 


PELONIS

OWNER'S MANUAL

12" Oscillating Table Fan

Model No.FT30-A4

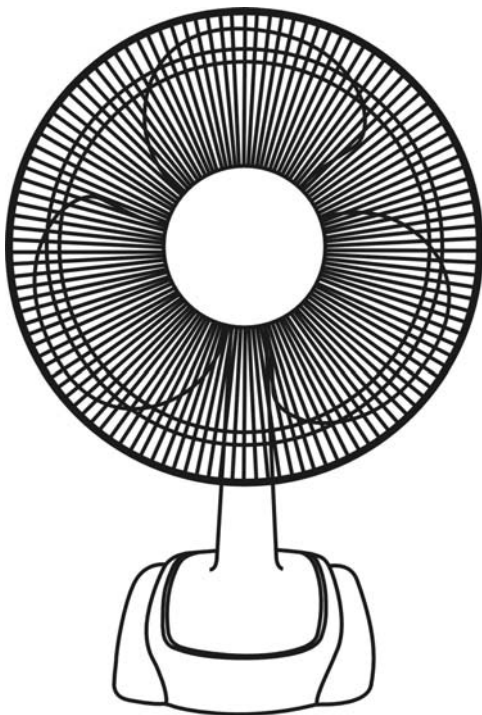

READ AND SAVE THESE INSTRUCTIONS

CAUTION

Read Rules for Safe Operation and Instructions Carefully.

WARNING

 
1. To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
2. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If plug does not fit fully in the outlet, reverse plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
3. Do not leave the fan running unattended.

RULES FOR SAFE OPERATION

1. Never insert fingers, pencils, or any other object through the grill when fan is running.
2. Disconnect fan when moving from one location to another.
3. Disconnect fan when removing grills for cleaning.
4. Be sure fan is on a stable surface when operating to avoid overturning.
5. DO NOT use fan in window. Rain may create electrical hazard.

ASSEMBLY OF BLADE AND GRILLS

1. Unscrew the spinner clockwise and the nut counter-clockwise then remove both of them.
2. Set the rear grill in the proper position with handle up.
3. Screw on plastic nut tightly to attach rear grill.
4. Discard plastic sleeve on motor shaft.
5. Install the blade onto the motor shaft until it reaches the retaining pin.
6. Screw spinner on to motor shaft counter-clockwise.
7. Mount the front grill with the trademark placed in the proper direction, the fix front grill and rear grill together with clips.

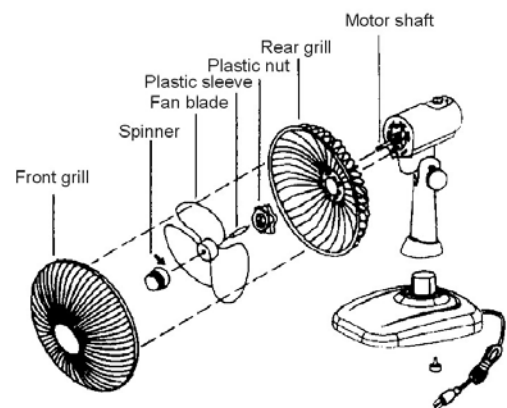


ASSEMBLY OF FAN PEDESTAL ONTO FAN BASE

1. Detach screw from base of the fan.
2. Match locking lug to base.
3. Tighten the screw from the base to lock the fan and base.

OPERATING INSTRUCTIONS

 1. Plug the power supply cord into a wall outlet.
2. Speed controller is on the back of motor.
3. To make/stop the fan head oscillate, push down/pull the clutch knob.
4. To adjust the airflow upward or mild downward, simply loosen the Swivel Adjustment Knob and move to desired angle then firmly tighten the Swivel Adjustment Knob.

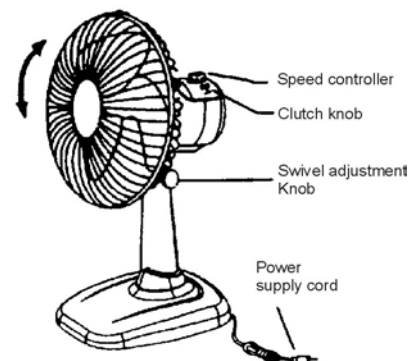

CLEANING

1. Be sure to unplug from the electrical supply source before cleaning.
2. Plastic parts should be cleaned with mild soap and a damp cloth or sponge. Thoroughly to remove soap film

- with clean water.
3. To disassemble each part, reverse the order assembly.
 4. Be sure not to make water or other liquid enter inside of motor.

SPECIFICATIONS

Model No.: FT30-A4
Voltage: 120v,60Hz

SERVICE & SUPPORT

For usage tips about this fan, to register your fan warranty online, or to obtain information about other Pelonis Appliance products, please visit our website at www.pelonis.com.

In the event of a warranty claim or if service is required for this fan, please contact us at the following:

Toll Free: 866-876-4332 (M-F 9:00am to 5:00pm EST)

Email us at: service@pelonis.com

For questions or comments, please write to:

Pelonis Appliance, INC.
Att: Consumer Relations Department
2617N Great Southwest Parkway
Grand Prairie, TX75050, USA

For your records, staple your sales receipt to this manual and record the following:

DATE OF PURCHASE: _____

PLACE OF PURCHASE: _____

(STAPLE SALES RECEIPT HERE)

**NOTE: PROOF OF PURCHASE IS REQUIRED FOR
ALL WARRANTY CLAIMS**

ONE(1) YEAR LIMITED WARRANTY

- Please read all instructions before attempting to use this product.
- Please return the Warranty Registration card within fifteen (15) days from the date of purchasing this product.

Pelonis Appliance, INC., referred to hereafter as Pelonis Appliance, warrants as limited herein to the original purchaser of retail that each new FT30-A4 Oscillating Table Fan, shall be free of defects in material and workmanship for a period of one (1) year from the date of original purchase. This one (1) year warranty is limited to the fan motor, fan blades, and electric control circuit board.

In the event of malfunctions or failure of your FT30-A4 Oscillating Table Fan, simply deliver or send the product, postage prepaid along with **PROOF OF PURCHASE**, within the warranty period of one (1) year, to Pelonis Appliance. Pelonis Appliance reserves the right to inspect the claimed defective part or parts to determine if the defect or malfunction complaint is covered by this warranty. Pelonis Appliance shall, within sixty (60) days after receipt of the product, at its option, repair and/or replace the defective part or parts free of charge. This warranty shall only cover defects arising from normal usage.

Pelonis Appliance assumes no responsibility whatsoever if the FT30-A4 Oscillating Table Fan should fail during the warranty period by reason of:

- Misuse, negligence, physical damage or accidents.
- Lack of maintenance (see instructions for proper maintenance).
- Repair by any unauthorized party during the warranty period.
- Damage caused by connection to an improper input voltage (see Operating Instructions for proper voltage information).

Pelonis Appliance makes no further warranties or representations, express or implied except those contained herein. No representative or dealer is authorized to assume any other liability regarding the FT30-A4 Oscillating Table Fan. The duration of the implied warranty granted under State law, including warranties of merchantability and fitness for particular purpose are limited in duration should the duration of the express warranty grant it hereunder. Pelonis Appliance shall in no event be liable for direct, indirect, special or consequential damages.

Some states do not allow limitations on how long an implied warranty lasts, and/or the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Should your FT30-A4 Oscillating Table Fan fail to operate under the terms of this limited warranty, contact Pelonis Appliance at 866-876-4332 (M-F 9:00am to 5:00pm EST).