

USER GUIDE



CREATE YOUR OWN TV CHANNEL

Your Sky⁺ remote control



sets your remote control to operate your Sky⁺ set top box



Version 4.1 August 2003

Sky+ and *Sky Guide* are trademarks of British Sky Broadcasting Ltd.

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorised by Macrovision, and is intended for home and other limited Pay Per View uses only, unless otherwise authorised by Macrovision. Reverse engineering or disassembly is prohibited.

You are not authorised to use your Sky+ set top box in a way which infringes the intellectual property rights of third parties. Copying programmes is unlawful under the Copyright, Designs and Patents Act 1988, except in a limited number of circumstances such as for the purpose of showing in schools (section 35) and timeshifting for private and domestic use (section 70).

The details in this Sky+ User Guide are correct at the time of going to print. The specification and features of Sky+ are subject to change at any time without notice.

No responsibility can be accepted for any failure of your Sky+ set top box to receive, process or act on information transmitted to it, or any change in the performance of your Sky+ set top box as a result of the transmission of this information.



A product with the Dolby Digital decoder system. Manufactured under license from Dolby Laboratories. "Dolby", and the double-D symbol are trademarks of Dolby Laboratories. All rights reserved.



Declaration of Conformity No. 2600

Trade Mark of the DVB Digital Video Broadcasting Project (1991 to 1996)

Contents

Welcome to Sky⁺	2
About this User Guide.	2
What is digital satellite TV?	2
Your Sky ⁺ set top box.	2
What is Sky Guide?	3
For your safety	4
Using equipment safely.	4
Electrical information	5
Mains plug and its fuse.	5
Connecting to the mains supply	5
Getting started	6
Your Sky ⁺ remote control	7
Turning your Sky ⁺ set top box on and off	7
Changing channel.	8
Changing the volume	8
Using the Search & Scan banner	9
Live Pause	10
Instant Rewind	10
Using digital text	11
Using teletext	11
Using Live Pause	12
Using Instant Rewind	14
TV Guide	15
Finding a programme	16
Choosing a programme to watch, and setting reminders	17
Choosing a programme to record	17
Displaying A–Z listings	18
Displaying more information	18
Using your Sky⁺ Planner	21
Sky ⁺ Planner information	21
Using the colour option keys.	23
Removing a programme	24
Using reminders	25
Reminder clashes	26
Using Series Link	27
Box Office	28
Ordering a Box Office programme	29
Using Sky⁺ for recording satellite TV	31
Recording current programmes	31
Recording future programmes	32
Recording clashes	34
Capacity warning	37



Using Sky⁺ for recording radio channels	38
Playing back recordings	40
Playing back a recorded programme	40
During playback	41
Using Fast Forward / Rewind keys	43
Playing back in slow-motion	44
Stopping playback	44
Using Bookmarks	45
Understanding on-screen symbols	47
Displaying programme information during playback	48
Playing back viewing-restricted programmes	48
Using Copy	49
Selecting a programme for copying	49
Services	52
Parental Control and your PIN.	53
Favourite Channels.	58
Other Channels.	60
Interactive.	61
Extra information	62
Setting your Sky ⁺ remote control to operate your TV	62
Setting your Sky Active keypad to operate your Sky ⁺	63
Replacing the batteries in your Sky ⁺ remote control	64
System Setup.	65
Optical digital-audio output.	67
Adding Other Channels.	68
Sky ⁺ Setup.	70
Looking after your Sky Viewing Card.	74
Connecting your Sky⁺ set top box.	75
Connecting to the telephone line.	76
Digital interface.	76
Further help	77
Solving problems	78
On-screen messages	78
General problems	81
Specifications	82
Remote control setup codes	84
Index	85

Welcome to Sky⁺

About this User Guide

This Sky⁺ User Guide contains all you need to know about how to watch and record digital satellite TV using your Sky⁺ set top box.

To use the recording and playback features of your Sky⁺ set top box, you must subscribe to Sky⁺.

To arrange a Sky⁺ subscription or to request a copy of the Sky⁺ Terms and Conditions, call Sky⁺ Customer Service. To find the Sky⁺ Customer Service number, select the *Telephone Numbers* option from the *Services* screen.



Look out for this symbol. It indicates useful and important tips.

What is digital satellite TV?

Digital satellite TV is the latest stage in the evolution of TV, giving you not only crystal-clear pictures and digital-quality stereo sound, but also the opportunity to receive many more channels and services.

Your Sky⁺ set top box

Your Sky⁺ set top box receives digital information via satellite, decodes it and sends it through to your TV. You control your viewing preferences through the on-screen *Sky Guide*.

Providing you have a Sky⁺ subscription, then, as well as watching satellite TV, you can instantly rewind or pause the viewing of a current programme, resume playback from the pause point and fast-forward to live TV. You can also record and play back satellite TV programmes, just as you would do with a video recorder.

Your Sky⁺ set top box has an internal hard disk that is used to record and play back TV programmes. It also has two inputs from your satellite dish, allowing you to view one programme while simultaneously recording a second programme.

Your Sky⁺ set top box comes with the Sky⁺ remote control. This controls both your TV and your Sky⁺ set top box. For more information see *Getting started* on page 6.

What is Sky Guide?

Sky Guide is a helpful and easy to use on-screen guide to your digital satellite services. It is designed for people who want to get the most out of watching television.

All *Sky Guide* features are controlled using your Sky⁺ remote control.

Sky Guide allows you to:

- see on-screen TV programme listings for up to seven days;
- set reminders for future programmes;
- select programmes for recording;
- select recordings for playback;
- see TV listings while you are watching a programme;
- set up and see your favourite channels;
- order *Box Office* movies, sports and events;
- use an ever-increasing range of interactive services;
- set parental-control viewing restrictions and a spending limit for programme purchases;
- modify your Sky⁺ settings.

Each of these features is described in detail in this User Guide.

Sky keeps you up-to-date

As digital television develops and as more features become available, Sky may occasionally update the *Sky Guide* software by loading it into your Sky⁺ set top box directly from the satellite. We will give you information on these additions and new features as they are added.

For your safety

Using equipment safely

Your Sky⁺ set top box has been manufactured to meet international safety standards, but you must take care if you want to obtain the best results and operate it safely. You must have your Sky⁺ digital satellite system installed by a qualified satellite-TV installer.

It is important that you read this booklet completely, especially the safety instructions below.

If you have any doubts about the installation, operation or safety of your Sky⁺ set top box, please consult your dealer.

WARNING!

Remember that contact with 230 V AC mains can be lethal or can cause a severe electric shock. To avoid this risk:

- ⚡ Never remove the top cover from your Sky⁺ set top box. There are no user-serviceable parts inside it, but there are some high-voltage live parts.**
- ⚡ Make sure that all electrical connections are properly made.**
- ⚡ Do not connect any of your equipment (Sky⁺ set top box, TV, video recorder etc.) to the mains supply until you have properly connected all the other leads.**
- ⚡ Disconnect your Sky⁺ set top box from the mains supply before you disconnect any other equipment from its rear panel.**
- ⚡ Never push anything into holes, slots or other openings in the casing of your Sky⁺ set top box (except your Sky Viewing Card and Interactive card into their respective slots).**

CAUTION!

- Do not use or store your Sky⁺ set top box in hot, cold, damp or dusty places.
- In order to ensure a free flow of air around your Sky⁺ set top box, allow at least 10cm of space above and on all sides (especially between your Sky⁺ set top box and your TV).
- Do not cover any ventilation slots.
- Do not place your Sky⁺ set top box in an enclosed cabinet with more than one other piece of audio/video equipment e.g. VCR or DVD.
- Do not put anything on your Sky⁺ set top box which might drip or spill into it. Never stand objects filled with liquids, such as vases, on top of your Sky⁺ set top box.
- Never place naked flame sources, such as lighted candles, on top of your Sky⁺ set top box.
- Do not pick up or otherwise move your Sky⁺ set top box while it is connected to the mains supply. If you want to move your Sky⁺ set top box, first disconnect it, then wait at least 30 seconds before continuing.

Electrical information

Mains plug and its fuse


The supplied mains plug may be a non-rewireable type or a rewireable type. Both types contain an approved 3A fuse. If you need to replace the fuse, you must use an ASTA- or BSI-approved BS 1362 fuse, rated at 3A and marked:




or



The **non-rewireable plug** has its fuse beneath a fuse cover on its face. Use a screwdriver to lever off the fuse cover, replace the fuse with a new one and refit its cover. **Never use a plug if its fuse cover is missing.**

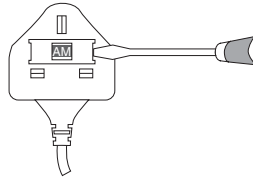

The fuse is inside the **rewireable plug**. Use a screwdriver to remove the plug's back cover, then lever out the fuse and replace it with a new one. Replace the plug's back cover.

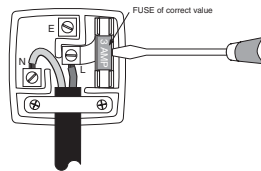

If the supplied mains plug is not suitable for your mains socket-outlet, remove its fuse and then cut the plug off the lead. Destroy the severed plug immediately to avoid the shock hazard which would exist if this were to be plugged into a mains socket.

Fit an appropriate mains plug on the lead. If this plug contains a fuse, it should be as described above. If you are using a non-fused plug, an external fuse must not exceed 5A.

Connecting to the mains supply

Your Sky⁺ set top box operates with 230 Volts AC, 50Hz mains supplies. **Do not connect it to a DC power supply.**

The supplied mains lead has a 2-way connector at one end and a mains plug at the other. Insert the 2-way connector into your Sky⁺ set top box **before** you insert the plug into the mains supply.

The only way to disconnect your Sky⁺ set top box from the mains is to remove the mains lead. Your Sky⁺ set top box must therefore be installed near to the mains socket-outlet, which should be easily accessible.

For information about the mains plug and its fuse, see above.

If you are in any doubt about the mains lead, its plug or its connection, consult a competent electrician.

Getting started

This section gives you the basic information you need to start using your Sky⁺ set top box.

For more detailed information about using your Sky⁺ set top box, use the **Contents** or **Index** to find the relevant section of this User Guide.


Before starting, make sure you insert your **Sky Viewing Card** the right way up in the slot located behind the flap on the front-left of your Sky⁺ set top box.

Open the flap.

Hold your **Sky Viewing Card** with the **Sky digital** logo facing upwards, and the arrow pointing towards the slot.

Insert your **Sky Viewing Card** into the slot, as far as it will go without forcing it, and then close the flap.

If you do not have a **Sky Viewing Card**, call Sky⁺ Customer Service. To find the Sky⁺ Customer Service number, select the **Telephone Numbers** option from the **Services** screen.

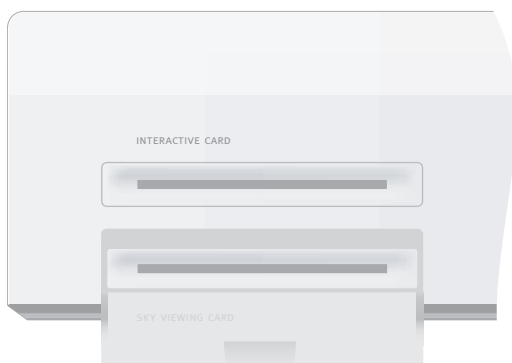

So that you can watch all the channels and services you want, you must leave your Sky Viewing Card in your Sky⁺ set top box at all times.



You must subscribe to Sky⁺ to be able to record and play back programmes using your Sky⁺ set top box.

Your Sky+ remote control

Your Sky+ remote control can operate your TV as well as your Sky+ set top box.

To use your Sky+ remote control to operate your Sky+ set top box, press **Sky**.

To use your Sky+ remote control to operate your TV, press **tv**.



For details of the functions of your Sky+ remote control keys, refer to the fold-out section at the front of this User Guide.



Your Sky+ remote control will always operate your Sky+ set top box. If your Sky+ remote control does not also operate your TV, see Setting your Sky+ remote control to operate your TV on page 62.

Turning your Sky+ set top box on and off

To turn your Sky+ set top box on, press **Sky** on your Sky+ remote control.

Make sure the standby light (⏻) on the front of your Sky+ set top box is green – this shows your Sky+ set top box is on.

To turn your Sky+ set top box off, press **Sky** on your Sky+ remote control, then press **standby**.

The standby light (⏻) is red when your Sky+ set top box is off, but still plugged into the mains. It is not necessary to unplug your Sky+ set top box when it is not in use.



Your Sky+ remote control can also turn your TV on and off.

To turn on your TV, press tv then a channel number.

To turn off your TV, press tv then standby.

Changing channel

Using the ch button

Press **ch +** or **-** on your Sky⁺ remote control to change channel up or down, one at a time.



You can also use ch + or - to display the next or previous screens of listings in the TV Guide. For more information about TV Guide listings, see page 15.

Using the channel number

If you know the channel number, you can use the number keys to choose the channel you want to watch. Channel numbers are always three digits, for example 106.



Each time you change channel, the Search & Scan banner appears on-screen.

The banner will disappear automatically after a few seconds, or you can press back up to remove it immediately.

For more information on the Search & Scan banner, see Using the Search & Scan banner on page 9.

Changing the volume

Press **vol +** or **-** on your Sky⁺ remote control to increase or decrease the volume of your TV.



Press **mute** to turn the TV sound off. To turn the TV sound back on, press **mute** again.



If your Sky⁺ remote control does not mute or control the volume on your TV, see Setting your Sky⁺ remote control to operate your TV on page 62.

Using the Search & Scan banner

When you are watching a satellite channel and want to find out what else is on, either now or later, without interrupting the programme you are watching, press **select** to display the *Search & Scan* banner.



Use the left and right arrows to see what programmes are on at different times on the current channel.

Use the up and down arrows to see what is on other channels.

- If you see a programme you want to watch and it is on now, press **select**; *Sky Guide* tunes your Sky⁺ set top box to the channel showing the programme.
- If you see a programme you want to watch and it is on later, press **select**; *Sky Guide* will set a reminder.
- If you see a programme you want to record, press **R**; *Sky Guide* will then record the programme.

If the channel shown in the *Search & Scan* banner is set as one of your *Favourite Channels*, this is indicated by a tick (✓).

To see what is on your *Favourite Channels*, press the *Search Favourite* (blue) key. Each time you press the *Search Favourite* (blue) key, programme information for another of your *Favourite Channels* is shown in the banner. If you see a programme you want to watch on one of your *Favourite Channels*, press **select**. If you see a programme you want to record, press **R**. For more details, see *Favourite Channels* on page 58.



You must have a Sky⁺ subscription to be able to record a programme using your Sky⁺ set top box.



Live Pause

Press **pause** to start recording live TV. The picture will 'freeze' on screen.

Press **play** or press **pause** again to resume the programme from the 'frozen' point.

For more information, see *Using Live Pause* on page 12.



You must have a Sky+ subscription to be able to use Live Pause.

Instant Rewind

While you are watching live TV, you can press the **rewind** key at any time to rewind back into the live programme.

Press **play** to resume playback from the point you choose.

For more information, see *Using Instant Rewind* on page 14.



You must have a Sky+ subscription to be able to use Instant Rewind and the feature must also be turned on (see Sky+ Setup on page 70).

Using digital text

If you are watching a channel that has a digital text service, press **text** to use it. (If digital text is not available, you will see a banner informing you how to use teletext instead.)

Press **Sky** at any time to return to TV viewing.

Using teletext

If your television has teletext features, press **tv** and then **text** on your Sky⁺ remote control to use them.

Use the number keys to choose the page you require. The table below shows the Sky⁺ remote control keys to use for teletext functions.

Key	Function
text	Enters text mode (also exits text mode on some TVs)
back up	Exits text mode
0–9	Page number entry
i	Text reveal
select	Page hold
colours	Fastext functions

To return to satellite services, press **back up**, then press **Sky**.



To use teletext via your Sky⁺ remote control, your remote control must be set to work with your TV. For further information, see Setting your Sky⁺ remote control to operate your TV on page 62.

Using Live Pause

Whenever you are watching a TV programme, you can pause it.

Press **pause** on your Sky+ remote control to freeze the picture and sound. Your Sky+ set top box will then record until the end of the programme.

As the programme is recorded, the *Live Pause* symbol will show the elapsed time in minutes relative to the live programme.



During *Live Pause* press **play**, **fast forward**, **rewind** and **pause** to move through the recording. If you reach the start of the recording, the picture and sound are frozen at that point. If you reach the end of the recording, Sky+ will take you straight into the live programme.

You can press **Sky** at any time to resume live TV viewing.



If you change channel your Live Pause recording is deleted.

If you attempt to view the full-screen listings, you must leave *Live Pause*.



To confirm that you wish to leave *Live Pause*, press **select**. The *Live Pause* recording is then deleted.

To continue *Live Pause*, press **back up**.

During *Live Pause* you can use the arrow keys to display the *Search & Scan* banner to find out what is on later or on other channels. For more information see *Using the Search & Scan banner* on page 9.



You must have a Sky⁺ subscription to be able to use Live Pause.



During Live Pause, you cannot use an interactive application (see Interactive on page 61).

Saving to your Sky⁺ Planner

You can use the *Search & Scan* banner to save the currently showing *Live Pause* or *Instant Rewind* recording to your *Sky⁺ Planner* (see page 21), for viewing at a more convenient time.

To display the *Search & Scan* banner, press **R**. The top line of the banner shows the programme that is the currently showing *Live Pause* or *Instant Rewind* recording.

To save the on-screen programme to your *Sky⁺ Planner*, press **R** again so that the record symbol appears next to the programme title. If necessary Sky⁺ will continue to record to the end of the programme.

Using Instant Rewind

While you are watching live TV, Sky+ can record up to the last 60 minutes of the channel you are viewing.

If you miss any of the action on-screen, simply press the **rewind** key to rewind up to 60 minutes behind live TV. Then press **play** to view the programme from the earlier point.

Sky+ will continue to record until the end of the programme, so you can play back from that point. If you want to catch up with live TV, press the **fast forward** key.

To change the number of minutes recorded by the *Instant Rewind* feature, press **services**, highlight *Sky+ Setup* then press **select**. (You can also disable the *Instant Rewind* feature by changing the setting to 'Off'.) For further details see *Sky+ Setup* on page 70.



You must have a Sky+ subscription to be able to use Instant Rewind and the feature must also be turned on (see Sky+ Setup on page 70).




During playback of Instant Rewind, you cannot use an interactive application (see Interactive on page 61).

TV Guide

Press **tv guide** on your remote control to see the *TV Guide* screen.

tv guide

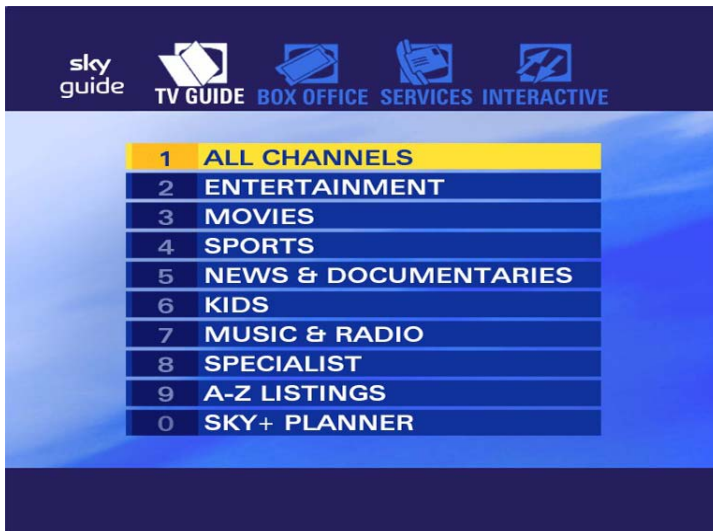

TV GUIDE

Here you can choose to see:

- **All Channels** – TV programmes scheduled for today and the week ahead, listed by channel number.
- **Entertainment, Movies, Sports, News & Documentaries, Kids, Music & Radio and Specialist**
– programmes scheduled for today and the week ahead, listed by channel type.
- **A-Z Listings** – an alphabetical listing of all programmes showing for the next 24 hours.
- **Sky+ Planner** – your recordings and programmes selected for future viewing.

For more information, see *Using your Sky+ Planner* on page 21.

Finding a programme

To find a programme from the full listings, press **tv guide** on your Sky+ remote control, highlight *All Channels*, then press **select**. The *All Channels* listings screen is shown.

sky
guide 7.01pm Tue 23 Jul

ALL CHANNELS

	Today	7.00pm	7.30pm	8.00pm
101 BBC ONE	Snapshot	Top of the..	Ground For..	
102 BBC TWO	Robot	Country Ho..	Trust Me..	
103 ITV1 London	Emmerdale	Coronation..	Tonight wi..	
104 Channel 4	Channel 4 News	Heligan		
105 five	News	Malaysian..	Was It Go..	
106 Sky One	Friends	The Simps..	Beat The..	
107 Sky One Mix	Dream Team	Batman	Pokemon	
109 UK Gold	EastEnders	New Adve..	The Bill	
110 UK Gold +1	Dads Army	All Creatu..	Bergerac	
111 UK Gold 2	Casualty	EastEnders		

Page Up

Page Down

+24 Hours

-24 Hours

Press **SELECT** to view or **R** to record

Use the up and down arrows to move the highlight through the channels.

Use the right and left arrows to see programmes being shown at different times.

Times are shown at the top of the programme listing.



Use the *Page Up* (red) and *Page Down* (green) keys to see the preceding or next section of the channel listing.

Use the *+24 Hours* (yellow) key to move forwards 24 hours at a time. To move backwards 24 hours at a time, use the *-24 Hours* (blue) key.



Use the number keys to go quickly to a particular channel. Enter the channel number, which is always three digits, for example 106.



Whenever you are using *Sky Guide*, if you see a screen you don't want, press **back up** to redisplay the previous *Sky Guide* screen.



TV GUIDE

Choosing a programme to watch, and setting reminders

When you see a programme you want to watch, use the arrows to highlight it, then press **select**.

- If the programme is on now, your Sky⁺ set top box tunes to it.
- If the programme is on later, *Sky Guide* will set a reminder. Your *Sky⁺ Planner* will also appear, showing the selected programme, together with a *Reminder* symbol in the right-hand column.
- If you choose a Pay Per View programme, you will see the *Box Office* screen showing the programme details and purchase price. For more information, see *Ordering a Box Office programme* on page 29.
- If you choose a programme that is on a channel to which you do not currently subscribe, you will be given information on how to include this channel in your subscription.

Choosing a programme to record

When you see a programme you want to record, highlight it, then press **R**.



- If the programme is on now, *Sky Guide* immediately starts recording the programme, and adds it to your *Sky⁺ Planner* for future viewing.
- If the programme is on later, *Sky Guide* adds the programme to your *Sky⁺ Planner* for future recording. Your *Sky⁺ Planner* will also appear, showing the selected programme, together with a *Record* symbol in the right-hand column.

For more information, see *Using Sky⁺ for recording satellite TV* on page 31.

Displaying A–Z listings

If you are looking for a particular programme, a quick way to find it is to use the *A–Z listings*. This lists all the day’s programmes in alphabetical order, so you can easily find when and where the programme is on.

To find a programme from the *A–Z listings*, press **tv guide** on your Sky+ remote control, highlight *A–Z Listings*, then press **select**.

Highlight the type of programme you are looking for, then press **select**. The *A–Z Listings* screen for that type of programme is shown.



You can use the number keys (which also have letters marked on them) to quickly find programmes that start with a particular letter. Press once for the first letter shown. Press the key again for the next letter, and so on. The listing updates after a short delay. To display the previous or next screen in the listing, you can also use **ch +** or **–** on your Sky+ remote control.



You can choose to see programmes of more specific types by pressing the colour option keys. The types of programmes listed are shown at the bottom of the screen. Use the left and right arrows to see what other types are available.

Displaying more information

If you would like more information about a particular programme, use the arrows to highlight it, then press **i** on your Sky+ remote control. The programme information banner appears on your screen.

To remove the programme information banner and show the previous screen, press **back up**.




The information banner for a programme includes a short programme summary and the programme start time.



The information banner for a recorded programme includes a short programme summary, the status of the recording (including the reason for any part-recording or recording failure), the time the recording was made, and the disk space used by the recording. For more information on recording status see *Sky+ Planner information* on page 21.

For *Box Office* recordings, the information banner also displays the time when the recording will be deleted.

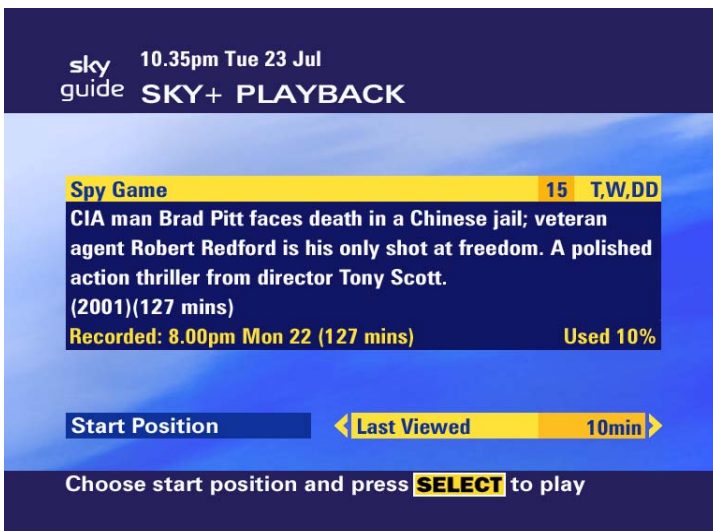

Both information banners may also include letter codes giving more information about the programme. These codes have the following meanings:

Letter codes:	
C	Copy-protected. If you try to record this programme it may not play back correctly.
DS	Surround sound. If your TV has surround-sound capability, you can hear this programme in surround sound.
DD	<i>Dolby Digital</i> . If your TV is connected to a home cinema system capable of decoding the signal, you can hear this programme in <i>Dolby Digital</i> . For more information see <i>Optical digital-audio output</i> on page 67.
L	Letterbox format. The programme is being shown in letterbox format; i.e. in a wide 'cinema-style' picture with black borders across the top and bottom of the picture.
N	Narrative. The programme is broadcast with a descriptive audio soundtrack for the partially sighted.
T	Subtitles. Language and/or subtitles for the hard of hearing are available for the programme.
W	Widescreen. The programme is being shown in widescreen format.
Rating codes:	
U	Universal, suitable for all audiences, including young children.
PG	Parental guidance is recommended. Some discretion may need to be applied as to the suitability of the film for younger or impressionable children.
12	Suitable for viewers aged 12 years or over. More mature themes or language make the film unsuitable viewing for young children.
15	Suitable for viewers aged 15 years or over. May contain stronger language, violence, or themes unsuitable for younger viewers.
18	Suitable only for adult viewers aged 18 years or over.
Content codes:	
s	Sex or nudity.
l	Strong language.
v	Violent scenes.
m	Material which is intended for a mature audience.

Using your Sky+ Planner

Your *Sky+ Planner* lists the programmes you have selected to watch or record, together with your recordings.

Whenever you select a future programme to watch or record, *Sky Guide* automatically adds it to your *Sky+ Planner*.

To view your *Sky+ Planner*, press **tv guide** on your Sky+ remote control, highlight *Sky+ Planner*, then press **select**.



YOUR SKY+ PLANNER

Sky+ Planner information

In addition to showing the programmes' names and channels, your *Sky+ Planner* shows the following information for each programme:

- Rating code (for rated programmes);
- Date and time of transmission for future programmes;
- For recorded programmes:

Recording – indicates that the programme is currently being recorded.

Recorded – indicates that the programme was successfully recorded.

Part recorded – indicates that only part of the programme was successfully recorded. To see why the programme is only part recorded, press **i** to display the programme information banner.

Failed – indicates that a programme you selected for recording did not record. To see why the programme was not recorded, press **i** to display the programme information banner.

Clashed – indicates that a programme selected for recording failed to record, as it clashed with another programme set up for recording at the same time.

Viewed – indicates that you have played back a recorded or part recorded programme.

Copy – indicates that you have selected a recorded programme for copying to your video recorder. For more information, see **Using Copy** on page 49.

Your **Sky+ Planner** may also show one or more of the following symbols in the right-hand column:

Reminder – indicates that a reminder will be displayed just before the programme starts.



Record – indicates that the programme will be recorded and is not marked for **Keep**.



Keep – indicates that the programme will be, or has been, recorded and is marked for **Keep**. For more information, see **Using the colour option keys** on page 23.



Series Link – indicates that **Series Link** for the programme has been turned on. For more information, see **Using Series Link** on page 27.



There is a space available indicator (a coloured line) above the programme list in your **Sky+ Planner**. This indicator tells you how much of the total capacity of the hard disk is free, as a percentage of the total available disk space.

The space available indicator also shows you the amount of disk space taken by each recorded, or part recorded, programme. When you highlight a recorded programme in your **Sky+ Planner**, the yellow portion of the indicator line represents the space used by that programme.

The space used by a recorded programme is also displayed in the programme information banner.

To see the programme information banner, press **i** on your Sky+ remote control.



You can use the **ch + and **-** keys to display the next and previous pages of your Sky+ Planner.**

Using the colour option keys

Depending on the programme you have highlighted in your **Sky⁺ Planner**, you may be able to use the colour option keys on your Sky⁺ remote control to select one or more of the following options:




- Press the **Copy** (red) key to copy a previously-recorded programme to your video recorder. For more information, see *Using Copy* on page 49.
- Press the **Series Link** (green) key to ensure the next episode in a series is automatically added to your **Sky⁺ Planner** when your Sky⁺ set top box tunes to the programme you have highlighted. For more information, see *Using Series Link* on page 27.
- Press the **Delete** (yellow) key to delete the highlighted programme from your **Sky⁺ Planner**. For more information see *Removing a programme* on page 24.
- Press the **Keep** (blue) key to ensure that a recording of the highlighted programme will not be automatically deleted.

Removing a programme

To remove a programme from your *Sky+ Planner*, highlight it, then press the *Delete* (yellow) key. The programme status will show *deleting* and the programme will be deleted immediately.

You may be asked to confirm your intention to delete a highlighted programme (e.g. for programmes marked *Keep*); if so, the following banner will be shown.

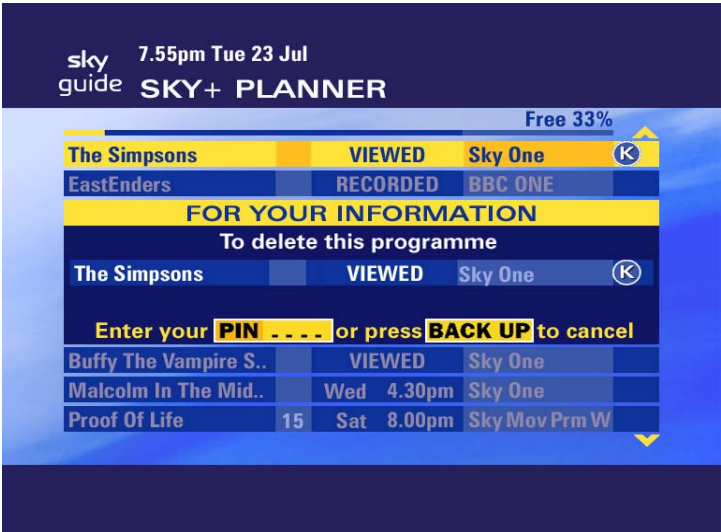

To confirm the deletion, press **select**. The highlighted programme is removed from your *Sky+ Planner*.

To cancel the deletion, press **back up**. The highlighted programme remains in your *Sky+ Planner*.

Using reminders

To set a reminder for a programme, highlight it within the *Sky Guide* listings, then press **select**.

One minute before the start of a programme for which you have set a reminder, you will see a reminder banner on the lower part of your screen.



To watch the programme described in the reminder banner, press **select**. Your Sky+ set top box will tune to the programme.

If the programme is not a *Box Office* programme then you can press **R** to record the programme. *Sky Guide* will check the amount of free disk space and, if there is enough space, will start recording. For more information, see *Capacity warning* on page 37.

To ignore the reminder and keep watching the programme you are currently viewing, press **back up**.



You will see the reminder only if you are watching programmes through your Sky+ set top box and not, for example, if you are watching terrestrial TV.

Reminder clashes

If you try to set a reminder for a programme that clashes with a programme you have previously selected to watch, *Sky Guide* will ask you what you want to do.



You can choose from two options:

- Press **select** to be reminded when each programme starts.
- Press **back up** to cancel the new selection and to be reminded only when the previously-selected programme starts.

If you select a programme to record that clashes with a programme you have previously selected to record, you must choose one or other of the programmes. For more information, see *Recording clashes* on page 34.

If the broadcasters change their programming schedules, your *Sky+ Planner* will be updated automatically, and programme reminders will be adjusted accordingly. However, if a broadcaster moves a scheduled programme by more than six hours, the programme will be deleted from your *Sky+ Planner* and you will need to re-select the programme.

Using Series Link

If the **Series Link** option appears on-screen when you highlight a programme in your **Sky+ Planner**, this means the programme is identified as one episode of a series, on that channel.

Press the **Series Link** (green) key if you want to watch or record the next episode on the same channel.

The **Series Link** symbol is then shown next to the programme, indicating that the link is set.

When your Sky+ set top box tunes to the programme, the next episode will be added to your **Sky+ Planner** with the link set.

If you selected the programme for recording, the next episode will also be set for recording.



Box Office

This section of *Sky Guide* is where you can choose the *Box Office* programmes you want to watch or record.

Press **box office** on your Sky⁺ remote control to see the *Box Office* screen.

box office



The *Box Office* screen allows you to see listings of movies by start time, in alphabetical order or just the latest additions. You can also see listings for sports and events, as well as for specialist programmes.

To see the listing you want, use the arrows to highlight it, then press **select**.

To see free previews of *Box Office* programmes, highlight *Free Previews*, then press **select**.

Ordering a Box Office programme

You can order *Box Office* programmes to watch and record using your Sky+ remote control.



To order a *Box Office* programme, complete the following steps:

1. Use the arrows to highlight the programme you want to watch or record.

If you want to set a reminder for the programme, press **select**.

If you want to record the programme, press **R**.

Sky Guide will show the time the programme starts, the channel and the purchase price. Additional special offers may be advertised on-screen for particular programmes.

2. You may be able to choose what time you watch or record the programme. Use the left or right arrow to choose a suitable start time, then press **select**.

If you want to change your selection, press **back up**.

3. To confirm your choice, press **select** again or enter your PIN (Personal Identification Number) if requested. Your PIN will be required if the selected programme is subject to your parental viewing restrictions or costs more than your spending limit.

Regardless of your parental viewing restrictions, you will need your PIN to watch or record any **Box Office** programme shown before its normal watershed time. PINs will be required as follows:

Programme rating	When PIN is required
18	programme starts before 10.00 pm
15	programme starts before 8.00 pm
12	programme starts before 8.00 pm

If you select a **Box Office** programme to watch, the programme will be added to your **Sky⁺ Planner** as a reminder.

If you select a **Box Office** programme for recording, the programme will be added to your **Sky⁺ Planner** and automatically recorded at the programme start time.

The **Box Office** programme will remain in your **Sky⁺ Planner** for a fixed amount of time before it is deleted. For example, selected **Box Office** movies may remain in your **Sky⁺ Planner** for seven days. If you do not watch the programme, **Sky Guide** will automatically delete the recording of the **Box Office** programme at the specified time and you will not be charged.

Once you start playing back a **Box Office** recording, you will have a period of time in which you can watch it as many times as you like. For example, you may be allowed to play back a **Box Office** movie for 24 hours.

You will be charged for the programme when you begin playing back the recording. When the time period is up, **Sky Guide** will automatically delete the recording.

The amount of time you have left to watch, or begin watching, a recording is shown on the programme information banner.



If you select a Box Office programme to watch or record but then do not tune to the relevant channel at any time during the programme, or do not play back the recording, you will not be charged for it.

Using Sky+ for recording satellite TV

You can select programmes for recording from both the *TV Guide* listings and *Box Office* screens, or directly from satellite TV viewing. The recording of all programmes, including *Box Office* programmes, is subject to the approval of the individual channel provider. A warning banner will appear if recording is not allowed for any reason.


Recording current programmes

To record a programme you are currently watching on satellite TV, simply press **R** on your Sky+ remote control. The *Search & Scan* banner appears on-screen with details of the programme to be recorded. Press **R** again to confirm the recording.

The recording indicator on the front panel of your Sky+ set top box lights up whenever a recording is taking place.

If you want to record a programme currently showing on a channel other than the one you are watching, press **select** to display the *Search & Scan* banner. Use the up and down arrows to see what is on other channels.

When you see a programme you want to record, press **R**.

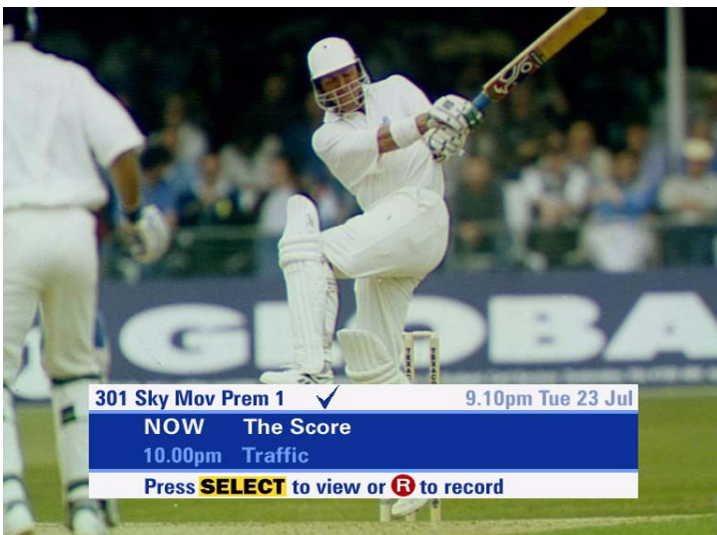

Programmes that you have selected for recording are indicated in the *Search & Scan* banner by the record symbol, which is a red circle containing a white **R**, against the selected programme.

To cancel the recording of a previously-selected programme, highlight the programme in the *Search & Scan* banner, then press **R**.



When you cancel the recording of a current programme, the programme remains listed in your Sky+ Planner but is marked as Part recorded.

Recording future programmes

If you want to record future programmes on the channel you are watching, press the right arrow to display the *Search & Scan* banner.

To see what programmes are on later on the current channel, press the right arrow again.

To record the programme highlighted in the *Search & Scan* banner, press **R**.



You can also select programmes to record from the *TV Guide* or *Box Office* listings. Use the arrow keys to highlight the programme you want to record, then press **R**.

sky 7.01pm Tue 23 Jul
guide ALL CHANNELS

	Today	7.00pm	7.30pm	8.00pm
101 BBC ONE		Snapshot	Top of the..	Ground For..
102 BBC TWO		Robot	Country Ho..	Trust Me..
103 ITV1 London		Emmerdale	Coronation..	Tonight wi..
104 Channel 4		Channel 4 News		Heligan
105 five		News	Malaysian..	Was It Go..
106 Sky One		Friends	The Simps..	Beat The..
107 Sky One Mix		Dream Team	Batman	Pokemon
109 UK Gold		EastEnders	New Adve..	The Bill
110 UK Gold +1		Dads Army	All Creatu..	Bergerac
111 UK Gold 2		Casualty		EastEnders

Page Up Page Down +24 Hours -24 Hours

Press **SELECT** to view or to record


When you select a programme to record from the *TV Guide* or *Box Office* listings, your *Sky+ Planner* is displayed on-screen with the programme highlighted and the record symbol displayed.
Press **back up** to return to the previous screen.



Your Sky+ set top box cannot record interactive applications.

Recording clashes

Sky+ can record two programmes at the same time. When you select a programme for recording, *Sky Guide* automatically checks to see whether it clashes with other programmes you have previously selected for recording. If it does clash, *Sky Guide* will ask you what you want to do.

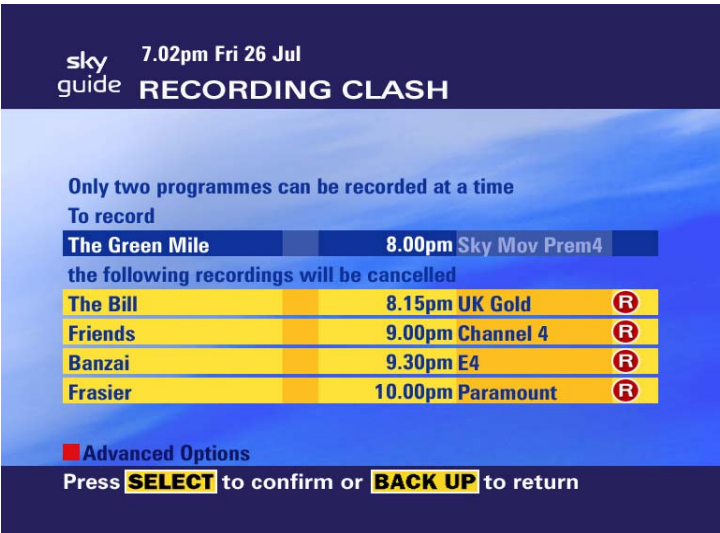


To record the new programme, press **select** to cancel the recording(s) suggested by Sky+ that are shown on the screen. If there is more than one recording to be cancelled, all of these programmes are listed. Use the up and down arrows to view them all.

To keep the previously selected recording(s) and cancel the recording of the new programme, press **back up**.

If you want complete freedom of choice over which recording(s) to cancel, press the *Advanced Options* (red) key. Details of all the recordings that clash appear on the following screen (shown opposite).

The previously selected recordings appear in two rows above the new recording, which is highlighted in red.

Use the arrow keys to highlight the recording you want to cancel, then press the **Cancel** (yellow) key. Repeat if necessary until the new programme can be recorded.

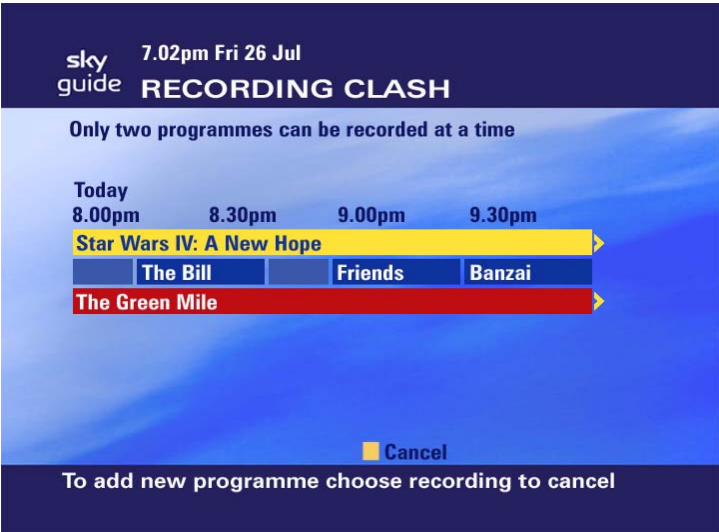

Once sufficient programmes have been cancelled the screen changes to indicate that the new programme will be recorded (see below).

To confirm the changes you have made, press **select**, or press **back up** to cancel and redisplay the simple clash screen.



If the broadcasters change their programming schedules, your **Sky⁺ Planner** will automatically update, and programme recording times will be adjusted accordingly. However, if a broadcaster moves a programme by more than six hours, the programme will be deleted from your **Sky⁺ Planner** and you will need to reselect the programme.

Where recording clashes result from changes in the programme schedules, **Sky Guide** will record the earlier programme in its entirety, and will record only part or nothing at all of the later programme. You can choose to change this priority by marking the later programme as **Keep**.

Capacity warning

Whenever you select a programme to be recorded, *Sky Guide* anticipates whether there will be enough disk space available for you to record the programme.

If you have set your *Disk Space Management* setting to *Manual* and there isn't enough disk space, *Sky Guide* asks you to manually delete existing recordings to make space for the new recording.



Press **back up** to cancel the new recording and return to the previous screen. To manually delete previously recorded programmes, see *Removing a programme* on page 24.

For information on Disk Space Management settings, see *Disk Space Management* on page 70.


Using Sky⁺ for recording radio channels

Radio channels do not have programme listings in *Sky Guide*, but you can record these channels using the *Services* menu.

Press **services** on your Sky⁺ remote control, highlight *Manual Recording*, then press **select**. The *Manual Recording* screen is shown.

sky guide 9.35pm Tue 23 Jul
MANUAL RECORDING

Channel Number	851
Channel Name	BBC R1
Day	TODAY
Start Time	-- : -- PM
End Time	-- : -- PM
Frequency	ONCE
Add Manual Recording	


Enter channel number or  to choose channel name

To record a radio channel:

1. If you know the channel number, you can use the number keys to choose the channel you want to record. Channel numbers are always three digits, for example 851.

Alternatively, you can use the left and right arrow keys to choose the name of the channel you want to record.

2. Press the down arrow to highlight **Day**, then use the left and right arrow keys to choose the day on which you want to record the channel.
3. Next, highlight **Start Time**, then use the number keys to set the start time of the recording. Use the left and right arrow keys to choose whether the start time is AM or PM.
4. Highlight **End Time**, then set the end time of the recording, and choose whether the end time is AM or PM.

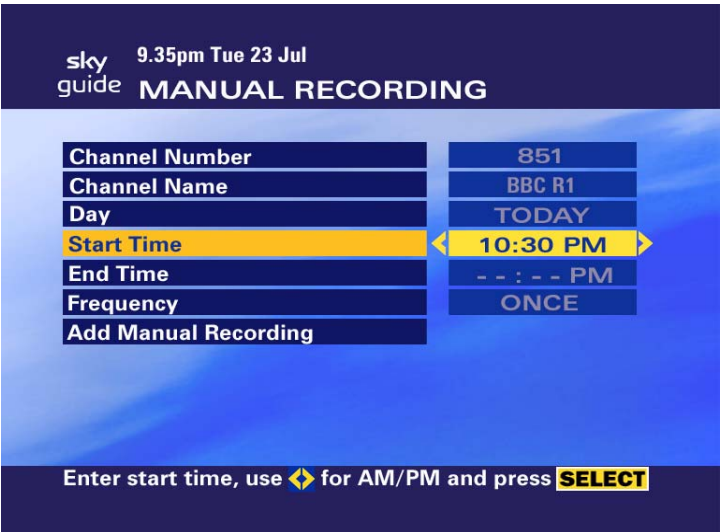

5. Press the down arrow to highlight *Frequency*. Use the left and right arrow keys to choose how many times you want to record the channel: once, daily, weekly or every weekday (Monday to Friday).
6. Highlight *Add Manual Recording*, then press **select** to confirm your choices. Your *Sky+ Planner* is displayed on-screen with the manual recording highlighted and the record symbol displayed.




Playing back recordings

Playing back a recorded programme

To select a previously recorded programme for playback:

1. Display your *Sky+ Planner* (press **tv guide** on your Sky+ remote control, highlight *Sky+ Planner*, then press **select**).
2. Highlight a programme that is currently recording, or that has been recorded or part-recorded, then press either **play** or **select**.

Sky+ offers you a choice of playback start positions before playback starts.

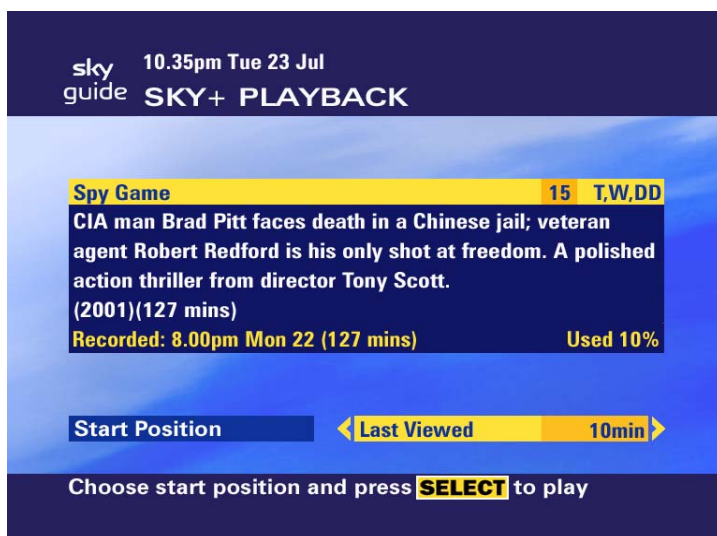

Use the left and right arrows to choose:

- to play back from the beginning of the programme;
- to play back from the point at which playback previously stopped;
- to play back from a point decided by yourself (viewer defined);

Use the number keys to set the number of minutes from the beginning of the programme, from which playback is to start.

- to play back from any bookmarks you have set.

Press **select** or **play** to confirm your choice and playback will start immediately from the selected position.

To select the most recently played-back programme (**not** a *Live Pause* recording) when either watching satellite TV, or when a *TV Guide* or *Box Office* listings screen is displayed, simply press **play**. This is useful if, for example, you had been unable to watch the whole programme previously.

When you have selected a programme for playback, the programme information banner is displayed. Press **select** to start playback.

During playback

Whenever you are playing back a programme, you can display the *play* symbol by pressing **play**.

The elapsed time from the beginning of the programme is shown below the symbol.



The *play* symbol is displayed for 5 seconds. To remove the *play* symbol immediately, press **back up**.

The playback indicator on the front panel of your Sky+ set top box lights up if playback, rewind or fast-forward is in progress. If you want to turn off the playback indicator, see *Front-panel recording/playback indicator* on page 74.

During playback you can use the arrow keys to display the **Search & Scan** banner to find out what else is on later or on other channels. The channel first displayed in the **Search & Scan** banner is the last-viewed live channel.

When the programme you are playing back ends, a message will appear on-screen.

To return to your *Sky+ Planner*, press **back up**.

To return to live tv viewing, press **stop**.



If you press the Sky key while playing back a programme, Sky Guide re-tunes your Sky+ set top box to the channel you were previously watching. If you press the ch + or – keys, or enter a channel number, Sky Guide tunes your Sky+ set top box to the requested channel.



To pause the programme while your Sky⁺ set top box is in play, fast-forward or rewind, press **pause**.

To restart playback, press **play** or **pause** again.



Using Fast Forward / Rewind keys

To fast-forward a recorded programme when it is playing back or paused, press the **fast forward** key. The *fast forward x2* symbol appears on the screen.

Fast forward and **rewind** are four-speed keys. To increase the fast-forward speed a second, third and fourth time (x6, x12, x30), press the **fast forward** key again. The appropriate *fast forward* symbol appears on the screen.



To decrease the fast-forward speed, press the **rewind** key. The speed reduces in reverse-order to the above steps, and the appropriate *fast forward* symbol appears on the screen, until normal playback speed is reached.

If you fast-forward to the end of a recording, playback is paused at that point. To return to the channel you were previously watching, press the **stop** key (see below).

The **rewind** key behaves similarly to the **fast forward** key, but in the opposite direction.



Playing back in slow-motion

To play back a programme in slow-motion, press and hold the **play** key for at least two seconds.

To resume normal playback speed, press **play** again.



Stopping playback

To stop playback or pause, and return to the channel you were previously watching, press the **stop** key.



To stop playback and return to your *Sky⁺ Planner*, press the **back up** key.



To pause playback of a programme while it is being played back or fast-forwarded, press the **pause** key.



Using Bookmarks

Bookmarks are points, within a recorded programme, to which you can quickly return.


To set a bookmark while playing back a recorded programme, first press **pause**, then the *Bookmark* (red) key. The *pause* symbol is displayed with the message **Bookmarked** underneath.

To skip forward to the next bookmark, and then resume playback, press and hold **fast forward** for at least two seconds.

To skip backward to the previous bookmark, and then resume playback, press and hold **rewind** for at least two seconds.



To display a list of your bookmarked points press **pause**, then the *green* key. Each bookmark is displayed with its time, in minutes, relative to the start of the programme.

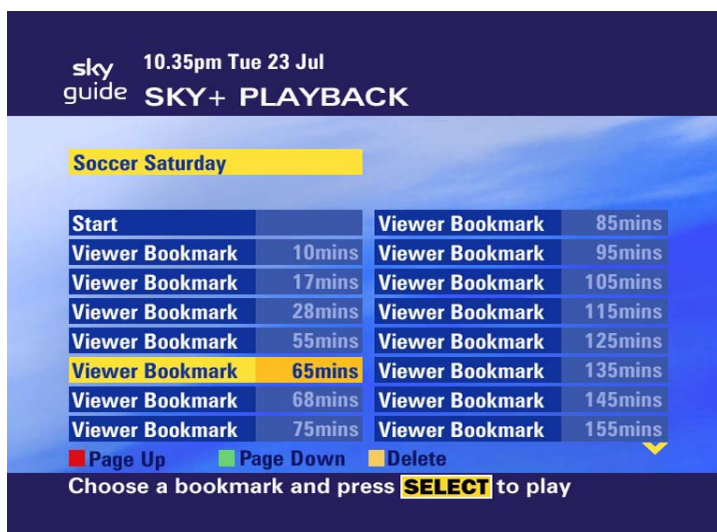

The start and end of the recorded programme are always displayed as the first and last bookmarks.








Use the arrows to highlight a bookmark, then press **select** to resume playback from the selected position.

If there are more bookmarks than can be displayed on the screen, you can display other parts of the list by using the *Page Up* (red) and *Page Down* (green) keys.

To remove a bookmark, highlight it, then press the *Delete* (yellow) key. The updated list is redisplayed with the bookmark removed.

Understanding on-screen symbols

In normal playback, the on-screen symbols are as follows:

 + 10mins	<p><i>play</i> – a green ring rotating clockwise, containing a single, forward-facing arrow.</p> <p><i>slow-motion</i> – the same as the play symbol, but half the speed of rotation.</p>
 + 42mins	<p><i>pause</i> – a static green ring, containing two vertical lines.</p>
 + 15mins	<p><i>fast forward</i> – a green ring rotating clockwise at double-speed, containing the selected fast-forward speed (x2, x6, x12 or x30).</p>
 + 25mins	<p><i>rewind</i> – a green ring rotating anti-clockwise at double-speed, containing the selected rewind speed (x2, x6, x12 or x30).</p>
 + 22mins	<p><i>skip forward</i> – a static green ring, containing a forward-facing arrow pointing to a vertical line.</p>
 + 16mins	<p><i>skip back</i> – a static green ring, containing a backward-facing arrow pointing to a vertical line.</p>
 Bookmarked	<p><i>bookmarked</i> – a pause symbol with the word <i>Bookmarked</i> beneath it.</p>

Below all symbols, with the exception of the *Bookmark* symbol, is the time in minutes since the start of the programme.



No playback symbols appear on-screen while the Search & Scan banner or programme information banner is displayed.

Displaying programme information during playback

Press the **i** key at any time during playback to display the programme information banner.

See also *Displaying more information* on page 18.

Playing back viewing-restricted programmes

You must enter your PIN to play back a programme that is the subject of a viewing restriction. See *Using Parental Control* on page 53, and *Viewing Restrictions* on page 54.



Using Copy

Providing you have a video recorder (VCR) connected to your Sky+ set top box, *Sky Guide* can copy recorded programmes directly to your video recorder, if, for example, you want to free up space on your hard disk.

Selecting a programme for copying

To select a recorded programme for copying:

1. Press **tv guide** then **0** to display your *Sky+ Planner*.
2. Use the up and down arrows to highlight the programme you want to copy, then press the *Copy* (red) key.

The status of the highlighted programme changes to *Copy*.

If you want to select additional programmes for copying, repeat step 2.

If you decide you do not want to copy a selected programme, highlight the programme, then press the *Copy* (red) key again.



To start the copying process:-

1. When you have selected all of the programmes you want to copy, press **play** or **select**.

Sky Guide then checks to ensure that none of the programmes will be parentally-restricted when they play back. If any of the programmes are parentally-restricted, you must enter your PIN to proceed.

2. Ensure that your VCR is recording, then press **play** or **select**.

You will see a screen detailing the amount of videotape required to record the selected programmes and a list of the programmes to be copied. The programmes will be listed in the same order that they were marked for *Copy* in your *Sky+ Planner*.

This is a contents marker for your videotape. If there are more than ten programmes, a series of screens is displayed.

Each screen is displayed for ten seconds.



The screenshot shows a television screen with a dark blue header. The header contains the 'sky guide' logo on the left, the time '10.35pm Tue 23 Jul' in the center, and the text 'SKY+ COPY' on the right. Below the header is a table with four rows of programme information. The first three rows are for 'WWE Raw', 'Ford International Football', and 'Extreme Machines'. The fourth row is for 'The Simpsons'. To the right of these rows is a yellow box containing the text 'Total Duration 260mins'.

Programme	Channel	Duration
WWE Raw	Sky Sports 1	90mins
Ford International Football	Sky Sports 1	90mins
Extreme Machines	Discovery	50mins
The Simpsons	Sky One	30mins

Total Duration 260mins

Each programme marked as *Copy* is then played back in turn from start to finish, preceded by its programme information screen (see page 19).

To stop the copying process at any time, press any key.

Some programmes are copy-protected and cannot be copied to your video recorder. Copy-protected programmes are marked with a **C** on the programme information banner. See *Displaying more information* on page 18.

Copying programmes to your video recorder happens at normal speed. This means if a programme is two hours long, it will take two hours to copy it to your video recorder.



Make sure you have sufficient videotape before starting the copying process.



During the copying process, on-screen warnings about lack of disk space for recording (which are normally displayed if disk space management is set to Warn or Manual) will not be displayed.



Some video recorders, when connected via a SCART cable to your Sky⁺ set top box, will start recording automatically when you start copying programmes. For more information on whether this feature is supported, see the user guide that came with your video recorder.




It is advisable to start copying during a period when you can leave your Sky⁺ set top box and video recorder unattended, as you will be unable to watch other programmes via your Sky⁺ set top box while copying takes place. If the process is interrupted, by pressing any of your Sky⁺ remote control keys, the copying process will end.

Services

Press **services** on your Sky+ remote control to see the **Services** screen.

services

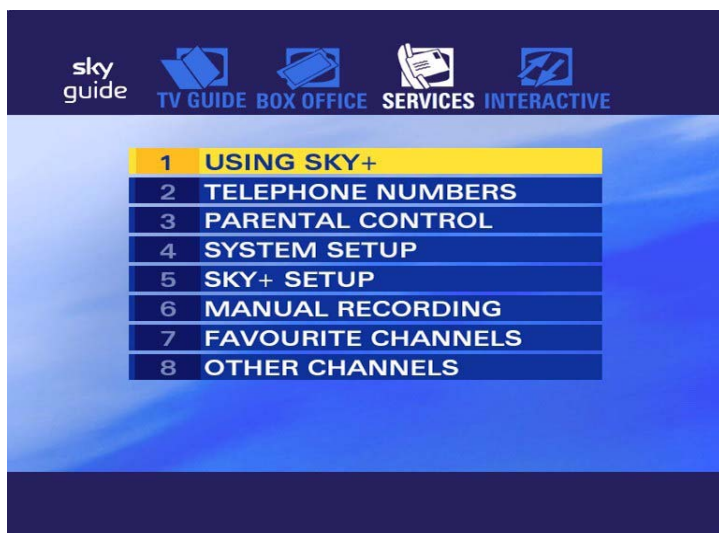

Services allows you to:

- view information on using your Sky+ set top box;
- use the *Parental Control* facility;
- set up your *Favourite Channels*;
- add *Other Channels*;
- display a list of useful phone numbers;
- set up manual recordings. For more information see *Using Sky+ for recording radio channels* on page 38.

You can also see and modify the settings for your Sky+ set top box.



Use the arrows to move the highlight around the screen; use select and all the other keys just as you do elsewhere.

Parental Control and your PIN

To display the *Parental Control* screen, press **services** on your Sky+ remote control. Highlight *Parental Control*, then press **select**. You will be asked to enter a PIN (Personal Identification Number). Your initial PIN is the last four digits of the number that is on the back of your *Sky Viewing Card*.

Your PIN enables you to control which programmes are seen in your home. It also allows you to prevent recorded programmes from being deleted.

You can change your PIN at any time. For more information, see *Changing your PIN* on page 56.

Parental Control lets you specify what categories of programme you can view and how much you can spend on a programme you order before you need to use your PIN.



If your Sky+ set top box is not connected to your telephone line, or if you forget your PIN, you must call Sky Customer Service to change your PIN or spending limit (see page 55). To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.

Using Parental Control

After you correctly enter your PIN, the *Parental Control* screen is shown.




Viewing Restrictions

To see the *Viewing Restrictions* screen, highlight *Viewing Restrictions* on the *Parental Control* screen, then press **select**.

The *Viewing Restrictions* screen lets you specify the programme categories that cannot be viewed or recorded unless your PIN is entered. Viewing restrictions can be applied only to programmes where the broadcaster provides category-restriction information.

To restrict a category of programme, highlight it, then press the *Restrict* (red) key. A cross marks a category you have restricted.

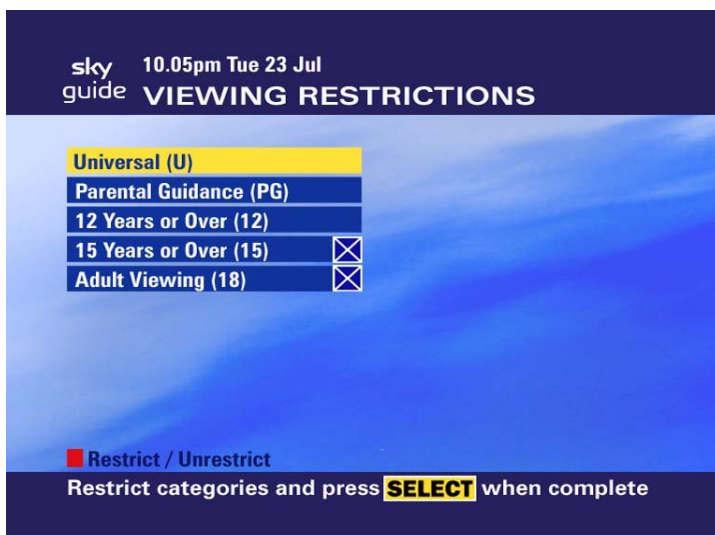

To remove a restriction, highlight the category, then press the *Unrestrict* (red) key. The cross is removed, indicating that the restriction has been removed.

When you have finished setting or changing viewing restrictions, press **select**.

You may watch programmes in restricted categories only if you first enter your PIN.


Spending Limit

To see the *Spending Limit* screen, highlight *Spending Limit* on the *Parental Control* screen, then press **select**.

The *Spending Limit* screen lets you specify how much a programme can cost before your PIN is required to order it. For example, if you set the limit at £3.50, you can order a programme costing £3.50 (or less) without using your PIN, but you would need your PIN for a programme costing £3.51 or more.

To set a spending limit, complete the following steps:


1. Highlight *Spending Restriction* and use the left or right arrow to set it to **ON**.
2. Highlight *PIN required for purchases over* and use the left or right arrow to set the maximum amount that a programme can cost before your PIN is needed.
3. Highlight *Save New Settings* and then press **select**.

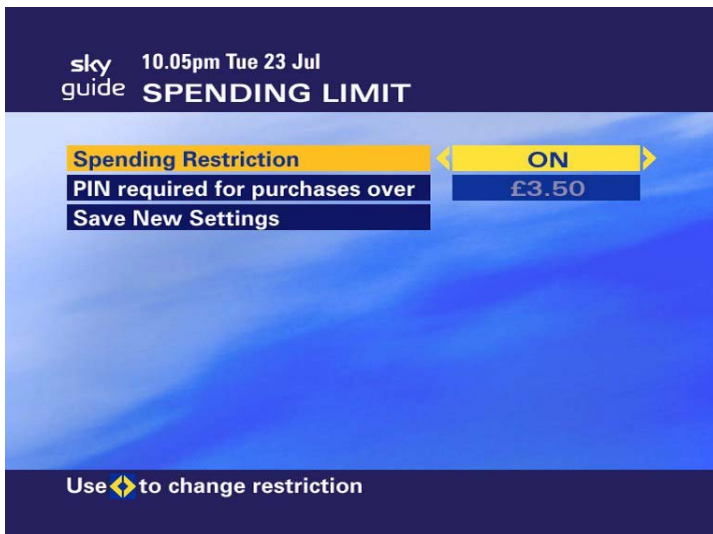

If you set your spending limit at £0.00, your PIN will always be required when you order a Box Office programme.

Changing your PIN

To see the *Change PIN* screen, highlight *Change PIN* on the *Parental Control* screen, then press **select**.

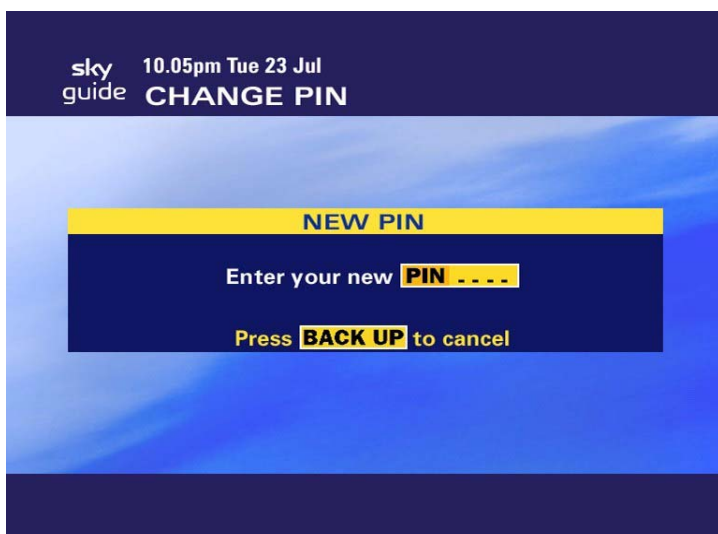

The *Change PIN* screen lets you change your PIN any time you wish. To change your PIN you must key in your new PIN twice.



Keep your PIN secret!



Choose a PIN you can remember. If you forget your PIN, call Sky+ Customer Service. To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.



If you start to change your PIN but then decide not to, press back up. Your PIN will stay as it was.



If your Sky+ set top box is not connected to your telephone line, you will have to call Sky+ Customer Service to change your PIN or spending limits.

Record Settings

To see the *Record Settings* screen, highlight *Record Settings* on the *Parental Control* screen, then press **select**.

The *Record Settings* screen lets you PIN-protect recorded programmes you have marked as *Keep* in your *Sky+ Planner*.



To PIN-protect programmes marked as *Keep*:

1. Highlight *PIN Protect Kept Programmes* and use the right arrow to select **YES**.
2. Highlight *Save New Settings* and then press **select**.

Favourite Channels

You can create a list of the channels you watch most often, so that *Sky Guide* can tune to your favourite channels quickly. You can have up to twenty favourite channels.

To see the *Favourite Channels* screen, press **services**, highlight *Favourite Channels*, then press **select**. The *Favourite Channels* screen is shown. This screen lists the available channels by channel number.



 When you first get your Sky+ set top box, the Favourite Channels screen has no favourite channels set.

Adding a Favourite Channel

You can use the *Favourite Channels* screen to tick (✓) the channels you watch most often. To do this:

1. Use the arrows or the *Page Up* (red) and *Page Down* (green) keys to move through the list.
2. To mark a channel as a favourite, highlight it, then press the *Favourite* (yellow) key. The channels you have selected as favourites are marked with a tick (✓) and added to your *Favourite Channels* list.

If you want to see more information about a channel, highlight it, then press *i*. Press **back up** to remove the information.

3. Press **select** when you have finished adding favourite channels.

Removing a Favourite Channel

To remove a channel from your list of favourites, highlight it on the *Favourite Channels* screen, then press the *Favourite* (yellow) key.

The tick (✓) disappears and the selected channel is removed from your list of favourites.

Using a Favourite Channel

You can easily check what is on your favourite channels and tune to them whenever you are watching television, without interrupting the programme you are watching.

To search through your favourite channels:

1. Press **select** to display the *Search & Scan* banner.
2. Press the *Search Favourite* (blue) key. This will show you information about the first of your favourite channels, which is indicated by a tick (✓) at the top of the *Search & Scan* banner.

Each time you press the *Search Favourite* (blue) key, programme information for another of your favourite channels is shown in the banner.

- If you see a programme you want to watch and it is on now, press **select**; *Sky Guide* tunes your Sky⁺ set top box to the channel showing the programme.
- If you see a programme you want to watch and it is on later, press **select**; *Sky Guide* will set a reminder.
- If you see a programme you want to record, press **R**; *Sky Guide* will then record the programme.

Other Channels



Other Channels include channels that your Sky⁺ set top box is capable of receiving but for which listings may not be available in *Sky Guide*, for example foreign-language channels. Your Sky⁺ set top box cannot record programmes that are not listed in *Sky Guide*.

To see the *Other Channels* screen, press **services**, highlight *Other Channels*, then press **select**. The *Other Channels* list is shown on your screen.

To watch one of these channels, highlight it, then press **select**.

When you first get your Sky⁺ set top box, the *Other Channels* screen is empty. For more information, see *Adding Other Channels* on page 68.

Interactive

Interactive services are available through your Sky⁺ set top box. You can shop, bank, get information, play games and send and receive e-mails, simply by using your Sky⁺ remote control.

Press **interactive** on your Sky⁺ remote control to see the *Interactive* screen.

Choose the service you require by pressing the number on your Sky⁺ remote control that corresponds to the number of the service.

You can get most interactive services by using your *Sky Viewing Card*. However, some services may need a specific *Interactive Card*, which you insert into the *Interactive Card* slot in the front of your Sky⁺ set top box.

Some TV programmes are enhanced with interactive applications. These programmes have an on-screen symbol to indicate that there is an associated interactive application. Press the colour key indicated on the screen to start the application.



Only insert a card into the Interactive Card slot when an instruction to do so appears on the screen.



Use the arrows to move the highlight around the screen; use select and all the other keys just as you do elsewhere.



Your Sky⁺ set top box cannot record interactive services or applications.

Extra information

Setting your Sky+ remote control to operate your TV

Your Sky+ remote control can operate both your Sky+ set top box and your TV.

Your Sky+ remote control should have been set up to work with your TV when your Sky+ set top box was installed.

If your Sky+ remote control is not correctly operating your TV, complete the following steps.



Before you start, look up the four-digit code for your brand of TV in this list.

Brand	Code	Brand	Code	Brand	Code
Akai	0098	Granada	0340	Panasonic	0051
Alba	0043	Grundig	0345	Philips	0081
Amstrad	0063	Hinari	0365	Saisho	0649
Bush	0157	Hitachi	0145	Samsung	0060
Decca	0244	JVC	0053	Sanyo	0159
Ferguson	0293	Matsui	0477	Sharp	0093
Fidelity	0294	Mitsubishi	0150	Sony	0000
Finlandia	0296	NEI	0514	Tatung	0049
Goodmans	0335	Nokia	0536	Toshiba	0156



If your brand of TV is not shown here, refer to Remote control setup codes on page 84.

1. Turn your TV on.
2. Press **tv** on your Sky+ remote control.
3. Hold down **select** and the red key together for about two seconds, until the red light on your Sky+ remote control blinks twice.
4. Press **tv** on your Sky+ remote control again.
5. Key in the four-digit code for your brand of TV. The light on your Sky+ remote control should blink twice.

If the light blinks once only, recheck the code for your brand of TV and start again at Step 1.

6. Press the **standby** key on your Sky⁺ remote control.



If your TV switches off, press **select**. The light on your Sky⁺ remote control should blink twice.

If your TV does not switch off, press **tv**, then press the **standby** key.



Repeat this action (press **tv**, then the **standby** key) until your TV turns off, then press **select**.



If the light on your Sky⁺ remote control blinks three times, it has checked all the possible settings for the code you used. Check that you have the correct four-digit code and start again at Step 1.

7. Turn your TV back on again and then press **tv guide**.

If you see the *TV Guide* screen, the remote control setup process is complete.

If you do not see the TV Guide screen, you must now complete the following steps.

8. Press **tv** on your Sky⁺ remote control.
9. Hold down **select** and the green key at the same time for about two seconds, until the red light on your Sky⁺ remote control blinks twice.
10. Key in the number of the channel on your TV that you use for watching satellite TV.
11. Press **select** on your Sky⁺ remote control. The red light should blink twice. The remote control setup process is now complete.



If after trying this, you still have problems, call Sky⁺ Customer Service. To find the Sky⁺ Customer Service number, select the Telephone Numbers option from the Services screen.

Setting your Sky Active keypad to operate your Sky⁺

Your *Sky Active* keypad can be set up to operate your Sky⁺ set top box for functions other than recording and playback. To set up your keypad:

1. Turn your TV on.
2. Press the **TV/sat** button on your keypad.
3. Hold down **select** and the blue key at the same time for about two seconds, until the red light on your keypad blinks twice.
4. Press **2** then **select**.
5. Press **Sky** on your keypad.

Replacing the batteries in your Sky⁺ remote control

When the batteries in your Sky⁺ remote control need replacing, you will require two new AA (MN1500, LR6 or UM-3) batteries. A warning message will appear on-screen advising you that it is time to replace the batteries.

To replace the batteries:

1. Hold the upper, silver part, of your Sky⁺ remote control in one hand. With your other hand, push the catch on the battery cover upwards and remove the cover by pulling it outwards.



2. Remove the old batteries from the battery compartment.
3. Fit the new batteries, ensuring that you match the + and – marks on the batteries to their respective marks inside the battery compartment.
4. Refit the battery cover, ensuring that the two lugs on the cover engage correctly in the casing, and that the bottom catch clicks into place.



Don't leave flat batteries in your remote control.



Replace both batteries at the same time.




If you leave your Sky⁺ remote control without batteries for more than 10 minutes, your remote control settings for operating your TV will be lost. In this case, after replacing the batteries, you will be able to control your Sky⁺ set top box as normal, but you will have to reset your Sky⁺ remote control to operate your TV. For more information, see [Setting your Sky⁺ remote control to operate your TV](#) on page 62.

System Setup

There should be no need for you to use the *System Setup* screens as your Sky+ set top box should have been correctly set up when it was installed.

However, the *System Setup* screens can be useful if, for example, you buy a new TV and you want to make sure your Sky+ set top box makes the best use of your new TV's features.

To use the *System Setup* screens, press **services** on your Sky+ remote control. The *Services* screen appears on your TV. Highlight the *System Setup* option, then press **select**. The *System Setup* screen appears on your TV.

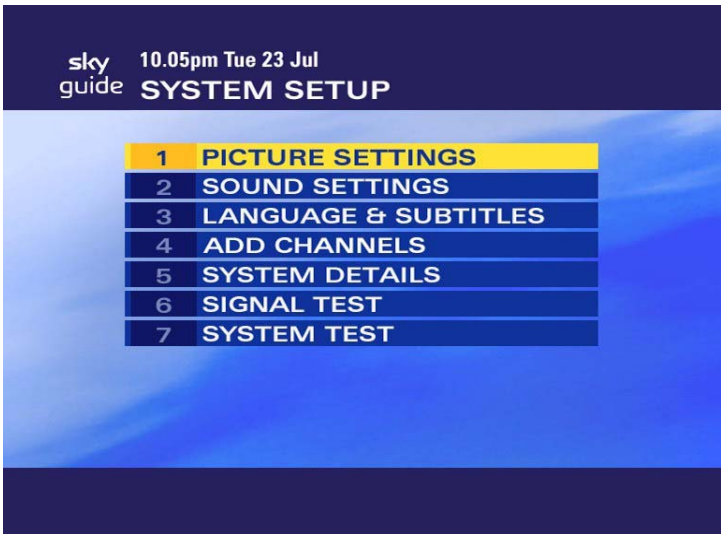

These *System Setup* options let you set the following:

- *Picture Settings* – to see and change the Sky+ set top box picture format, video output type, contrast level and timeout for the *Search & Scan* banner. Select *Save New Settings* to confirm any changes or press **back up** to cancel.
- *Sound Settings* – to see and change the type of sound output and standard volume level, the optical digital-audio output setting (needed to receive a *Dolby Digital 5.1* signal, see page 67) and to turn background music on or off. You can also turn the beep on or off. Select *Save New Settings* to confirm any changes or press **back up** to cancel.
- *Language and Subtitles* – to see and change the preferred audio language and to turn subtitles on or off, where available. Some programmes may offer a choice of language and/or subtitles. Select *Save New Settings* to confirm any changes or press **back up** to cancel.



You can easily reset the settings for your Sky⁺ set top box to the standard settings. Press the Reset (red) button when viewing the Picture Settings, Sound Settings and/or Language and Subtitles screens. Select Save New Settings to confirm any changes you make or press back up to cancel.

- **Add Channels** – add *Other Channels* to your *Sky Guide*. For more information, see *Other Channels* on page 60 and *Adding Other Channels* on page 68.
- **System Details** – to see details of your Sky⁺ set top box, including your Sky⁺ set top box model number, manufacturer and your Sky Viewing Card number.
- **Signal Test** – to test the quality of the signals your Sky⁺ set top box is receiving from the satellite via your satellite dish.
- **System Test** – to check that your Sky⁺ set top box is properly connected to your telephone line.



The System Details, Signal Test and System Test can be useful if you ever have to call for technical help or repairs to your Sky⁺ set top box.

Optical digital-audio output

Your Sky⁺ set top box has an optical digital-audio output that can be connected using an optical cable (not supplied) to suitable hi-fi / audio equipment that is capable of decoding a *Dolby Digital* signal.

If you are watching a programme that has a *Dolby Digital* soundtrack (indicated by the letters DD in the title bar of the programme synopsis), this connector will normally output a *Dolby Surround Pro Logic* signal. Within *System Setup* you can configure this connector to output a *Dolby Digital* signal, which can then be decoded by your hi-fi/audio equipment.

To turn on the *Dolby Digital* signal:

1. Highlight *Sound Settings* on the *System Setup* screen, then press **select**.



2. Highlight *Optical Output* and use the left or right arrow to change the setting to *Dolby D*.
3. Press the down arrow to highlight *Save New Settings*, then press **select**.



Dolby Digital audio is available only if the programme is broadcast with a Dolby Digital soundtrack.

Adding Other Channels

There is normally no need for you to tune in satellite channels because *Sky Guide* tunes in all the available channels for you, including new channels as they are added to the digital satellite TV service.

Your Sky⁺ set top box is designed for receiving digital television signals transmitted at 28.2 or 28.5 degrees East, either unencrypted or encrypted using BSkyB's encryption system. Reception of other digital satellite signals may be possible but is not guaranteed.

If you want to tune in other channels that are not listed in *Sky Guide*, for example foreign-language channels, complete the following steps:

1. Select the **Add Channels** option from the **System Setup** screen. The **Add Channels** screen appears on your TV.



2. Highlight **Frequency** and use the numbers to key in the transponder frequency.
3. Highlight **Polarisation** and use the left or right arrow to set the polarisation for the transponder.
4. Highlight **Symbol Rate** and use the left or right arrow to set the symbol rate for the transponder.
5. Highlight **FEC** and use the left or right arrow to set the FEC setting for the transponder.
6. Highlight **Find Channels**, then press **select**. *Sky Guide* checks the settings you entered and looks for any new channels at those settings.

The **New Channels** screen appears on your TV. This is a list of the channels that your Sky⁺ set top box has found. You can select those you want to add to the **Other Channels** list.



7. To add a channel, highlight it, then press the **Store Channel** (yellow) key.
8. When you have finished adding **Other Channels**, press **select**. You will see a screen confirming your new channel line-up.



To watch any of the Other Channels you have added, press services and select the Other Channels option. For more information, see Other Channels on page 60.



Your Sky⁺ set top box cannot record programmes listed on the Other Channels screen.

Sky+ Setup

To display the *Sky+ Setup* screen, highlight *Sky+ Setup* on the *Services* screen and press **select**. *Sky+ Setup* allows you to:

- change the way in which *Sky Guide* manages your recordings;
- change the length of time of the *Instant Rewind* recording;
- add extra time to the start and end of recordings;
- choose the way in which the front-panel indicator works.



Disk Space Management

To change the way in which *Sky Guide* manages your recordings:

1. Highlight *Disk Space Management* and use the left or right arrow to change the setting.
2. When you have selected your preferred setting, press the down arrow to highlight *Save New Settings*, then press **select**.

You can choose one of three settings:

- *Automatic* – recorded programmes will be deleted automatically when there is insufficient space to record new programmes.

Sky Guide will first delete recorded programmes you have previously watched, then recorded programmes that you have not watched.

Sky Guide will not delete recorded programmes marked as *Keep* or viewed *Box Office* programmes.



- **Warn** – you will be notified shortly before your Sky+ set top box runs out of disk space.

Press **select** to continue the new recording and delete the old recording(s). Press **back up** to keep the old recording(s); the new recording will stop when there is no more disk space.

If you do not respond, the new recording will continue and the old recording(s) will be deleted automatically.

- **Manual** – you will be notified shortly before your Sky+ set top box runs out of disk space. Recording(s) will never be deleted automatically.

Press **select** to continue the new recording and delete the old recording(s). Press **back up** to keep the old recording(s); the new recording will stop when there is no more disk space.

If you do not respond, the old recording(s) are not deleted and the new recording will stop when there is no more disk space.



If, despite deleting previous recordings, there is still insufficient disk space available for a new recording, Sky Guide will only partially record your selected programme.

Instant Rewind

This is the recording Sky+ makes automatically of the currently viewed channel. To change the length of time of the *Instant Rewind* recording:

1. Highlight *Instant Rewind*.
2. Use the left and right arrow keys to change the setting.

You can choose one of four settings: *Off*, *5*, *15* or *60 minutes*.



To disable the Instant Rewind feature, you must choose the 'Off' setting.

3. Press the down arrow to highlight *Save New Settings*, then press **select**.

For more information, see *Using Instant Rewind* on page 14.



Add to start and end of recordings

To add extra time to the start of recordings:

1. Highlight *Add to Start of Recording*.
2. Use the left and right arrow keys to change the setting.

You can choose one of six settings:

- **Automatic** – your Sky⁺ set top box will automatically calculate the best way to record the whole programme, even if it overruns;
- **0, 1, 2, 5 or 10 minutes** – the extra recording time that will be added to the scheduled start time of recordings.

To add extra time to the end of recordings, highlight *Add to End of Recording* and use the left and right arrow keys to choose one of the settings shown above.

3. Press the down arrow to highlight *Save New Settings*, then press **select**.



Where recordings are back-to-back, any extra time added to the start and end of recordings may be dropped in favour of the next recording.




Front-panel recording/playback indicator

To choose the way in which the front-panel indicator works:

1. Highlight *Front Panel Indicator* and use the left or right arrow to change the setting.
2. When you have selected your preferred setting, press the down arrow to highlight **Save New Settings** and press **select**.

You can choose one of three settings:

- **Standard** – the recording, playback and/or circular playback indicators light up if recording and/or playback is in progress.
- **Off** – the circular indicator is turned off, but the recording and/or playback indicators light up if recording and/or playback are in progress.
- **Demo** – all of the indicators light up in a continuous sequence of operation.

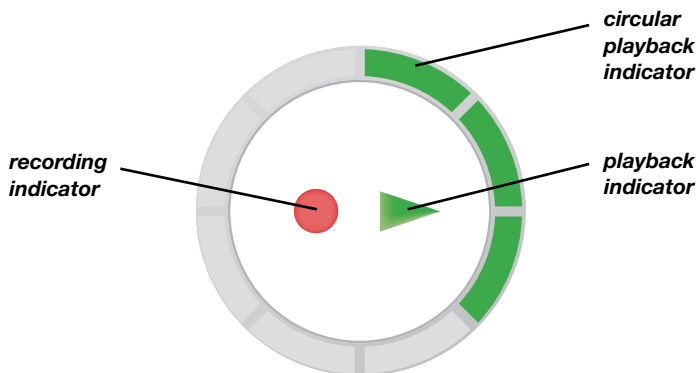


Looking after your Sky Viewing Card

- Do not remove and re-insert your *Sky Viewing Card* unnecessarily. There is no need to remove your *Sky Viewing Card* unless it is faulty or has expired.
- Do not bend your *Sky Viewing Card*.
- Keep your *Sky Viewing Card* away from heat and sunlight.
- Keep your *Sky Viewing Card* dry. Never clean it with fluids – use a soft, dry tissue.
- Keep your *Sky Viewing Card* away from small children and pets.

Connecting your Sky⁺ set top box

This section shows you how your Sky⁺ set top box:


- can be connected to other equipment such as your hi-fi / audio system;
- can be reconnected after minor changes, for example, after you have moved your TV or Sky⁺ set top box;
- settings can be updated.

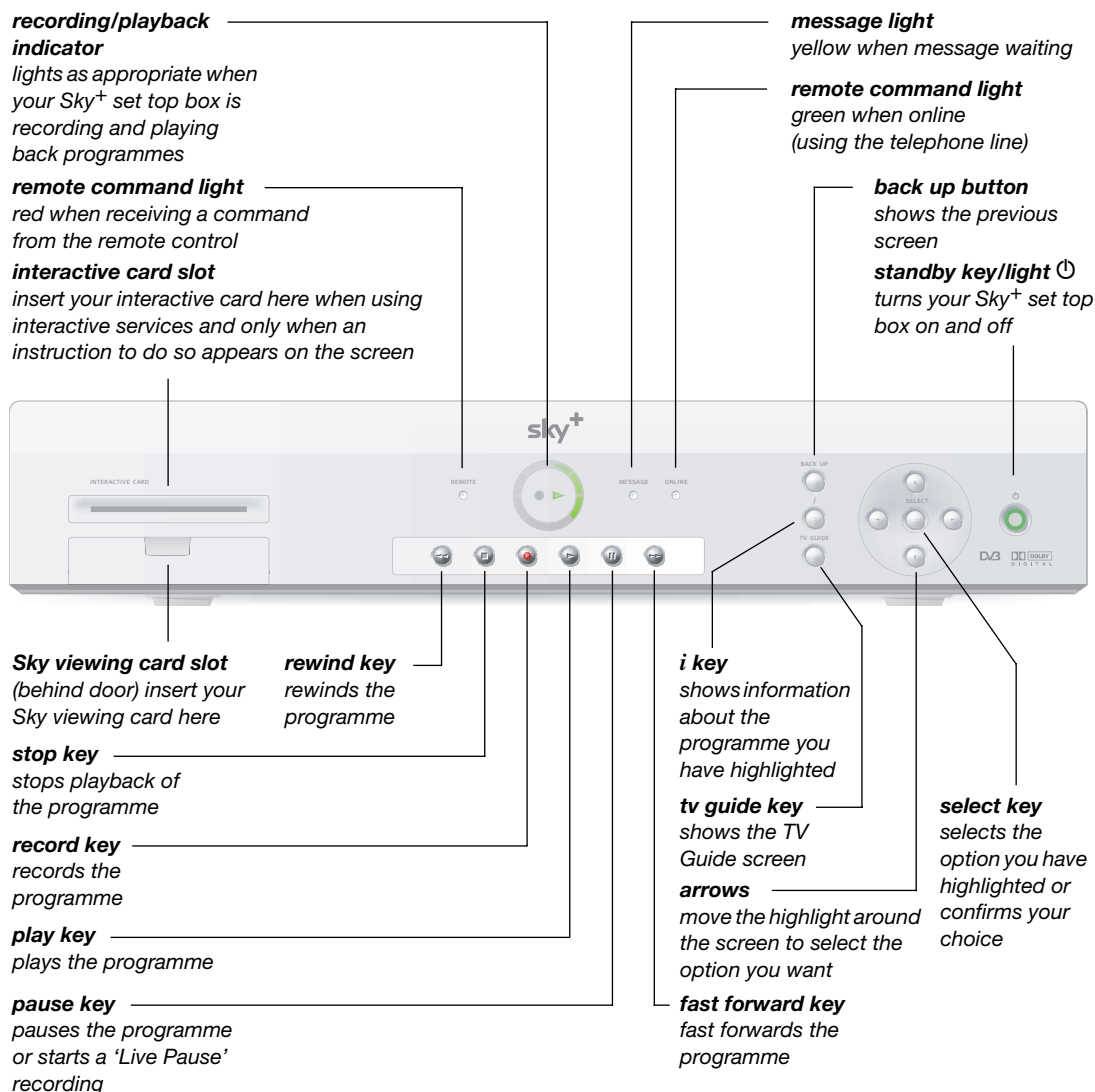

CONNECTING YOUR SKY⁺ BOX

WARNING!

You must disconnect your Sky⁺ set top box from the mains supply before you connect your Sky⁺ set top box to (or disconnect it from) any other equipment.

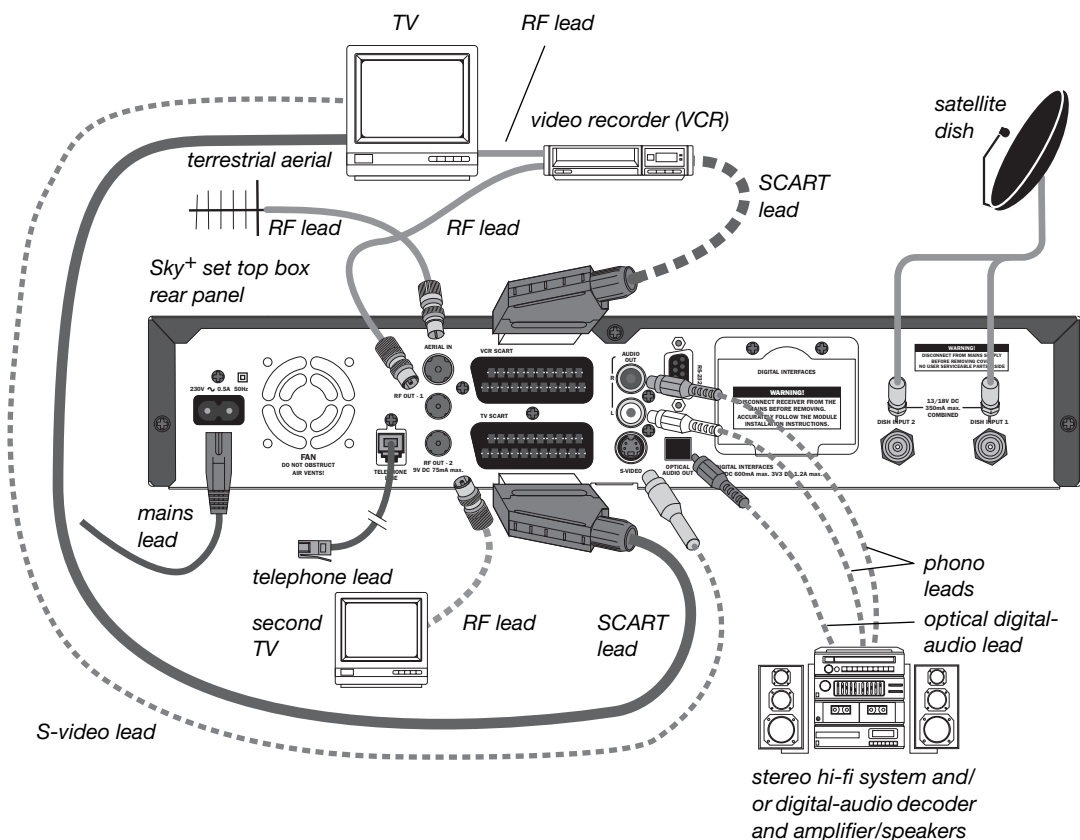

With the exceptions of the mains and the telephone line, all the interconnections between the rear panel of your Sky+ set top box and your other equipment are safe, extra-low voltage circuits.

Connecting to the telephone line

The telephone lead (labelled in the diagram above) is intended for connection to standard analogue UK telephone lines. This lead and your Sky+ set top box have been specifically designed for this purpose. Do not attempt to connect the telephone lead to anything other than a standard UK telephone line.

Digital interface

On the rear panel of your Sky+ set top box there is a plate, which covers a general-purpose interface. This is for future plug-in modules, which will have their own installation instructions. Only plug-in modules that are authorised by Sky must be used. **You must disconnect your Sky+ set top box from the mains before removing the plate or plugging in a module.**

Further help

For further information and tips on getting the most out of your Sky⁺ set top box, tune to channel 999, the *Sky Customer Channel*, or 998, the *Sky Welcome Channel*.

If you need help or information about your TV or video recorder, please refer to the instruction books that came with them.

If you are having problems using your Sky⁺ set top box, see *Solving problems* on page 78.

You can also use *Sky Guide* to get help:

1. Press the **interactive** key on your Sky⁺ remote control.
2. Highlight *Sky Customer Service*, then press **select**. In a few moments the *Sky Customer Service* screen will appear.
3. Highlight *Technical Assistance*, then press **select** and use the on-screen menus to find the help you need.



If you still have a problem, call Sky⁺ Customer Service. To find the Sky⁺ Customer Service number, select the Telephone Numbers option from the Services screen.

Make sure you have your Sky Viewing Card number, Sky⁺ set top box brand and model number available before you call. You can find this information on the System Details screen. To see this screen, press services on your Sky⁺ remote control, select the System Setup option, and then select System Details.

Solving problems

On-screen messages

Message	Possible reason	What to do now
<i>Insert your Sky Viewing Card</i>	There is no viewing card in the <i>Sky Viewing Card</i> slot in your Sky ⁺ set top box.	Insert your viewing card into the <i>Sky Viewing Card</i> slot.
<i>There is a problem with your Sky Viewing Card</i>	Your Sky ⁺ set top box cannot recognise your viewing card.	Check it is your <i>Sky Viewing Card</i> . Check it is in the right way up. Check that your card is not damaged. If the problem continues, call Sky ⁺ Customer Service. To find the Sky ⁺ Customer Service number, select the <i>Telephone Numbers</i> option from the <i>Services</i> screen.
<i>Insert your new Sky Viewing Card</i>	You have inserted your old <i>Sky Viewing Card</i> .	Remove your old <i>Sky Viewing Card</i> and insert your new <i>Sky Viewing Card</i> .
<i>This viewing card is not authorised</i>	Your <i>Sky Viewing Card</i> is not authorised.	Call the telephone number shown on your screen to get your <i>Sky Viewing Card</i> authorised.
<i>There is a problem with your viewing card</i>	Your <i>Sky Viewing Card</i> has developed a problem.	Call Sky ⁺ Customer Service. To find the Sky ⁺ Customer Service number, select the <i>Telephone Numbers</i> option from the <i>Services</i> screen.
<i>This is the wrong card for this Sky⁺ set top box. Insert the correct Sky Viewing Card</i>	You have more than one set top box and have put the wrong <i>Sky Viewing Card</i> in this Sky ⁺ set top box.	Insert the correct <i>Sky Viewing Card</i> for this Sky ⁺ set top box.
<i>You cannot purchase this programme at the moment</i>	You cannot buy this programme now.	You may be able to buy it later.
<i>This programme has already started</i>	The programme has already started and you cannot purchase it now.	Check the listings to find out when it is next on.
<i>The Sky⁺ Planner is full. You must delete an entry before another programme can be added.</i>	You already have the maximum number of programmes in your <i>Sky⁺ Planner</i> . You must delete some.	Highlight the programmes you want to delete from your <i>Sky⁺ Planner</i> and press the <i>Delete</i> (yellow) key.
<i>There is insufficient credit left on your viewing card</i>	There is not enough credit left on your <i>Sky Viewing Card</i> account to buy this programme.	First check that the telephone lead between your Sky ⁺ set top box and the socket is properly plugged in. If the message persists, call the number shown on your screen so you can order this programme.

Message	Possible reason	What to do now
<i>There is insufficient space left on your viewing card</i>	There is not enough space on your Sky Viewing Card to store the information for this programme.	First check that the telephone lead between your Sky ⁺ set top box and the socket is properly plugged in. If the message persists, call the number shown on your screen so you can order this programme.
<i>You have entered your PIN incorrectly three times. PIN is now blocked for 10 minutes</i>	Your PIN has been entered incorrectly three times in a row.	You will not be able to access anything that needs a PIN for 10 minutes. If you have forgotten your PIN, call Sky ⁺ Customer Service. To find the Sky ⁺ Customer Service number, select the Telephone Numbers option from the Services screen.
<i>No satellite signal is being received</i>	Your Sky ⁺ set top box is not receiving a satellite signal.	Check the cables from your satellite dish are correctly plugged into the back of your Sky ⁺ set top box. Always turn your Sky ⁺ set top box off at the mains before plugging-in or unplugging any other equipment. If the problem continues, call Sky ⁺ Customer Service. To find the Sky ⁺ Customer Service number, select the Telephone Numbers option from the Services screen.
<i>Ensure that an operating telephone line is connected</i>	Your Sky ⁺ set top box is not connected to an operating telephone line.	Check that the telephone lead between your Sky ⁺ set top box and the socket is properly plugged in. Always turn your Sky ⁺ set top box off at the mains before plugging-in or unplugging any other equipment.
<i>No signal found</i>	Your Sky ⁺ set top box was not able to find a signal after you asked it to find new channels.	Check the settings you entered were correct.
<i>This programme is no longer available</i>	You have selected a programme that is no longer available in your Sky⁺ Planner .	Select another programme.
<i>Digital text is not available during playback</i>	Your Sky ⁺ set top box does not record digital text.	In order to view digital text, press Sky to return to live programmes, then press text .
<i>You cannot record/play back this programme</i>	An unexpected error has occurred with your Sky ⁺ set top box when you attempted to record or play back a programme.	Call Sky ⁺ Customer Service. To find the Sky ⁺ Customer Service number, select the Telephone Numbers option from the Services screen.

Message	Possible reason	What to do now
<i>System fault. Sky+ playback and recording are unavailable.</i>	An unexpected error has occurred with your Sky+ set top box during system setup.	Call Sky+ Customer Service. To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.
<i>Housekeeping. Please wait.</i>	Your Sky+ set top box is attempting to resolve a system fault.	Wait for your Sky+ set top box to resolve the problem; if it is not resolved call Sky+ Customer Service. To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.
<i>Recording interrupted by loss of signal or cancellation. Please wait.</i>	Your Sky+ set top box temporarily lost the satellite signal during recording, or recording was cancelled and restarted during the programme.	This message may be seen during playback of a recorded programme. After a few seconds your Sky+ set top box will continue playback from the point when the satellite signal returned or recording was turned on.
<i>Play/Pause/Record are not available whilst in an interactive application</i>	You have attempted to play, pause or record a programme while you are using an interactive application.	You cannot use these features while you are using an interactive application. Press Sky on your Sky+ remote control to leave the interactive application before using these keys.
<i>You cannot record this programme</i>	You have attempted to record a programme which cannot be recorded by your Sky+ set top box.	Select a different programme.
<i>Recording/Live Pause is not available</i>	Your Sky+ subscription has expired.	Call Sky+ Customer Service to renew your subscription. To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.
<i>The batteries in this remote control are low. Please replace within the next few days. (Or a battery symbol in the Search & Scan banner)</i>	The batteries in the remote control need to be changed.	Change the batteries in your remote control as soon as possible.
<i>Synopsis not available</i>	You have pressed the i key while Sky+ is recording two programmes at the same time.	Follow the on-screen instructions. Sky+ cannot display a programme synopsis while recording two programmes at the same time.

General problems

Problem	Possible reason	What to do now
You've forgotten your PIN.		Call Sky+ Customer Service. To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.
You can't find your Sky+ remote control.		Use the buttons on the front of your Sky+ set top box. You can perform most functions using these buttons.
Nothing is happening.	<p>Your Sky+ set top box is not plugged into the mains.</p> <p>Your Sky+ set top box is switched off (the standby light (Ⓢ) is red).</p>	<p>Make sure the mains lead is properly plugged in and your Sky+ set top box is switched on.</p> <p>Press Sky on your Sky+ remote control.</p>
Your Sky+ remote control isn't working.	The batteries are flat or something is between your Sky+ remote control and your Sky+ set top box.	Make sure you point your Sky+ remote control directly at your Sky+ set top box, and that nothing is between it and your Sky+ set top box. The remote command light should flash on your Sky+ set top box and on your Sky+ remote control each time you push a remote control key. If neither light flashes, check the batteries in your Sky+ remote control.
Your Sky+ remote control works with your TV but not with your Sky+ set top box.	Someone has pressed tv on your Sky+ remote control.	Press tv then Sky on your Sky+ remote control.
Your Sky+ remote control isn't working with your TV.	Someone has pressed Sky on your Sky+ remote control.	Press tv on your Sky+ remote control.
tv , vol and mute keys don't work with your TV.	Your Sky+ remote control isn't properly set to operate your TV.	Refer to Setting your Sky+ remote control to operate your TV on page 62.
You can't find a channel you have previously watched.	The channel only broadcasts for part of the day.	Check the TV Guide listings to see when the channel is available.
On-screen interference.	Your TV or video recorder is not correctly tuned.	Check that your TV and video recorder are correctly tuned to your Sky+ set top box. For further information, refer to your TV and video recorder instruction books. In some cases your Sky+ set top box may need re-tuning. Call Sky+ Customer Service for further advice. To find the Sky+ Customer Service number, select the Telephone Numbers option from the Services screen.

Specifications

Due to continued product improvement, this specification may change without notice.

General

Operating voltage:	230 V AC \pm 15%; 50 Hz
Power consumption:	60 W (max.); 45W (typical)
Weight:	4.5 kg (packed)
Dimensions (W x H x D):	380 mm x 72 mm x 243 mm
UHF modulator:	CCIR PAL System I; Ch. 21 to 69 (factory setting is 68)
Operating temperature range:	0°C to +40°C
Storage temperature range:	-20°C to +60°C

Rear-panel connectors

MAINS INPUT:	IEC 320 2-pin
DISH INPUT 1:	female F-type
DISH INPUT 2:	female F-type
TV SCART:	SCART (composite video out; RGB out)
VCR SCART:	SCART (composite video in/out; RGB in)
S-VIDEO OUT	4-way mini-DIN
TELEPHONE LINE:	RJ11
AERIAL IN:	IEC 169-2 female
RF OUT - 1:	IEC 165-2 male
RF OUT - 2:	IEC 165-2 male
AUDIO OUT (LEFT and RIGHT):	Phono sockets
OPTICAL AUDIO OUT	Optical digital-audio socket
DIGITAL INTERFACE:	General-purpose interface for future plug-in modules
RS-232:	DB-9 female, data communications equipment (DCE) EIA/TIA-232-E ITU-T V.28 115.2 kbit/s (max.)



If you connect earthed equipment to the RS-232 connector, you must use an approved screened cable.



The product complies with the following European Council Directives:

- 73/23/EEC (the Low Voltage Directive) as amended;
- 89/336/EEC (the EMC Directive) as amended;
- 1999/5/EC (the R&TTE Directive) as amended.

System Setup screens (factory setting shown by *)

Picture settings:

Picture Format:	*4:3; 16:9
Letterbox Mode:	On; *Off
SCART Control:	*On; Off
Video Output:	*PAL (composite video); RGB (red, green, blue)
Contrast:	Low; *Medium; High
Search & Scan Banner Time-out:	0 seconds; *5 seconds; 10 seconds

Sound settings:

Audio Output:	*Stereo; Mono
Volume:	Bar graph – *mid position
Optical Output:	*Normal; Dolby D
Background Music:	*On; Off
Beep:	*On; Off

Languages and Subtitles:

Favourite Language:	*English; French; German; Spanish; Irish; Scots; Welsh; Punjabi; Hindi; Urdu; Chinese; Narrative
Subtitles:	On; *Off

Sky⁺ Setup:

Disk Space Management:	*Automatic; Warning; Manual
Instant Rewind:	*Off; 5; 15; 60 (minutes)
Add to Start of Recording:	*Automatic; 0; 1; 2; 5; 10 (minutes)
Add to End of Recording:	*Automatic; 0; 1; 2; 5; 10 (minutes)
Front Panel Indicator:	*Standard; Demo; Off

Remote control setup codes

Brand	Code	Brand	Code	Brand	Code
Akai	0098	Goldstar	0056	Protech	0595
Akura	0042	Goodmans	0335	Pye	0600
Alba	0043	Granada	0340	Roadstar	0625
Amstrad	0063	Grundig	0345	Saba	0645
BPL	0115	Harwood	0361	Saisho	0649
Bang & Olufsen	0118	Hinari	0365	Salora	0651
Baird	0117	Hitachi	0145	Samsung	0060
Beko	0125	ITT	0384	Sanyo	0159
Beon	0899	JVC	0053	Schneider	0665
Brionvega	0147	Loewe	0442	Seleco	0672
Bush	0157	Matsui	0477	Sharp	0093
Crown	0225	Memorex	0037	Siemens	0680
Daewoo	0092	Minoka	0921	Sony	0000
Decca	0244	Mitsubishi	0150	Soundwave	0702
Dual	0257	NEI	0514	Tandy	0741
Ferguson	0293	Nikkai	0528	Tatung	0049
Fidelity	0294	Nokia	0536	Technics	0250
Finlandia	0296	Nordmende	0537	Telefunken	0757
Finlux	0297	Orion	0549	Thomson	0771
Fisher	0154	Panasonic	0051	Thorn	0772
Funai	0179	Philips	0081	Thorn-Ferguson	0936
Genexxa	0330	Pioneer	0166	Toshiba	0156

You can use *Sky Guide* to get help on this topic:

1. Press the **interactive** key on your Sky⁺ remote control.
2. Highlight *Sky Customer Service*, then press **select**. In a few moments the *Sky Customer Service* screen will appear.
3. Highlight *Technical Assistance*, then press **select** and use the on-screen menus to find the help you need.



If you still have a problem, call Sky⁺ Customer Service. To find the Sky⁺ Customer Service number, select the Telephone Numbers option from the Services screen.

Index

About this User Guide	2	Favourite Channels	
Adding		adding	58
extra time to start and end of recordings	73	removing	59
Favourite Channels	58	using	59
Other Channels	68	Finding	
Audio language		a channel	16
changing	65	a programme	16
A-Z listings	18	Front-panel recording/playback indicator	74
Banner		Further help	77
programme information	18, 19	Getting started	6
reminder	25	Help	77
Search & Scan	9, 31, 32	Indicator	
Batteries		front-panel recording/playback	74
replacing	63	Information	
Bookmarks		banner	18, 19
defining	45	during playback	48
removing	46	Sky+ Planner	21
skipping	45	Instant Rewind	10, 14, 72
Box Office	28	Interactive	61
Ordering a programme	29	Keep	22, 23
Capacity Warning	37	PIN protection	57
Card		Keypad	
Interactive	61	setting to operate your Sky+	63
Sky Viewing	6, 74	Language	
Changing		changing	65
channel	8	Live Pause	10, 12
language	65	Looking after your Sky Viewing Card	74
volume	8	Mains plug	5
your PIN	56	Optical digital-audio output	67
Channels		Ordering	
adding other	68	Box Office programmes	29
changing	8	Other Channels	60
favourites	58	adding	68
found new	69	Parental Control	
other	60	accessing	53
Choosing		changing your PIN	56
a programme to record	17	during playback	48
a programme to watch	17	removing a viewing restriction	54
Clashing Programmes		setting a spending limit	55
recordings	34	setting a viewing restriction	54
reminders	26	using	53
Connecting		PIN	48, 53, 55, 56
to the mains supply	5	changing your	56
to the telephone line	76	Playback	
your Sky+ set top box	75	Bookmarks	45
Copy		choice of start position	40
selecting a programme	49	during	41
using	49	fast forward / rewind	43
Digital audio output	67	parental control of	48
Digital interface	76	pausing	42
Digital satellite TV	2	in slow-motion	44
Digital text	11		
Disk space management	70		
Dolby Digital	20, 67		

Playback		Sky+ Planner	
stopping	44	recording clashes.	34
on-screen symbols	41, 47	reminder clashes	26
Problem-Solving	78	using reminders	25
Programme		using Series Link	27
finding	16	using the colour keys	23
information	18	Sky+ remote control	7
Record Settings	57	Sky+ set top box	
Recording		connecting	75
currently-showing programmes	31	specifications	82
future programmes	32	system setup	65
capacity warning	37	turning on and off	7
clashes	34	Solving Problems	78
radio channels	38	Specifications	82
Reminders	17	Spending Limit	55
Remote control		Subtitles	65
replacing the batteries	64	Symbols	
setting to operate your TV	62	fast forward	43
setup codes	84	pause	42
Removing		pause (Bookmarked)	45
favourite channels	59	play	41
viewing restrictions	54	Sky+ Planner	22
Replacing the batteries	64	understanding on-screen	47
Restrictions		System Setup	65
Keep	57	Sky+ Setup	70
spending	55	Telephone line	76
viewing	54	Teletext	11
Search & Scan banner		Text	
timeout	65	using digital text	11
using	9	using teletext	11
Series Link	27	Troubleshooting	78
Services		TV Guide	15
parental control	53	Updates	3
screen	52	Using	
Sky+ Setup	70	Box Office	28
system setup	65	Copy	49
Set top box	2	digital text	11
Setting		equipment safely	4
disk space management	70	Interactive	61
front-panel recording/playback indicator	74	Instant Rewind	14
spending limit	55	Live Pause	12
viewing restrictions	54	Playback	40
Settings		reminders	25
Sky+ set top box	65	Series Link	27
Sky Guide		Services	52
Box Office	28	Sky+ Planner	21
Interactive	61	teletext	11
Services	52	TV Guide	15
TV Guide	15	Viewing Restrictions	
What is it?	3	removing	54
Sky Viewing Card	6, 74	setting	54
Sky+ Planner		Volume	
removing a programme	24	changing	8
planner information	21	Welcome to Sky+	2

Notes



Pace Micro Technology plc
Victoria Road Saltaire Shipley
West Yorkshire BD18 3LF England
www.pace.co.uk

Pace[®] and [®] are trademarks and/or registered trademarks of Pace Micro Technology plc

502-2309512