



COOLER RCX-Z775-SL

USER Manual

www.rosewill.com

Thank you for purchasing a High-Quality Rosewill Product.

Please register your product at : www.rosewill.com
for complete warranty information and future support for your product.
If you have any question while using our products, please visit our website : www.rosewill.com
for latest driver & user manual or feel free to contact us at feedback@rosewill.com

Support Email: techsupport@rosewill.com

Easy Installation Guide

RCX-Z775-SL

Rosewill[®]

Preparations

Work in an environment with clear lighting. Turn off the computer and disconnect all cables. Open the pc case to remove any existing cooler carefully. Clean the CPU surface using a tissue to remove any remaining paste .

Step

1


Apply paste to the middle of CPU surface. Use approximately 1/2 of the injection. Keep the paste in the center and do not spread the paste.



Step

5

Attach the Cooler's power plug onto the motherboard's power socket. Close your case properly, reconnect the cables and start your computer.

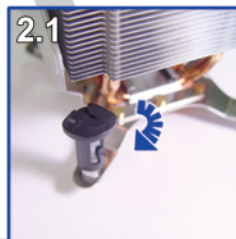

Step

2

The four plastic clips must first be aligned in the right position: turn the black plastic head ClockWise. Align the Cooler horizontally in a standard ATX case as shown.




Step

4

After checking the correct fit of the clips, press the black clip heads downwards until they click into place.

The metal clips have been given numbers 1 and 2. Press down both numbers 1 at the same time and repeat this step with numbers 2.

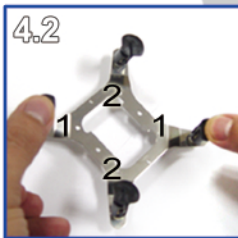

Step

3

Twist the cooler slightly in a small angle (as shown by the arrows) to ensure that the paste is spread evenly and no air bubbles are left between the CPU and Cooler surfaces.



My Optimized Design.

Auras is one of the biggest NB cooler designer who gives the total solution for Dell, HP and Apple. RCX-775-SL is the qualified product presented by Rosewill and Auras corporations. Please feel free to visit our website and contact us at feedback@rosewill.com



Enjoy reliability: Rosewill high-performance with silence.

For your noiseless digital environment, ensure that the acoustic level of other fans is lower than that of the CPU Cooler fan (for example: system- / power-supply / VGA-fan).



Installation Problems?

Have the product, the box and this manual ready. Contact your place of purchase or email technical support at www.rosewill.com.tw