

**08/ 16 CHANNELS H.264  
DIGITAL VIDEO RECORDER  
INSTALLATION QUICK GUIDE**

# A. SPECIFICATION

| VIDEO  |   |         |  |         |
|--|---|---------|--|---------|
| <b>Model No.</b>                               | 08 CH   |         | 16 CH  |         |
| <b>MODE</b>                                    | Triplex   |         |  |         |
| <b>IMAGE SYSTEM</b>                            | NTSC  | PAL     | NTSC   | PAL     |
| <b>LIVE-TIME RESOLUTION</b>                    | 720x480   | 720x576 | 720x480  | 720x576 |
| <b>LIVE-TIME DISPLAY RATE</b><br>(Frame / Sec) | 08 × 30   | 08 × 25 | 16 × 30  | 16 × 25 |
| <b>SPLIT SCREEN</b>                            | 1, 4, 8,9   |         | 1, 4, 9, 13, 16  |         |
| <b>VIDEO INPUT</b>                             | BNC × 08  |         | BNC × 16   |         |
| <b>VIDEO LOOPING</b>                           | BNC × 08  |         | BNC × 16   |         |
| <b>VIDEO OUTPUT (BNC)</b>                      | BNC × 1   |         | BNC × 1  |         |
| <b>VIDEO OUTPUT (SPOT MONITOR)</b>             | BNC × 1   |         | BNC x 1  |         |
| <b>VIDEO OUTPUT (S-VIDEO)</b>                  | Yes   |         |  |         |
| <b>VIDEO OUTPUT (VGA)</b>                      | Yes   |         |  |         |
| AUDIO  |   |         |  |         |
| <b>AUDIO INPUT</b>                             | RCA × 1   |         |  |         |
| <b>AUDIO OUTPUT</b>                            | RCA × 1   |         |  |         |
| <b>AUDIO BACKUP</b>                            | Yes   |         |  |         |
| <b>AUDIO STREAMING</b>                         | Yes   |         |  |         |
| RECORDING                                      |   |         |  |         |
| <b>COMPRESSION TYPE</b>                        | H.264   |         |  |         |
| <b>RECORDING RESOLUTION (HALF D1)</b>          | NTSC:720x240<br>PAL: 720x288                                  |         |  |         |
| <b>RECORDING RESOLUTION (CIF)</b>              | NTSC: 360x240<br>PAL: 360x288                                 |         |  |         |
| <b>RECORDING RATE (HALF D1)</b>                | NTSC: 720 x 240 up to 120 PPS<br>PAL: 720 x 288 up to 100 PPS |         | NTSC: 720 x 240 up to 120 PPS<br>PAL: 720 x 288 up to 100  |         |
| <b>RECORDING RATE (CIF)</b>                    | NTSC: 360x240 up to 240<br>PAL: 360x288 up to 200             |         | NTSC: 360 x 240 up to 240 PPS<br>PAL : 360 x 288 up to 200 |         |
| <b>RECORDING MODE</b>                          | Manual / Schedule / Alarm                                     |         |  |         |
| PLAYBACK & SEARCH                              |   |         |  |         |

|                                      |   |
|--------------------------------------|---|
| <b>PLAYBACK SPEED</b>                | Fast Forward X 2 X 4 X 8<br>Fast Backward X 2 X 4 X 8<br>field by field Playback<br>Pause |
| <b>TIME SEARCH</b>                   | Yes   |
| <b>EVENT SEARCH</b>                  | Yes   |
| <b>EVENT LIST</b>                    | 3000 records per H.D.D (Maximum)  |
| <b>OSD &amp; CONTROL INTERFACE</b>   |   |
| <b>TITLE</b>                         | 8 Characters  |
| <b>ON SCREEN DISPLAY &amp; SETUP</b> | Time / Date / Setup Menu  |
| <b>GRAPHIC USER INTERFACE (GUI)</b>  | Yes   |
| <b>DVR CONTROL PANEL</b>             | Yes   |
| <b>MOUSE</b>                         | Yes   |
| <b>IR REMOTE CONTROLLER</b>          | Yes   |
| <b>IE BROWSER</b>                    | Yes   |
| <b>PLAYER</b>                        | Yes   |
| <b>STORAGE &amp; BACKUP DEVICE</b>   |   |
| <b>INTERNAL HDD SUPPORT</b>          | SATA HDD x 2  |
| <b>USB BACKUP</b>                    | Yes   |
| <b>DVD RW BACKUP</b>                 | Yes ( DVD-RW)   |
| <b>NETWORK</b>                       |   |
| <b>ETHERNET</b>                      | Yes   |
| <b>ETHERNET COMPRESSION FORMAT</b>   | H.264   |
| <b>IE REMOTE CONTROL</b>             | Yes   |
| <b>DDNS</b>                          | Yes   |
| <b>NTP</b>                           | Yes   |
| <b>E-MAIL &amp; FTP</b>              | Yes   |
| <b>NETWORK IP</b>                    | Static/ Dynamic/ PPPoE  |
| <b>MULTI-REMOTE CLIENT</b>           | Yes ( 4 Clients at the same time available)   |
| <b>3GPP</b>                          | Yes (MPEG-4)  |
| <b>PDA/Phone Support</b>             | Yes (MPEG-4)  |
| <b>ALARM</b>                         |   |
| <b>ALARM INPUT</b>                   | 08 In (NO/ NC)      16 In (NO/ NC)  |
| <b>ALARM OUTPUT</b>                  | 1 Out (NO/ NC)      1 Out (NO/ NC)  |

|                                     |  |                      |
|-------------------------------------|--|----------------------|
| <b>MOTION DETECTION</b>             | Yes  |                      |
| <b>MOTION DETECTION AREA</b>        | 30 x 24 grids  |                      |
| <b>MOTION DETECTION SENSITIVITY</b> | 1-100  |                      |
| <b>VIDEO LOSS DETECTION</b>         | Yes  |                      |
| <b>ALARM RECORDING</b>              | Yes  |                      |
| <b>BUZZER</b>                       | Yes  |                      |
| <b>SETUP &amp; OTHER FUNCTIONS</b>  |  |                      |
| <b>DAYLIGHT SAVING TIME</b>         | Yes  |                      |
| <b>PTZ CONTROL</b>                  | Yes  |                      |
| <b>RS-232</b>                       | Yes  |                      |
| <b>RS-485</b>                       | Yes  |                      |
| <b>DIGITAL ZOOM</b>                 | Yes  |                      |
| <b>PASSWORD CONTROL</b>             | Three levels, one for system, one for HDD format and the other for Network Password. |                      |
| <b>KEY-LOCK</b>                     | Yes  |                      |
| <b>MULTI-LANGUAGE</b>               | Yes  |                      |
| <b>FIRMWARE UPDATE</b>              | USB Host & Update on line  |                      |
| <b>OTHERS</b>                       |  |                      |
| <b>POWER INPUT</b>                  | AC 100V~240V   | AC 100V~240V         |
| <b>POWER CONSUMPTION (W)</b>        | 24W (Without HDD)  | 24W (Without HDD)    |
| <b>DIMENSIONS (W x H x D)</b>       | 430mm x 88mm x 382mm   | 430mm × 88mm × 382mm |
| <b>WEIGHT (kg)</b>                  | 6.3  | 6.3                  |
| <b>OPERATION TEMPERATURE</b>        | 0 - 45 °C  |                      |


**\* SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE**

## B. PACKAGE CONTENT


| NO. | ITEM                          | AMOUNT |
|-----|-------------------------------|--------|
| 1   | DVR                           | X1     |
| 2   | Power Cable                   | X1     |
| 3   | Adaptor                       | X1     |
| 4   | CD Disk                       | X1     |
| 5   | Screw Package                 | X2     |
| 6   | Quick Guide                   | X1     |
| 7   | Mouse                         | X1     |
| 8   | Remote Controller             | X1     |
| 9   | Extension Board for RS232/485 | X1     |
| 10  | Extension Board for I/O       | X1     |

## C. HARDWARE OVERVIEW

### FRONT PANEL

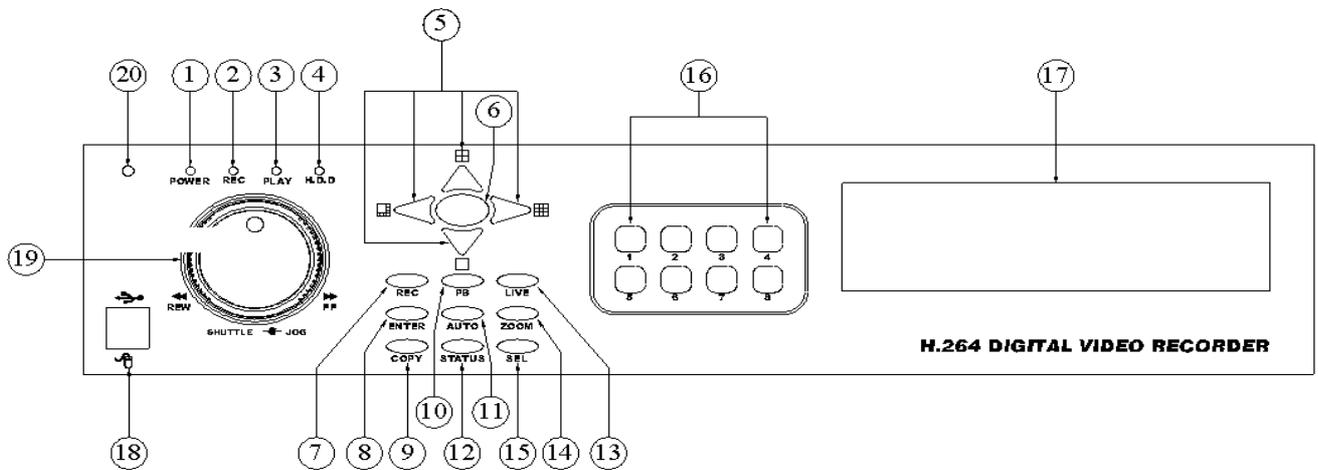


**08-CH DVR FRONT PANEL**

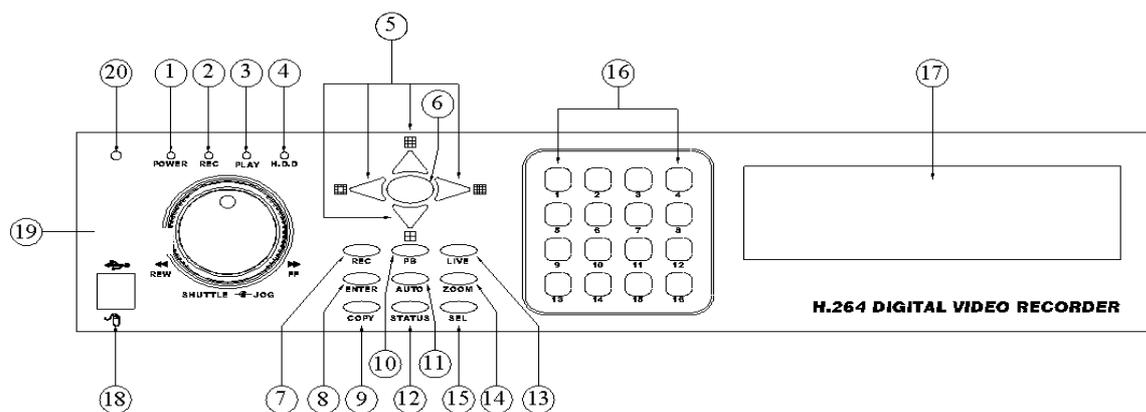


**16-CH DVR FRONT PANEL**

**DVR OPERATION**

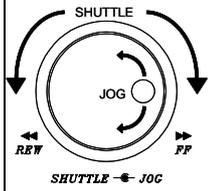
| NO. | LABEL                    | OPERATION  | PTZ                          |
|-----|--------------------------|--|------------------------------|
| 1   | <b>POWER</b>             | Power LED Indicator  |                              |
| 2   | <b>REC</b>               | Recording LED Indicator  |                              |
| 3   | <b>PLAY</b>              | Play LED Indicator   |                              |
| 4   | <b>H.D.D</b>             | H.D.D LED Indicator  |                              |
| 5   | <b>▲ ▼ ◀ ▶</b>           | Button Of Controller.<br>Button Of Switching Channel.  | UP, DOWN,<br>LEFT &<br>RIGHT |
| 6   | <b>MENU</b>              | Press MENU to entry or exit main menu  |                              |
| 7   | <b>REC</b>               | Press REC to start recording. Press again to stop  |                              |
| 8   | <b>ENTER</b>             | Press ENTER button to make choose or move cursor forward or make confirm in MENU system  |                              |
| 9   | <b>COPY</b>              | Backup video or picture to USB or CDRW   | Narrow key                   |
| 10  | <b>PB</b>                | Playback for TIME SEARCH or EVENT LIST.  |                              |
| 11  | <b>AUTO</b>              | Press AUTO to switch channel by channel automatically  |                              |
| 12  | <b>STATUS</b>            | Display the status of H.D.D. and USB devise  | Zoom button                  |
| 13  | <b>LIVE</b>              | Live viewing   |                              |
| 14  | <b>ZOOM</b>              | Zooming  |                              |
| 15  | <b>SEL</b>               | Press this button to select the different assembled of camera formats.   |                              |
| 16  | <b>1-8 / 1-16</b>        | Press the button to display full screen.   |                              |
| 17  | <b>CDRW</b>              | Slot for CDRW  |                              |
| 18  | <b>USB / Mouse</b>       | USB or Mouse connector   |                              |
| 19  | <b>SHUTTLE &amp; JOG</b> |  <p>SHUTTLE:<br/>FAST FORWARD ×2 ×4 ×6 ×8<br/>FAST BACKWARD ×2 ×4 ×6 ×8</p> <p>JOG:<br/>PICTURE BY PICTURE PLAYBACK</p> |                              |
| 20  | <b>○</b>                 | IR Sensor for remote control   |                              |

- Note:**
1. User can select camera by using the channel keys on DVR front panel. For example, user can press “+10” key and then press “6” key to see the 16th channel image.
  2. Under the Full and 16 split screen condition, press SELECT button to switch AUDIO ON/OFF.
  3. Please plug in the supplied mouse to DVR mouse connector before turn on the DVR. DO NOT REMOVE and PLUG IN the supplied mouse while DVR is operating.

## BACK PANEL

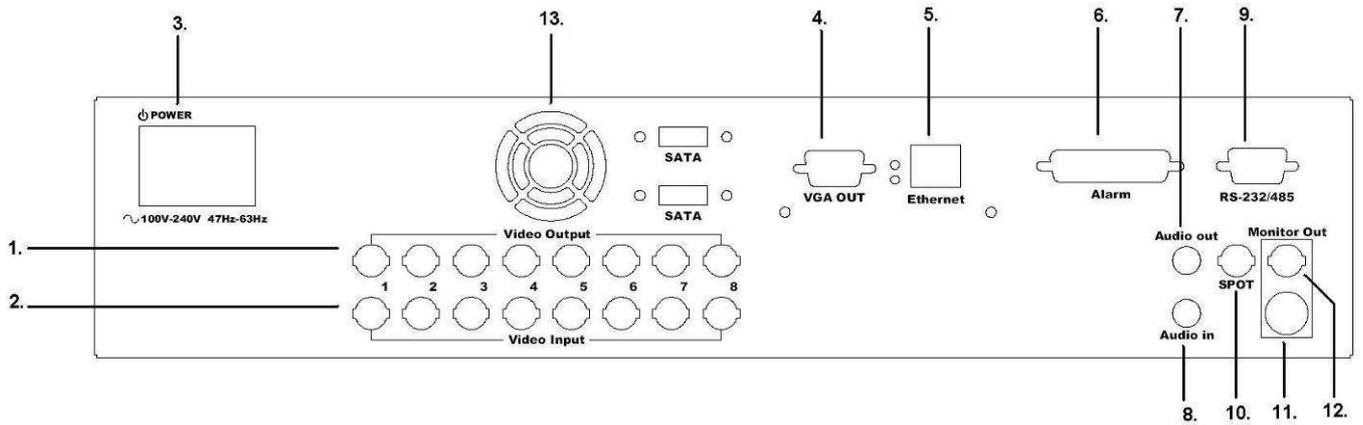

## 08-CH DVR FRONT PANEL

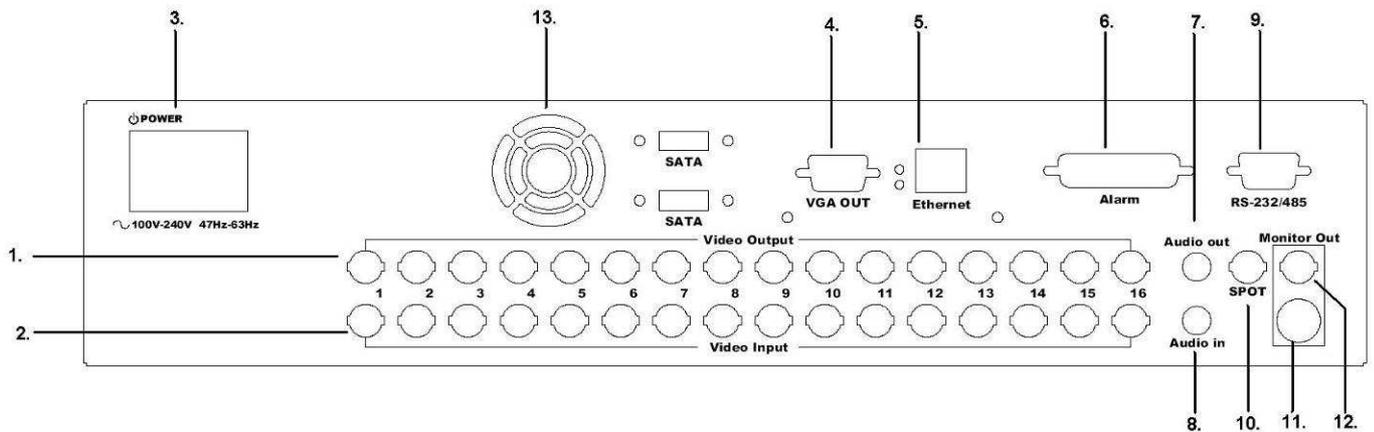

## 16-CH DVR FRONT PANEL

| NO. | LABEL                  | OPERATION  |
|-----|------------------------|--|
| 1   | <b>VIDEO OUTPUT</b>    | Video output with BNC connector.                       |
| 2   | <b>VIDEO INPUT</b>     | Video input with BNC connector.                        |
| 3   | <b>POWER</b>           | Power switcher: DC12V & AC100V~AC240V / 47-63Hz input. |
| 4   | <b>VGA D-SUB OUT</b>   | Connect to CRT or LCD monitor.                         |
| 5   | <b>ETHERNET</b>        | RJ-45 connector for network.                           |
| 6   | <b>ALARM</b>           | 25 pin D-Sub connector for Alarm input/ output.        |
| 7   | <b>AUDIO OUT</b>       | Audio output.  |
| 8   | <b>AUDIO IN</b>        | Audio input.   |
| 9   | <b>RS-232 / RS-485</b> | 9 pin D-Sub connector for external control unit.       |
| 10  | <b>SPOT</b>            | SPOT video output.                                     |
| 11  | <b>MONITOR OUT</b>     | Video output with S-Video connector.                   |
| 12  | <b>MONITOR OUT</b>     | Video output with BNC connector.                       |
| 13  | <b>FAN</b>             | Cooling fan.   |

# D. QUICK INSTALLATION

Following installation example based on 16 CH Model.



| NO. | LABEL           | OPERATION   |
|-----|-----------------|---|
| ①   | POWER CORD      | Connect with the power cord.                        |
| ②   | LCD MONITOR     | Connect LCD monitor to VGA OUT                      |
| ③   | ETHERNET LOUTER | Connect router to Ethernet port                     |
| ④   | ALARM           | Connect alarm to alarm port                         |
| ⑤   | CAMERA          | Connect camera(s) to 1-16 video input               |
| ⑥   | SPEAKER         | Connect speaker to audio out.                       |
| ⑦   | MIC             | Connect MIC to audio In.                            |
| ⑧   | CRT MONITOR/ TV | Connect CRT monitor or TV to Monitor Out or S-Video |

## E. QUICK OPERATION

### E-1. RECORD

Press REC button on the DVR front panel/  button on the pop-up toolbar to activate record

immediately. Moreover, click  within the main menu to perform record setup.

### E-2. PLAYBACK

Press  button on the DVR front panel to entry **PLAY SEARCH** and start playback. Moreover, press

 button on the pop-up toolbar under the live viewing mode to entry **PLAY SEARCH** and start playback.

#### **PLAY SEARCH**

1. **PLAY TIME SEARCH:** Double click left button of the mouse and set start and end time to perform play time search.
2. **EVENT SEARCH:** Double click left button of the mouse to trigger event search. Moreover, use TYPE and CHANNEL two options to perform the advanced search.

### E-3. BACKUP

First, insert USB device into a USB port of the DVR or put blank CD/DVD into CD RW/ DVD RW burner. Then, while using USB device to backup, use the mouse wheel to select the start and end time and click  to start backup. Furthermore, select the start and end time and click  to start backup when using blank CD/DVD.


**NOTE: 1. Make sure the selected backup time is among record time.**

2. **For more detailed operation information, please see the attached User Manual carefully.**

# F. HDD QUICK INSTALLATION

\*Below example is based on 08 CH Model.

\* For detailed Hard Disk Compatible Table, please refers to the attached User Manual.
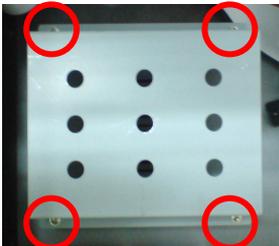
|   |   |  |   |
|---|---|--|---|
| 1 | Loose 1 screws on the back and 4 screws on two sides to remove DVR cover.           |  |   |
|   |    |    |                    |
| 2 | Remove the 4 fixed screws of the HDD holder   |  | 3<br>Insert HDD(s) and tight up the screws on two sides of HDD holder. Or fixed in the machine under. |
|   |    |  |                    |
| 4 | Connect the power and data cable (s).   |  |   |
|   |  | <p>Single HDD: Use any socket</p> <p>Twin HDD: Connect the "MASTER" tab data cable is recognized as HDD 1</p> <p>Connect the "SLAVE" tab data cable is recognized as HDD 2</p> |   |
| 5 | Refit the HDD holder back and screw it tightly                                      |  |   |
|   |  |  |   |
| 6 | Refit the top cover and screw all the screws back.                                  |  |   |
|   |  |    |                  |

# G. NOTIFICATION

## Important

**Warning: Before Installation (Don't void your warranty)**

Power off the DVR if it is found smoking or smells unusual.

Keep the DVR away from the water. If the DVR is wet, unplug it.




Contact your distributor when such cases happen.




Contact your distributor when such cases happen.

Do not place the DVR around a heat source, such as television or oven.




Refer to your user's manual for the proper operating temperature.

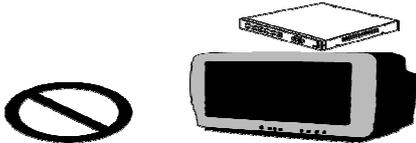

Keep the DVR away from direct sunlight or direct heat.


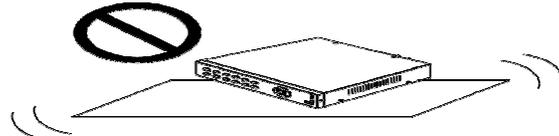


Do not place the DVR in high humidity environments.

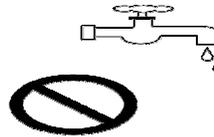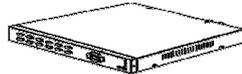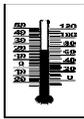



Do not place the DVR on an unsteady surface.

Do not touch the DVR when lightening is present.

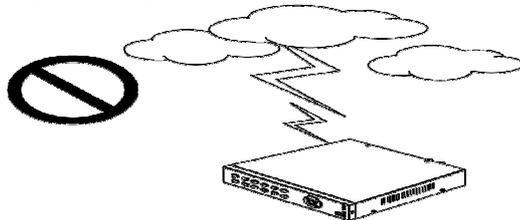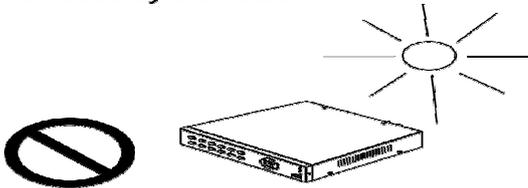


Do not disassemble the DVR.

Do not drop the DVR

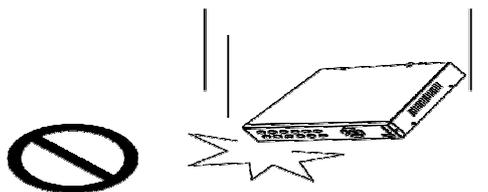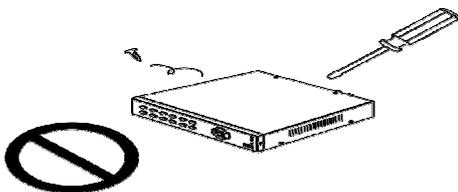

Do not insert any object into the DVR, such as a needle.

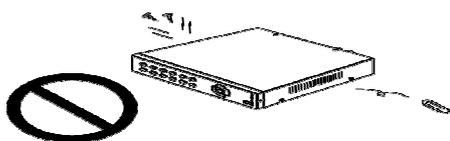

Failing to abide these rules can automatically void your warranty and holds our company harmless from damages, injury, or death. Be safe.