



# 42" Oscillating Tower Fan with Remote Control

OWNER'S MANUAL

Model # FC1-42R-03



Intertek

3149097

## **PLEASE READ AND SAVE THESE INSTRUCTIONS**

### **42 IN. OSCILLATING TOWER FAN W/ REMOTE CONTROL**

Thank you for choosing a Soleus Air fan. This owner's manual will provide you with valuable information necessary for the proper care and maintenance of your new product. Please take a few moments to thoroughly read the instructions and familiarize yourself with all the operational aspects of your new fan.

For your own records, please attach a copy of your sales receipt to this manual. Also, write the store name/location and date purchased below:

Store Name: \_\_\_\_\_

Location: \_\_\_\_\_

Date Purchased: \_\_\_\_\_

### **IMPORTANT SAFETY INSTRUCTIONS**

When using this electric unit, basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury, including the following:

- 1) Read all instructions before using this unit.
- 2) Use only for intended household use as described in this manual.
- 3) Plug the fan directly into a 120 V A/C electrical outlet.
- 4) Never insert your fingers, pencils, or other objects through the fan grill during operation.
- 5) The fan should be used on a stable and level surface.
- 6) Do not expose the fan to excessive heat or humidity. This could cause damage to the electrical components.
- 7) Do not immerse in any type of liquid. Do not use near water.
- 8) The fan should be kept out of the reach of children. Close supervision is necessary when the fan is used by or near children.
- 9) To reduce the risk of fire or explosion, do not store or use gasoline or other flammable vapors or liquids in the vicinity of the fan.

- 10) Do not operate this or any appliance with a damaged cord, if the unit malfunctions, or if it has been dropped or damaged in any manner. Connect to properly polarized outlets only.
- 11) Do not cover the cord or place near heat sources. Keep the cord away from high traffic areas, and do not submerge in water.
- 12) Unplug the fan before moving, cleaning or making repairs. NOTE: If for any reason this unit requires service, return appliance to manufacturer or a similarly qualified service agent to ensure safety.
- 13) To reduce the risk of fire or electric shock, do not use this fan with any solid-state speed control device.
- 14) To disconnect, grip plug and pull from wall outlet. Never pull on the cord to unplug.
- 15) Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc), or rechargeable (Nickel-Cadmium) batteries.
- 16) For indoor use only.

**WARNING:** This fan is equipped with a polarized plug (one blade is wider than the other). The plug is intended to fit into a power outlet only one way, with the wide blade in the wide slot. This is a safety feature; if you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still does not fit, contact a qualified electrician.

DO NOT DEFEAT THE SAFETY PURPOSE OF THE POLARIZED PLUG.

## TECHNICAL SPECIFICATIONS

Voltage Rating	120V, 60Hz
Power Consumption	58W
Unit Size	13 in. (W) x 13 in. (D) x 42 in. (H)
Unit Weight	9.28 lbs

This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Replace the fuse per the instructions below and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded or returned to an authorized service facility for examination and/or repair.





## HOW TO REPLACE THE FUSE

1. Unplug the fan from the outlet. Place the plug on a firm, flat surface. Open the fuse cover, located on the top of the plug, using your thumb or a flathead screwdriver to slide the cover towards the prongs.  
NOTE: Ensure that the fuse cover is completely open before attempting to remove the fuse.
2. Remove the fuse carefully by using a small screwdriver to pry the fuse out of the compartment by the metal ends of the fuse.
3. Risk of fire. Insert a new 5 Amp, 125 Volt fuse into the fuse compartment, making sure that the fuse is securely in place.
4. Slide the fuse cover closed completely. If the fuse cover is difficult to close, make sure the fuse is properly secured in place by pressing down on the metal ends of the fuse.

**CAUTION:** Risk of fire. Do not replace the attachment plug. It contains a safety device (fuse) that should not be removed. Do not use the product if the attachment plug is damaged.


To avoid a risk of fire, only replace with a 5 Amp, 125 Volt fuse.

To order a new fuse, contact Soleus Air at (888) 876-5387

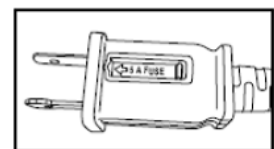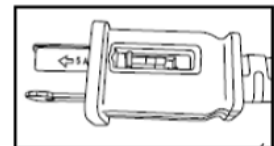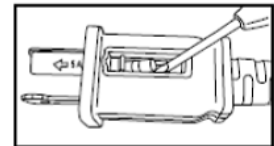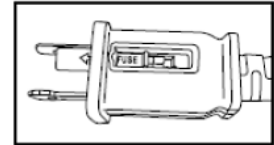

## ASSEMBLY

1. First, put the pillar together. The pillar is made of two separate halves. Make sure to pass the power cord through the middle of the pillar before snapping the pillar pieces together.
2. Now, attach the pillar to the fan body using the included pillar screws.
3. Next, put the fan base together. Like the pillar, the fan base is made up of two separate halves. Make sure to pass the power cord through the middle of the fan base prior to sliding the base pieces together. There is a groove on the bottom of the fan base for the power cord. Make sure this groove is aligned with the back of the fan prior to attaching the fan base to the pillar.
4. Once the groove on the bottom of the fan is aligned, attach the fan base using the included base screws. Last, pass the cord through the groove on the fan base.

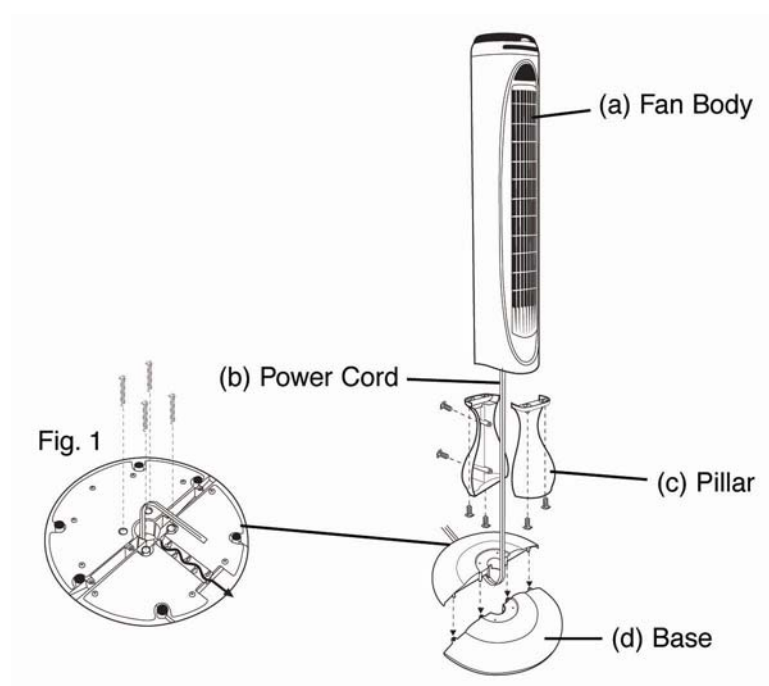

## **OPERATING INSTRUCTIONS**

Set the fan on a stable, level surface. Plug the cord into a standard 120V A/C outlet.

Please refer to Fig. 2 on the next page.

### **1. POWERING ON THE FAN**

The fan can be turned on by pressing the POWER button on the fan control panel or using the supplied remote control. The POWER button is also used to turn the fan off.

### **2. FAN SPEED**

Press the SPEED button to select Low (L), Medium (M), or High (H) fan speed.

### **3. OSCILLATION**

The fan can operate in oscillation or stationary mode. Press the OSCILLATE button on the control panel or remote control to start oscillation. To turn Oscillation off, simply press the OSCILLATE button once more.


### **4. WIND MODES**

Press the MODE button on the fan control panel or remote to select one of the three wind modes. When the fan is initially powered-on, the default wind mode (normal) is selected. Press the MODE button once to select Natural wind mode (M1), and twice to select Rhythm wind mode (M2). During Natural wind mode, the fan will simulate the airflow of the wind by randomly cycling through its 3 fan speeds. Rhythm wind mode will cycle through the fan speeds in order of Low, Medium, and High.

### **5. TIMER**

The fan can be programmed to automatically shut-off after a set period of time. The timer can be set for 30 minute increments. The maximum programmed time is 7.5 hours. To start the Timer, press the TIMER button on the control panel or the supplied remote. Each press of the TIMER button will increase the timer by 30 minutes. Once the Timer button is pressed, a green LED light on the front of the fan will light up according to the selected time. If more than one LED light is lit, the timer is programmed for the sum of the times represented by the LED lights. If all timer lights are lit, then the fan will be programmed for the maximum 7.5 hours.

**Fig. 2**

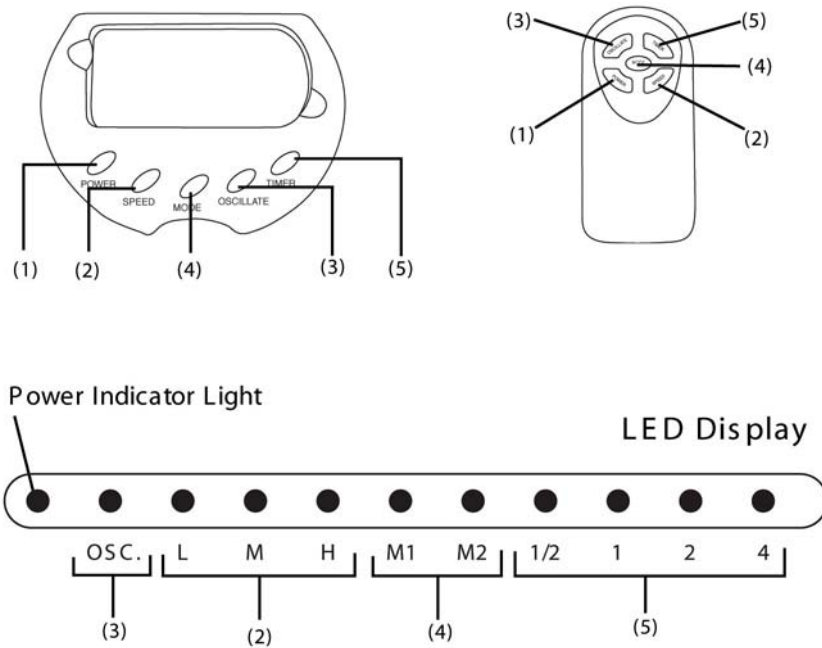

## **CLEANING/MAINTENANCE**

- Turn the fan off and unplug the unit.
- Clean the tower fan and base using a dry cloth.
- Never use abrasive cleaning agents or solvents. This may cause damage or deterioration to the surface of the unit.
- Do not immerse the fan in any form of liquid. Do not allow water to drip on or into the fan motor housing.

## **STORAGE**

When not in use, store the fan in a cool, dry location. To prevent dust and dirt build-up, use the original packaging to repack the unit.

## WARRANTY

### One Year Limited Warranty

Soleus International Inc. warrants the accompanying Soleus Air FC1-42R-03 to be free from defects in material and workmanship for the applications specified in its operation instruction for a period of ONE (1) year from the date of original retail purchase in the United States.

If the unit exhibits a defect in normal use, Soleus International, Inc. will, at its option, either repair or replace it, free of charge within a reasonable time after the unit is returned during the warranty period.

As a condition to any warranty service obligation, the consumer must present this Warranty Certificate along with a copy of the original purchase invoice.

### This Warranty Does Not Cover

- 1) Damage, accidental or otherwise, to the unit while in the possession of a consumer not caused by a defect in material or workmanship.
- 2) Damage caused by consumer misuse, tampering, or failure to follow the care and special handling provisions in the instructions.
- 3) Damage to the finish of the case, or other appearance parts caused by wear.
- 4) Damage caused by repairs or alterations of the unit by anyone other than those authorized by Soleus International Inc.
- 5) Freight and Insurance cost for the warranty service.

ALL WARRANTIES, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY ARE LIMITED TO A ONE-YEAR DURATION OF THIS EXPRESS LIMITED WARRANTY. **SOLEUS INTERNATIONAL, INC.** DISCLAIMS ANY LIABILITY FOR CONSEQUENTIAL OR INCIDENTAL DAMAGES AND IN NO EVENT SHALL SOLEUS INTERNATIONAL INC'S LIABILITY EXCEED THE RETAIL VALUE OF THE UNIT FOR BREACH OF ANY WRITTEN OR IMPLIED WARRANTY WITH RESPECT TO THIS UNIT.

This warranty covers only new products purchased from our authorized dealers or retailers. It does not cover used, salvaged, or refurbished products.

As some states do not allow the limitation or exclusion of incidental or consequential damages, or do not allow limitation on implied warranties, the above limitations and exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

**For Technical Support and Warranty Service, call 1-888-8-SOLEUS, or go to [www.soleusair.com](http://www.soleusair.com)**

Or Write To:

Soleus International Inc.

20035 E. Walnut Dr. North

City of Industry, CA, 91789 USA

[www.soleusair.com](http://www.soleusair.com)