


Remote Pet Training Collar for 300Meters

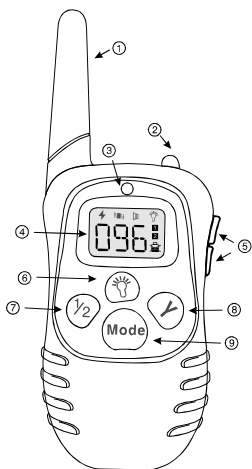

1. Antenna
2. Led light
3. Indication light
4. LCD display
- 000 1-100 level
- ⚡ Static shock mode
- 🔊 Vibration mode
- 🔊 Beep mode
- 💡 Light mode
- 1 Channel 1
- 2 Channel 2
- 🔋 Battery exhaustion
5. Up/down button
6. Led light button
7. Channel button
8. Launch button
9. Mode button

■ How to match the receiver and remote controller

To match the receiver and remote controller, please read the following carefully.

1. Turn on the remote controller by keeping pressing the mode button for 5 seconds.
2. Wake up the remote controller by pressing any button except LED light button.
3. Press the channel button 1/2 to choice.
4. Install the batteries for the receiver. There is a beep when you install the battery.
5. Press launch button on the controller, the led light will be flashing and there is a beep in the receiver indicating that the remote controller and the receiver have matched each other successfully.
6. To encode for the second receiver, just choice the different channel by pressing channel button.

You could see number 1 or 2 in the LCD screen. And then press launch button to encode.

Notes: you need to match controller and receiver soon after installing the battery in the receiver.

Please encode within 15 seconds. If you don't press the launch button and the receiver is beeping which means you need to reinstall the battery in the receiver and encode again.

1

■ How to check shock

The static impulse released by the receiver can not be seen with naked eye. You have two ways to test the shock:

A. Use a test light. Put the test light on both nipples in the receiver; Press the mode button to move to shock mode; You could see the shock symbol on the LCD screen; Press the launch button on the remote controller; The test light will flash; Remember, the test light is designed specifically for testing only and not a normal part of collar used for the dog; Please take it off after the test.

B. Use your finger. Put your on both nipples in the receiver then press shock button on the remote controller. You will feel the shock.

■ Features

1. there are 100 levels for static shock and vibration. The strong static impulse can penetrate the hair of the pet and fabric within 6mm thick. It is unnecessary to let the discharging point touch the skin of the pet. Therefore it is safe for the pet.
2. The static impulse can quickly and effectively curb the improper deeds of the pet.
3. With the movement induction power switch in the collar receiver, it will turn on/off automatically to save power.

2

■ User's Manual

1. Check that battery is installed in the remote controller, and the LCD screen is turned on.
2. Match the remote controller and the receiver. As soon as putting batteries into the receiver, you should press launch button on the remote controller and the receiver will beep once. In this way the match is done and the remote control system can operate normally.
3. If the receiver beeps on its own without pressing any button after batteries are installed, please take out the batteries for over ten seconds and put them back and try step 2 again.
4. Check the remote controller: Press the buttons on the remote controller one by one, the LCD contents will change one by one. Press the launch button, the indicator light will light.
5. Check the receiver: With the movement induction switch in it, the receiver will enter into standby mode automatically upon shaking. The receiver will turn off automatically when it is in stillness for more than 4 minutes, so as to save power.
6. Connect the collar and the receiver. Adjust the length of the collar so that it suits the neck of your pet best. Don't make it too tight while the discharging point of the receiver can touch the neck of the pet.

3

7. Press the mode button to choice vibration or shock mode.
8. Press the up/down button on the right side to decide the level.
9. Keep pressing the launch button to launch the commands (vibration or shock). In the shock mode, the discharging point will release static impulse. The discharging state can be checked by the testing light supplied separately in the box.
10. Press the light button on the remote controller and the LED in front of the remote controller will light.

Notes: To control two receiver, simply choice the different channel 1 or 2 to encode the receiver. After encoding one receiver, then install the battery for the second receiver and press the channel button to change to channel 2, and then press the launch button to encode the second receiver. The steps are exactly same as before.

■ Operational Instructions:

1. The controller will be standby if there is no operation after 20 seconds. And it will be turned off automatically after there is no operation within 1 minutes.
2. In standby mode, you just need to press any button to wake it up except light button.

4

3. If the unit is turned off, keep pressing mode button for 5 seconds to turn on the controller.
4. Open the insert buckle of the collar and put the collar round the neck of the pet. Adjust the tightness of collar. Don't make it too tight while the discharging point of the receiver can touch the neck of the pet.
5. Most pets feel uncomfortable at first wearing the collar. Don't use any of the functions before the pet has gotten used to the collar.

6. The vibration or shock function will be stopped once you release launch button.

7. The shock is used to curb the improper deeds of the pet. After each successful training, the owner will be able to let the pet know what should be done and what should not be done. Over a period of training the pet will understand what its owner likes and doesn't like.

8. We suggest you give the dog vibration before starting the shock. After a time of training, the dog will learn that shock will come after vibration. In this way, the vibration alone can effectively curb the improper deeds of the pet. The shock only acts as a menace that might be unnecessary for most of the time.

9. Prepare some socks for the dog as rewards for good deeds. This will make better effect in the training.

5

10. The LED can be used for illumination or giving training signals.

11. If you don't use this product, take the collar and receiver off the dog and place them in a place without vibration, so as to prolong the lifetime of the batteries.
12. If you don't use the collar receiver for a long time, take out the batteries.

■ How to change the batteries:

1. Receiver: Take off the cover and you will see two batteries (model: AAA/1.5V), Take out the batteries and install the new ones. Pay attention to the polarity of the batteries. Mount the cover and press it tight.

2. Remote controller: The battery cell cover is at the back of the remote controller. Open the cover by pressing it following the direction of the arrow. Take out two batteries (4LR44, 6V) and put new batteries back and then close the cover.

3. The lifetime of the batteries vary according as how often you use the product. Since the remote controller only consumes power when you press the buttons to send signals, its batter's lifetime is usually more than one year. The battery lifetime of the receiver depends on how frequently you use it. Therefore you should often check the batteries by watching the indicator light in the receiver.

6

■ Notes for use:

1. The valid distance of remote controlling means the straight-line distance between the remote controller and the receiver without obstacles in between. If there are interference signals or signal screening around, the actual remote control distance may vary.
2. This product is for pet training. Only by training can the pet understand the intention of its owner. Good effect can only be achieved after a period of training.
3. Presently, this product is the most effective and safest tool for training pet. Following the correct operational instructions, you can effectively train the pet and bring it no harm.

7