


GETTING STARTED:

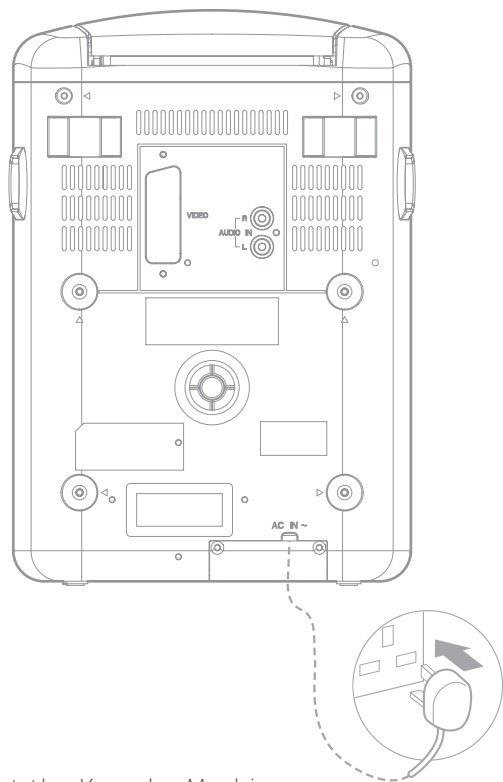

Connect the Karaoke Machine
to the power supply

WANT TO KNOW MORE?

The full User Manual is available online at:




www.goodmans.co.uk/support

CD/CDG Compatible Karaoke Machine
Model: XB4CDGXP

0211-52982-00


Goodmans Karaoke System

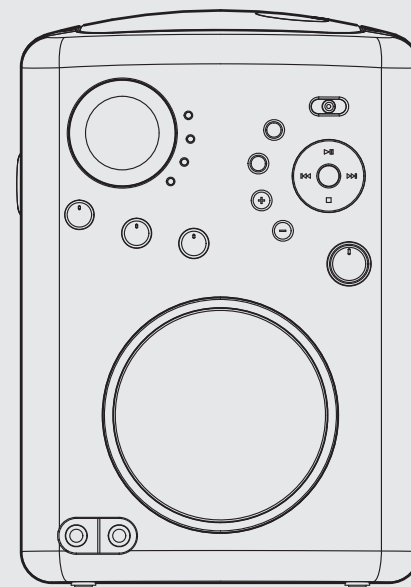

VIDEO CONNECTION


Please follow the steps below to display CDG lyrics on the TV screen.

- Ⓐ Connect the scart cable to the SCART OUT socket to the back of the karaoke system.
- Ⓑ Connect the other end of the scart cable to the SCART IN Socket on your TV or VCR.

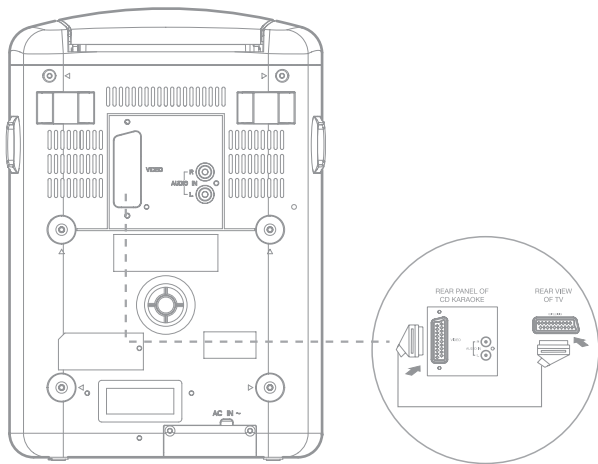

- Ⓒ Select SCART input on your TV to see the lyrics from your CD+G disc.


CONNECTING THE MICROPHONE

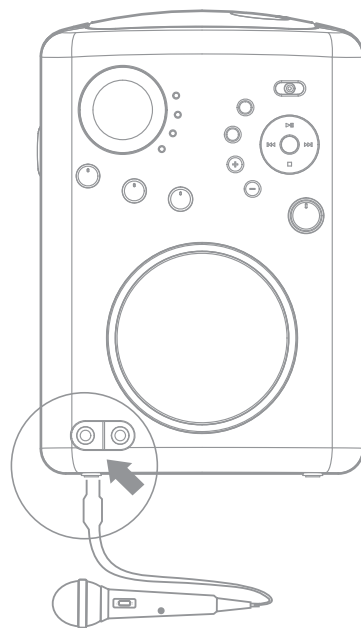

Insert the microphone plug into mic jack 1 or 2.

CD AND CD+G OPERATION

- Ⓐ Press the **STANDBY/ON** button to start up the unit.
- Ⓑ Slide the **FUNCTION** switch to CD position.
- Ⓒ Open up the CD compartment and place a CD or CD+G inside.
- Ⓓ Press the **PLAY** button to begin playing the first track.

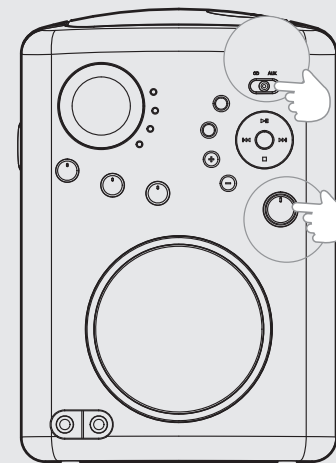

ADJUSTING THE VOLUME

- Ⓐ Rotate the master volume control to adjust the volume to a comfortable level.
- Ⓑ Press the **ECHO +** or **-** buttons to increase or decrease the echo effect. (The echo effect value will show in the display)