

Troubleshooting

If the unit doesn't operate...	Check that the batteries are installed correctly, or install new batteries.
If the volume is too low...	Install new batteries.
If the voice/music begins playing at a very high or low rate of speed...	Install new batteries.
If there is a continuous buzzing sound and the unit doesn't operate...	Install new batteries.
If the light of the keys becomes dim...	Install new batteries.
If the unit malfunctions...	Install new batteries.

Important Information

Care instructions:

- Keep the unit clean by wiping it with a slightly damp cloth.
- Keep the unit out of direct sunlight and away from any direct heat source.
- Do not expose the unit to moisture or water.

This product complies with the essential requirements of the European Toy safety directive.

Customer Specific Information

in **spiration**
works

Inspiration Works UK Ltd

First Floor
The Annexe
Salisbury Hall
St Albans AL2 1BU

UK

www.inspirationworks.co.uk

facebook



twitter



CIDE
GROUP

© 2013 CIDE Group
www.cidegroup.com

© Disney
Visit the Disney website at:
www.disneyprincess.com

V01
March 2013
Printed in China
Made in China



WASTE ELECTRICAL PRODUCTS AND BATTERIES
SHOULD NOT BE DISPOSED OF WITH HOUSEHOLD
WASTE. PLEASE RECYCLE WHERE FACILITIES
EXIST. CHECK WITH YOUR LOCAL AUTHORITY FOR
RECYCLING ADVICE

 


My First Disney Princess Touchpad



Instruction manual

The Unit:

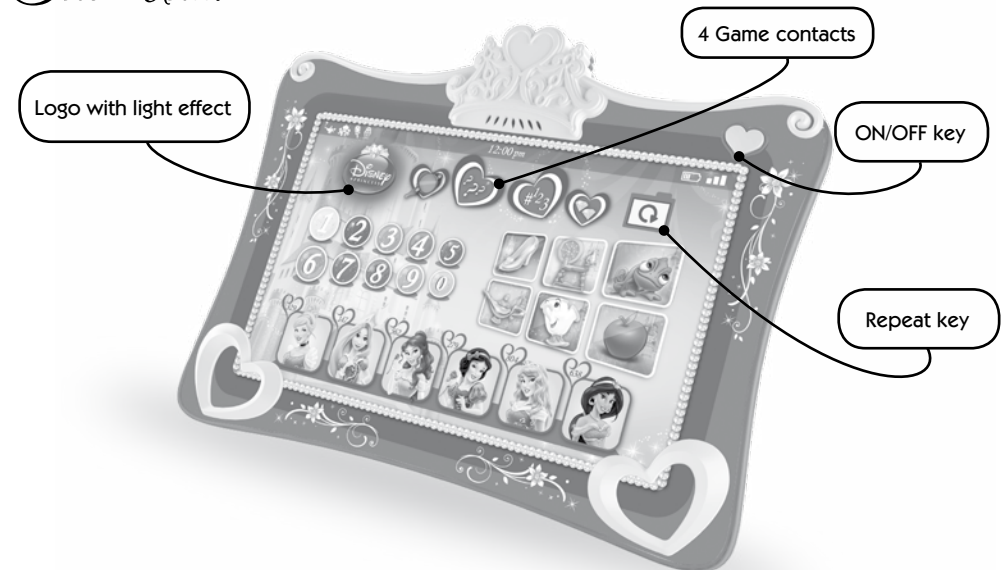

Important information



- This toy is suitable for children aged 2 & over.
- Please retain this manual for further reference.
- WARNING: All packing materials such as internal bags, plastic collars, plastic films, carton inserts are not part of this product and should be discarded for your child's safety.
- IMPORTANT: for additional safety, check toys regularly for signs of damage during use.

S13450

Contents

- Unit
- User Manual

How to play

- Press the heart key  to turn the touchpad ON.
- Listen to music and see the Disney Princess logo light  up when pressed.
- Start to play by touching a contact and listen to the numbers, objects or names of the princesses and their music.
- Select a game by pressing on one of the below contacts:



• Find



 
When touching the game mode 1 contact, you will be asked to find a princess, an object or a number.
You have three attempts to find the correct answer.
After answering the question, the touchpad will give a new question. To go back into discovery mode, you should press the Disney Princess logo contact.

• Quiz



When touching the game mode 2 contact, you will be asked questions relating to the princesses.
You have three attempts to find the correct answer.
After answering the question, the touchpad will give a new question. To go back into discovery mode, you should press the Disney Princess logo contact.

• Numbers



When touching the game mode 3 contact, you will be asked to give a sequence of three numbers.
You have three attempts to give the correct answer.
After answering the question, the touchpad will give a new question. To go back into discovery mode, you should press the Disney Princess logo contact.

• Matching



When touching the game mode 4 contact, you will be asked questions to match either the princesses to their belongings, or vice versa.
You have three attempts to give the correct answer.
After answering the question, the touchpad will give a new question. To go back into discovery mode, you should press the Disney Princess logo contact.

 
- To repeat the last question, press on the repeat contact :



*Automatic shut off:
In order to save the batteries, the unit switches off after about 2 minutes of inactivity.
To re-activate the unit press the ON/OFF key contact.*

How to change batteries

1. This product requires 2 x AA batteries.
2. When required, using a suitable screwdriver, undo and remove the battery cover located under the unit.
3. Insert 2 x AA batteries into the compartment ensuring they are installed the correct way around.
4. The polarities are marked inside the battery compartment.
5. Should the batteries have no polarity markings, the flat end of the battery should always be inserted against the spring.
6. Reassemble the battery cover and tighten the screw to secure.
7. Do not over tighten.

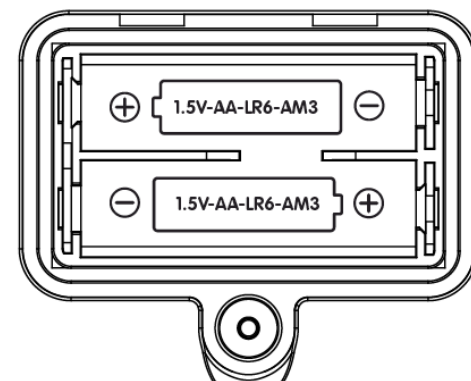

Please note the important points below when using batteries to power this product:

- Batteries should be inserted and removed by an adult.
- Only use the type of batteries specified in this user manual, or equivalent type. We recommend the use of alkaline batteries.
- Follow the polarity diagram inside the battery compartment and the polarity markings on the batteries.
- An incorrect location may either damage the toy, or cause battery leakage, or, to an extreme degree, lead to battery explosion.
- Do not try to charge non-rechargeable batteries, as they may leak or explode.
- Replace all batteries at the same time.
- Do not mix new with old batteries
- Do not mix different types of batteries (i. e. alkaline and zinc carbon).
- Remove the batteries during long periods of non-use. Always remove exhausted batteries from the product. Battery leakage and corrosion can damage the product.
- Do not short-circuit the supply terminals. Store batteries away from metal objects.
- Do not dispose of batteries in fire, as they may leak or explode. Never disassemble batteries.
- Rechargeable batteries should not be used.
- When rechargeable batteries are used anyway :
 - o Rechargeable batteries shall be charged only under the supervision of an adult.
 - o Rechargeable batteries shall be removed from the toy before being charged (if they can be removed).
- If a battery is swallowed, consult a Doctor or Medical Facility. Don't forget to take the product with you.
- If battery leakage occurs and comes in contact with the skin or eyes, wash immediately with lots of water.
- Batteries are included for demonstration purposes only and may need replacing after purchase.
- Strong Electro Magnetic Interference may disturb the normal function of the product. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function does not resume, please use the product in another location.