



## 1. Main Data:

Fixture Model	CREE LED Type	Input Voltage	System Wattage	Ballast Model	Power Factor @120V
MHTL-WS-48E	XTE	120-277V AC 50/60Hz	48W	EUC-052S140ST	≥0.95


## 2. Installation and Maintenance Instructions:

- 2.1 This product is to be installed and serviced by a certified electrician.
- 2.2 The Luminaire should be installed in an area with good ventilation, clear of any corrosive or combustible gases and explosive objects.
- 2.3 A supply voltage tolerance of +/- 10% is allowable. An improper installation outside of this range or with the incorrect input voltage will influence the normal operation of this luminaire and result in damage to the lamp and electronic ballast.
- 2.4 The luminaire must be properly grounded to prevent accidental electrical shocks, and to prevent interference from the electrical ballast affecting the normal operation of the luminaire.


## 3. Installation:

1. Remove the Lens.
2. Install the housing on the wall or ceiling using anchors and screws
3. Shut off main power and connect power source to ballast that is inside the fixture.
4. Reinstall the lens and energize the fixture.

(If mounting bracket is provided, install mounting bracket on the wall or ceiling first then hook the fixture on the bracket.)

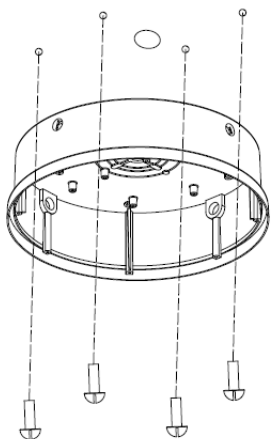

Surface Mount without Mounting Bracket

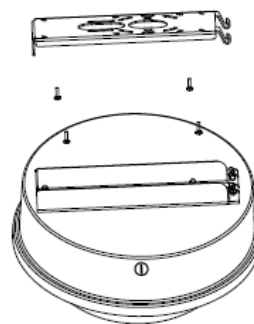

Surface Mount with Mounting Bracket