

MiD® by *Takara*®

MID70

Instruction Manual



Français
English
Italiano
Español

Page 1 - 37
Page 38 - 74
Pagina 75 - 111
página 112 - 148

MID70

Instruction Manual

TABLE OF CONTENTS

• Table of Contents.....	38
• Notice - Safety Information.....	39
• Accessories.....	41
• Product sides.....	42
• Basic setting.....	43
• UI introduction.....	45
• List.....	48
• Language.....	49
• Brightness.....	52
• Screen timeout.....	55
• ESB connection.....	58
• Wi-Fi.....	63
• GPS.....	65
• Camera/camcorder.....	67
• Web browsing.....	69
• Touch panel calibration.....	69
• Photo.....	71
• Email.....	72
• Troubleshooting.....	73
• Hereby declare.....	74

Notice

- The product belong to precision instrument, Never take apart the product by yourself.
- Do not drop it and avoid heavy impact at anytime.
- Please use suitable battery, charger and accessories ,or the product maybe damaged
- Do not use the product near water, Do not touch the product with you wet hand.
- Do not kink or crease the power cable or place heavy objects on the power cable, Fire can result from damaged power cables.
- Do not handle power plug and adapter with wet hands, electrical shock may result.
- Do not use the product at extremely low or high temperature.
- Avoid to leave the product in hot or humid place. Do not drop it and avoid heavy impact at anytime.
- Always use soft and dry cotton cloth when cleaning the product. Use of water/detergent/benzene/surfactants as cleaning agents is strictly prohibited.
- Operating the device must be compliance with the local electricity requirements.

MiD® by *Takara*®

Mobile Internet Drive

Modèle n°: MID70

Alimentation: 12V  1500mA 

DC 12V  cigarette lighter adapter



WARNING

**RISK OF EXPLOSION
DO NOT OPEN**



Rechargeable lithium battery pack

Output:  7.4V

Storage temperature: 0°C-40°C

Storage humidity: 45%-85%

WARNING

1. May explode if battery is incorrectly replaced or disposed in fire or water.
2. Do not short-circuit.
3. Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.
4. Do not place the battery pack under direct sunlight or in excessively hot places (over 40°C/104°F) such as the dashboard of cars.
5. Only use with the specific power adaptor by manufacturer
6. Do not strongly impact or press the battery.

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT REMOVE COVERS.

NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

CAUTION: Do not leave the tablet in a closed car on a sunny day, exposed to direct sunlight or near any source of heat (Otherwise the surface of the tablet may warp, change colour or be damaged.) When the tablet is used for a long period, the surface may be hot; this is not a malfunction, however, do not obstruct the vent opening as they are necessary for temperature regulation.

Accessories



MID70



Car cradle



Travel Charger



ESB Cable



Car charger



Car holder



User Manual

Product Sides



Basic Operation

Key features:

Home key:

- In the option program, menu or visit the website, pressing the home key then will return the main page.
- Long Press home key, will show your recently opened interface.

Menu:

- Click the menu key, and open the list of your current operation
- Press the Menu key, and close the list of current operation
- Long press the menu, open / close the keyboard shortcuts
- When the Screen was locked, you should press the Menu key to start the screen, then click the menu to unlock the screen
(If you have a set pattern or password locked, the system will ask you to enter the information)

Direction key

- Direction key can navigate a program; the mid-key can confirm the program that you option

Back:

- Click Back, return to the previous

Search:

- Click the Search button, enter the search interface

Powered-off:

- Click ON / OFF, MID power off


Power-on:

- Click ON / OFF. Screen locked, go into hibernation
- Long press ON / OFF, pop-up the option of the mid mode, you can select silent mode/airplane mode/power off

Volume:

- Click + to increase the volume
- Click - to reduce the volume

Basic Operation

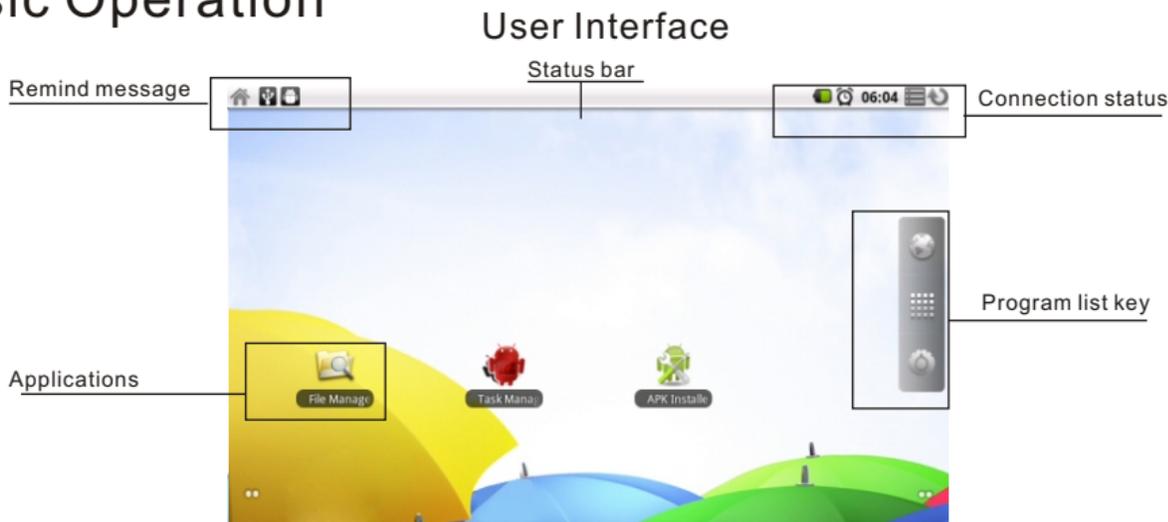

- **Remind message**
Press the status bar and slip down to read the message
- **Status bar**
- **Connection status**
- **Program list key**
you can click or drag to hide or show the list of applications
- **Applications**
Click any icon to start the application

Basic Operation

- **Main interface:**

The main interface is equivalent to a computer desktop.

You can put the application shortcuts & small gadget on the screen .

- **Tips & connection icon:**

Noted that the status bar on the top of your screen , if the icon appeared on the left ,it will prompt you can play music or other operation at present, on the right of status bar, you can see the alarm setting/wifi connection/battery charging and etc.

- **Reading tips**

When the status bar appear the prompt message, at the information, please click the column box, and slide the screen to open the notification list

Click Options to open prompt message

Click the clear notification on the top of Tips column, to read the full message

Slide the screen with your fingers, closed Tips column

- **Desktop widget**

 
Press the main interface of the space ,it will pop up "added to the main screen"

Select window to add or other operations

Basic Operation


Application:

Press the program don't move until Delete button appears, move program to Delete button and could delete the application

	mute		GPS opened & normal working
	Uploading & downloading		Complete downloading
	3G service connecting & data exchanging		Wi-Fi service connected & available
	Alarm clock		Playing music
	SD card shortage of capacity		Battery power changes
			charging

Basic Operation

list:

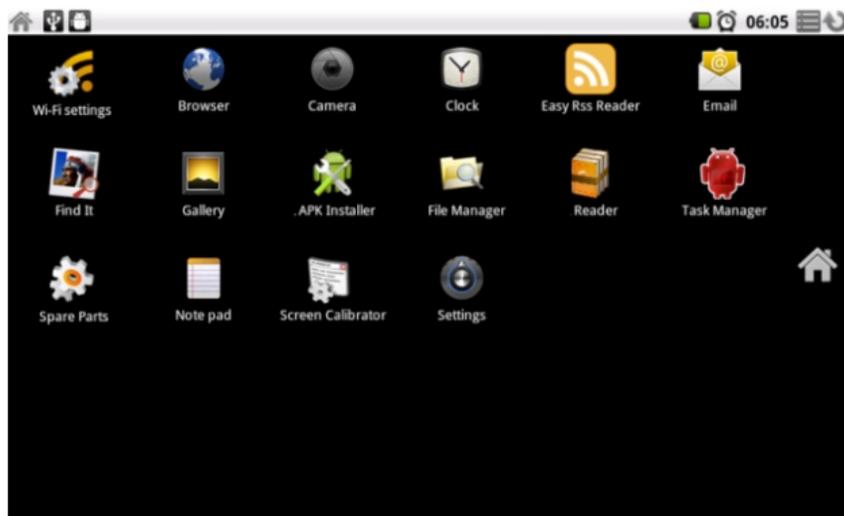


- Click the program button on the main interface, here will be show all application
- Click any what you want ,then it will enter into
- Hold down the program icon in the main interface , adding shortcuts
- Click again the program will be took up. and come back the main interface


Basic Operation

Language setting

Settings → Language & keyboard → Select language

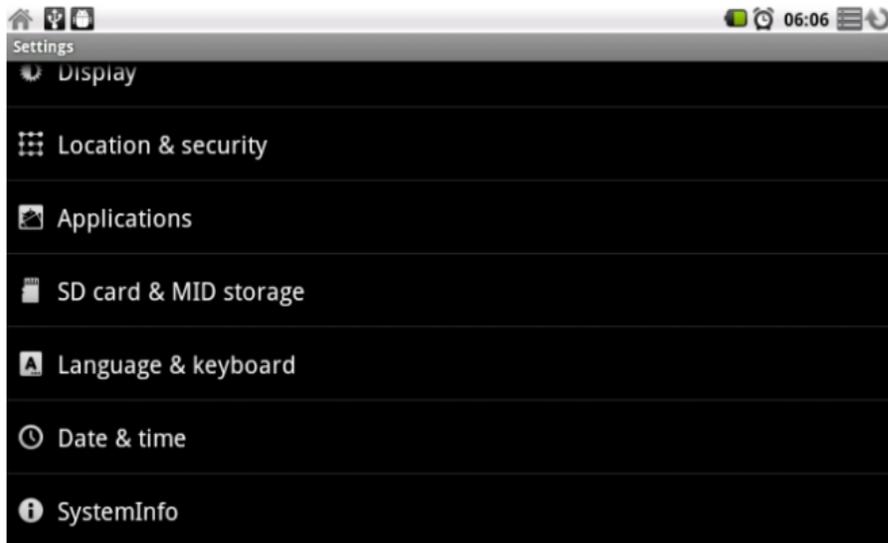


Basic Operation

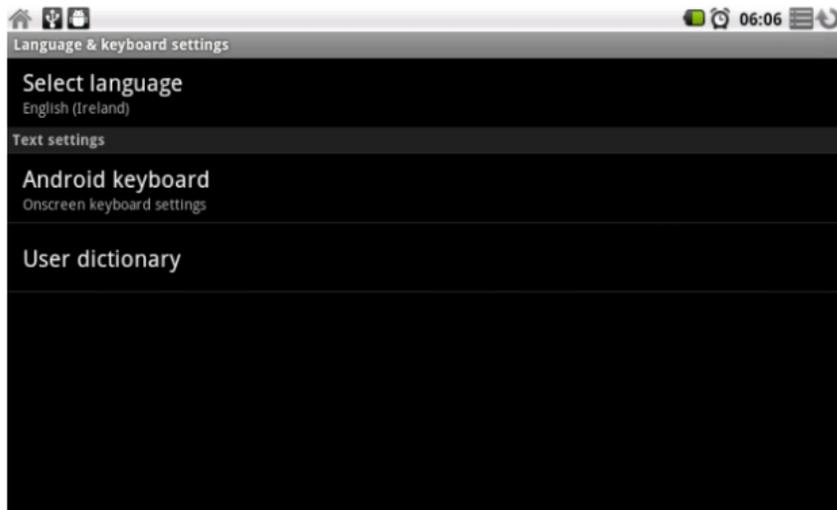

Basic Operation


Click to select the language in the list.

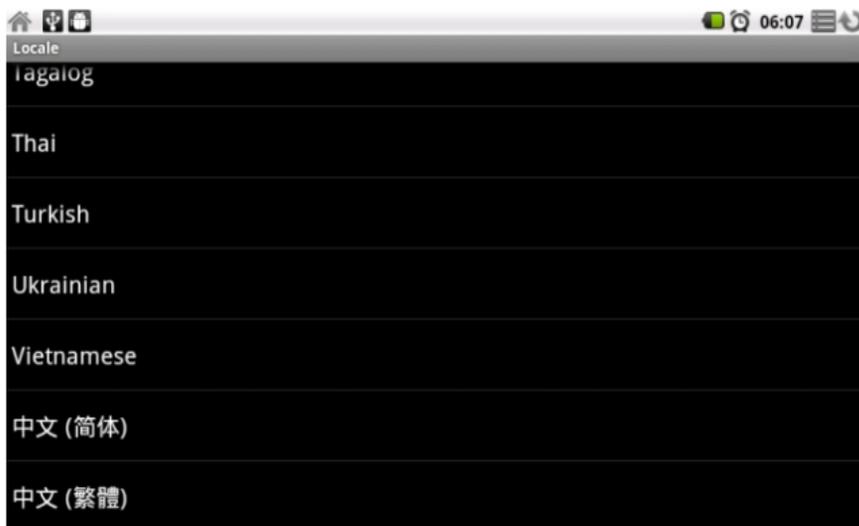


Basic Operation

Brightness setting


Settings → Display → Brightness

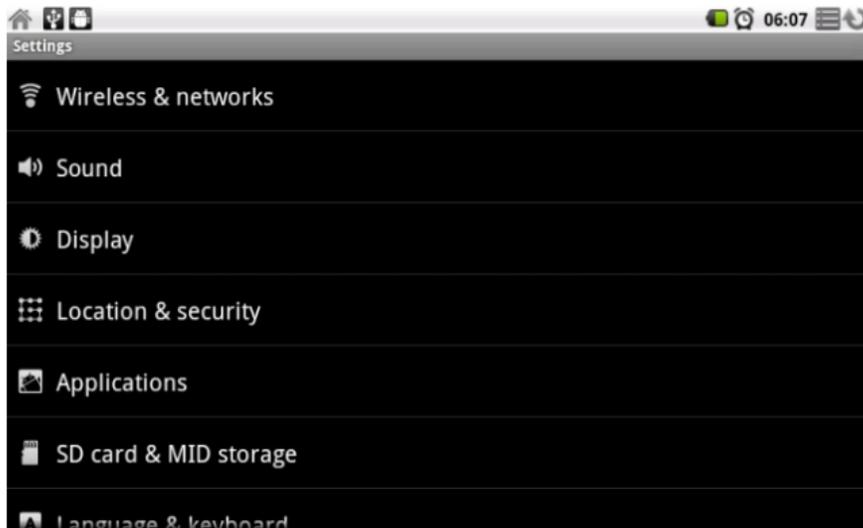

Basic Operation

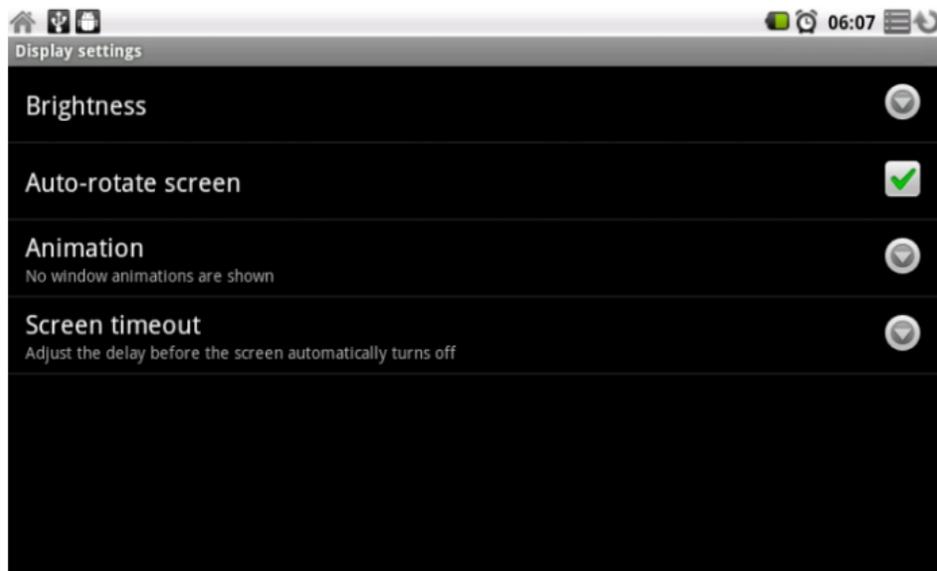

Basic Operation

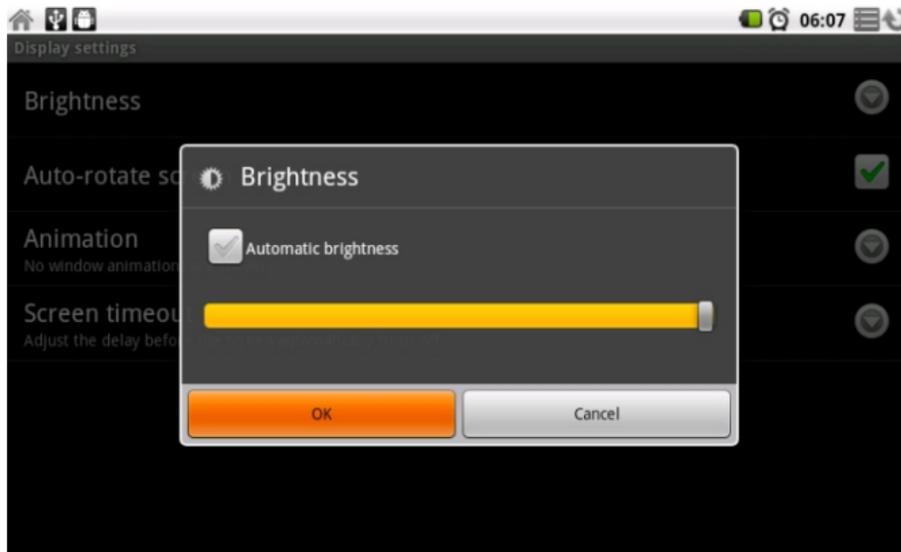


Note

Sound, date & time settings can consult with the brightness setting


Basic Operation

Screen timeout setting

Settings→Display→screen timeout

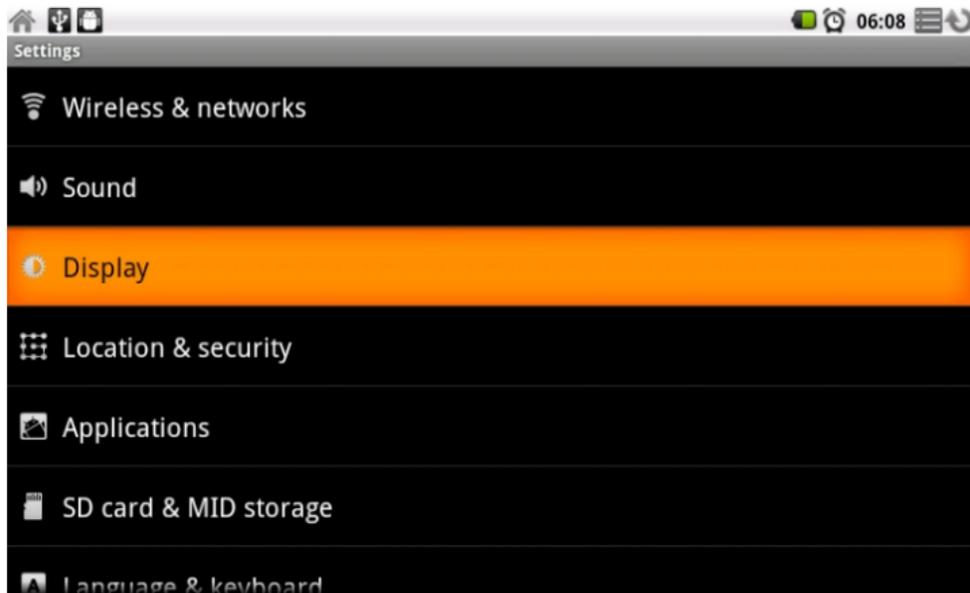

Basic Operation

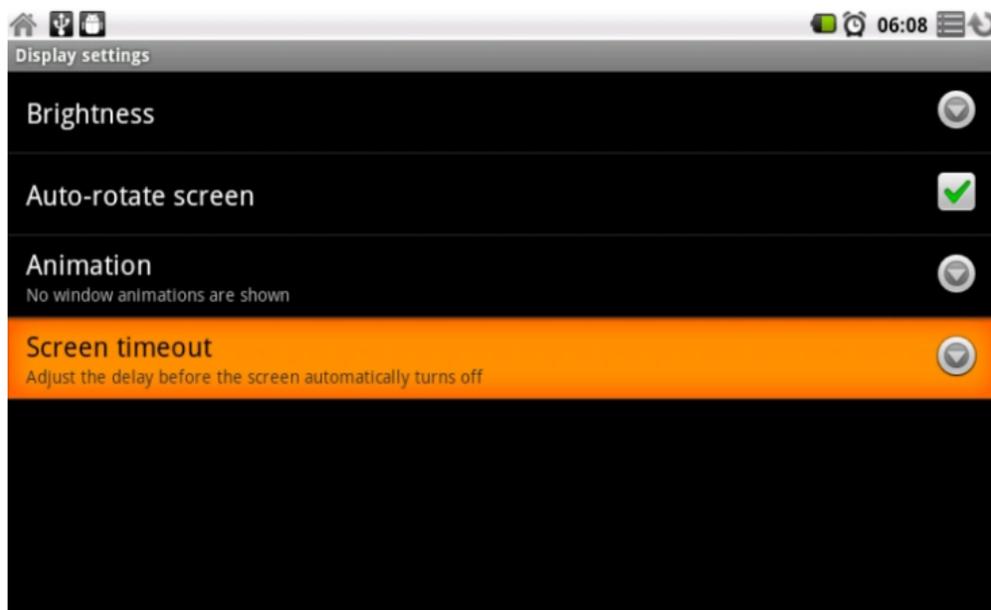


Basic Operation



Basic Operation

ESB connection setting

It will show this icon when an ESB is connected.

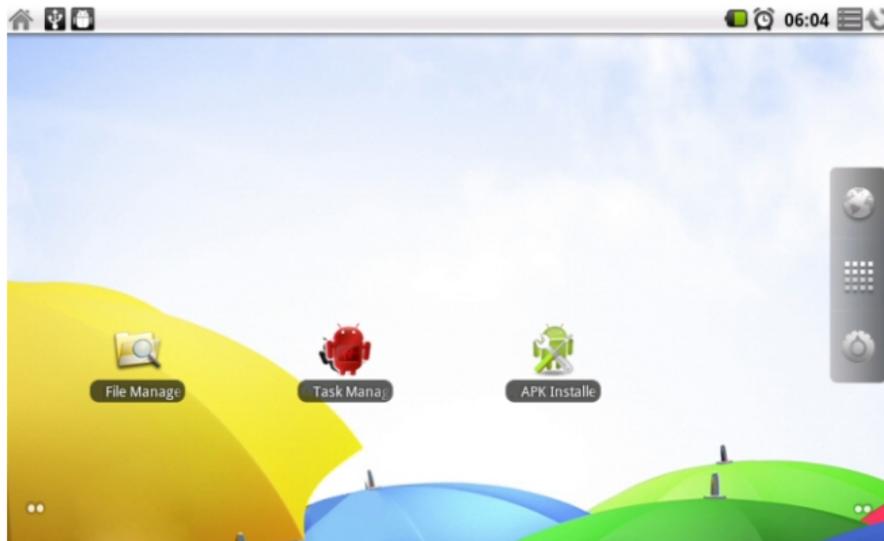


Basic Operation

- ESB is available, if you want to operate the files in the Memory card through the computer ,need to do the following:
- Press the status bar & slide down
- Display the following information.



Basic Operation


Select “ESB connected”. The below interface will pop up.
Attention please: One is memory and the other is Memory card card.

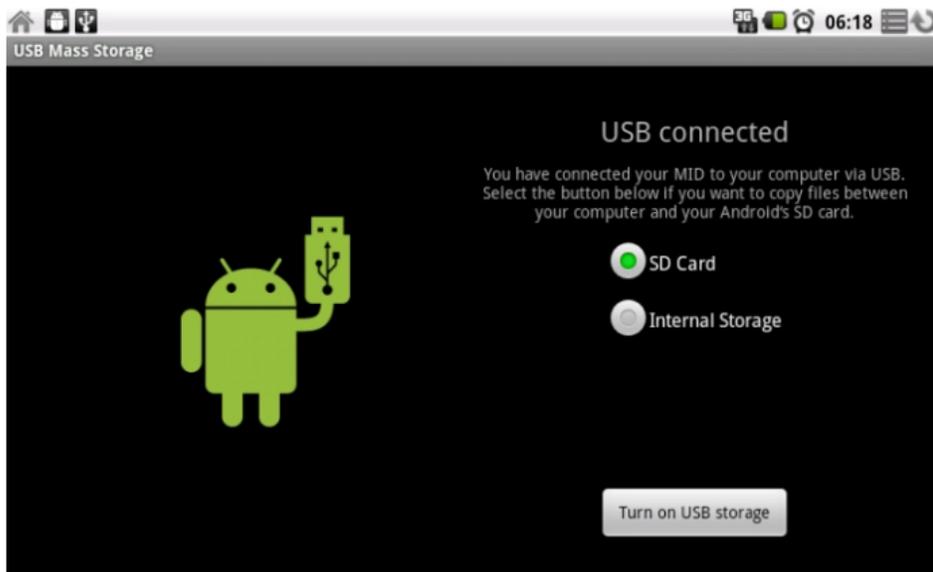

Basic Operation

Click “Turn on ESB storage” to install. Now you can use ESB device on the computer.


The following picture will appear to show the correct connection.

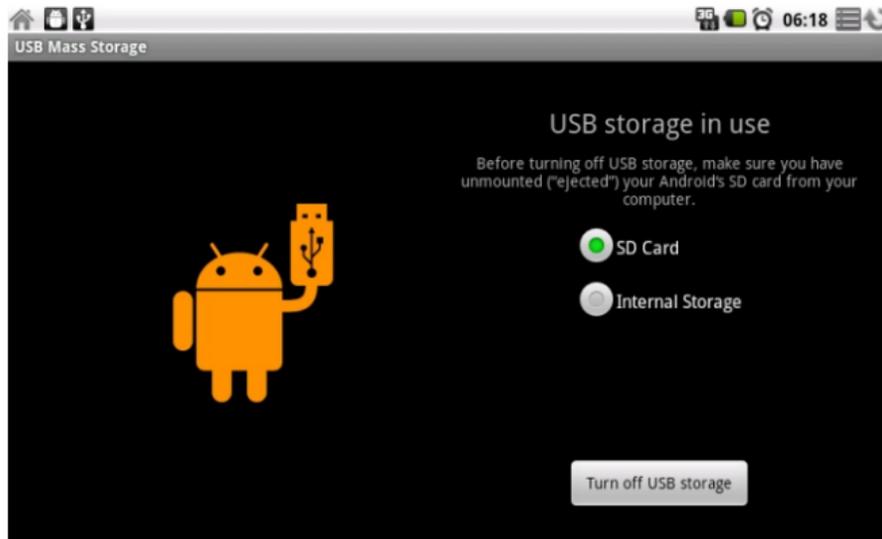

Basic Operation


If you need to disconnect the ESB, click “Turn off ESB storage” to safely remove.

After removal, it will go back to the following picture.

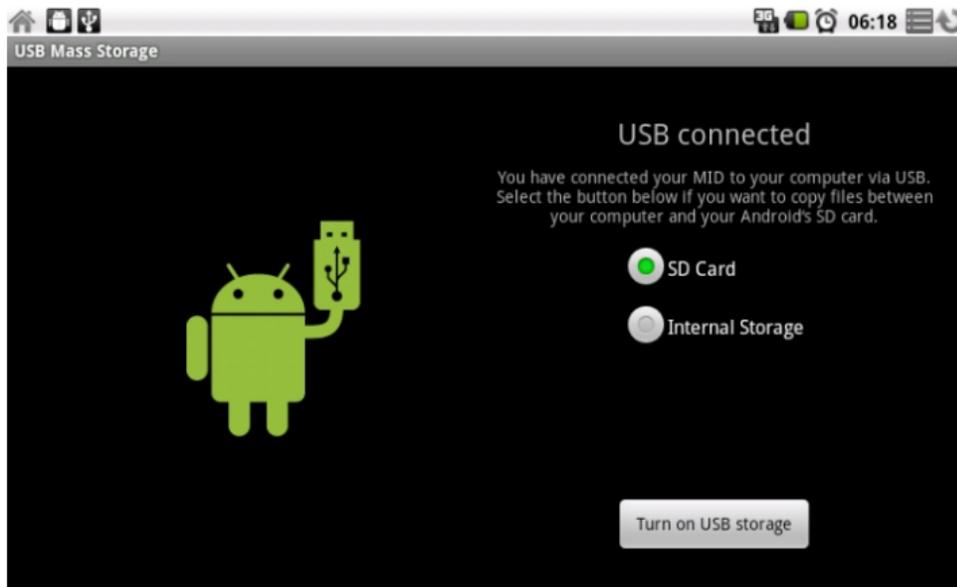

Basic Operation

- Wi-Fi setting
- Your phone can connect with Wi-Fi network .must make sure have connected

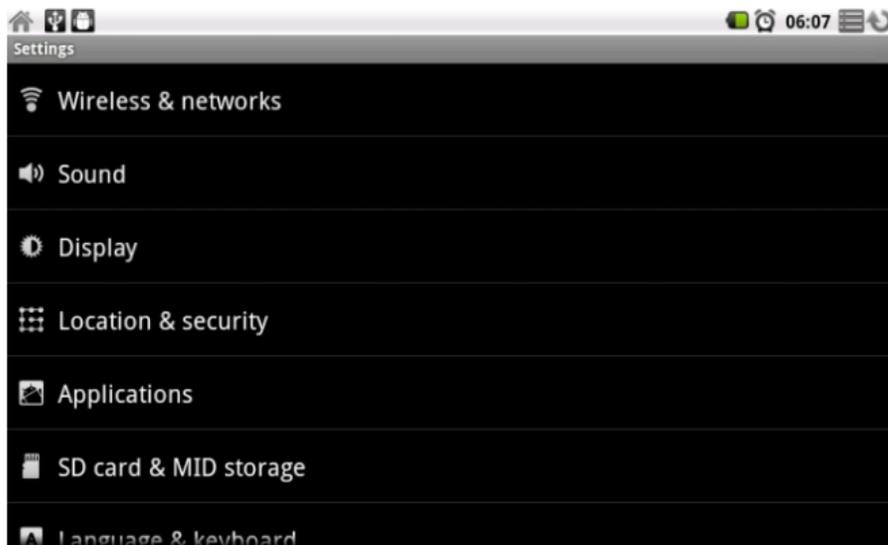

Basic Operation

- Click the menu button in the main interface,
- Press setting
- Click wireless control I and select the Wi-Fi to open it.
- Click Wi-Fi settings. the mid will search the available Wi-Fi network
- Click the Wi-Fi network what you want to connect.
- Input password.
- Click connection.

Note

When connect WiFi ,your phone will consume lots of power, please turn off WiFi when you don't use

Function

- GPS setting
- Click “GPS settings” icon
- GPS viewer program description
- Before using GPS, make sure that the GPS function is enabled, The method please refer to the above settings




Description:

After Positioning it will display signal strength graph

After press cold start, the program will re-positioning.

Function

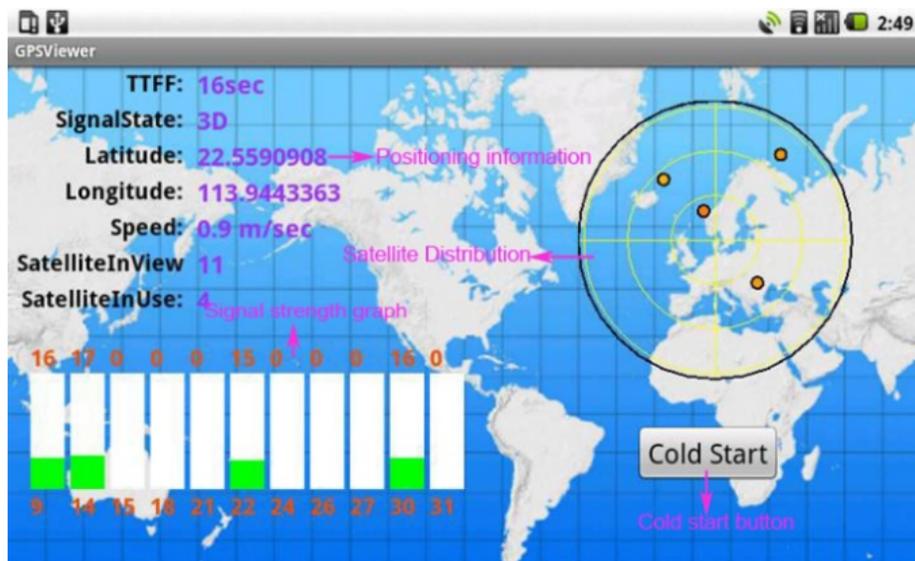


Function

Camera / Camcorder settings

Click the “camera” icon ,and get into the program


Before using please make sure the Memory card card has been

Camcorder mode:

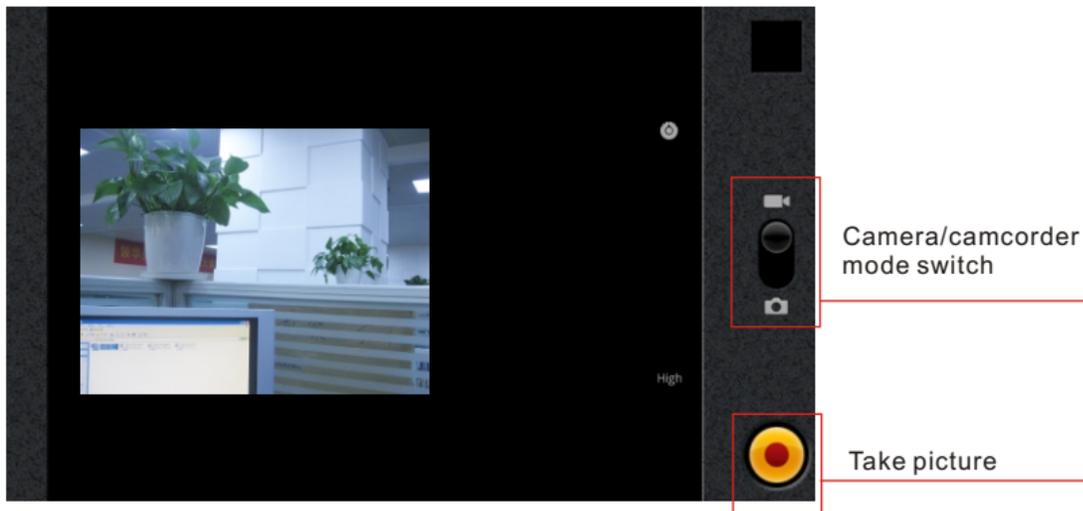

Function

Camera mode :

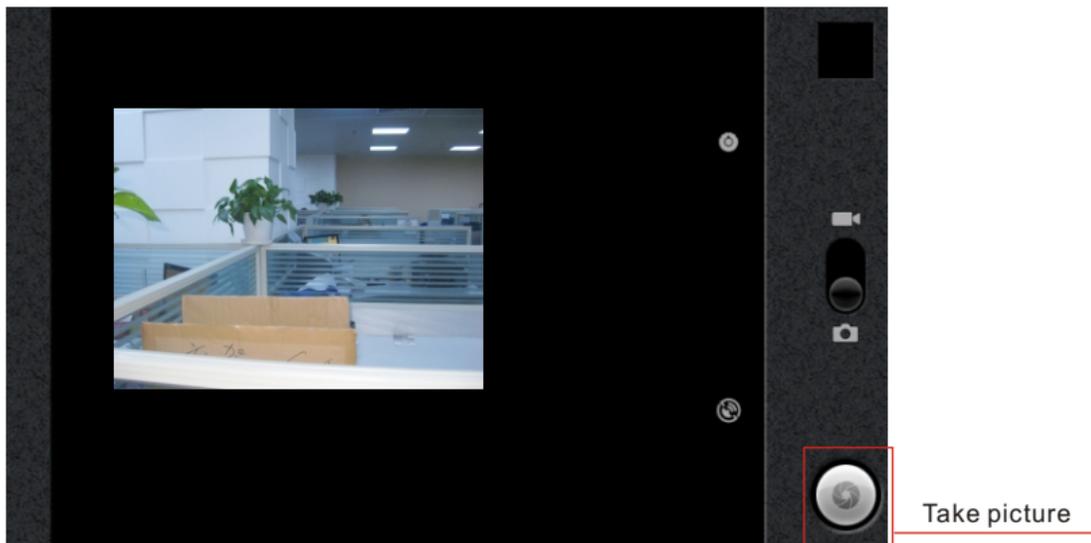


Function

Web browsing

Before use the browser, make sure the wifi service have been opened in accordance with the Previous operation

Applications setting

Touch panel calibration

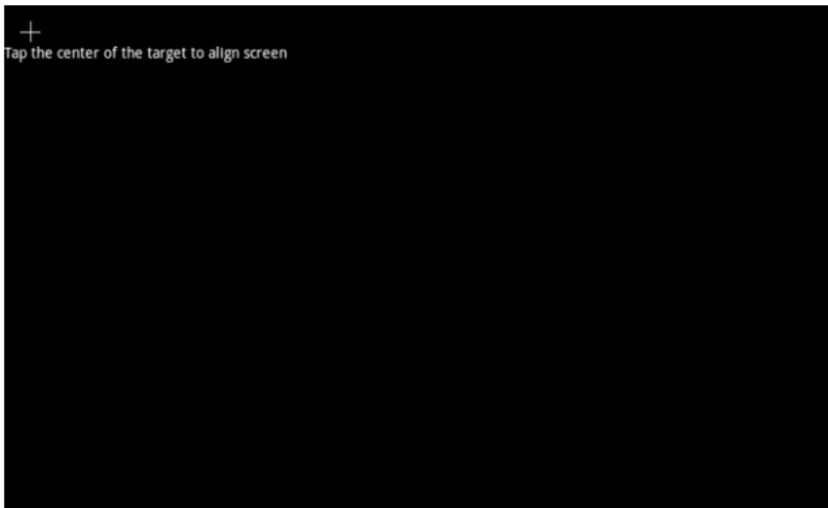


Function

- If you want to calibration the touch screen, press MENU→Settings→touchpanel calibration. Follow the prompts touch screen calibration, the calibration is complete there will be prompt and returns the corresponding list of settings.
- Click the touch screen calibration , enter procedures
- According to prompts, tap the center of the target to align screen
- After operated, click OK (if can not operate you can use the mouse or ESB jack)
- Then the touch screen can be more accurate.

Function

Photo Browser

Press the folder to show → Enter → Open

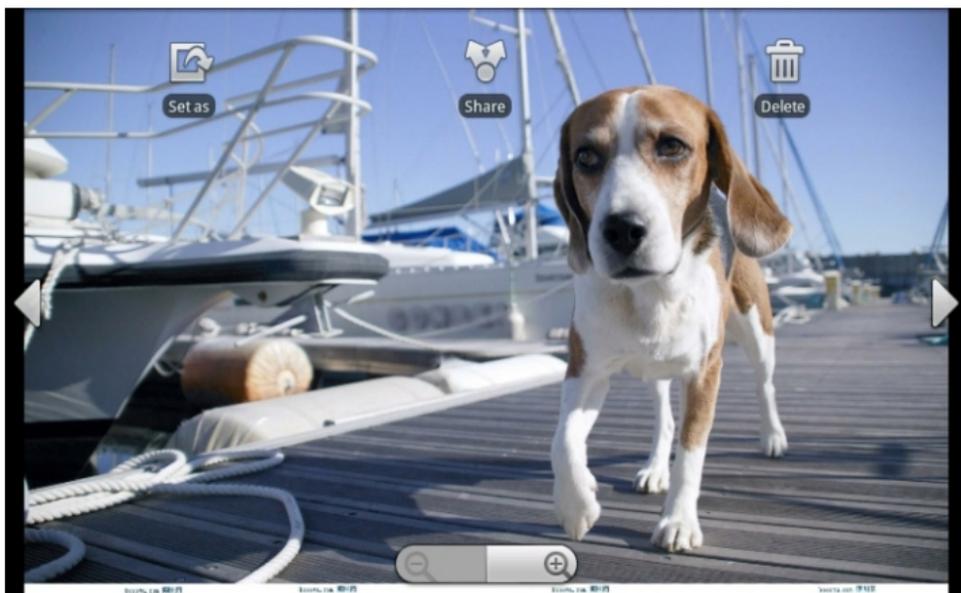

Function

E-mail

- Click the E-mail icon



can enter the e-mail, and then you can

- Proceed as follows
- Set e-mail account
- Open a new e-mail
- Send and receive e-mail

Note: Press MENU to pop-up shortcut menu

- **Note**

The product can support MSN &Third Party Software

Troubleshooting

Forced shutdown

- Press and Machinery Power key for 3 seconds, device will force the shutdown.

Restore default settings

- To restore the device to factory settings and clear all information, press
- MENU → Settings → Memory card cards and equipment storage → restore factory settings.

Warning

- Reset the device selected will delete Google accounts, system and application data and settings, downloading applications, please use this carefully.

Hereby declare

Google, the Google logo, Android, Google Maps, Gmail, YouTube, Android Market, and Google talk are trademarks of Google Inc.

