



16 Litre Oven Model CE100MO



INSTRUCTION MANUAL

SAVE THESE INSTRUCTIONS

Dear Valued Customer

Thank you for purchasing a *CASCADE* appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADE* product into your home.

Your *CASCADE* appliance is recognised as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADE* appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply:	230V ~ 50 Hz – AC only
Rated Power:	1200 watts total
Timer length:	60 minutes

BEFORE FIRST USE

1. Your CASCADE oven has left the factory in good working order in this carton for your protection. Should the carton be damaged or if the product is dropped, damaged, has a malfunction in any way, or if the flexible cord is damaged, immediately contact your retailer for replacement or repair.
2. Carefully unpack your CASCADE oven. Make sure you do not discard any packaging material until all parts of the appliance have been found.
3. Carefully wipe the exterior of the appliance with a damp cloth to remove any dust that may have accumulated. Dry with a dry towel. Do not use abrasive cleaners.
WARNING do not immerse in water or any other liquids.
4. Wash the oven rack and tray accessories in warm soapy water. Dry with a dry towel.
5. The appliance is now ready for operation.

OPERATION

- Before using the appliance for the first time, or after long periods of storage, clean the appliance thoroughly. (See BEFORE FIRST USE.)
- Always place the appliance on a flat, clean and non-slippery surface before operating it.
- Always place the appliance on a heat resistant surface as the appliance reaches high temperatures.
- **WARNING** always leave a gap of approximately 20 cm around the exterior of appliance. Never use near curtains, walls, under cupboards or other flammable materials.
- Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your appliance.

Mains supply: 230V ~ 50Hz – AC only

- Your CASCADE oven is now ready for use.

Bake or grill function.

Your Cascade oven has both BAKE and GRILL function.

- To use oven BAKE function, place wire oven rack into the lower oven rack position. Place food item on oven tray supplied and position on rack. Select BAKE function (Upper and Lower heat) on selector switch, turn timer to desired cook time and set oven temperature control to the desired oven temperature. Close oven door. Cooking will commence.
- To use oven GRILL function, place wire rack into upper or middle rack position. Place food item on oven tray supplied and position on rack. Select GRILL function (Upper heat) on selector switch, turn timer to desired cook time and set oven temperature control to the MAX position. Open door. Cooking will commence.

In both settings the cooking will automatically stop once timer has reached OFF position. To continue cooking for an extended period, simply reset timer to an extended time and cooking will recommence. Red indicator lamp indicates power is on.

NOTE The first time you use your appliance, there may be a small amount of smoke and smell. This is normal. It is due to a protective coating, placed on the heating elements, to protect the heating elements during shipping.

WARNING do not touch hot surfaces. Use the special handle supplied to remove oven tray or oven gloves. Place food trays on a heat resistant surface.

Temperature guide

Setting	Oven temperature
1	60°C
2	82°C
3	103°C
4	124°C
5	145°C
6	166°C
7	187°C
8	208°C
9	230°C
10	250°C

CLEANING AND CARING

- Always disconnect your CASCADE oven from the mains supply before cleaning.
- Always allow your appliance to cool completely before cleaning.
- Never immerse your appliance in water or other liquids.
- Wipe the exterior of the appliance with a damp cloth. Dry with a dry towel.
- Wipe the inside of the oven with a warm damp cloth.
- Always remove any food scraps or breadcrumbs from the oven before re use.
- Wash the accessories in warm soapy water. Dry with a dry towel.
- Store your appliance in its original box or in a dry cupboard.

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **CAUTION** Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.
3. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
4. **VERY IMPORTANT** do not immerse oven in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
5. Unplug from mains outlet when appliance is not in use, before attaching or removing accessories, and before cleaning.
6. An appliance dropped or damaged should not be used until examined by a service engineer.
7. Do not permit the mains lead to come in contact with hot objects.
8. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
9. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service-Dealer.
10. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.

11. Do not let the cord hang over edge of table or counter.
12. **WARNING** an appliance should never be left unattended when plugged in.
13. This appliance is intended for household use only and not for commercial or industrial use.
14. **WARNING** do not touch hot surfaces.
15. **WARNING** this appliance must be earthed.
16. **WARNING** do not use the appliance near flammable materials such as curtains, walls or under cupboards.
17. If appliance is to be used by a third party, please supply the instruction manual with it.
18. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com