 


 
QUICK START GUIDE

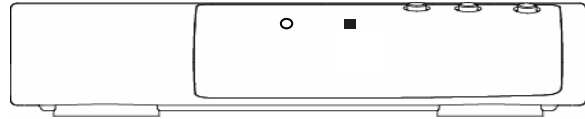

CAX-01/CAX-03/CAX-04

STEP 1: CONNECTIONS

Option 1. Antenna and RF Cable Connections

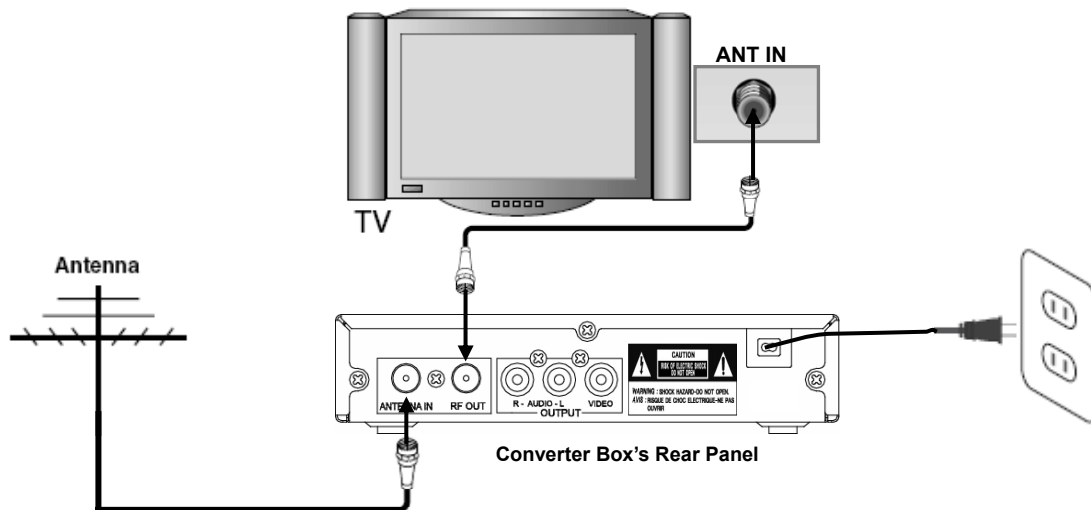

 
1. Connect an antenna cable to the **"ANTENNA IN"** jack on the rear of the Converter Box.
2. Connect the **"RF OUT"** jack from the rear of the Converter Box to the **"ANT IN"** jack on your TV using the RF cable supplied with the Converter Box.
3. Connect the AC power cable of the Converter Box to suitable wall outlet.

Note

 
- If you connect **"RF OUT"** of Converter Box to **ANT. IN** of your TV, you can watch the video and the audio of the Converter Box on **Ch.3** or **Ch.4** of your TV. The RF output channels can be selected in output channel of menu-option. (Refer to page 15 in user manual)

※ CAX-03 and CAX-04 have analog pass-through.

~ These models are capable of passing through the analog signal to the TV set in standby mode.

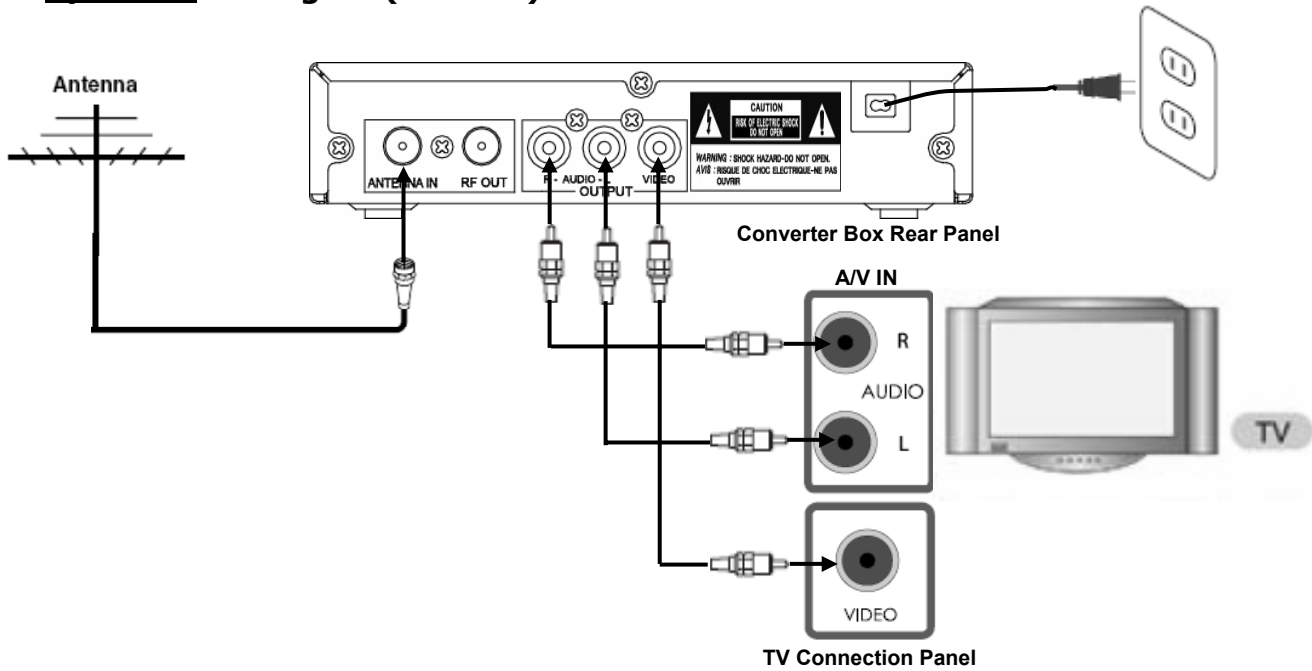Option 2. Analog TV (Monitor) Connection with RCA Cables

1. Connect an antenna cable to the "**ANTENNA IN**" jack on the rear of the Converter Box.
2. Connect the "**R-AUDIO-L**" jacks and "**VIDEO**" jack from the converter box to the "**A/V IN**" jacks on your TV using RCA-type cables.
3. Connect the AC power cable of the Converter Box to suitable wall outlet.

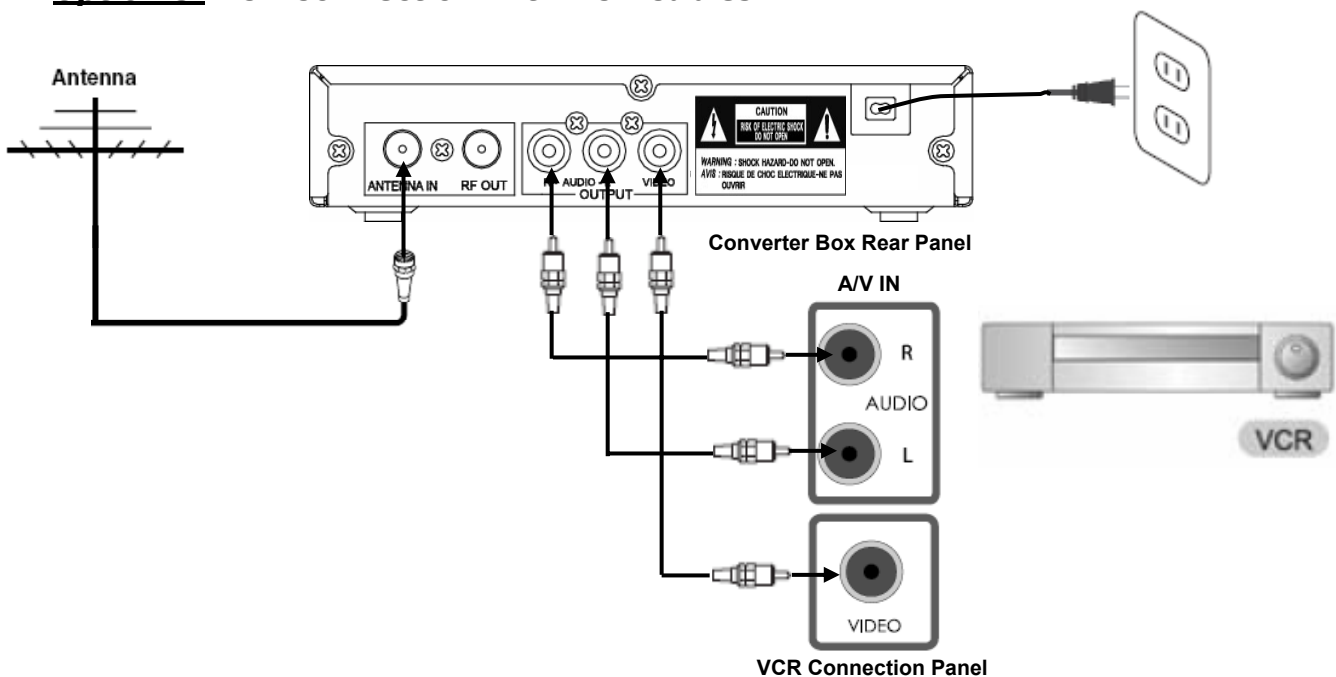Option 3. VCR Connection with RCA Cables

1. Connect an antenna cable to the "**ANTENNA IN**" jack on the rear of the Converter Box.
2. Connect the L/R "**AUDIO OUT**" jacks and "**VIDEO OUT**" jack from the Converter Box to the "**A/V IN**" jacks on your VCR using RCA-type cables.
3. Connect the AC power cable of the Converter Box to suitable wall outlet.

STEP 2: PROGRAM THE REMOTE CONTROLLER

You can control TV sets of all major brands after programming the Converter Box remote controller with the **PGM**(Program) button.

1. Refer to the Program Code List (**page 21 in user manual**).

 
Search the brand of your TV set and the 3-digit program code. If your TV set is not on the list, skip the rest of this section and go to "STEP 3: TURN ON THE CONVERTER BOX".

※ If you have lost the user manual, visit www.casticonverter.com

PROGRAM CODE LIST

MAKER(BRAND)	CODE LIST	MAKER(BRAND)	CODE LIST
ADMIRAL	072 081 160 161 096	ELECTROHOME	024 076 143
ADVENT	247	EMERSON	005 028 043 048 076 096 155 004 051 143 151 153 154
AIKO	103	FISHER	007 057
AKAI	006 146 248	FUJITSU	164 028 198 246
ALARON	028	FUNAI	028 043 052 249
AMARK	112 143	FUTURETECH	043

 
2. Keep the **PGM** button pressed while entering the correct 3-digit program code with the **Number(0~9)** buttons. After entering the 3-digit program code, release the **PGM** button.

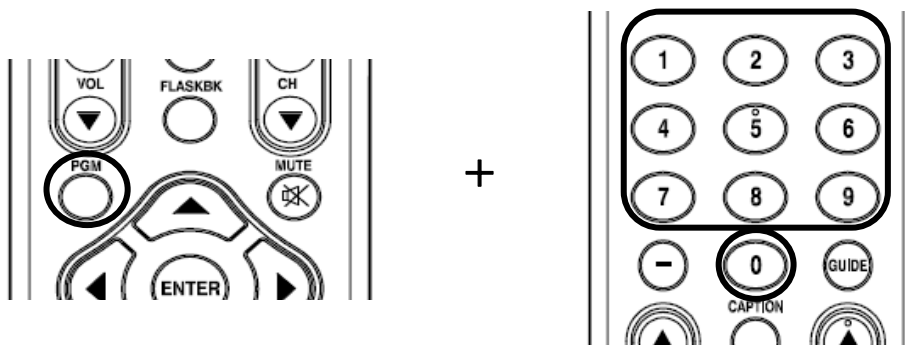

3. Aim the remote controller toward your TV and press the **TV POWER** button on the remote controller to check if the TV responds properly. If there is no response from your TV set, try step 2 again with another program code. If your TV responds properly, the programming is completed.

STEP 3: TURN ON THE CONVERTER BOX

1. Press **POWER** on the converter box or **BOX POWER** on the remote controller.
The power indicator will turn green if the power is on.
2. Press **TV POWER** of remote controller to turn on your TV
3. When the converter box is connected only to RF cable, if current channel of TV is not CH04 or CH03, press **CH04** or **CH03** of remote controller. **※ Initial RF output channel is CH04**
4. When the converter box is connected to RCA cables, if your TV is in Tuner mode, press **INPUT** of remote controller to switch to AV mode.

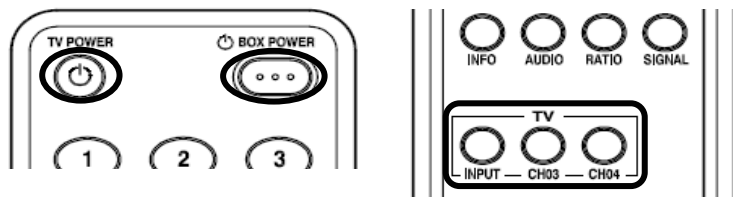**STEP 4: SETTING THE OSD LANGUAGE**

1. Press the **MENU** to display MENU LIST on the screen.
2. Select **OPTION** menu using ◀/▶ then press **ENTER** or ▼.
3. Use ▲/▼ to select "Language" then press ▶ or **ENTER**.
4. Use ▲/▼ to select the desired language then press **ENTER**.
5. Press **MENU** or ◀ to return to the previous category or press **EXIT** to return to TV viewing.

**STEP 5: AUTO CHANNEL SCANNING**

1. Press the **MENU** to display MENU LIST on the screen.
2. Press **ENTER** or ▼ to enter the sub-menu of CHANNEL menu.
Use ▲/▼ to select 'Channel Scan'.
3. Press **ENTER** or ▶ to start auto scan of available channels.
If you want to stop channel scan in the middle of the scanning process, press **ENTER**.
4. After the channel scan is completed, the channel with the lowest channel number will appear on the TV screen.
5. Press **MENU** or ◀ to return to the previous category or press **EXIT** to return to TV viewing.



Your Converter Box is now ready for use !

Please, read the User Manual for further details on using the Converter Box.