

SR100
Digital Telephone Recorder
Operate Instruction

Version1.0.0

INDEX


The table of contents is empty because you aren't using the paragraph styles set to appear in it.

| | |
|------------------------------------|-----------|
| 7.SETUP | 8 |
| 8.RECORD | 12 |
| 9.SERVICE AND WARRANTY..... | 17 |
| 10.CONTACT | 18 |

1.INTRODUCTION

This device is a single line voice logger. It can record all the calls over the phone including Caller ID, date, time and elapse.

2..APPEARANCE

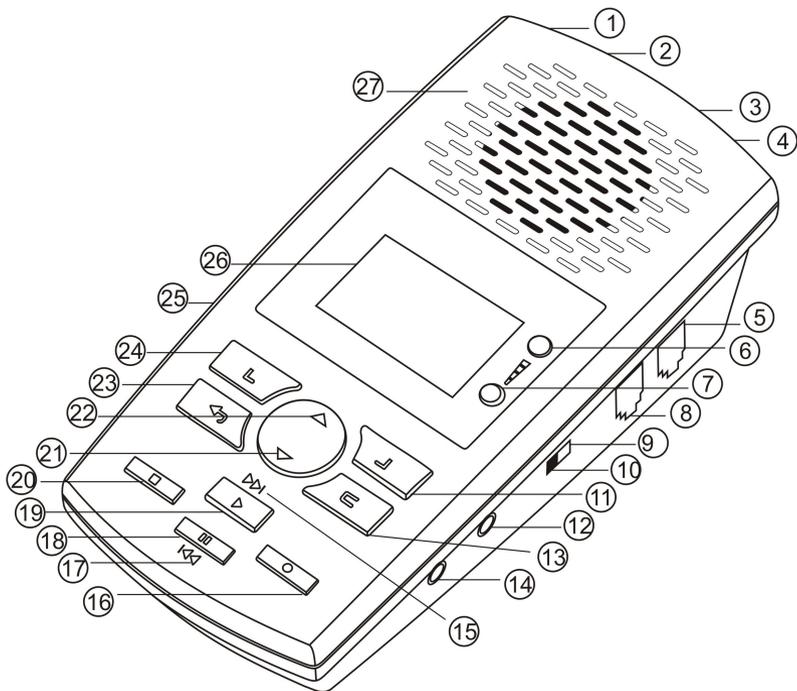

①USB Port

○2DV 5V

○3LINE port

○4PHONE port

○5Handset Line

○6Volume +

○7Volume -

○8Handset

○9SOURCE PHONE

○10SOURCE MICROPHONE

○15Fast Forward

○16Recording

○17Fast Reverse

○18Pause

○19Play

○20Stop

○21Page Down

○22Page Up

○23Back

○24Records

○25SD Card

SR100 Operate Instruction

3.Accessory

- 1、SR100
- 2、Operation Instruction
- 3、USB Cable
- 4、DC5V Adaptor
- 5、2G SD Memory card

4.PC Requirement


- 1、Windows7/Vista/XP/2000
- 2、Above Pentium 400 MHz CPU
- 3、256MB RAM
- 4、1GB HDD capacity
- 5、USB interface

5.Connection

1. Analog line connection:

- a. Switch the SOURCE to PHONE
- b. Co-line to LINE port
- c. Phone to PHONE port,


**  will be shown on the LCD. See P.9 for set up.

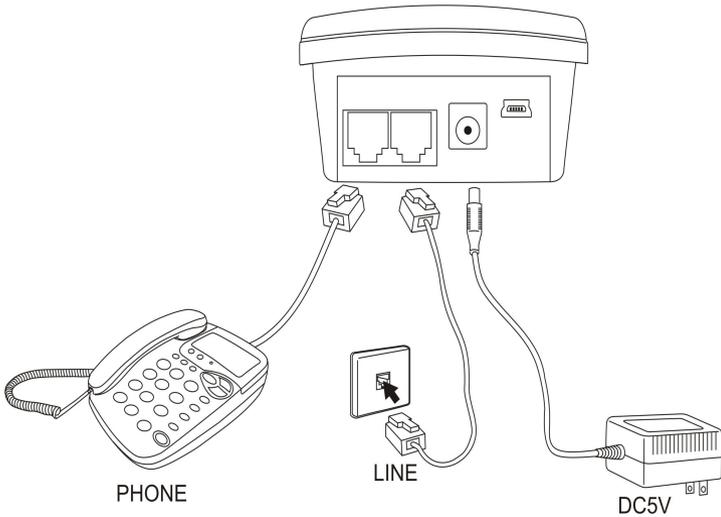

2. Digital phone Connection (Handset):

- a. Switch SOURCE to PHONE
- b. Connect handset line to LINE
- c. Connect handset to PHONE

**☎ will be shown on the LCD. Voice trigger setup is necessary. See Page 9 for set up.

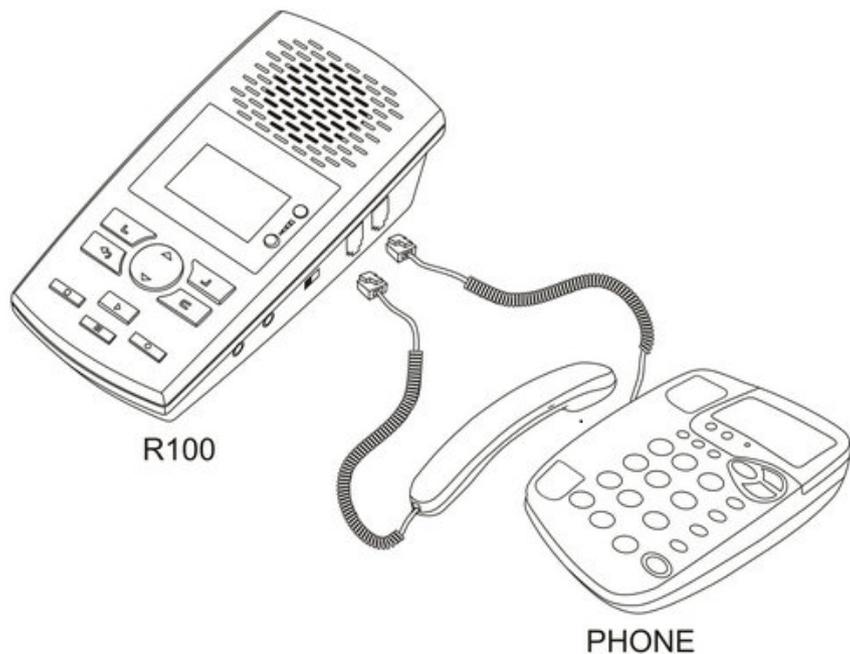

3. Microphone connection (Environmental Record):

a. Switch SOURCE to MIC

**  will be shown on LCD. See Page 8 for set up.

Remark: See Page 11 for initial Time/Date set up.

6.Main Menu



(A)Standby Mode

: Remaining Battery capacity

: Recording display (Flash when recording)

: Handset recording mode : Microphone recording mode

Auto: Auto recording mode Manual: Manual recording mode

Trigger: Voice Trigger mode : Loop recording mode

10H: Recording time of remaining capacity Time: System Time

(B)Talk Mode

Type: Incoming .Outgoing

Elapse: Talking time.

Phone number: Incoming/Outgoing phone number .

7.Setup

(A).Recording Parameter

RECORDING

▶ MIC REC. MODE
AUTO/MANUAL REC.
VOX TRIG LEVEL
VOX SILENCE
MAX REC. DURATION
MIN REC. DURATION
LOOP REC.
LOW MEMORY REMINDER
PLAY ANNOUNCEMENT
OFF HOOK VOLTAGE
CALL OUT DELAY TIME

OK

BACK

1 .MIC REC Mode :

Switch the SOURCE to MIC, DUET can record audio from built-in microphone or external microphone.

(1)Manual

Press RECORD to start, STOP to terminate.

(2)Automatic (Voice Trigger)

When voice level is higher than settings, it starts recording automatically.

2. Auto / Manual Rec.

You can set channel recording conditions

(1)Manual Recording

Press RECORD to start, STOP to terminate

(2)Automatic Recording

When line voltage is lower than settings, it starts recording automatically

(3)Voice Trigger

When voice level is higher than settings, it starts recording automatically.

3 .VOX Trig Level

Adjust voice level in voice trigger conditions. Setting range is 1-10.

4. VOX Silence

Adjust silent time to terminate recording in voice trigger conditions. Setting Range is 5-99 sec

5. Max REC Duration

Set maximum recording time for single call. Setting range is 10 min ~ ∞

6. Min REC Duration

Set minimum recording time for single call. Setting range is 5 sec ~ ∞

7 .Loop Recording

(1)Enable

When the SD card capacity is insufficient, it will delete the old audio files automatically and keep recording.

(2)Disable

When the SD card capacity is insufficient, it will not record any more.

8. Storage Capacity Alert

The LCD remaining recordable time symbol will blink when storage capacity is lower than setting. Setting range is 5-99 hours.

9. Play Announcement

Enable / Disable to play announcement that the call is recorded to caller


10. Off Hook Voltage

The system will record the call automatically when the line voltage is lower than setting. Setting range is 15~30(V).

11. Call Out Delay Time

The system will record calls after setting delay time. Setting range is 0~20 sec

(B) .System Setup

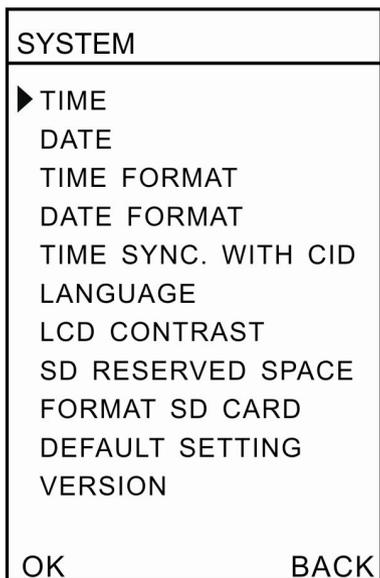

1 .Time

System time setup

2. Date

System date setup

3. Time Format

System time display format setup

4. Date Format

System date display format setup

5 .Time synchronization with Caller ID

Synchronize the time with FSK Caller ID

6. Language

You can choose Traditional Chinese, Simple Chinese or English as system language.

7. LCD Contrast

Adjust the contrast of LCD display, the higher the brighter. Range 1-6

8. SD Card Reserve Space

SD card can be set to retain the capacity for system smooth running.

9. Format SD Card

Format SD Card will remove all audio files.

10 .Default setting

Reset to factory default.

8. Record

(A)Records Display Description

```
▶T 04/01 12:48 00m11s
∞ TRIG
  T 04/01 11:48 00m12s
∞ TRIG
  O 04/01 10:48 00m13s
∞ 0932567814
OPT      1/3      TYPE
```

1 .Record Type

I=Incoming call O=Outgoing call N=MIC T=Voice Trigger A=Answering machine

2 .Date /Time

Display date and time of audio files

3. Recording Length

Display the length of audio files.

4 .∞

Symbol indicates audio files, otherwise CDR only.

SR100 Operate Instruction

5 .Incoming /Outgoing Call Number Display

Display incoming or outgoing numbers.

6.

Symbol indicates the important audio files.

(B).Operation

| OPTIONS | |
|---|-------------------|
|  | PLAY |
| | FLAG |
| | REMOVE FLAG |
| | REMOVE FLAG |
| | DELETE |
| | SEARCH BY TIME |
| | SEARCH BY TEL NO. |
| OK | BACK |

1 .Play: Play selected audio files.

2 .Flag: Mark important audio files.

3 .Remove Flag: Remove mark on audio files.

4 .Delete: Delete selected audio files or CDR.


(1) Delete audio files and keep the CDR

(2) Delete both audio files and CDR

5 .Search by Time: Search audio files by time


6 .Search by number: Search audio files by incoming / outgoing numbers

(C). Play Audio files

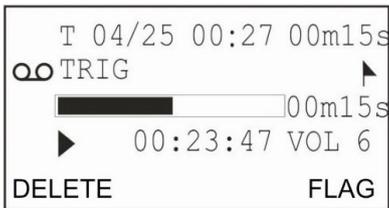

Recording type, date, time, elapse, number and process will be shown on LCD. You can delete or flag the audio file directly.

(D) .Searching Option

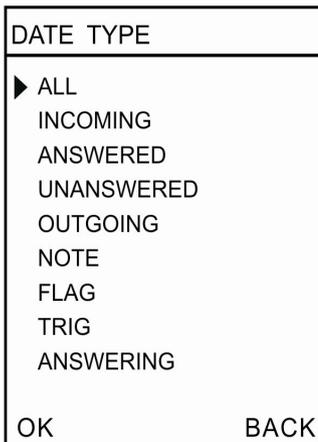

1. All

Search all records in SD card

2. Incoming

Search all incoming calls including missed calls.

3. Answered

Search all received calls

4 .Unanswered Calls

Search all missed calls

5. Outgoing

Search all outgoing calls

6. Note

Search all audio files from MIC

7. Flag

Search marked audio files

8. Trig

Search voice triggered audio files

9. Answering

Search answering machine messages audio files

You can search specified audio files by operating search functions.

8.Service Guarantee

One (1) Year Limited Warranty

Limited Warranty

1. **HARDWARE:** this hardware against defects in materials and workmanship under normal use for a period of ONE (1) YEAE from the date of purchase.
2. **SOFTWARE:** software can be installed in computer system and ensure it is compatible or works with the hardware. Third party application is not covered under this Limited Warranty.

3. **OTHERS:**

This warranty does not apply: (a) to accessories, such as operation instruction, USB cable, telephone cord and software CD; (b) to damage caused by accident, abnormal voltage, abuse, misuse, liquid contact, fire, earthquake or other external causes; (c) to a product or part that has been modified to alter functionality or capability without the written permission; (d) to damage caused by customer relocation or falling or (d) to defects caused by normal wear and tear or otherwise due to the normal aging of the product.

Important: Do not open the hardware product. Opening the hardware product may cause damage that is not covered by this warranty.