

Daffodil®

User Manual

AMC530

Digital Alarm Clock

Réveil Numérique

Digitaler Wecker

Orologio sveglia digitale

Reloj despertador digital

Digital Daffodil Ltd
www.digitaldaffodil.com

User manual

1. Introduction

Thank you for purchasing this product. This user manual will help you to familiarise yourself with all the features of your new device, so please do take the time to read it thoroughly.

The AMC530 is a stylish battery-powered alarm clock, thermometer and calendar with a transparent LCD display.

2. Main Features

- Digital clock with 12 or 24 hour display
- Calendar with date and day display
- Thermometer in Celsius (°C) or Fahrenheit (°F)
- Adjustable snooze function: 1-60 minutes
- 8 selectable alarm tones
- Stylish design with transparent LCD display
- Powered by 2xAAA batteries

3. Package content

- Digital alarm clock
- 2 x AAA batteries
- User manual

4. Parts & Functions



4.2 Functions

• Installing the batteries

Open the battery compartment, on the bottom of the device, and insert the 2 supplied AAA batteries. The AMC530 will beep and the LCD display will activate upon correct insertion. Replace the battery cover.

• Setting the time and date

When the time is displayed on the LCD screen, press SET to start adjusting the time and date. The UP and DOWN buttons change the flashing value and the SET button cycles through the adjustable values in this order: hour – minutes – year – month – day . Press the mode button to finalise your settings and return to clock mode. The device will automatically return to clock mode after a minute's inactivity.

• Setting the alarm clock

First select alarm mode. The mode button switches between clock mode and alarm mode, alarm mode is indicated by a bell on the left hand side of the LCD screen and whilst in clock mode, the colon between the hour and minute display flashes. Press the UP button to select from the following alarm modes:

- 1 “(((o)))”, Single alarm
- 2 “ZZ” Alarm with snooze
- 3 “blank” No alarm

Press SET to start adjusting the alarm time. The UP and DOWN buttons change the flashing value and the SET button cycles through the adjustable values in this order: hour, minutes, snooze duration (settable from one minute to one hour in 1 minute intervals). Press the mode button to finalise your settings and return to alarm mode. The device will automatically return to alarm mode after a minute's inactivity.

5. Specifications

Time Formats	12 and 24 hour
Alarm Modes	Single / Snooze Repeat
Alarm Tones	8 settable tones
Temperature Formats	°C / °F
Battery Type	2 x AAA

Please note the above instructions are only intended for reference purposes. Digital Daffodil Ltd reserves the right to revise product specifications, features and design without notice.

For any further enquiries, please telephone Digital Daffodil Ltd's helpline on +44 (0)845 293 9358 or email service@digitaldaffodil.co.uk