

CLEANING / MAINTENANCE / TROUBLESHOOTING

CLEANING / MAINTENANCE

During Season Care:

1. Always unplug the heater before cleaning.
2. Clean the unit with a soft cloth moistened with a mild soap solution.
3. NEVER use abrasive or flammable solvents to clean the unit.
4. After cleaning, be sure to completely dry the unit with a cloth or towel.

After Season Care:

1. Store heater in a cool, dry location
2. The manufacturer recommends that you store the unit in its original carton.

TROUBLESHOOTING

If your heater fails to operate:

Unplug The Unit:

- Make sure the electrical outlet or circuit breaker is working.
- Check for obstructions. If you find an obstruction turn the heater OFF, and unplug the unit. Carefully remove the obstruction and follow the reset instructions.
- The temperature may be set too low. Adjust the thermostat until the heater restarts.

Please DO NOT attempt to open or repair the heater. Please see the Warranty for Service Instructions or call consumer service at 1-800-546-5637.

WARRANTY INFORMATION

SERVICE INSTRUCTIONS

1. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the warranty.
2. If you have any questions regarding this unit's operation or believe any repair is necessary, please write to our Consumer Service Department.
3. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed warranty.
4. If you have any other questions or comments, see our correspondence below or visit our website at www.holmesproducts.com.

SUNBEAM PRODUCTS, INC., DOING BUSINESS AS JARDEN CONSUMER SOLUTIONS
303 NELSON AVENUE
NEOSHO, MO 64850

For your own records, staple or attach your sales receipt to this manual. Also, please take a moment to write the store name/location and date purchase below.

STORE NAME: _____

LOCATION: _____

DATE PURCHASED: _____

(STAPLE RECEIPT HERE)

WARRANTY INFORMATION

5 YEARS LIMITED WARRANTY

Sunbeam Products, Inc., doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of five years from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

How to Obtain Warranty Service

In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-546-5637 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc., doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 5975 Falbourne Street, Mississauga, Ontario L5R 3V8. If you have any other problem or claim in connection with this product, please write our Consumer Service Department. **PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

9100020008243


HFH740007EM1

Printed in China

Holmes®

Owner's Guide

HFH7400

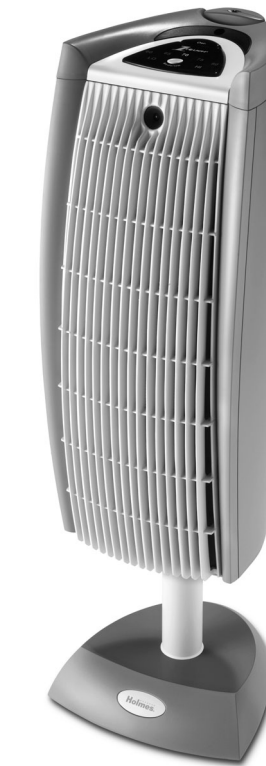

Remote Control 1Touch® Tower Heater Fan

PLEASE READ AND SAVE THESE IMPORTANT INSTRUCTIONS

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

Thank you for purchasing this Holmes® product. We understand the value of quality and are committed to making superior products that stand the test of time. We trust this product will exceed your expectations of quality and reliability. We hope that you enjoy this product and will consider purchasing another Holmes® product in the future. To see our full product line or if you have any questions or comments about this product, please visit our website at: www.holmesproducts.com.

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

1. Read all instructions before using the appliance.
2. To avoid fire or shock hazard, plug the appliance directly into a 120V AC electrical outlet.
3. The heater is hot when in use. To avoid burns, DO NOT let bare skin touch hot surfaces. If provided, use handles when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 ft (0.9 m) from the front of the heater and keep them away from the sides and rear.
4. DO NOT run cord under carpeting. DO NOT cover cord with throw rugs, runners, or the like. Arrange cord away from traffic area and where it will not be tripped over.
5. This heater is not intended for use in bathrooms, laundry areas and similar indoor location. NEVER locate heater where it may fall into a bathtub or other water container.
6. Extreme caution is necessary when any heater is used by, or near children or invalids, and whenever the heater is left operating and unattended.
7. Always unplug the heater when not in use.
8. When unplugging, be sure to pull by the plug and not the cord.
9. DO NOT insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
10. DO NOT operate heater with a damaged cord or plug, or after the heater malfunctions, has been dropped or damaged in any manner. Return appliance to manufacturer for examination, electrical or mechanical adjustment, or repair.
11. A heater has hot and arcing or sparking parts inside. DO NOT use it in areas where gasoline, paint, or flammable liquids are used or stored.
12. Use appliance only for intended household use as described in this manual. Any other use not recommended by the manufacturer may cause fire, electric shock, or injury to persons. The use of attachments not recommended or sold by The manufacturer may cause hazards.
13. DO NOT use outdoors.
14. To prevent a possible fire, DO NOT block air intakes or exhaust in any manner. DO NOT use on soft surfaces, like a bed, where openings may become blocked.
15. To disconnect heater, turn controls to OFF, then remove plug from outlet.
16. Avoid the use of an extension cord because the extension cord may overheat and cause a risk of fire. However, if you have to use an extension cord, the cord shall be No. 14 AWG minimum size and rated not less than 1875 watts.
17. If the heater will not operate, see specific instructions on Auto Safety Shut-off.

FEATURES - OPERATIONS

18. DO NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void your warranty. The inside of the unit contains no user serviceable parts. All servicing should be performed by qualified personnel only.
19. Discontinue use if plug or outlet is hot. It is recommended that the outlet be replaced if plug or outlet is hot to touch.

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

TECHNICAL SPECIFICATIONS

- Wattage: 1500 W (+5% -15%)
- Working voltage: 120v AC/60Hz

AUTO SAFETY SHUT-OFF

This heater is equipped with a patented, technologically-advanced, safety system that requires the user to reset the heater if there is a potential overheat situation. When a potential overheat temperature is reached, the system will automatically shut the heater off. It can only resume operation when the user resets the unit.

To Reset the Heater:

If the unit shuts down:

1. Unplug unit.
2. Wait 10 minutes for unit to cool down.
3. Plug in and operate normally.

NOTE: To shut unit OFF, hold Mode/Off button down for 2 seconds.

NOTE: After the heater is shut off the fan will continue to run for 30 seconds to cool down the inside of the unit.

Tip-Over Shut-Off

When the unit is accidentally knocked over, it will instantly

shut off. To reset, simply place the heater in an upright position and press the MODE/OFF button it will operate normally.

PRE-OPERATING INSTRUCTIONS

1. Carefully remove your heater from the box. Make certain to remove parts from both sides of the packing foam. Please save carton for off-season storage.
2. Place heater on a firm level surface.
3. Your heater comes fully assembled and ready to use in the reduced height configuration.
4. To use with pedestal see Assembly Instructions below.
5. Avoid overloading your circuit by not using other high wattage appliances in the same outlet. At 1500 Watts, this unit draws 12.5 Amps.

NOTE: The power light will illuminate when the heater is plugged in.

OPERATING INSTRUCTIONS

Your heater is equipped with a technologically advanced 1Touch® electronic thermostat. You can set the heater to run continuously in manual mode or set the 1Touch® thermostat to your desired temperature setting. The 1Touch® thermostat will automatically turn the heater ON or OFF depending on the preset comfort level. The comfort level ranges between 60° and 80° Fahrenheit in a 5° increments.

Manual Mode Instructions:

1. Plug the heater into a 120V AC electrical outlet.
2. To start the unit, press the MODE/OFF button once for the HI manual setting. (See Fig. 4)
3. Press the MODE/OFF button again for the LOW manual setting. (See Fig. 4)
4. To stop the unit, press and hold the button for two seconds or keep pressing the button until all the temperature indicators are OFF.

NOTE: The Power Light will remain lit during operation. In Manual Mode, only the LOW or HIGH power light will be lit.

NOTE: To shut unit off at anytime press and hold the

FEATURES - OPERATIONS

Mode/Off button for 2 seconds. After the heater is turned off heater will run for 30 seconds to cool unit.

ASSEMBLY INSTRUCTIONS

If you are planning on using the pedestal, start with Step 1 (Steps 1-6 see Figure 1 to Figure 3)

Step 1 – Turn the heater upside down and place on a firm level surface.

Step 2 – Unscrew the locking nut by turning counterclockwise. Slide the locking nut and base off of the power cord.

Step 3 – Slide the pedestal pole onto the cord – internal threads first.


Step 4 – Screw the pedestal clockwise onto the (neck) threaded end on the bottom of the heater until you feel resistance.

Step 5 – Slide the base and the locking nut onto the cord, smooth surface facing up. Make sure to align the dot on the back of the base to the dot on the neck of the heater.

Step 6 – Hold base straight while tightening the locking nut by turning clockwise.

Step 7 – Insert the power cord through the opening at the rear of the base. Twist to lock in place. (see Figure 3)

Step 8 – Carefully turn the heater upright, place on a firm level surface.

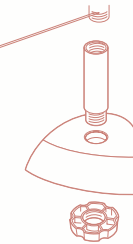

1TOUCH® THERMOSTAT INSTRUCTIONS

To take advantage of the 1Touch® thermostat, continue to press the MODE/OFF button until the desired temperature is set in either the HIGH or LOW setting. When ambient temperature rises above the set temperature, the heater will stop. When the ambient temperature drops below the set temperature, the heater will turn on automatically.

NOTE: When the 1Touch® thermostat is set, either the HIGH or LOW power light, and the set temperature light will remain lit during operation. (See Fig. 4)

NOTE: It is normal for the heater to cycle ON and OFF as it maintains the preset temperature. To prevent the unit from cycling, you need to raise the thermostat setting. When the preset temperature is made, the fan will run for 30 seconds without heat. This cool down process ensures an accurate and consistent temperature reading.

NOTE: 1Touch® has memory. The 1Touch® thermostat will remember the previous temperature setting after the unit has been turned off. However, if the unit is unplugged, or the unit is turned off, the 1Touch® thermostat will be reset and will no longer remember the previous setting.

OSCILLATION INSTRUCTIONS

1. Select the desired control setting and press or switch the oscillation button to the ON position.
2. To stop oscillation, press or switch the oscillation button to OFF.
3. Please do not manually turn the unit; it is designed to turn only by motorized oscillation.

REMOTE CONTROL INSTRUCTIONS

The remote control allows you to control the power, mode, and temperature settings of this unit. Please see "Manual Mode" and "1Touch® THERMOSTAT INSTRUCTIONS" above.

For your convenience a remote control holder is integrated into the heater.

Insert 2 AAA batteries (not included) into the remote control.

NOTE: To shut this unit off with the remote control you can scroll through all settings until all temperature and power lights turn off. Remote cannot control oscillation function.

BATTERY WARNING:

- DO NOT mix old and new batteries.
- DO NOT mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

