



# user's manual

 
coolBlu

model #: ID102



Music Dock for iPhone® and iPod® Devices

hello.

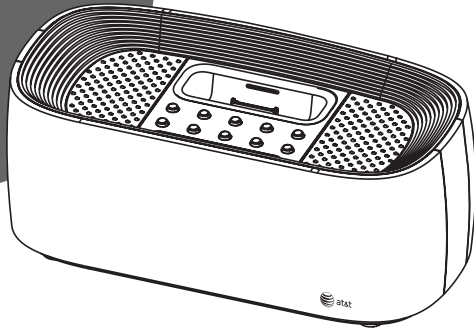

Thank you for purchasing  
coolBlu [ ID102].

Music Dock For iPhone® and iPod® Devices


#### Features

 - Speaker dock for iPhone and iPod device
- FM radio
- Alarm clock
- Built in stereo speaker
- Line-In Jack for use with other devices
- Play & charge your iPhone and iPod device simultaneously

iPhone® and iPod® are registered trademarks of Apple Inc.


## What's Included

Unpack the docking station and make sure all accessories are put aside so they will not be lost.

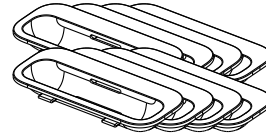


iPhone/iPod devices

 Dock Adapters



AC Adapter

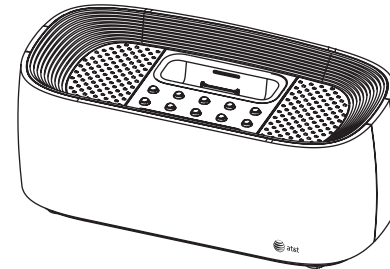 

Docking Station

## Contents

Introduction	2
What's Included	3
Safety Information	5
Getting Started	
Location of Main Unit Controls	8
Power Supply	9
Back Up Batteries	9
Preparation for Use	9
Dock Adapters	10
Operational Instructions	
Dimmer Function	11
Setting the Digital Clock	11
Alarm Functions	12
Electronic Volume Control	14
Radio Operation	15
Operation with iPhone and iPod Device	16
Music Equalizer	17
Using the Audio Line in Connection (AUX-INPUT)	17
Troubleshooting	18
Compliance with FCC Regulations	19
Warranty Information	20
Specifications	21

## Safety Information

### Warning!

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING LIQUIDS.



The lightning flash and arrowhead symbol within the triangle is a warning sign alerting you of "dangerous voltage" inside the product.



**WARNING:** To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel.



The exclamation point within the triangle is a warning sign alerting you of important instructions accompanying the product.

**NOTES:** Caution symbols are printed on rear of unit.

Please refer to user's manual.

This device complies with Part 15 of the FCC Rules.

Operation is subject to the condition that this device does not cause harmful interference.

### Important Safety Instructions

 
When used in the directed manner, this unit has been designed and manufactured to ensure your personal safety. However, improper use can result in potential electrical shock or fire hazards. Please read all safety and operating instructions carefully before installation and use, and keep these instructions handy for future reference. Take special note of all warnings listed in this user's manual and on the unit.

1. **CLEANING** - Unplug the unit from the wall outlet before cleaning. Clean the unit using a damp cloth; do not use liquid or aerosol cleaners.
2. **ATTACHMENTS** - Do not use attachments not recommended by the manufacturer.
3. **ANTENNA** - Do not connect an external antenna to the unit (other than that provided).
4. **WATER AND MOISTURE** - The unit should not be used near water. For example: near a bathtub, washbowl, kitchen sink, laundry tub, swimming pool or in a wet basement.
5. **PLACEMENT** - Do not place the unit on an unstable table, stand, tripod, or bracket. This may result in serious personal injuries and damage to the unit.
6. **VENTILATION** - The unit should be situated so that its location or position does not interfere with its proper ventilation. For example, it should not be situated on a bed, sofa, rug or similar surface that may block ventilation openings. Also, it should not be placed in a built-in installation, such as a bookcase or cabinet, which may impede the flow of air through the ventilation openings.
7. **PERIODS OF NON-USE** - If the unit is to be left unused for an extended period of time, such as a month or longer, the power cable should be unplugged from the unit to prevent damage or corrosion.
8. **OBJECTS AND LIQUID ENTRY** - Care should be taken so that external objects do not fall into and liquids are not spilled onto any openings or vents located on the product.
9. **POWER SOURCE** - The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit. If you are not sure please consult the dealer or local power company.
10. **POWER CORD PROTECTION** - Power supply cord should be routed so that it is not likely to be walked on or pinched by items placed upon or against it. It is always better to have a clear area from where the cable exits the unit to where it is plugged into an AC outlet.

11. **LIGHTNING** - Unplug the unit from the wall outlet and disconnect the antenna or cable system during a lightning storm or when it is left unattended and unused for long periods of time. This will prevent damage to the product due to lightning and power-line surges.
12. **OVERLOADING** - Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.
13. **HEAT** - The unit should be situated away from heat sources such as radiators, heat registers, stoves or other appliances (including amplifiers) that produce heat.
14. **DAMAGE REQUIRING SERVICE** - The unit should be serviced by qualified service personnel when:
  - A. the power supply cable or plug has been damaged.
  - B. objects have fallen into or liquid has been spilled onto the enclosure.
  - C. the unit has been exposed to rain.
  - D. the unit has been dropped or the enclosure damaged.
  - E. the unit exhibits a marked change in performance or does not operate normally.
15. **SERVICING** - The user should not attempt to service the unit beyond those methods described in the user's manual. Opening or removing covers will expose you to dangerous voltage and other hazards. Service methods not covered in the user's manual should be referred to qualified service personnel.
16. **SAFETY CHECK** - Upon completion of any service or repair to the unit, ask the service technician to perform safety checks to determine that the product is in proper working condition.

## Getting Started

### Location of Main Unit Controls

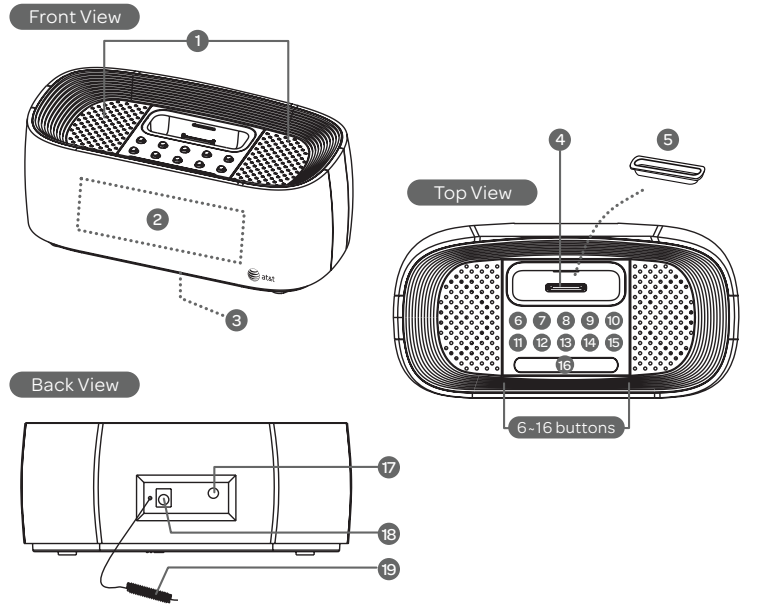

1. Speaker
2. Blue backlit display
3. Back-up battery compartment (Bottom of docking station)
4. Cavity for dock adaptor
5. Dock adaptor for iPod device (Several different adaptors are provided)
6. VOLUME DOWN (-) button ◀
7. VOLUME UP (+) button ▶
8. MEMORY button
9. EQ/SLEEP button
10. ON/OFF button ⏻
11. SKIP (-)/SEARCH (-) button <
12. SKIP (+)/SEARCH (+) button >
13. AL-MODE/AL-SET button
14. FUNCTION/CL-SET button
15. PLAY/PAUSE/STEREO/MONO button ▶||
16. SNOOZE/DIMMER button
17. AUX-INPUT socket
18. DC jack (DC 6V --- - - - ⊕ +)
19. FM antenna wire

## Getting Started

### Power Supply

#### AC Operation (External AC-DC Power Adaptor)

- coolBlu is equipped with a “DC-jack” that should only be used with the supplied AC-adaptor to operate the docking station. Use of other adaptors may damage the docking station or cause it to malfunction.
- Plug the tail end of the AC-adaptor into the DC-jack (socket) on the rear of the docking station.
- Insert the plug of the AC-adaptor into a wall outlet with AC-power and not controlled by a wall switch.
- Press the ⏻ button to switch on the docking station.
- coolBlu is designed to operate without ever being totally powered “OFF”. It will either be “ON” or in “STANDBY” mode.
- In “STANDBY” mode, the blue backlit digital display will be dimmed, but the display will show the current time (clock function).
- From “STANDBY” mode, you can switch “ON” the docking station by pressing the ⏻ button.
- Save energy by switching the system to “STANDBY” mode when not in use.

### Back Up Batteries

- Open the battery door at the bottom of docking station.
- Insert 2 “AAA” batteries (not included) in the battery compartment. The 2 batteries supply backup power for the current time clock and radio memory preset stations during brief power outages.

 
 
 
 
 
 
 
### Preparation for Use

- Before connecting your iPhone/iPod device to coolBlu, it is recommended to insert the proper dock adapter for your iPhone/iPod device model. coolBlue includes dock adaptors that work with several models of iPhone device and iPod device.
- If you want to connect a different model iPhone/iPod device at a later time, you can easily remove the dock adaptor from your speaker system using a fingernail, and insert the adaptor that fits the new iPod device.

## Getting Started

### Dock Adapters

Choose the dock adapter that fits your iPhone/iPod device and insure your iPhone/iPod device fits snugly into the correct adapter.

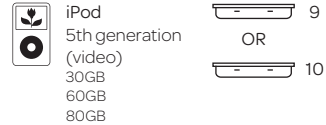


the dock adaptor number shows which iPhone/iPod device fits.

## Operational Instructions

### Dimmer Function

coolBlu has a dimmer function to adjust the brightness level of the display backlight to reduce eye strain and save energy. Simply adjust as desired by pressing the **SNOOZE/DIMMER** button repeatedly (hi-dimmer/low-dimmer/OFF). The display backlight will always return to low-dimmer after reset of the docking station.

### Setting the Digital Clock

Press the  button to turn the docking station into "STANDBY" mode. In "STANDBY" mode, the display will continuously show the current time. In this situation the blue backlight is normally dimmed to save electricity.

#### How to Set the Correct Time

Switch docking station to "STANDBY" mode (display light = dimmed)

Press & hold the **FUNC./CL-SET** button for 3 seconds.  
Display shows "12H" Hour or "24H" hour (flashing)

Press the **< >** button to select 12-hour or 24-hour clock display system & press the **FUNC./CL-SET** button to confirm your selection

Press the **< >** button repeatedly to set the correct hour in the display & press the **FUNC./CL-SET** button to confirm


Press the **< >** button repeatedly to set the correct minute in the display & press the **FUNC./CL-SET** button to confirm

Correct time is now set & will be shown on the display.

### Alarm Function

coolBlu is equipped with 3 alarm modes: buzzer, radio and iPod. Before setting the alarm, make sure to set the clock (see “Digital Clock Function” on page 11).

#### Alarm Time Setting


1. Please make sure the docking station is in “STANDBY” mode. (LED clock dimmed)
2. Press the  button to put the docking station into “STANDBY” mode (blue backlight dimmed).
3. Press and hold **AL-MODE/AL-SET** button until the hour digits on the display are flashing.
4. Press the **<** or **>** button to reach the hour of the desired WAKE UP time; then press **AL-MODE/AL-SET** button to confirm. The display will now show the minute digits flashing.
5. Press the **<** or **>** button to reach the minutes of the desired WAKE UP time, then press the **AL-MODE/AL-SET** button to confirm.
6. Select the desired source that the docking station will play at the “WAKE UP” time.:



3. Hour (Flashing)





 
4. Minutes (Flashing)

Press the  button to switch on the docking station (display blue light will be “ON”).

1. For iPhone or iPod: Connect the iPhone device or iPod device to the docking station. Select the song or the desired playlist to play at the “WAKE UP” time. Start and pause playback of the song/playlist at the point from which you want playback to begin at the “WAKE UP” time.

For radio: Tune in the desired station.

For buzzer: No preparation is required.

2. Adjust the volume level as desired by pressing  or  button. Once the desired source has been prepared, press the  button to put the docking station into standby mode. Press the **AL-MODE/AL-SET** button repeatedly to select the source as desired. The AL(buzz)/iPod/FM lights flash in sequence until the desired source is selected.



7. The alarm time is now fully programmed and the alarm symbol will appear to indicate that the alarm function is “ACTIVE”.
8. The docking station will now automatically switch “ON” at the wake up time you have chosen, as long as the alarm function is “ACTIVE”.
9. To turn off the docking station after it has automatically switched on, simply press the button once. This will switch off the docking station but will not clear the alarm settings. The docking station will switch on again automatically on the next day at exactly the same preset time.
10. To deactivate the alarm, press continuously the **AL-MODE/AL-SET** button until symbol “AL” disappears from the display.
11. To activate the alarm again, repeat the procedure of “ALARM TIME SETTING”.

### important!

If the alarm is set to iPod, you need to make certain the iPhone device or iPod device is connected properly and using docking station power rather than the battery power of the device. Otherwise, the buzzer alarm will sound at the set time.

## Operational Instructions

### Snooze Function

- When the alarm rings, it can be temporarily suspended for a short period of 9 minutes, by pressing the SNOOZE/DIMMER button once. In this period, you will observe "AL" icon flashing on the display.
- The alarm will then automatically come on again after the 9 minute "SNOOZE" period has ended.
- The procedure can be repeated for approximately 90 minutes from original alarm wake up time.

 

### Automatic Power Off Sleep Function

- coolBlu has a special sleep function which, when set, will automatically switch the docking station off after a preset amount of time. This is useful for sleeping to music at night.
- At any time while the docking station is operating, press & hold the EQ/SLEEP button until the "SL" symbol flashes. Press the EQ/SLEEP button repeatedly to choose the desired automatic power off time. In this period, you will observe "SL" icon on the display.





\* OFF means sleep timer is deactivated

### Electronic Volume Control



- To increase or decrease the loudness of coolBlu, press the  or  button respectively.
- Release the button when the desired volume level is reached.
- Sometimes, especially when listening to the radio, you may notice a "click-click-click" (repeating) sound when you are increasing or decreasing the volume. This is a normal condition & the sound will disappear when you release the volume button.

## Operational Instructions



### Radio Operation

- Press the  button to turn the docking station on.
- Press the FUNC./CL-SET button repeatedly until the display shows "FM".
- Extend and adjust the FM-wire antenna to obtain the best reception.
- Use the  button to select the desired mode (stereo/mono). In stereo mode, you will observe "ST" icon on the display. Whereas in mono, no icon is observed on the display.
- In some cases where reception is poor, it may be advisable to select "MONO" mode to improve clarity of the radio signal.





### Manual Station Adjustment (Scan Mode)

- Press (and immediately release) the  and  buttons to "scan" (manually adjust) the radio stations "up" or "down" 1-frequency at a time.
- The digital display will indicate the exact station at each step's position.
- When a desired station is reached, it can be saved into one of the "MEMORY" positions. (See "RADIO MEMORY" section below.)

### Automatic Station Adjustment (Seek Mode)

- Press and hold (for 2 seconds) the  and  buttons to automatically "seek" the radio stations "up" or "down" to the next available station in your area.
- The digital display will indicate the exact frequency of the next station that is found.
- When a desired station is reached, it can be saved into one of the "MEMORY" positions. (See "RADIO MEMORY" section below.)

### Radio Memory (Station Preset Memory Storage)

- At any time, the currently displayed station or frequency can be stored into one of the memory positions.
- Press and hold the MEMORY button until "c01" flashes in the display.
- Press the  and  buttons to select desired memory position. (There are a total of 30 memory positions.)
- Press the MEMORY button once to save the selected station into the selected memory position.
- To recall any station saved to memory, simply press the memory button once and use the  and  buttons to navigate your preset stations.
- To clear the memory of any position, simply save a new station to the same memory position.



## Operational Instructions

 
### Operation with iPhone or iPod Device

- Turn on the docking station and the iPhone device or iPod device.
- Insert the iPhone device or iPod device into the docking station.
- Press the **FUNC./CL-SET** button repeatedly until the display shows "iPod".
- Press the **▶** button on the docking station to begin playback.
- The iPhone/iPod display will indicate the information of the current song.
- At anytime during playback, press the **▶||** button to pause playback. Press **▶||** button to resume playback of the same song and position.
- At anytime during playback, press and release the **<** and **>** buttons to skip forward or backwards by one song, as desired.
- At anytime during playback, press and hold the **<** and **>** buttons to fast-forward (cue) or fast-reverse (review) the current song.
- You can operate the iPhone/iPod device using either the docking station's buttons, or directly with the iPhone/iPod device itself.
- When your iPhone/iPod device is connected to the docking station, it will start charging the battery of the iPhone/iPod device.
- It is recommended that playback of your iPhone/iPod device be paused before removing it from the docking station to prevent damage to your song files.

## Operational Instructions

### Music Equalizer

At anytime during playback, press the **EQ/SLEEP** button repeatedly to choose the desired sound effect according to the music you are listening to :

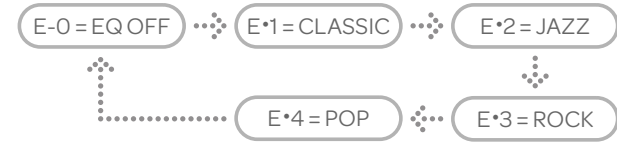

### Using the Audio Line in Connection (AUX-INPUT)

- You can connect the audio input of an external device, such as a MP3 player or a TV, to coolBlu for listening to the sound of that device through the high quality amplifier of the docking station.
- To connect the external device, use a standard stereo headphone (3.5 mm) cable. Connect the "headphone-out" or "audio line-out" of the device to the aux-input socket of this docking station.
- Switch on the docking station and the external device (eg. MP3-player or TV).
- Switch the function to aux using the **FUNC./CL-SET** button.
- Start playback of the external device and adjust the volume control of the docking station to the desired level.
- Remember to switch off the docking station when you are finished using the external device.



"Made for iPhone" and "made for iPod", means that an electronic accessory has been designed to connect specifically to iPhone and iPod respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPhone and iPod may affect wireless performance.

## Troubleshooting

Symptom	Possible cause	Solution
coolBlu does not respond (no power)	AC adapter is not plugged into a wall outlet or the connector is not plugged into the DC IN jack on the back of the docking station.	Verify the AC adapter is plugged into wall outlet and the DC IN jack properly.
iPhone/iPod device does not dock properly	Using no or wrong iPhone/iPod dock adapter.	Make sure the dock adapter is the proper fit for the iPhone/iPod device.
	iPhone/iPod device is not installed properly.	Remove the iPhone/iPod device from the docking station and check for obstruction on the connections of the docking station and of the iPhone/iPod device. Then reset the iPhone/iPod device into the docking station.
iPhone/iPod device does not respond to the coolBlu	iPhone/iPod device is not installed properly.	Remove the iPhone/iPod device from the docking station and check for obstruction on the connections of the docking station and of the iPhone/iPod device. Then reset the iPhone/iPod device into the docking station.
	iPhone/iPod device is locked up/frozen.	Make sure your iPhone/iPod device is working properly before docking it into the docking station. Please refer to the iPhone/iPod device manual for details.
	Using first or second generation iPod, iPod shuffle or other devices.	coolBlu cannot control these iPod devices or other devices.
iPhone/iPod device is not charging	iPhone/iPod device is not installed properly.	Remove the iPhone/iPod device from the docking station and check for obstruction on the connections of the docking station and of the iPhone/iPod device. Then reset the iPhone/iPod device into the docking station.
	iPhone/iPod device is locked up/frozen.	Make sure your iPhone/iPod device is working properly before docking it into the docking station. Please refer to the iPhone/iPod device manual for details.
	iPhone/iPod battery has a problem.	

### Remarks:

If troubleshooting does not eliminate the problem, disconnect the DC IN plug from the back of docking station and reconnect it after a few seconds. This resets the docking station to its factory default settings and results in the deletion of all previous settings. In case the problem still exists, see warranty information on page 20 to obtain service.

## Compliance with FCC Regulations

The equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate Radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to Radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to Radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced Radio/television technician for assistance.

THE SPECIFICATION AND EXTERNAL APPEARANCE OF THE MUSIC DOCK ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.



If at any time in the future you should need to dispose of this product, please note that waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority or retailer for recycling advice.

## Warranty Information

### Limited Warranty

The AT&T brands are used under license. Any repair, replacement, or warranty service, and all questions about this product should be directed to Concept 101 LLC at [www.att.com/electronics](http://www.att.com/electronics) or call 1(888) 920-8680 from the USA or Canada.

Concept 101 LLC warrants to the original purchaser that the product will be free from defects in material, parts and workmanship for the period designated for this product. The warranty commences the day the product is purchased and covers up to a period of one (1) year (90 day Labor and 1 year Parts). Concept 101 LLC agrees that it will, at its option, replace the defective product with either a new or remanufactured unit equivalent to your original purchase during the warranty period. Should the Parts warranty period exceed the Labor warranty period, Concept 101 LLC will supply at no charge for the remainder of the Parts warranty, any new or remanufactured replacement parts as required by the product. During this period all labor and service charges will become the responsibility of the customer.

**Exclusions:** This warranty does not apply to the appearance or exterior of the product which may have been damaged or defaced, altered or modified in design or construction. This warranty does not apply if the serial number is altered or removed, or if there is any damage due to power line surge, user damage to the AC power cord, connection to improper voltage source, general misuse, accidents, or repair attempts by unauthorized service agents. Other exclusions include ear pads, rechargeable and non-rechargeable batteries.

**REPAIR OR REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY OF THE CUSTOMER; CONCEPT 101 LLC SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT, EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW. ANY IMPLIED WARRANTY OF MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED TO THE DURATION OF THE WARRANTY.**

Some states do not allow the exclusion or limitations of incidental or consequential damages, or limitations on how long the warranty lasts. In these cases the above exclusions or limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

**Obtaining Service:** To obtain service, product literature, supplies or accessories please call 1 888-920-8680, or visit our website, [www.att.com/electronics](http://www.att.com/electronics), to create a ticket for exchange/repair. Please make sure to provide the date of purchase, model number and a brief description of the problem. Our customer service representative will contact you or send detailed return instructions.

Concept 101 LLC does not warrant that the unit will work properly in all environmental conditions, and makes no warranty and representation, either implied or expressed, with respect to the quality, performance, merchantability, or fitness for a particular purpose other than the purpose identified within this user's manual. Concept 101 LLC has made every effort to ensure that this user's manual is accurate, and disclaims liability for any inaccuracies or omissions that may have occurred. Information in this user's manual is subject to change without notice and does not represent a commitment on the part of Concept 101 LLC. Concept 101 LLC reserves the right to make improvements to this user's manual and/or to the products described in this user's manual, at any time without notice. If you find information in this manual that is incorrect, misleading, or incomplete, please contact us through our website.

## Specifications

- Power supply: DC 6V, 2Amps through built-in DC jack  
External AC-DC power adaptor 110V-240V ~ 50/60Hz
- Power consumption: 10 W
- Speaker: 2" x 2
- Frequency: FM 87.5-108 MHz

purchase date:

place of purchase:



[www.att.com/electronics](http://www.att.com/electronics)