Quick Setup Guide LH600 Access Series









PACKAGE CONTENTS:

- 1 x Digital Video Recorder with pre-installed HDD*
- 1 x Power Adapter
- 1 x Remote Control
- 1 x Mouse
- 1 x Ethernet Cable
- 1 x DVI to VGA Adapter 1 x User Manual
- 1 x Quick Start Guide
- 1 x Software CD

ATTENTION:

- * Number of Channels/ Port configuration and HDD (hard disk drive) capacity may vary by model. Check your package for specific content
- Monitor and Cameras are not included.
- Broadband Router and Computer are required for local and remote monitoring (not included).

It's all on the Web



information, please visit our website

Information in this document is subject to change without notice. As our products are subject to continuous improvement, Lorex Technology INC. and our subsidiaries reserve the right to modify product design, specifications and prices, without notice and without incurring any obligation. E&OE © 2010 LOREX. All rights reserved.

BASIC SYSTEM SETUP

Connecting Cameras (not included)

Connect the BNC cameras to the BNC ports on the rear panel.

NOTE: Test the cameras prior to

selecting a permanent mounting

the cameras and cables to your

Connecting the USB Mouse

Connect a USB mouse to the USB port on the rear panel of

3a From the Monitor-OUT BNC port

to the RCA OUT of the LCD

monitor (not included).

OPTIONAL

connect a BNC terminated cable

the system.

Connecting a Monitor

location by temporarily connecting

STEP 1

BASIC INSTALLATION GUIDE



STEP 1

BASIC INSTALLATION GUIDE



Quick Menu (Mouse option only)

CONTINUED

BASIC SYSTEM SETUP

- The Quick menu gives you an overview of all the available settings on your DVR. To open Quick Menu:
- 1. Right-click anywhere on the screen in the main viewing window **OR**
- 2. Press the **MENU** button on the front panel. NOTE: If you are configuring the system, you cannot open Quick menu.



By default, the system does not require a password to login.

TIP: It is recommended to change the default password after the initial setup is complete.

Default

USER ID: ADMIN (case sensitive) PASSWORD: 1234

The Virtual Keyboard

The system automatically opens the virtual keyboard when you doubleclick a blank field, or when you need to enter system information.

To use the Virtual Keyboard:

1. Click any desired letter, number, or character. NOTE: Click "A" to shift between upper and lowercase letters.

Setting the Date & Time

- 7 1. Right-click anywhere on in the main viewing window to open the Quick menu.
 - 2. Click SYSTEM SETUP. The System Setup window opens.
 - 3. Click **SYSTEM**. The System window opens.
 - 4. Beside **DATE TIME**, click on the time (yyyy/mm/dd; hh/mm/ss) and adjust the values using the 🖶 | huttons

- Double-click the values to open the number window to input the values.
- 5. Beside **DATE FORMAT**, use the time. button to adjust the date format.
- 6. Click **APPLY** to save your settings.



NAVIGATION AND CONTROLS

Left-Button: While in a split-screen display

mode, double-click an individual channel

to view it in full-screen; double-click again

to return to the split-screen display mode.

While navigating menus, click to select a

anywhere on the screen to open the Quick

2 Right click anywhere on the monitor screen and from the QUICK

menu, select SYSTEM SETUP to access the MAIN MENU options.

menu option. **Right-Button:** Right-click

Menu. Scroll-Wheel: N/A

STEP 2

Mouse

Main Menu

1. DISPLAY

2. CAMERA

3. SOUND

4. SYSTEM

Direction Pad

5. EVENT/SENSOR

3 Use the direction pad to

system menus.

navigate thrrough the

Powering On/Off the System

connected cameras.

To power off the system:

Menu opens.

To power on the system:

1. Press the POWER button on the remote

main screen. By default, the system

begins recording continuously from any

1. Press the **POWER** button on the front panel

2. Click **YES** to shut down the system. **OR**

5. Click **YES** to shut down the system.

of the system. A confirmation window opens.

3. Right-click anywhere on the screen. The **Quic**k

4. Click **SHUTDOWN**. A confirmation window opens.

Congratulations! You have completed STEP 1 & 2 successfully. Your system is now

ready to use. Refer to the owner's manual to learn how to record, search, playback,

and use other advanced features and all other features available with this system

control or front panel. The system powers

on. Wait for the system to boot up into the

6. DISK MANAGE

BASIC INSTALLATION GUIDE



SET-UP LOCAL VIEWING ON YOUR

REMOTE VIEWING INSTALLATION GUIDE











This step relates to local viewing over the LAN (local area network) by using a PC and a router located on the same network as that of the System.

Retrieve the System Information

1. Right-click in the main viewing window to open the Quick Menu

STEP 3A

ON YOUR PC

- 2. Click SYSTEM SETUP→ SYSTEM→SYSTEM **MANAGEMENT**
- 3. Beside **SYSTEM** INFORMATION, click the PRESS button.



Record the IP and MAC Addresses in the section below:	
IP ADDRESS :	
MAC ADDRESS :	

1. Launch Internet Explorer. . In the address bar, enter the IP address of your System recorded in the previous



NOTE: Enter http:// followed by the IP address of your system, then a semi-colon, and then the HTTP Port number (i.e. http://192.168.X.XXX:80).

- Enter in your System's User ID and Password.
 USER ID: ADMIN, PASSWORD: 1234. The Web Remote Viewer
- Click the Active X menu bar near the top of the browser. Click Install **ActiveX Control.**
- Click **Install** when the security window opens.
- Click the ActiveX toolbar when the main Web Remote Viewer window opens. Click Install ActiveX Control.
- Click **Install** when the security window opens. The Web Remote Viewer automatically detects and connects to your system after the ActiveX plug-in installs.

Congratulations! You have completed 3A successfully. You can now view, playback images on your Local computer via LAN (local area network).



LOCAL LIVE SITE

LH600 Series Quick Setup Guide - English - R1





* For setup of Instant Mobile Viewing and MAC Compatibility refer to your



Tip: Adjust the contrast and brightness of your

monitor and the camera(s) color settings to

optimize the image quality.

Connect one end of the monitor's power cable to its power port and the

other end to the power outlet. Press the **DISPLAY** button at the front

panel of the DVR repeatedly until you reach the desired display mode

Connecting the Ethernet Cable

(i.e. full screen, quad, auto-sequence).

VGA adapter to the DVI port at

the back of the DVR. Connect

monitor (not included) to the

the VGA/DVI Cable from the LCD

Connect the included DVI to

VGA/DVI adapter.

Connect one end of the Ethernet cable (for remote monitoring) to one of the router's (not included) LAN ports and the other end to the DVR's Network Port.




Connecting the Power Cable

Connect the power cable to the DC 12V port on the rear panel of the system; connect the power adaptor to an outlet, power strip, or surge protector. Wait for the system to boot up into the main screen.







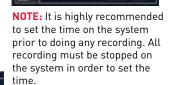

LOREX EASY CONNECT INTERNET REMOTE **MONITORING ADVANCED**

STEP 3B


ON YOUR SYSTEM



REMOTE VIEWING INSTALLATION GUIDE

This step offers more advanced internet remote monitoring features.

Auto Port Forward (via System with UPNP enabled Router):

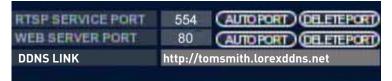

To enable auto port forwarding:

- 1. Right click to open the Quick menu.
- 2. Select SYSTEM SETUP and click on the SYSTEM menu.
- 3. Select **NETWORK**.
- 4. Beside **RTSP SERVER PORT**, click the **AUTO** button. A success message appears.
- 5. Beside **WEB SERVER PORT**, click the **AUTO** button. A success message

Note: Default RTSP Server Port is 80. Default Web Server Port is **554**

6. Under **DDNS LINK** make sure the DDNS link appears.

(e.g. http://tomsmith.lorexddns.net). Use this URL for Remote Access (WAN).

7. Press **APPLY** to save your changes.

NOTE: The Auto Port feature works with UPNP (Universal Plug & Play) routers only. If you do not get a SUCCESS message, your router may not be compatible with this feature. Use the Auto Port Forwarding Wizard to automatically configure your router.



WARNING (**)

Go To Step 3B6

FAIL/NO DEVICE Go To Step 3B2



Step 3B.

For Instant Mobile Connectivity using a Smart Phone, refer to the User Manual. Make sure to complete Port Forwarding

LOREX EASY CONNECT INTERNET REMOTE LOREX EASY CONNECT INTERNET REMOTE MONITORING ADVANCED (AUTO PORT FORWARD WIZARD)

STEP 3B

OPTIONAL

CONTINUED

ON YOUR PC

Auto Port Forward Wizard

he Lorex Auto Port Forwarding Wizard is a software that automates router port forwarding.

You must have the following before you configure the

- 1. Your router's **model** and **version** numbers
- 2. Your router's user name and password
- 3. Your Lorex device's IP address
- 4. Your Lorex device's **port** numbers that require port forwarding

Installation

Insert the system's software CD, select the **Lorex Easy Connect Internet** Setup Wizard and follow the instructions to register, download and launch the Wizard.

Step 1: Populate the Router Database

he Auto Port Forwarding Wizard automatically populates a list of current routers, and detects the number of


1. Click the **Next** button after the software detects your router configuration.



Step 2: Enter your Router Settings

1. Under the Router drop-down list, select the model of your router **OR** click the **Search** button to enter the name of your router model.

NOTE: Ensure you select the proper model and firmware number of the router.

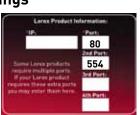

NOTE: Click the Auto Detect button if you have a Linksys or Netgear router (works with most models).

- 2. Under Router IP, click the Detect Router IP button. The router's IP populates in the blank field.
- 3. Under **Username** and **Password**, enter **the router's** username and password. 4. Under IP, enter the IP address of your Lorex device as recorded in Step 3A-1.
- 5. Under **Port**, enter the port number(s) that require forwarding (80, 554).
- 6 Click **Next** to continue

Step 3: Update the Router Settings

- 1. Click the **Update Router** button. The program begins updating the router settings. This may take 20 - 30 seconds. 2. Close the **update** window when the update
- finishes

NOTE: You may have to manually save your router settings after the software makes the required changes to your router.

Step 4: Test your Connection

1. Click the **Test Your Connection** button Your system's default browser opens and connects to your Lorex device. **NOTE:** Ensure that Internet Explorer is your system's default internet browser.



To Log in **USER ID: ADMIN** PASSWORD: 1234

> PROCEED TO STEP 3B-6.

MONITORING ADVANCED

STEP 3B

CONTINUED

DDNS ON YOUR PC


Manual Port Forward (optional):

If you were unable to port-forward your router automatically using the wizard, you will need to do so

All routers are different. To port forward your router, please refer to your router's user manual.

An example of a port forwarding screen is shown for illustration purposes.

Ports: 80 (Web Port), 554 (TCP/IP port).

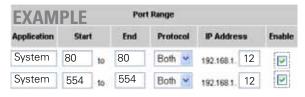

DDNS (Dynamic Domain Name System) Set-up:

Open your web browser (Internet Explorer by default) and enter http://www.lorexddns.net in the address bar.

http://www.lorexddns.net

7 Create Account:



Complete New Account Information:



- 1. For **PRODUCT LICENSE** select the **LH600 Series** option from the drop down menu
- 2. For **PRODUCT CODE** enter the Monitor's **MAC** address (recorded in step 3A-1).
- 3. For **URL REQUEST** enter a unique URL name (e.g. tomsmith). NOTE: URL name should not be more than 15 characters.

MONITORING ADVANCED

STEP 3B





Registration Email:

An automated REGISTRATION CONFIRMATION EMAIL will be sent to your email. Print and Save this confirmation. You will need this information to access your System remotely.

Service Provider: dns1.lorexddns.net Domain Name: tomsmith.lorexddns.net User ID: tomsmith **EXAMPLE** Password: (your password)

10 Enter DDNS Set-up on your DVR



To enable DDNS on your system:

- Right-click anywhere in the main viewing window to access the QŬICK menu
- Select SYSTEM SETUP and click on the SYSTEM menu.
- Select NETWORK.
- Select DDNS. Your selection adds a 'yellow' checkmark in the
- Beside DDNS SERVER double-click the blank field. A DDNS SETUP window opens



- DDNS SERVER NAME by default is LOREX.
- Beside **DOMAIN NAME**, double-click the blank field. The Virtual Keyboard opens
- Enter only the first portion of your **DDNS domain** from the confirmation email. (e.g. if your domain name is tomsmith@lorex.ddns.net, you only need to enter "tomsmith" in the text field
- Click **OK** to save your settings.
- Beside **USER ID**, double-click the blank field. The Virtual Keyboard opens
- Enter your Lorex DDNS User ID.
- Click **OK** to save your settings. • Beside PASSWORD, double-click the blank field. The Virtual Keyhoard onens
- Enter your **Lorex DDNS password**.
- Click **OK** to save your settings.

NOTE: Select DDNS STATUS to verify the DDNS connection. A Success message appears if DDNS is running properly. Click OK.

- Select **APPLY** to save your settings or select **UNDO** to restore
- Select **CLOSE 'X'** to exit the menu screen.

LOREX EASY CONNECT INTERNET REMOTE LOREX EASY CONNECT INTERNET REMOTE **MONITORING ADVANCED**

STEP 3B

CONTINUED



Logging into Web Remote Viewer (REMOTELY):

. On your computer, open Internet Explorer (PC) or Safari (Mac) and type in the **DDNS DOMAIN NAME.** You can acquire this from the DDNS Registration Email sent to you.



- 2. A login window appears.
- 3. Enter in your System's User ID and Password. USER ID: ADMIN, PASSWORD: 1234. The Web Remote Viewer window opens
- 4. Click the Active X menu bar near the top of the browser. Click Install ActiveX Control.
- 5. Click Install when the security window opens.
- 6. Click the ActiveX toolbar when the main Web Remote Viewer window opens. Click Install ActiveX Control.
- 7. Click Install when the security window opens. The Web Remote Viewer automatically detects and connects to your system after the ActiveX plug-in installs.

NOTE: Remote viewing is only compatible with Internet Explorer & Safari (Safari supports Viewing only and does not support Search or PTZ controls). Other browsers are not supported.



REMOTE LIVE SITE*

*If you are unable to connect remotely over the internet make sure to perfrom steps 3B3 to 3B5 Auto Port Forwarding Wizard.

Congratulations! You have completed 3B successfully. You can now view, playback mages on your Remote Computer via WAN (wide area network) and Remotely control the system on your Remote computer over the Internet (Wide Area Network).