

Splavar d.o.o.

Letuš 80 a, 3327 Šmartno ob Paki; Slovenia

Telephone: +386 3 588 51 43; Mobile: +386 31 864 967

Fax: +386 3 891 51 43; E-mail: info@leetekeurope.com; Internet: <http://www.leetekeurope.com>



'All in One' USER MANUAL



LTK 2003

Transmitter, charger, keypad and programmer in one housing

COASTER PAGER LT 2008

Digital pager

PLUG & PLAY


Step 1: Lock the antenna to the right corner of the All-In-One Transmitter.

(Fit over plug and twist left to lock antenna in place)

Step 2: Plug the All-In-One Transmitter A/C adaptor into the All-In-One Transmitter and then into a standard outlet. A surge protector is recommended.

Step 3: If more than one charging base is used, connect base units with jump wires.

Step 4: Insert the pagers on the chargers. A charging indicator will illuminate to

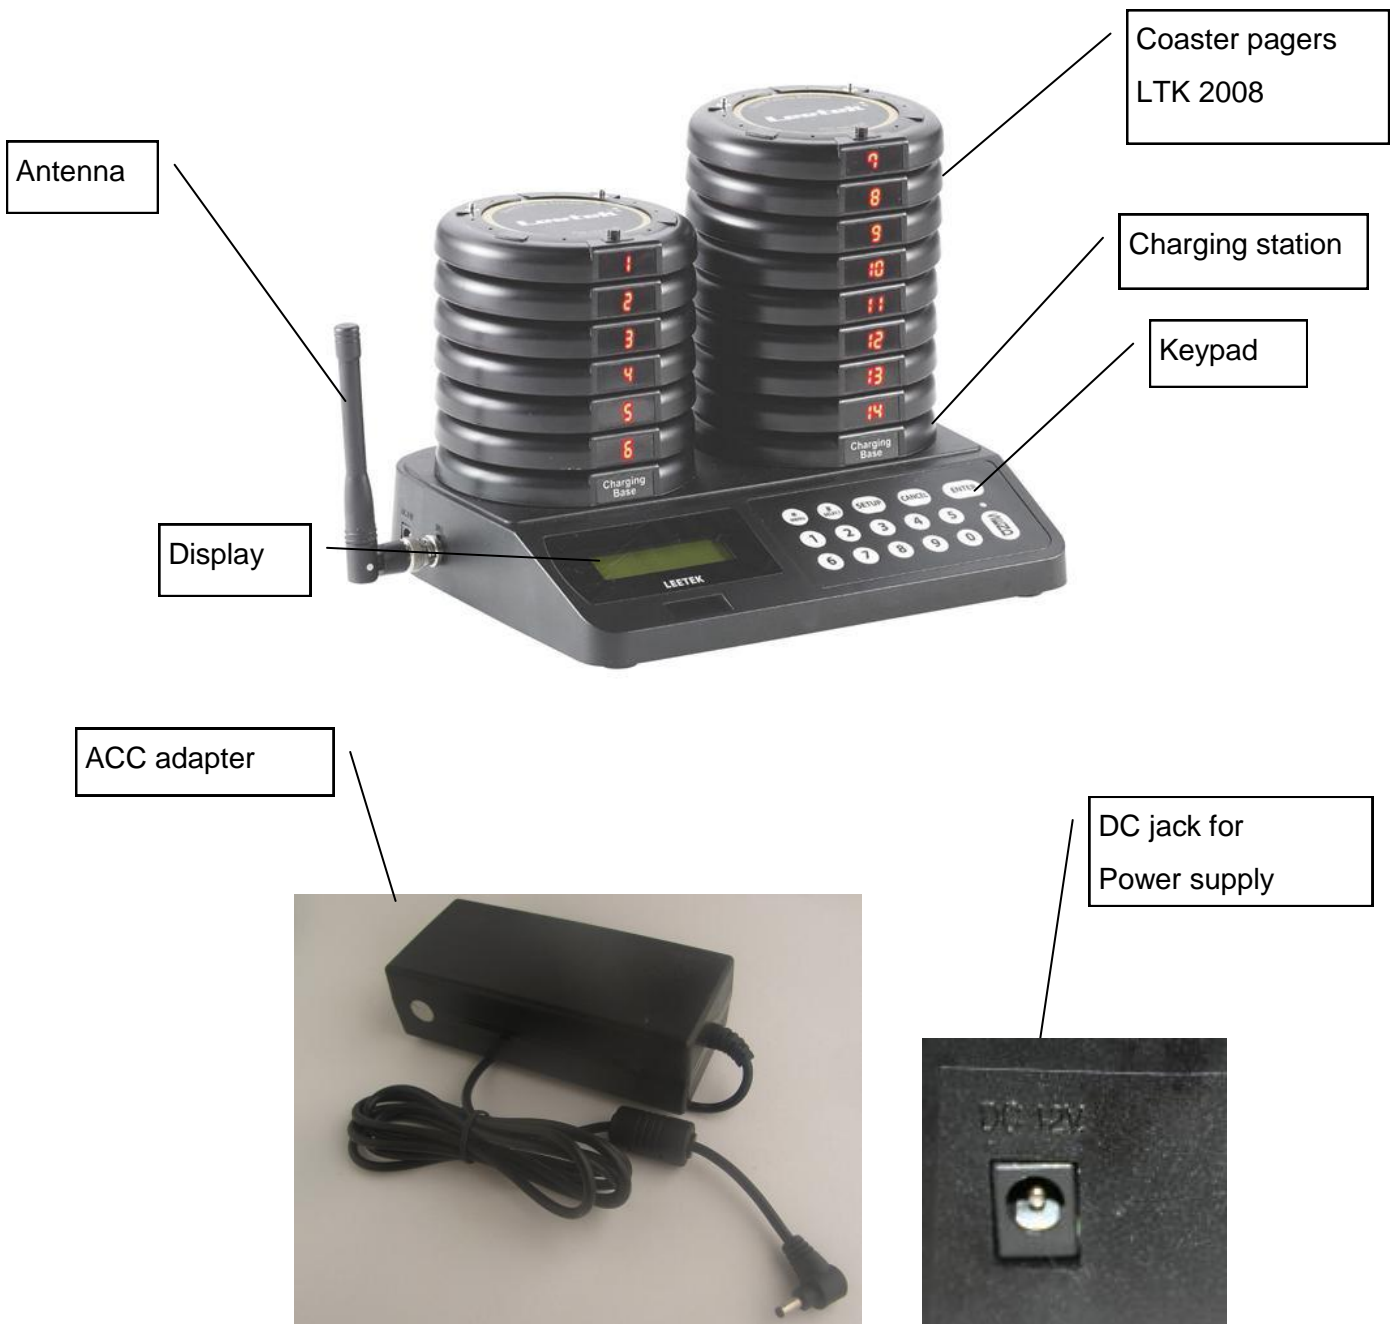

EASY TO USE

Step 1: Give the coaster pager to the customer. Please explain him that he will be paged once the meal is prepared for him.

Step 2: Calling the customer - type the appropriate number of the pager and push the button 'SEND'. The pager will now alert the customer.

Step 3: Put the pager onto the charging base or onto the top pager. It is recharging again.

RENUMBERING COASTER PAGERS

Step 1: Take off the pagers from the charger

Step 2: Then, please put them back to charger base.

Step 3: Press the combination of buttons '1 + ENTER'.

Step 4: Press the combination of buttons '002 + ENTER'. Now the pagers are renumbered.

Note: Please complete steps 3~4 within 1 minute after doing step 2.

ENTERING THE 'PROGRAMM MODE'

To enter programming mode, press the "SETUP" button and enter the password "2580" followed by "ENTER". If the password is accepted, the display will show "use * to scroll to menu options"

Use the "* / Menu" key to scroll through the several menu options or press "CANCEL" to exit the system setting menu.

HOW TO CHANGE ALERT TYPE OF COASTER PAGER

Step 1: Turn on the transmitter

Step 2: Remove pagers from charger

Step 3: Press the button on the transmitter same as below

911 (Group Call ID) + Enter + 4 digit of Message Code + SEND

If the pager receives the message code well from the transmitter, the pager will respond like as below.

4 digit message codes are:

- A. Vibe Only - 9292
- B. Beep & Flash - 9595
- C. Vibe & Flash - 9696
- D. Flash Only - 9797
- E. Beep & Vibe & Flash - 9898

OTHER GREAT LEETEK EUROPE PRODUCTS

1. LEETEK PAGING SYSTEMS

Table Call



Server Call



Nex Call



Nex Call Lite



Nex Call Alpha



All in One Coaster



Laser Paging



4 Message



Push button



2. TRANSMITTERS

3. RECEIVERS

Splavar d.o.o.

Letuš 80 a, 3327 Šmartno ob Paki

Slovenia, European Union

Internet: <http://www.leetekeurope.com>

Email: info@leetekeurope.com