



# Cipher-201

Programmable

Terminal

User's Guide



# CipherLab Co., Ltd.


# 1. Packing

## **This packing includes:**

- (1) This User's Guide
- (2) The Cipher-201 main unit
- (3) Optional LCD display and Calendar of Cipher-520 main unit(by order)
- (4) Power Adaptor (110VAC or 220VAC)
- (5) Default System Master Card (1234567890)

## 2. Components

### 2.1. Front View

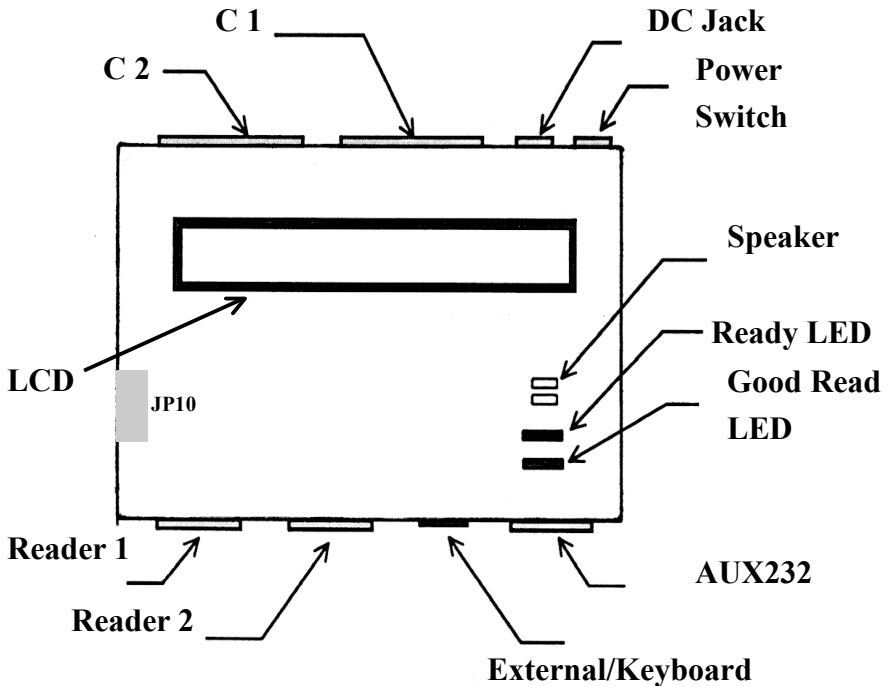

**Note:**

The data memory can be a **32KB** or **128KB** SRAM. However, to accommodate different pin assignments, The **SRAM** type must be selected via the jumper (JP10) on the main board.

## **3. Installation**

### **3.1. Power Source**

The Cipher-201 can be powered 8 to 20V from the DC jack and +5V from C1 or C2. In case this host power is not available or not adequate, a wall adaptor (in the range of 8 to 20V) can be fed via the DC-jack.

### **3.2. Reader Ports**


There are totally 2 reader ports provided, each can be either a Wand, Barcode slot reader, Barcode Scanner with Laser emulation or up to dual-track magnetic card reader.

### **3.3. External Keyboard Port**

An external AT-compatible keyboard can be attached for handy data entry. The connector and pin assignment conforms to PC/AT standards.

### **3.4. RS232 Connection**

The factory settings of the RS232 port are 9600 baud rate with 8 data bits, no parity, and 1 stop bit. And the Cipher-201s delivered from factory all have the line connection setting been set to multi-station on-line master. User can use Aux232 or C1 or C2 to connect computer and transfer data.

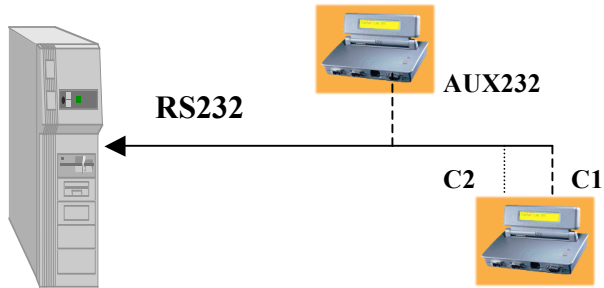

**RS-232 Configuration**

### 3.5. RS485 Connection

 
The RS485 ports are used to connect multiple Cipher-201s. Every Cipher-201 station is connected to the RS485 bus line in a daisy chain style.



**RS-485 Connection between Cipher-201s**

### 3.6. Digital I/O

The Cipher-201 provides 2-digital inputs and 2-digital outputs for controlling and monitoring external devices. These inputs and outputs are photo-isolated and share the same DB-25 connector as the



COM2

- |                      |                      |
|----------------------|----------------------|
| 13. Digital Output 1 | 14. Digital Output 0 |
| 15. Digital Input 1  | 16. Digital Input 0  |

#### COM2 Port Connector and Digital Pin Assignment

### 3.7. Speaker

A low power speaker is supported and the sound level is 4-level tunable. This speaker electrically behaves like a capacitor, which implies that current flows only when states are changed (charge/discharge capacitor) and very little power is consumed. However, a higher voltage, e.g. 10V is needed to drive it.

### 3.8. LED Indicator

There are totally **2 LEDs** on the panel for showing system status.

- **READY, Red**
- **GOOD READ, Green**

### **3.9. LCD Display**

A 2 x 20 LCD is used to display current system time, scanned card ID, system message and so on. This is an easy-to-read wide viewing angle LCD equipped with LED back light and can easily be read even in a dim environment. The viewing angle can be adjusted via a variable resistor as depicted in the *Nomenclature*.



## 4. Programming System Parameters

The system parameters of Cipher-201 Terminal can be programmed manually or by RS232 commands. Manually programming the Cipher-201 terminal system is described in this section and programming the Cipher-201 via RS232 commands will be described under the section **RS232 Command**.

### 4.1. Manually programming

Power on the Cipher-201 and scan the master card. Now Cipher-201 is waiting for entry of the password. However, if the password was set to none, this message will not be shown and this step is simply ignored. The system manager must key in the password now. If the password is correctly entered, Cipher-201 will be in the System Management mode where 2 major tasks can be done as follows,

#### 1. Setup

```
System Manager
1.Setup
```

- (1) Press the ENTER key and now the Cipher-201 is in the setup mode and is ready to accept system parameter modification. The Cipher-201 will show the name of parameter on the upper side of the display and the original setting value on the lower side.

```
2. Line Connection:
=Master
```

- (2) Press ENTER key then you can change the setting value of this parameter. Use the "□" and "□" keys for selecting a new setting value or type in a new value via numeric keys. Then press ENTER key to conclude the new setting value.

```
1. Line Connection:
-><Single>
```

- (3) After all the system parameter modification are completed, the F1 key must be pressed to update these modifications and

save the new settings into the program memory. System will restart with the new settings. If F2 key instead of F1 key is pressed, all modifications of the system parameters will be discarded and retain the original settings.

(4) Followings are the system parameters,

- a. Station ID Setting
- b. Line Connection Setting
- c. Max. Station ID Setting
- d. Manager Card Setting
- e. Manager Password Setting
- f. LCD backlight Setting
- g. Master Card Setting
- h. Password Setting
- i. Buzzer Volume Setting
- j. Time Setting
- k. Timer Fine Tune Setting
- l. COM1 Setting
- m. COM3/AUX Setting
- n. Sybologies Setting
- o. Rdader1 Setting
- p. Reader2 Setting
- q. Time Stamp Setting
- r. ID Stamp Setting
- s. Source Stamp Setting

## 2. Self Test

This mode provides a simple but yet efficient way for diagnostic. Press

**ENTER** key for executing the following items test one by one,

- Flash test
- SRAM test
- Beeper test
- LCD test

- LED test
- DI & DO test
- COM1 test
- COM2 test
- COM3 test
- 485 test
- Wedge test
- ADC test
- Calendar test
- Reader test
- Keypad test
- AT Keyboard test
- Shutdown test

### 3. **Init System**

This is used to set all system parameters to their default value and initialize the file systems. Care should be taken, as this will destroy all data stored in the memory.

### 4. **Flash Clone**

This is used to copy the program in FLASH memory to another terminal. Usually it is used for diagnostic or software update.

### 5. **Flash Download**

This is used to update program code stored in the flash memory. The code can be downloaded from a PC using the "MDL6" or as described in the previous section, from another machine. Also, the RS232 has been fixed to 38400,N,8.

## 4.2. Host Command

The host computer can get access to terminals on the RS485 nets via COM1 of the master station.

Basic characteristics of the Cipher-201 are listed below,

### 4.2.1 Command Format

Each command is composed as <CC><ss><p..p>^, where,

- <CC>        command code string
- <ss>        2 digits station ID depending on command code
- <p..p>      parameters
- ^            delimiter carriage return, hex 0d

### 4.2.2 Command for master station

The following commands are for master station only and thus NO station ID should specified.

Command Code	Parameter	Operation	Echo
<b>ONLINE</b>	null	inquire on-line-status	aa,bb,...cc lists of all station Ids that are currently on-lined including the master station itself
<b>READ</b>	null	read one record	d...d: if available OVER: if empty
<b>REMOVE</b>	null	remove one record	NEXT: done OVER: done and data file now empty
<b>MAXID</b>	null or =ss	inquire/set maximum station IDs to be polled	ss: 2 digits maximum ID
<b>TIME</b>	null or =YYMMD Dhhmss	inquire/set system time	YYMMDDhhmss: system time after command execution. Once set, all stations on the net are

			modified.
--	--	--	-----------

Note:

1. The command **REMOVE** is effective only after current record has been read by Command **READ**, else the data file remains unchanged even **NEXT** is echoed.
2. When command **TIME** was issued, the master automatically issues a broadcasting Command to update all stations.

^ delimiter carriage return, hex 0d

### 4.2.3 Command for Individual station

Individual station can be accessed via these commands and 2-digit station **ID** **MUST** be specified.

Command Code	Parameter	Operation	Echo
<b>DCOUNT</b>	null	inquire on-line status stored in the data file	aa,bb,...cc
<b>TTUNE</b>	null or = offset	inquire/fine tune calendar offset = offset value from -128 to +127	d..d: value of the tuning register
<b>MCARD</b>	null or = tm..m	inquire/set master card t: code type m..m: up to 20 characters card ID	tm..m: updated master card
<b>PWD</b>	null or = p..p	inquire/set password	p..p: updated password
<b>BL</b>	null or = d	inquire/set backlight level d: 0 to 3	d: updated backlight level
<b>VOL</b>	null or = d	inquire/set buzzer volume	d: updated buzzer volume

		d: 0 to 3	
<b>COM1</b>	null or = b,p,d,h	inquire/set COM1 setting b: baud rate from 0 to 7 p: parity from 0 to 3 d: data bits from 0 to 1 h: handshake from 0 to 3	b,p,d,h: updated settings
<b>COM3</b>	null or = b,p,d,h	inquire/set COM3 setting b,p,d,h: as above	b,p,d,h: updated settings
<b>BCODE</b>	null or = p..p	inquire/set symbologies p..p: 20 digits for each symbologies	p..p: updated setting
<b>READER1</b>	null or = s,t,r	inquire/set reader1 s: scan mode from 0 to 7 t: time out from 0 to 225 r: redundancy from 0 to 3	s,t,r: updated setting
<b>READER2</b>	null or = s,t,r	inquire/set reader 2 s,t,r: as above	s,t,r: updated setting
<b>TMSTP</b>	null or = d	inquire/set time stamp d: 1/0, enable/disable	d: update setting
<b>IDSTP</b>	null or = d	inquire/set IDstamp d: 1/0, enable/disable	d: update setting
<b>SRSTP</b>	null or = d	inquire/set source stamp d: 1/0, enable/disable	d: update setting

# **Cipher-201 Hardware Reference Manual**

**V1.1**

**April 18, 2007**

© 1995, CipherLab Co., Ltd.

# 1. Table Of Contents

1. Table Of Contents .....	2
2. List Of Figures .....	3
3. Preface .....	4
4. General Features .....	5
5. Characteristics.....	6
5.1. Electrical.....	6
5.2. Environmental.....	6
5.3. Physical .....	6
6. Nomenclature.....	7
7.PCB .....	8
8. Power Circuit.....	9
9. Reset.....	10
10. Program Memory (Flash) .....	11
11. Data Memory (SRAM).....	12
12. Calendar chip .....	13
13. Memory and Calendar Backup Battery .....	14
14. LCD.....	15
15. Reader.....	16
16. External Keyboard .....	17
17. Membrane Keypad.....	18
18. Interface C1 .....	19
18.1. COM2.....	20
18.2. Wedge emulation .....	20
18.3. Power Pins .....	20
18.4. Loop Back Tester .....	20
19. Interface C2 .....	21
19.1. COM1 .....	22
19.2. Digital Input.....	22
19.3. Digital Output .....	22
19.4. Power Pins .....	22
19.5. Loop Back Tester .....	23
20. RS232 (COM3).....	24
21. LED .....	25
22. Speaker .....	26



## 2. List Of Figures

Figure 1. Nomenclature.....	7
Figure 2. PCB .....	8
Figure 5. SRAM type selector .....	12
Figure 6. SRAM connection.....	12
Figure 7. LCD Connector.....	15
Figure 8. Reader 1 Connector.....	16
Figure 9. External Keyboard Connector .....	17
Figure 10. Keypad Connector.....	18
Figure 11. C1 .....	19
Figure 12. C2 .....	21
Figure 13. COM3.....	24

### **3. Preface**

This manual provides in-depth hardware informations of the Cipher-201 programmable terminal and serves as a reference for hardware and maintenance engineers. Assumption has been made that readers of this manual have basic knowledge of electric and/or electronic theory.

Numberings of all components, including connectors, passive and active components conforms to the PCB V3.01. However, CipherLab does not guarantee this conformity. The numberings and locations of components might be re-arranged. For confirmation, please refer to the PCB and its schematics. After all, this manual intends to describe the operation theory of the circuitry utilized.

## 4. General Features

The Cipher-201 is equipped with the follows,

- TLCS-900 16 bit CPU running at 9.8304 MHz
- Program : 128 KB flash memory
- Data memory : 32 or 128 KB SRAM
- Optional Fine-tunable calendar chip
- Memory & calendar chip backup 3.6V NiCd battery
- 2 reader ports for barcode Wand, Laser-emulation scanners or up to dual-track magnetic card reader.
- optional 2 X 20 characters dot-matrix LCD display with adjustable back-light and viewing angle
- optional 4 X 4 membrane keypad
- 2 digital input ports
- 2 digital output ports
- external keyboard port (AT keyboard) or keyboard emulation
- 3 serial communication ports, depending on ports, can be configured as RS232, CMOS RS232 or RS485

## **5. Characteristics**

Basic characteristics of the Cipher-201 are listed below,

### **5.1. Electrical**

- Main Power Supply Voltage :
  - 8 to 20 V DC from DC-jack
  - +5V from C1 or C2
- Power consumption : 0.5W maximum without LCD nor external devices attached

### **5.2. Environmental**

- Humidity (operating) : non-condensed 20% to 90%
- Humidity (storage) : non-condensed 10% to 95%
- Temperature (operating) : 0 to 50
- Temperature (storage) : -20 to 70
- EMC regulation : FCC class A and CE approved

### **5.3. Physical**

- Dimensions : 179 \* 116 \* 32 mm (without LCD)
- Weight : 300 gram maximum (without LCD)
- Material : ABS
- Color : Gray

## 6. Nomenclature

The overall out-looking and connector locations are depicted below,

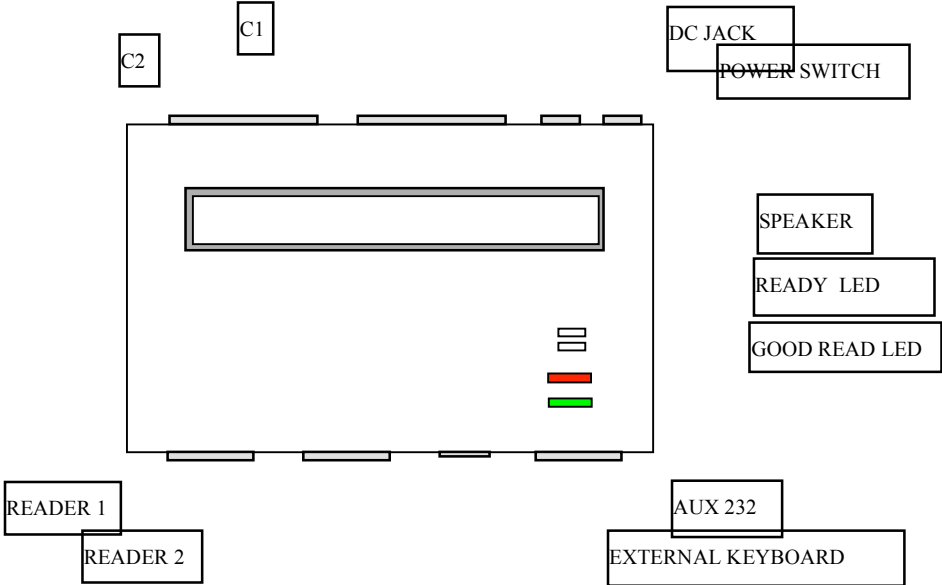


Figure 1. Nomenclature

## 7. PCB

The PCB and locations of major components are shown below,

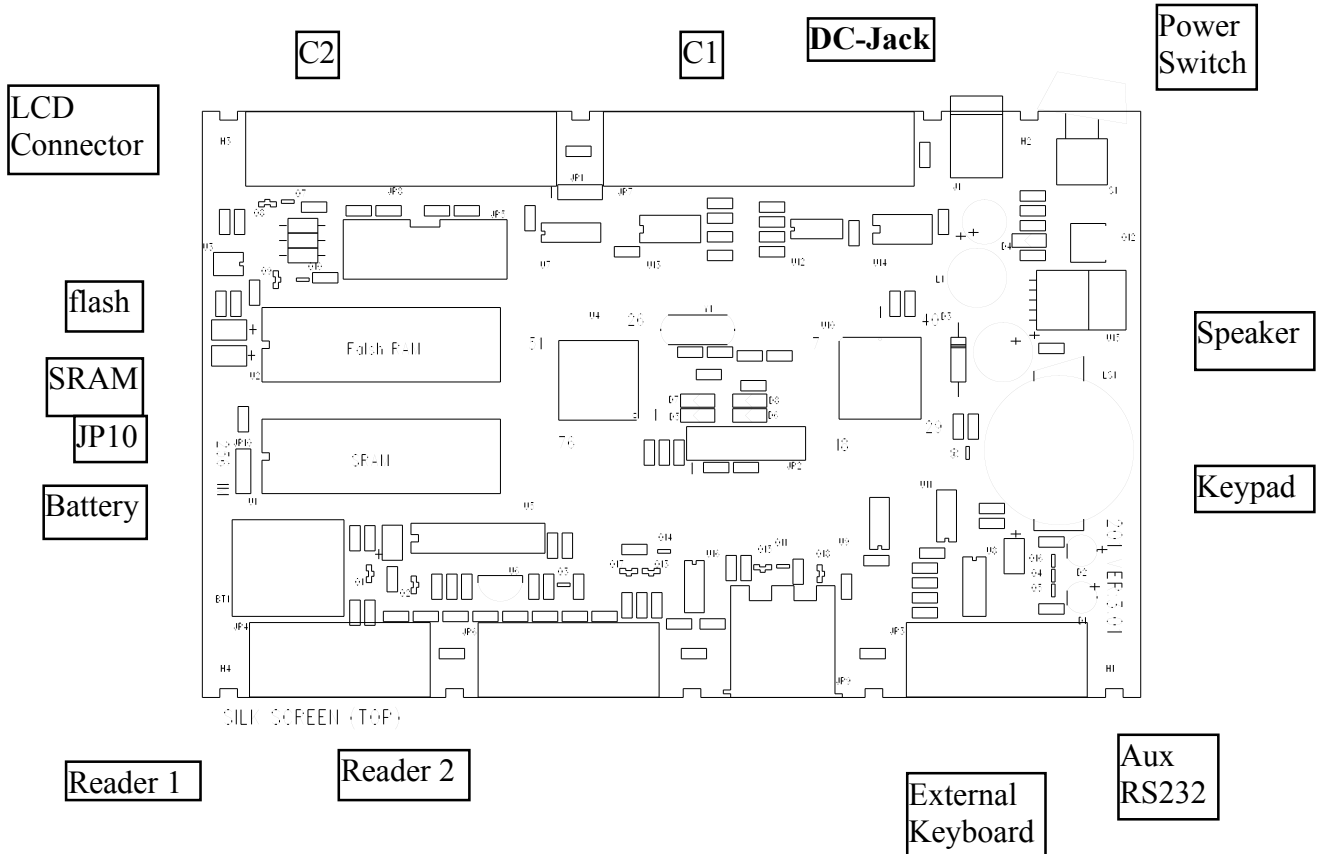


Figure 2. PCB

## 8. Power Circuit

The 201 can be powered in two ways,

- 8 to 20 V from the DC jack
- +5V from C1 or C2

Later is used mostly for keyboard emulation decoders where the power can be drawn from the host computer. In case this host power is not available or not adequate, an wall adapter (in the range of 8 to 20V) can be fed via the DC-jack. As long as this external power is asserted, the +5V from C1 or C2 is disconnected via an internal FET switch. A simple buck-type switching regulator (LM2575) is followed to generate the required system power, +5V. This regulator is capable of providing up to 1 Amp currents and provides a reasonable typical efficiency around 70% to 80%. Low-ESR (equivalent series resistance) type electrolytic capacitors are used both at input and output sides to reduce ripples.

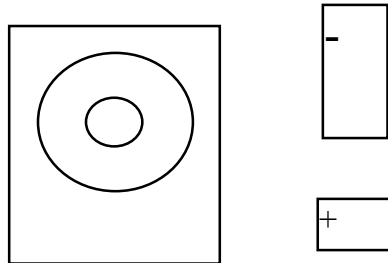


Figure 3. Main Power Connector

The power is controlled via a dual pole dual throw (DPDT) type switch and a resistor is used to discharge the output capacitor when switch was turned off (namely, to the OFF side). As the 201 itself consumes very little power (typical 50mA with LCD back-light off, no external devices attached), this ensures a sharp power up and down sequence.

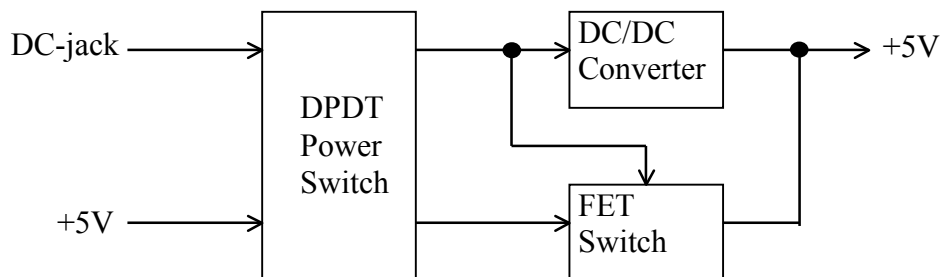


Figure 4. Power Circuit

## 9. Reset

The system reset signal is generated by a voltage detector chip RICO RE5V or compatible chips. It outputs an active low reset signal when the system power drops below a pre-determined voltage level ( $V_{det-}$ ). The reset signal then changes to high when the power is higher than another pre-determined voltage level ( $V_{det+}$ ). The  $V_{det+}$  is about 200 mV higher than  $V_{det-}$ , this phenomenon known as hysteresis, prevents noise to false-trigger the reset circuitry. The TLCS-900 is guaranteed to work within 5V 10% and the  $V_{det-}$  is set to 4.6V. This reset signal does not only ensure the proper operation of the CPU but is also used to reset the UART chip (NS82C50) and disables SRAM access (connecting to SRAM CE2) during power-up and power-down. The later is very important as the SRAM contents might be changed by unwanted spikes during supply voltage change.



## 10. Program Memory (Flash)

128 Kbytes flash memory (U2) is used to store the program code and is guaranteed to last at least 100,000 erase/program cycles. 2 kinds of flash chips can be used, the AMD 29F010 and 28F010 from Intel, MX and so on, and the access time must be 150 ns or faster. The former is a pure +5V device whereas the later requires a +12V for erasing/programming. U3 and accompanying passive components are used to generate this +12V. The U3 can be a Maxim MAX660 or Linear Technology LT1262, which two are total-compatible. Instead of inductor type switching DC/DC converter, these chips utilize a capacitor switching type circuitry and features smaller PCB space, lower ripple and lower EMI emission.

The +12V generation is controlled by a CPU output pin and types of flash memory utilized is automatically identified by software (refer to software manual, routine download() ). That is, if 29F010 is used, this circuit is not enabled. During normal read, this DC/DC converter is disabled and the voltage stays at 0V.

## 11. Data Memory (SRAM)

The data memory can be a 32KB or 128KB SRAM. However, to accommodate different pin assignments, the SRAM type must be selected via the jumper, JP10 as follows,

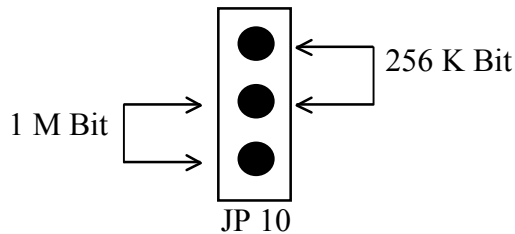


Figure 5. SRAM type selector

Also, the SRAM should be plugged as follows,

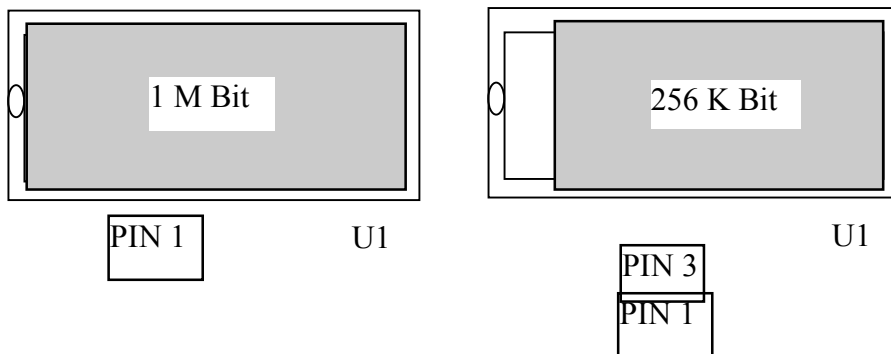


Figure 6. SRAM type connection

The SRAM used must be LL type to reduce battery power consumption and with access time 150 ns or faster. These SRAMs are backup by a NiCd battery and will be described in detail later.

## 12. Calendar chip

A battery backup calendar chip is used to retain the system time even when power is off. The chip utilized is a V3022 from EM micro-electronic Marin SA. It features the following outstanding features,

- Very low power consumption  
When powered from the battery (3.6V), the current is typically 0.9  $\mu$ A and maximally 1.5  $\mu$ A.
- Wide operation voltage range  
This chip works down to 2.0 V.
- On-chip high precision oscillator  
This is a must for accurate time keeping as it is factory trimmed and external oscillators tend to be effected by outside electro-magnetic noise, temperature and so on for the long leads and traces.
- Timer Adjustment  
It can also be fine tuned to compensate for a fast or slow clock. This is an outstanding feature for those applications which need punctual system time such as a time/clock application. The tuning of the calendar chip is done by modifying the value of the **trimming register** of the calendar chip.
- Trimming Register  
The frequency of the calendar chip can be tuned in units of ppm via a digital trimming register. The trimming range is from 0 to 255 ppm. The bigger the value of the trimming register the slower the calendar chip runs. For instance, if the calendar chip is 1 second **slow** in one day then the value of the trimming register should **decrease** 12 to correctly adjust the calendar chip. During system initialization, this register is set to 186.  
 $1 \text{ sec} / 1 \text{ day} = 1000000 / (24 \text{ hours} \times 60 \text{ min} \times 60 \text{ sec}) = 11.57 \text{ ppm} \sim 12 \text{ ppm}$
- Write-protected  
Unless changing calendar time is needed, it is write-protected and won't be accidentally changed.
- Cold start detection  
A cold start bit is set if power loss encountered or first power-on. The software can then recognize this bit and initialize the calendar chip.

### 13. Memory and Calendar Backup Battery

A 3.6V rechargeable NiCd battery is used to backup the SRAM and keeps the calendar chip running even when system power is off. Its capacity is 60 mAh and is trickle charged with a typical 1.2 mA current. After fully charged, it is able to sustain for more than 15 months. For example,

- SRAM (LL-type, SONY CXK581000), current consumed is  
0.7  $\mu$ A (typical) and 4.0  $\mu$ A (max., 0 to 40 )
- V3022 : 0.9  $\mu$ A (typical), 1.5  $\mu$ A (max.)

Time (typical) = 60 mAh / (0.7 + 0.9) = 37500 hrs = 1563 days > 52 months

Time (worst) = 60 mAh / (4.0 + 1.5) = 10909 hrs = 455 days > 15 months

Although behaves in similar ways, unlike system power, switching between +5V and battery is done by 2 transistors and some passive components. This circuit features a very low leakage (base to collector leakage current of the PNP transistor Q1) back to the +5V and a low voltage drop (saturated  $V_{ce}$ , ~0.2V). This low drop is necessary for most CMOS chips. If you are interested in this issue, pick up some CMOS chip data sheets. When system power is supplied, the supply voltage for these chips (SRAM & calendar) is +5V -  $V_{drop}$ . Whereas signals are directly from/to CPU and other chips, which are supplied with +5V. However, for SRAM (a CMOS chip), the upper limit of input signal is  $V_{dd} + 0.5V$ . If using diodes such as 1N4148 for switching, the voltage drop is also 0.6V which is too large and will damage these chips.

## 14. LCD

An optional 20 X 2 LCD display can be equipped as follows,

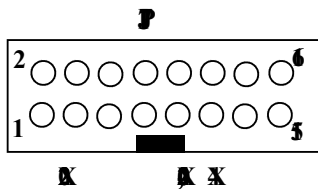


Figure 7.

LCD Connector

- |                      |                        |
|----------------------|------------------------|
| 1. Ground            | 9. D2                  |
| 2. Vcc, +5V          | 10. D3                 |
| 3. view angle adjust | 11. D4                 |
| 4. A0                | 12. D5                 |
| 5. A1                | 13. D6                 |
| 6. CS                | 14. D7                 |
| 7. D0                | 15. Back-light Anode   |
| 8. D1                | 16. Back-light Cathode |

**Note** that although utilizing the same LCD display as the 510, these 2 displays are **not interchangeable**. Signals on the connector are mirrored, this reversal of the power pins will destroy the display.

The LCD is equipped with LED back-light and can be 4 levels tuned. 2 high current NPN transistors (500 mA maximum), Q8 and Q9 are used to drive the back-light and Q8 provides twice current Q9 does. Controlling Q8 & Q9 yields current ratios from 0, 1, 2 to 3.

$$I_{\text{back-light}} = (V_{\text{cc}} - V_{\text{ce}} (\text{saturated}) - V_{\text{f}}) / R$$

Where,

$V_{\text{cc}}$  = supply voltage, +5V

$V_{\text{ce}} (\text{saturated})$  = transistor collector to emitter saturation voltage

$V_{\text{f}}$  = LED forward voltage


R = resistor

The typical back-light current is then  $(5 - 0.2 - 3.8) / 20 = 50$  mA. That is, from 0 to 150 mA on a 50 mA basis. As this is an STN-type LCD and the viewing angle is quite large, view angle adjustment is unnecessary.

## 15. Reader

 There are totally 2 reader ports provided, each can be either a Wand, Barcode slot reader, Barcode Scanner with Laser emulation or up to dual-track magnetic card reader. They are equivalent in both hardware and software. Their connectors and pin-assignments are listed below. Beware that in order to decode barcode and magnetic card at the same time, some signals share the same pin. However, the software is able to tell types of the readers attached.

### DB-9 Male



#### Front View

Figure 8. Reader Connector

JP4 & 6	Barcode	Magnetic
1	Start Of Scan	Not used
2	Data	Clock 1
3	Good Read	Not used
4	Not Used	Data 1
5	Switch	Clock 2
6	Power Enable	Not used
7	Ground	Ground
8	Not used	Data 2
9	Vcc, +5V	Vcc, +5V

## 16. External Keyboard

An external AT-compatible keyboard can be attached for handy data entry. The connector and pin assignment conforms to PC/AT standards.

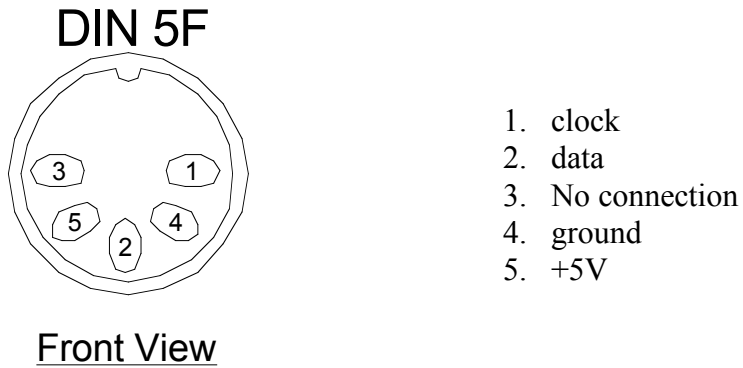


Figure 9. External Keyboard Connector

However, these signals are also used to simulate a keyboard when configured as a wedge-type decoders. In that case, this connector should be left unconnected and the CipherLab special wedge cable for that particular wedge emulation should be plugged to C1. Then the original keyboard used by that host computer can be then attached to the special wedge cable.

## 17. Membrane Keypad

A standard 16-key membrane keypad is provided for data entry.

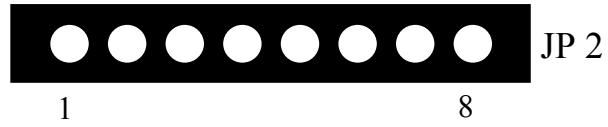


Figure 10. Keypad Connector

- |         |          |
|---------|----------|
| 1. In 1 | 5. Out 1 |
| 2. In 2 | 6. Out 2 |
| 3. In 3 | 7. Out 3 |
| 4. In 4 | 8. Out 4 |



## 18. Interface C1

This is a 25 pin D-type female connector as depicted below,

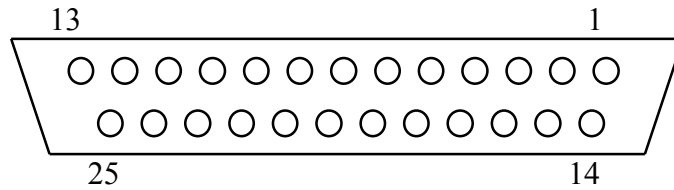


Figure 11. C1

- |  |  |
|--|--|
| 1. Ground                              | 13. keyboard-emulation signal 1              |
| 2. TxD 232, transmit data RS232 level  | 14. keyboard-emulation signal 2              |
| 3. RxD 232, receive data RS232 level   | 15. keyboard-emulation signal 3              |
| 4. RTS 232, RTS, RS232 level           | 16. keyboard-emulation signal 4              |
| 5. CTS 232, CTS RS232 level            | 17. keyboard-emulation signal 5              |
| 6. short to C2 pin 6                   | 18. keyboard-emulation signal 6              |
| 7. Ground                              | 19. No connection                            |
| 8. short to C2 pin 8                   | 20. short to C2 pin 20                       |
| 9. TxD CMOS, transmit data CMOS level  | 21. RS485 +                                  |
| 10. RxD CMOS, receive data, CMOS level | 22. RS485 -                                  |
| 11. RTS CMOS, RTS, CMOS level          | 23. +5V power input                          |
| 12. CTS CMOS, CTS CMOS level           | 24. +12V power output, directly from DC-jack |
|  | 25. +5V power output                         |

It contains the follows,

- Serial communication COM2, one and only one of the follows can be used,
  - RS232
  - CMOS-level RS232
  - RS485
- Wedge emulation
- External power input
- Power pins



## 19. Interface C2

This is a 25 pin D-type male connector as depicted below,

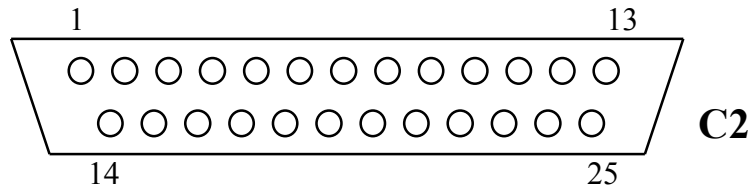


Figure 12. C2

- |  |  |
|--|--|
| 1. Ground                              | 13. Digital Output 1                         |
| 2. RxD 232, receive data RS232 level   | 14. Digital Output 0                         |
| 3. TxD 232, transmit data RS232 level  | 15. Digital Input 1                          |
| 4. CTS 232, CTS RS232 level            | 16. Digital Input 0                          |
| 5. RTS 232, RTS, RS232 level           | 17. No connection                            |
| 6. short to C2 pin 6                   | 18. No connection                            |
| 7. Ground                              | 19. No connection                            |
| 8. short to C2 pin 8                   | 20. short to C2 pin 20                       |
| 9. RxD CMOS, receive data, CMOS level  | 21. RS485 +                                  |
| 10. TxD CMOS, transmit data CMOS level | 22. RS485 -                                  |
| 11. CTS CMOS, CTS CMOS level           | 23. +5V power input                          |
| 12. RTS CMOS, RTS, CMOS level          | 24. +12V power output, directly from DC-jack |
|  | 25. +5V power output                         |

It contains the follows,

- Serial communication COM1, one and only one of the follows can be used,
  - RS232
  - CMOS-level RS232
- Digital Input/output
- External power input
- Power pins

## 19.1. COM1

This communication port can be used as RS232 or CMOS-level RS232. However as they share the same UART, only one of them can be used at a time. On the software part, the RS232 and CMOS-level RS232 functions the same.

## 19.2. Digital Input

2 digital inputs are equipped. However, unlike 510, these 2 signals are not photo-isolated and are directly connected to CPU Input pins, thus care must be taken in handling these pins. Also, on the software side, the read value is inverted. That is, if this pin is at high (2.2 ~ 5.3 V), the `get_din()` will return 0. Whereas 1 is returned if it is at low (-0.3 ~ 1.5V). When floated, 2 on-board pull-up resistors keep these signals at high.

## 19.3. Digital Output

2 digital outputs are equipped. However, unlike 510, these 2 signals are not photo-isolated and are directly connected to CPU Output pins, thus care must be taken in handling these pins. Also, on the software side, if it is set ON by `set_do()`, the pin goes to low. Whereas it goes to high when set OFF. The output drive capability is limited as below,

- Output low voltage : maximally 0.45V if sinking 1.6 mA
- Output high voltage : minimally 2.4V if sourcing 400  $\mu$ A and minimally 3.75V if sourcing 100  $\mu$ A

Buffering is strongly recommended.

## 19.4. Power Pins


As stated earlier, the 201 can be powered from external +5V through this connector or an unregulated +8V to +20V through the DC-jack.

- Pin 23, +5V power input can be used to draw power from host computer, usually when configured as a decoder. However, as stated earlier, this power source is automatically disconnected by an FET switch if an external power is fed through the DC-jack.
- Pin 24, +12V output : this is the power switch gated power from the DC-jack and can be used to power external devices. However, in doing so, the overall power consumption and adapter power rating must be examined.
- Pin 25, +5V output : this is the power switch gated +5V regulated by the on-board DC-DC converter and can be used to power external devices. However, the on-board regulator is able to supply up to 1 Amp current. In doing so, the overall power consumption must be examined.


## 19.5. Loop Back Tester

2 Loop back testers can be used accompanying self-test codes for diagnostics.

- For RS232 & wedge emulation signals,

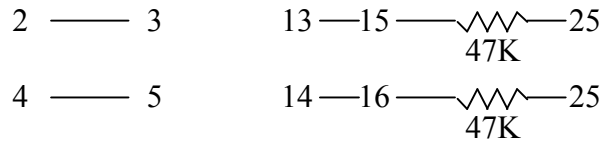

- For CMOS RS232 & wedge emulation signals,

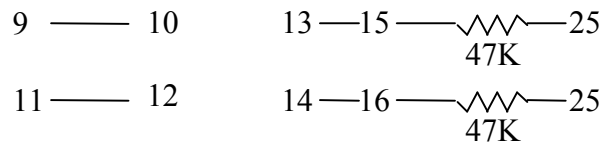


Connection of this tester is identical to that of the C1 except connector polarity. Thus a one to one gender (male to female changer or female to male changer) can be used to swap between C1 and C2.

## 20. RS232 (COM3)

 An auxiliary RS232 is equipped in the front panel as below,

### DB-9 Male



Front View

1. No connection
2. Receive data, RS232 level
3. Transmit data, RS232 level
4. No connection
5. Ground
6. No connection
7. RTS, RS232 level
8. CTS, RS232 level
9. +5V

Figure 13. COM3

## 21. LED

There are totally 2 LEDs on the panel for showing system status.

- READY, Red
- GOOD READ, Green

The GOOD READ LED is activated if one or both of the reader good read LED is activated. That is, these two reader good read signal is Ored to drive this on-board LED.

## 22. Speaker

A low power speaker is supported and the sound level is 4-level tunable. This speaker electrically behaves like a capacitor, which implies that current flows only when states are changed (charge/discharge capacitor) and very little power is consumed. However, a higher voltage, e.g. 10V is needed to drive it. To do this, the speaker is driven by a pair of complementary CMOS-level 5V signals to produce a virtually 10V peak to peak signals across the speaker. This peak to peak voltage level is altered to control the sound level. Up to 4 sound levels can be set and the corresponding peak to peak voltages are 2.5 V, 5 V, 7.5 V and 10 V. The working frequency ranges from 1KHz to 6KHz and have a peak around 4 KHz.