



## Dog Training Collar with Wireless Remote

CC-710

# Product User Guide

# Contents

Overview .....	2
Parts List.....	3
Charging the Remote and Receiver .....	4
Fitting the Collar Properly .....	5
Using the Remote.....	6
Programming the Remote.....	9
Syncing Remote & Receiver .....	11
Using 2 Collars.....	12
Sleep Mode .....	12
Contact Us.....	13



## Overview

Thank you for purchasing your new CC-710 Dog Training Collar. Here at Cujo Control, we strive to provide the highest quality pet supplies, with a customer support team truly above the rest. As always, all of our products are backed by our lifetime warranty. If you ever need anything, please contact us and we will do everything possible to accommodate you.

We are fully committed to your satisfaction and the happiness of your dog. This user guide will provide you everything you need to get started training your dog correctly and safely. Please read this guide carefully before using the training collar for the first time.



## Parts List

### What's In The Box



Remote Control



Test Light & Contacts



USB Charger




Collar & Receiver



## Charging the Remote and Receiver

Both the **Remote Control** and **Receiver** (the receiver is the black plastic device connected to the collar) use lithium batteries that can be recharged. For best results, please charge the remote and the receiver for **3 hours** each before using the first time.

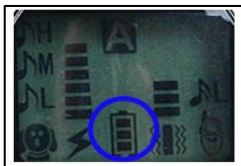

There are 3 bars to show the battery power level. 3 bars means the remote is fully charged.

To charge the **Remote**, simply slide the black rubber cover on the top of the remote to the side, and insert the charger into the charging hole. Since this is a USB charger, you can charge the remote from a computer, or you can charge it from a wall outlet.



To charge the **Receiver**, simply open the protective rubber cover and insert the charger into the charging hole. Note: The same charger is used to charge both the remote and the receiver.

When charging, a **red LED light** will blink on the receiver to indicate that it is being charged correctly. When the receiver is fully charged, the light will stop blinking.



## Fitting the Collar Properly

### Step 1 Choosing the Appropriate Length of Contact Points



This is a critical step and is often overlooked. If you don't have the proper length **Contact Points**, the collar won't work correctly. For smaller dogs, the short contact points should be used. For larger dogs, or dogs with a heavier hair coat, you should use the longer contact points.

### Step 2 Fit the Collar to your Dog



The collar needs to be placed relatively high on the dog's neck, usually just a couple of inches below the ears. The collar should be pretty snug on the dog's neck, and it should not dangle. If the collar is too loose, the contact points will not be touching your dog, and it will not work. A good indicator that the collar is fit properly is if you can fit two fingers under the collar.

### Step 3 Brush Coat and Check Skin Daily



When first using, you should check under the dog's neck to make sure there is no irritation. It is also a good idea to brush their coat and check their skin daily.



## Using the Remote



### Power Button

<b>Functions</b>	Turns the remote on/off and wakes the remote from sleep mode
<b>To Use</b>	Press and hold the power button for 2-3 seconds to turn the remote on or off. Press the power button once to awaken remote from sleep mode



### Collar Tone Button

<b>Functions</b>	Produces an audible beep tone from the collar
<b>To Use</b>	Press the button once to cause the collar to make an audible beep tone. Hold the button down, and the collar will continue to beep until released. When in programming mode, this button is used to decrease the value being programmed.

### Shock Button

<b>Functions</b>	Produces a shock from the collar
<b>To Use</b>	Press the button once to cause the collar to produce a shock through the metal prongs. Hold the button down, and the shock will continue until released.

### Menu Button

<b>Functions</b>	Let's you choose the collar A, B, or AB. Enters the remote into programming mode. Used to cycle through program settings.
<b>To Use</b>	Press the button once to select the collar mode. Hold down the button for 2-3 seconds to enter remote into programming mode. Repeat to exit programming mode. When the remote is in programming mode, pressing the button quickly will scroll through the features to be programmed.

### Vibrate Button

<b>Functions</b>	Produces a vibration from the collar
<b>To Use</b>	Press the button once to cause the collar to produce a vibration through the receiver. Hold the button down, and the vibration will continue for 5-6 seconds.





### Remote Tone Button


<b>Functions</b>	Produces an audible beep tone from the remote
<b>To Use</b>	Press the button once to cause the remote to make an audible beep tone. Hold the button down, and the remote will beep until released. When in programming mode, this button is used to increase the value being programmed.

### Charging Port

<b>Functions</b>	Charges the remote control
<b>To Use</b>	Plug in the USB charger. When the battery indicator shows 3 bars, the remote is fully charged.



## Programming the Remote

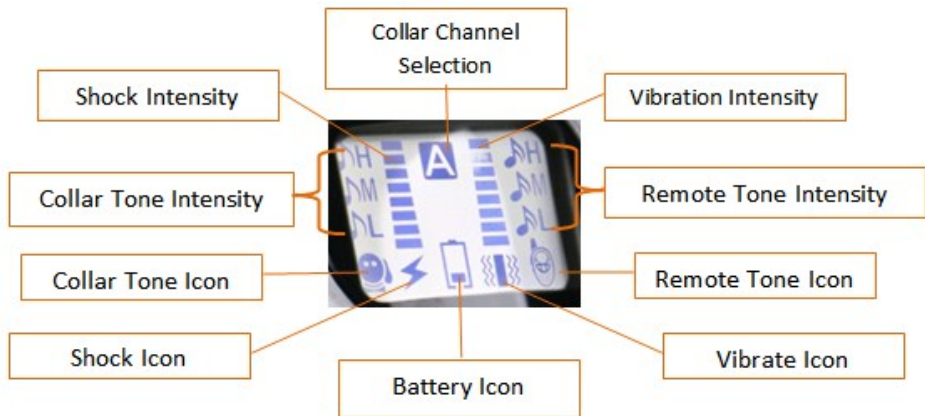

### Enter Program Mode

To program the remote, you must first enter programming mode. To do this, press and hold the menu button for 2-3 seconds. The remote will beep once and the collar channel (A, B, or AB) will begin flashing.

First choose which collar channel you want to program. Press the collar tone button or remote tone button to cycle through the collar channels. Select either **A**, **B**, or **AB**. Select Channel **A** if you only have one collar.



Press the menu button to cycle through the programming features. When finished programming, press and hold the menu button again for 2-3 seconds to exit programming mode.

### **Collar Tone**

This tone setting can be set to L, M, or H. If "L" is selected, the collar will beep one time when the collar tone button is pressed. "M" - the collar beeps twice. "H" - the collar beeps three times. To set this function, press the menu button until the collar tone icon (dog) is flashing on the screen. Press the collar tone button to decrease this setting, and the remote tone button to increase this setting.

### **Shock**

This shock setting can be set as low as 1 bar, or as high as 8 bars. The more bars selected, the higher the intensity of the shock. It is recommended to start with the lowest bar setting first, to test how your dog responds. Then you can slowly increase the intensity. To set this function, press the menu button until the shock icon (lightning) is flashing on the screen. Press the collar tone button to decrease this setting, and the remote tone button to increase this setting.

### **Vibrate**

This vibration setting can be set as low as 1 bar, or as high as 8 bars. The more bars selected, the faster the collar will vibrate. To set this function, press the menu button until the vibrate icon is flashing on the screen. Press the collar tone button to decrease this setting, and the remote tone button to increase this setting.



## Remote Tone

This tone setting can be set to L, M, or H. If "L" is selected, the remote will beep one time when the remote tone button is pressed. "M" - the remote beeps twice. "H" - the remote beeps 3 times. To set this function, press the menu button until the remote tone icon (remote) is flashing on the screen. Press the collar tone button to decrease this setting, and the remote tone button to increase this setting.

## Syncing Remote & Receiver

When your collar arrives, it will already be synced to the remote. If something happens and it becomes disconnected from the remote for any reason, you can simply reset the receiver and re-sync the remote.

To **RESET** the receiver:

On the receiver, there are two holes. One is the charging port, and one is the reset hole. Simply pull the rubber protector up so that the reset hole is visible. Insert a paperclip, or something similar into the reset hole. You only need to tap once and the red LED light will begin blinking. This will let you know the receiver has been reset and is ready to sync to the remote

To **SYNC** the remote to the receiver:

First, make sure the red LED light is blinking on the receiver. If it is not, refer to the steps above. Then choose which channel you want assigned to this collar. Choose A, B, or AB on the remote and press either the remote sound, shock, or vibrate button on the remote. This will cause the **red LED light** to blink rapidly and then stop. Now your remote and receiver are properly synced.



## Using 2 Collars

One remote can be used to control two separate collars. Follow the syncing steps above if you wish to sync another collar, for up to two dogs. Select Channel **A** or Channel **B** to control each collar individually. Or you can select **AB** on the remote, and this will control both collars simultaneously.

## Sleep Mode

To save on battery life, the remote and receiver are programmed to enter **Sleep Mode** if they don't sense any movement or activity for a certain period of time.

The remote will enter sleep mode if there is no activity for one and a half minutes. To wake the remote from sleep mode, simply press the **Power Button**, or press the **Menu Button**.

The receiver will enter sleep mode if there is no movement from the collar for one minute. To wake the receiver from sleep mode, simply touch or move the **Receiver**.



## Contact Us

Phone Number

626-667-4730

Address

6 Kingsbridge Rd, Suite 2A  
Fairfield, NJ 07004

E-mail Address

[support@cujocontrol.com](mailto:support@cujocontrol.com)

Website

[www.cujocontrol.com](http://www.cujocontrol.com)

