

CONTACT INFORMATION

Website: www.iLiveElectronics.com

Email Support: prodinfo@dpiinc.com

Email Parts: partsinfo@dpiinc.com

Phone Support: 1-888-999-4215

WARRANTY

For Warranty Information and the most up-to-date version of this User's Guide, go to: www.iLiveElectronics.com



**Protect for Today
Sustain for Tomorrow**

INTERNATIONAL SUPPORT

To download this User's Guide in English, Spanish, or French, or to get answers to frequently asked questions, visit the support section at:

www.iLiveElectronics.com

Para descargar este Manual del Usuario en inglés, español y francés, o para obtener respuestas a preguntas frecuentes, visite la sección de apoyo en:

www.iLiveElectronics.com

Pour télécharger ce guide de l'utilisateur en anglais, espagnol ou français, ou pour obtenir des réponses à des questions fréquemment posées, consultez la rubrique d'assistance sur: www.iLiveElectronics.com


CHARGING THE BATTERY

Requires a Micro-USB to USB cable (included).

Note: *Be sure the computer is not in sleep mode.*

1. Using a Micro-USB to USB cable (included), connect the larger **USB plug** to the **USB port** of a powered on computer or USB power adaptor.
2. Pull back the water cap and connect the smaller **Micro-USB plug** to the **Micro-USB port** of the unit. The unit will now charge.

WARNING: DO NOT, UNDER ANY CIRCUMSTANCES, CHARGE THE SPEAKER WHILE IT IS IN OR NEAR WATER. ALLOW AMPLE TIME TO DRY BEFORE CHARGING AFTER USE IN WATER.

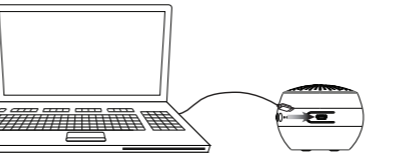

PAIRING A BLUETOOTH DEVICE

1. Press and hold the **Power button** to power on the speaker.
2. Press and hold the **Pair** button to begin pairing. *The **Pairing Indicator** will begin flashing quickly. When pairing, remain within 3 feet of the unit.*
3. Using the controls on your Bluetooth device, scan for and select **ISBW105** in your Bluetooth settings to pair. If your device requests a password, enter the default password **0000**. *Refer to the user's manual for your specific device for instructions on pairing and connecting Bluetooth devices.*
4. When successfully paired, the **Pairing Indicator** will turn solid and an audible chime will sound through the speaker. *After initial pairing, the unit will stay paired unless unpaired manually by the user or erased due to a reset of the device. If your device should become unpaired or you find it is unable to connect, repeat the above steps.*

PLAYING AUDIO WIRELESSLY

1. Use the controls on the connected device to select an audio track.
2. Audio played through the connected Bluetooth device will now be heard through the speaker. Use controls on your device or the speaker to play, pause, skip, and change the volume.

USING THE SPEAKERPHONE

1. When a call is received, a ringtone will sound through the speaker. Press the **Play/Pause/Speakerphone** button to accept the call or accept the call using the controls on the connected phone.
2. The incoming call received through the device will now be heard through the speaker. Speak into the microphone on the top of the speaker during the call.
3. To end the call, press the **Play/Pause/Speakerphone** button or end the call using the controls on the connected phone.



Wireless Water Resistant Speaker

User's Guide for Model No. ISBW105BU v1316-01

WARNINGS AND PRECAUTIONS

- **WARNING:** To prevent fire or shock hazards, do not expose this unit to rain or moisture.
- **WARNING:** Do not place this unit directly onto furniture surfaces with any type of soft, porous, or sensitive finish. As with any rubber compound made with oils, the feet could cause marks or staining where the feet reside. We recommend using a protective barrier such as a cloth or a piece of glass between the unit and the surface to reduce the risk of damage and/or staining.
- **WARNING:** Where the mains plug or appliance coupler is used as the disconnect device, such disconnect device shall remain readily operable.
- **NOTE:** This device uses an internal rechargeable lithium-ion battery that should last the lifetime of the device. If you suspect your battery may be dead after several attempts to charge, please contact 1-888-999-4215 for support.
- Never disassemble the unit or attempt to remove the battery as that could cause leakage of an electrolytic substance.

FCC WARNINGS

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FEATURES

- Built-in Bluetooth speaker
- Wireless range: 60 feet
- IPX7 water resistant
- Built-in microphone for hands free speakerphone operation
- Micro-USB port for battery recharge
- Battery life: approx. 4 hours

INCLUDES

- Micro-USB to USB cable
- Detachable suction cup

CONTROLS

Battery Charge Indicator |

Bluetooth Pairing Indicator |


Pair Bluetooth |

Play/Pause/Speakerphone |

Skip Fwd/Rev/Vol +/- |

Power OFF/ON |

Micro-USB Charging Port (side) |

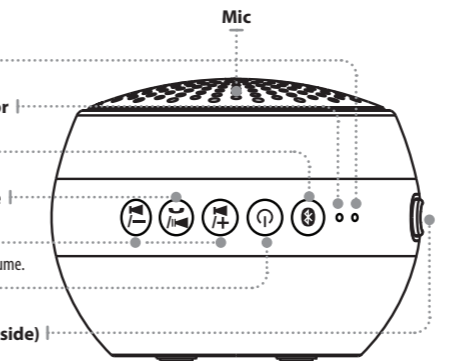

WATER RESISTANCE

This unit has an IPX 7 level of water resistance. This makes it suitable for indoor and outdoor use in the presence of incidental or light exposure to splashing water, rain, or snow. It is not recommend to submerge this speaker in greater than 1 meter of water for any amount of time.

IMPORTANT: To ensure your speaker is prepared for use in a wet environment, disconnect and remove any power cables, and tightly close the charging port water cap. If the water cap is not properly closed, water resistance will be compromised and could result in damage to the speaker or personal injury.

BATTERY CHARGE INDICATORS

STATUS	INDICATOR
Low Battery	Flashing red light
Charging Device	Solid red light
Full Charge	No light

BLUETOOTH PAIRING INDICATORS

STATUS	INDICATOR
Pairing Device	Flashing blue light
Device Paired	Solid blue light