

---

# Operation Manual

## VistaBeam® 600/300



**VistaBeam 600 Center**



**VistaBeam 600 Pole-Op**



**KINO FLO®**  
Lighting Systems

# VistaBeam Fixture Styles and Features

## VistaBeam Center Mount



### **VIS-6C-120**

VistaBeam 600 DMX Center Mount, 120VAC

### **VIS-6C-230**

VistaBeam 600 DMX Center Mount, 230VAC



### **VIS-3C-120**

VistaBeam 300 DMX Center Mount, 120VAC

### **VIS-3C-230**

VistaBeam 300 DMX Center Mount, 230VAC

## VistaBeam Yoke Mount



### **VIS-6Y-120**

VistaBeam 600 DMX Yoke Mount, 120VAC

### **VIS-6Y-230**

VistaBeam 600 DMX Yoke Mount, 230VAC



### **VIS-3Y-120**

VistaBeam 300 DMX Yoke Mount, 120VAC

### **VIS-3Y-230**

VistaBeam 300 DMX Yoke Mount, 230VAC

## VistaBeam Pole-Op Mount



### **VIS-6P-120**

VistaBeam 600 DMX Pole-Op Mount, 120VAC

### **VIS-6P-230**

VistaBeam 600 DMX Pole-Op Mount, 230VAC



### **VIS-3P-120**

VistaBeam 300 DMX Pole-Op Mount, 120VAC

### **VIS-3P-230**

VistaBeam 300 DMX Pole-Op Mount, 230VAC

## Included w/ all VistaBeam Models



### **LVR-V690**

VistaBeam 600  
Louver-Honeycomb 90° (Included)

### **LVR-V390**

VistaBeam 300  
Louver-Honeycomb 90° (Included)



### **GFR-V6**

VistaBeam 600 Gel Frame (Included)

### **GFR-V3**

VistaBeam 300 Gel Frame (Included)

## True Match® Lamps



### **964-K29**

96W Kino KF29 (Twin)

### **964-K32**

96W Kino KF32 (Twin)

### **964-K55**

96W Kino KF55 (Twin)

# VistaBeam 600 Center Mount Kits



## **KIT-V6C-120**

VistaBeam 600 DMX Center Kit, 120VAC

## **KIT-V6C-230**

VistaBeam 600 DMX Center Kit, 230VAC

### **Kit Contents:**

- 1 VistaBeam 600 DMX Center Mount
- 1 VistaBeam Louver 90°
- 1 Ship Case

### **Dimensions**

41.5 x 15.5 x 44"  
(105.5 x 39.5 x 112cm)

### **Weight**

140lb (63kg)



## **KIT-V6C-120/2**

VistaBeam 600 DMX Center Mount Kit,  
120VAC (2-Unit)

## **KIT-V6C-230/2**

VistaBeam 600 DMX Center Mount Kit,  
230VAC (2-Unit)

### **Kit Contents:**

- 2 VistaBeam 600 DMX Center Mount
- 2 VistaBeam Louver 90°
- 1 Ship Case


### **Dimensions**

41 x 27 x 44"  
(102.5 x 67.5 x 112cm)

### **Weight**

205lb (93kg)

# VistaBeam 300 Center Mount Kits

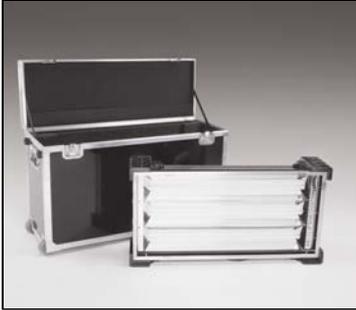

## **KIT-V3C-120**

VistaBeam 300 DMX Center Kit, 120VAC

## **KIT-V3C-230**

VistaBeam 300 DMX Center Kit, 230VAC

### **Kit Contents:**

- 1 VistaBeam 300 DMX Center Mount
- 1 VistaBeam Louver 90°
- 1 Ship Case

### **Dimensions**

42 x 14.5 x 25.5"  
(107 x 37 x 65cm)

### **Weight**

82.3lb (37kg)

## Inserting Lamps



1) Open the two hinged reflector panels. 2 & 3) Insert the lamp base into the lamp connector. 4) Insert the lamp tip into the lamp clip. Close the reflector panels.

## Inserting Gel Frame



Align the pins of the Gel Frame with the **inner** (closest to lamps) holes of the Accessory Holder. Pull back the pins and release into the holes to secure the gel frame.


## Applying Gel to Frame



**A)** The Gel Frame comes with Gel Clips. Cut the gel to size and use the Clips to fasten the gel to the Frame.

**B)** Another method is to apply transfer tape directly to the gel frame. The clips are not necessary when taping the gel.

## Inserting Louver

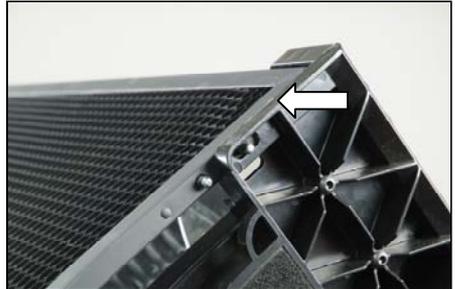

Align the pins of the louver with the **outer** (farthest from lamps) receptacle holes on the Accessory Holder. Pull back the pins and release into the hole to secure the louver.

## Mount Option / Rope Hang




The large holes on the Accessory Holder can be used as rigging points; for example, a 4 point rope hang.

## VistaBeam Center Mount



The **VistaBeam Center Mount** includes a Center Mount Assembly (**MTP-V63C**) and a Junior Stand Adapter (**MTP-V63JR**) which can be mounted onto a junior stand.

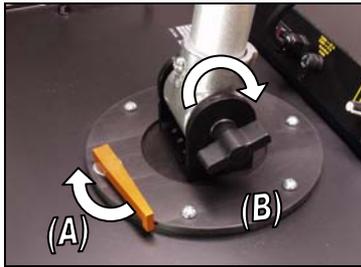

### Center Mount Rotation and Tilt Controls

- A) The gold lock lever controls the rotation of the fixture.
- B) The black knob controls the tilt.

## Center Mount Hanging Adapter



The **VistaBeam Center Mount** can also hang from a junior pipe hanger using a Hanging Adapter (**MTP-V63H1**), sold separately.



Remove the Junior Pin (**MTP-V63JR**) and attach the Hanging Adapter. It is held in place by a safety screw and a setscrew. A lock knob adjusts rotation of the arm.

## Center Mount Speed-Rail Rigging



The Mount fittings are U.S. industry standard “Speed Rail” 1 ¼” fittings. They accept a 1 5/8” outside diameter pipe.

These fittings enable custom frames to be constructed for special rigging applications such as multiple fixture hangs.

## VistaBeam Yoke Mount



The yoke has a ½” hole to accept industry standard hardware.

The **VistaBeam 600 and 300 Yoke Mount** fixtures can hang from a junior pipe hanger using a Yoke Junior Pin (**MTP-I80**), sold separately.



**MTP-I80** Yoke Junior Pin

## VistaBeam Pole-Op Mount



The **VistaBeam 600 and 300 Pole-Op Mount** fixtures include a yoke with an attached junior pin.

They can be hung from a grid with a junior pipe hanger.



Junior pin attached to Pole-Op Yoke


## Operating Pole-Op



The **Blue** cup alters the **Pan** (left or right).

The **White** cup alters the **Tilt** (up or down).

# VistaBeam DMX Control Panel

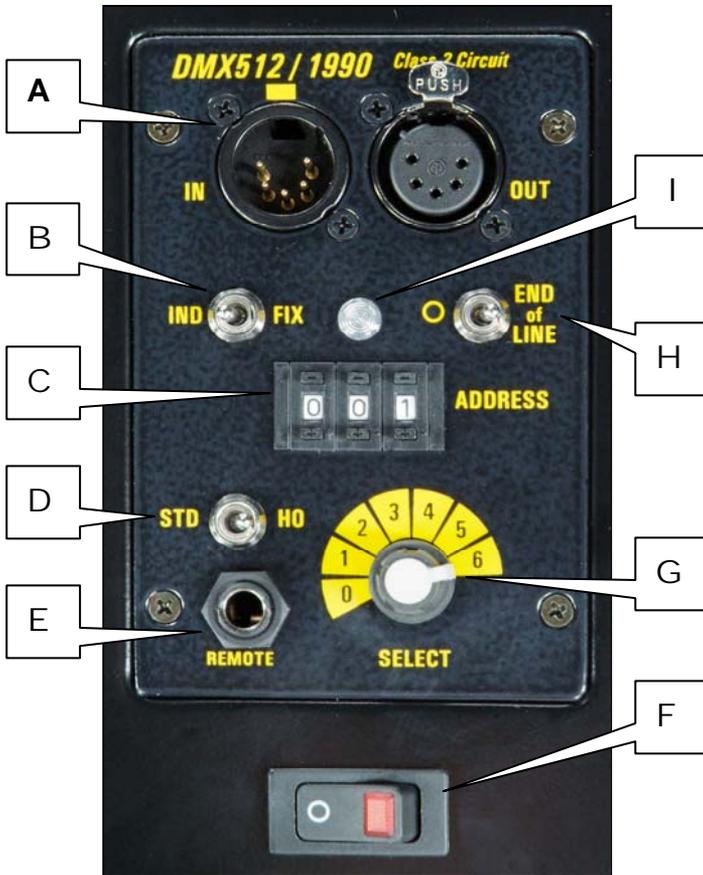

- A) **DMX-In & DMX-Out:** DMX-IN receives DMX signals from Dimmer Board. DMX-OUT relays DMX signal through to other Fixtures or Instruments.
- B) **Individual Lamp / Fixture Switch:** Converts between INDIVIDUAL LAMP and FIXTURE methods of DMX control.
- C) **DMX Address:** Sets DMX Address of Fixture.
- D) **STD/HO Switch:** **STD** operates lamp in standard output mode. **HO** operates Lamps in High Output mode.
- E) **REMOTE Input Jack:** Input for **DIM-5** remote controller

- F) **Power Switch:** Has a built-in indicator light, which can detect if AC power is present in power cord. "O" = OFF position
- G) **Manual SELECT Dial:** Turns lamps on and off manually without connecting DMX Cable to Fixture.
- H) **END of LINE Switch:** Terminates DMX signal at the end of Fixture series.
- I) **DMX Indicator Light:** Lights up Amber when valid DMX signal is present.

**IMPORTANT!**

The dimmer board/light console should have its channel set to LINEAR light output response. (LINEAR response is the default setting on most dimmer boards.)

## Power & Fuse Requirements



**POWER**

Provide 120VAC or 230VAC depending on model. Do not dim the fixture through a dimming circuit. If powering the fixtures through a dimmer board, set the dimmer profile to non-dim.

**FUSE**

Provides circuit protection. *Note: If Fuse is "blown" or "open" replace with same type of fuse rating as marked.*

**Load Considerations:**

The Kino Flo ballasts used in the VistaBeam are not power factor corrected. They will draw double the current on the neutral from what is being drawn on the two hot legs. On large installations it may be necessary to double your neutral run so as not to exceed your cable capacity.

# Manual Operation


The VistaBeam DMX fixture may be operated manually with the Manual Lamp Selector Dial. The Dial enables you to turn lamps on and off with an “inside-out” pattern (i.e., if all lamps are on, the outside tubes will turn off first).

**Note:** Manual lamp switching is disabled as soon as DMX cables are applied.

## VistaBeam 600 Switching




**SELECT**

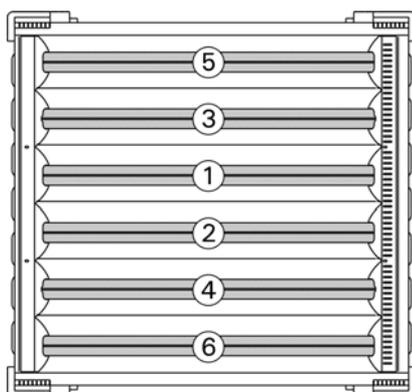

## VistaBeam 300 Switching



**SELECT**

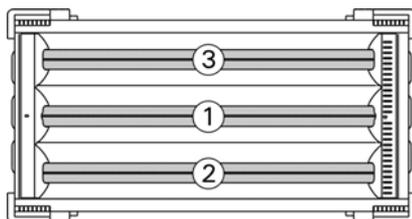

**STD** operates lamps in Standard Output mode.  
**HO** operates lamps in High Output mode.



Lamps can be controlled manually through a hand held remote controller (**DIM-5**). For **Manual Remote Lamp Control** plug in the accessory **DIM-5**. Rotating the dimmer knob turns lamps on and off in sequence.

# DMX Operation



## DMX Addressing

Push the tabs above or below the number window to set the address. (Valid addresses range from 001 to 512.) The yellow light above the address block will illuminate if a DMX signal is present.

**Tip:** Power is not required to set DMX addresses. Therefore, DMX addresses can be set for each fixture prior to hanging.

After the DMX address is entered, the VistaBeam 600 Fixture automatically assigns 7 addresses to lamp positions 1–6 and address 7 controls the **STD/HO** setting.

**Note:** Manual lamp switching is disabled as soon as the DMX cables are applied. For Manual control with DMX cables plugged in, set address to “000”. There is a 5 second delay when switching between DMX and Manual control.

**NOTE: If a Fixture or Ballast loses its DMX signal it will hold its last DMX command.** For this reason it is important to turn a Fixture or Ballast off using the DMX commands.

For example, if you try to turn off the lights by turning off the dimmer board the lights will remember their last DMX command and stay on. The Fixtures or Ballasts require a DMX “Off” or “Black-out” command in order to turn off.



The **END of LINE** switch must be set to open ( **O** ) on Fixtures within the DMX chain.

Set to closed (**END of LINE**) when the Fixture is the last DMX controlled device in the chain.

*Note: When the last Fixture's DMX Term is set to "1", it will absorb all energy in the DMX line, ensuring DMX signals are transmitted correctly. If a signal is not terminated, it is called a "Reflected Wave", and may create transmission errors by causing valid DMX signals to be canceled.*



Any theatrical lighting board with DMX512 protocol can be used to individually turn **on/off** lamps in a Fixture.

VistaBeams can be jumpered using the IN and OUT ports. As many as 100 Fixtures can be jumpered on one chain as long as the DMX cable run remains under 1000 feet or 40 x 25ft DMX cables.

**Note:** When operating Fixtures at great distances from the dimmer board it is recommended to use Opto-Isolators to provide DMX signal amplification.



### DMX Cables

Cable must comply with EIA-485 (RS485).

The Fixture uses five-pin XLR male and female connectors to receive DMX signals from the Dimmer Board and jumper the Fixtures in a series. DMX pin-out wiring follows the USITT DMX512 standard:

- Pin 1: Shield**
- Pin 2: Data -**
- Pin 3: Data +**
- Pin 4: Spare -**
- Pin 5: Spare +**

*Note: Pin four and five in the Fixture are connected internally as Pin four to four and Pin five to five. Connecting Pin four and five as the pass-thru allows secondary data to be passed through for other equipment.*

## Fixture Mode



Setting the unit to "FIX" mode allows the user to re-create the "Inside-Out" pattern of the manual switch.

One of the best applications for the **Fixture** mode is when lighting Blue and Green Screens or large Cycloramas.

*For example:* One row of fixtures can be set to **Fixture** mode on a common address. When the fader on the dimmer board is brought up or down all the Fixtures on that address will have the same lamps turned on.

**Addressing:** In **Fixture** mode selecting the base address automatically assigns the 7<sup>th</sup> address (in VistaBeam 600) to control the **STD/HO** setting. For example, setting 001 as the first address automatically assigns address 007 as the control address for the **STD/HO** setting. Not assigning the 7<sup>th</sup> address results in the fixture operating at the **HO** setting.


For the sake of simplification, it is advisable to select address sequences such as 10, 20, 30, 40 and so on. This also allows the operator to change from **Fixture** mode to **Individual Lamp** mode without readdressing the fixtures. Never assign the 7<sup>th</sup> address to a new fixture. In the VistaBeam 300 every 4<sup>th</sup> address controls the **STD/HO** setting.

### Dimmer level - Lamp response

Sliding the fader on the dimmer board from 0 ~ 100 controls the number of lamps that are on within a fixture.


Note: the lamps may respond  $\pm 4$  channel levels, depending on the dimmer board.

### VistaBeam 600 Lamp Sequence

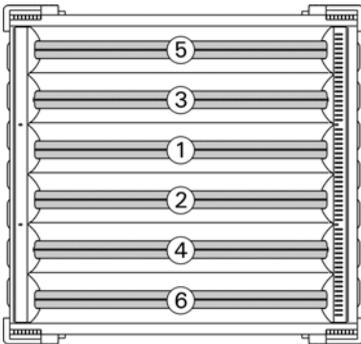

DMX Address # 001	
Lamp #	Dimmer Level
Lamp 1	6
Lamp 1~2	19
Lamp 1~3	32
Lamp 1~4	45
Lamp 1~5	57
Lamp 1~6	95
DMX Address # 007	
HO	0
STD	50

## VistaBeam 300 Lamp Sequence

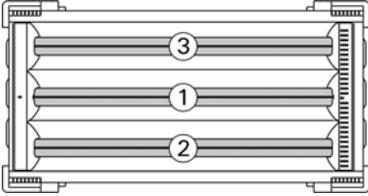

DMX address # 001	
Lamp #	Dimmer Level
Lamp 1	6
Lamp 1~2	50
Lamp 1~3	95
DMX address # 004	
HO	0
STD	50



The VistaBeam 600's 7<sup>th</sup> DMX address controls the **STD/HO** function. The VistaBeam 300's 4<sup>th</sup> DMX address controls the **STD/HO** function.

Programming the **STD/HO** address at full dimmer setting activates the **STD** setting. Not using this address or programming a dim setting under 50% will activate the **HO** setting.


## Individual Lamp Mode

Setting the unit to **Individual Lamp** mode allows each lamp position within the fixture **Sequence** to have its own address. Although this option will use up a lot of addresses, it may be preferable for certain situations. The **Individual Lamp** mode is useful in achieving light effects like flickering, chasing or creating light patterns.

After the DMX address is entered, the VistaBeam 600 automatically assigns 7 addresses to lamp positions 1-6 and the 7<sup>th</sup> address controls the **STD/HO** settings. For the sake of simplification, it is advisable to select address sequences in groups of 10 for VistaBeam 600 & VistaBeam 300 such as 10, 20, 30, 40 and so on.


For example, if the VistaBeam base address is set at 001, the configurations below will provide lamps individually addressable through DMX512.

**VistaBeam 600 Lamp Sequence**

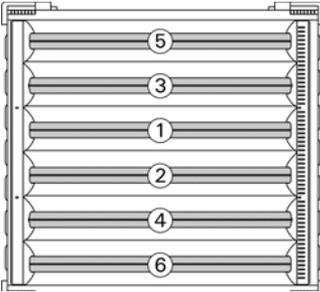

VistaBeam 600 Address Sequence	
DMX Address = 001	
Lamp #	DMX Address
Lamp 1	1
Lamp 2	2
Lamp 3	3
Lamp 4	4
Lamp 5	5
Lamp 6	6
STD/HO	7

**VistaBeam 300 Lamp Sequence**

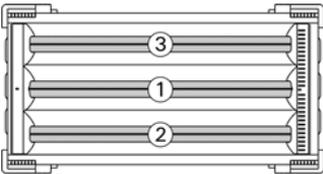


VistaBeam 300 Address Sequence	
DMX Address = 001	
Lamp #	DMX Address
Lamp 1	1
Lamp 2	2
Lamp 3	3
STD/HO	4

# Accessories & Parts




**DIM-5**  
Remote Lamp Selector

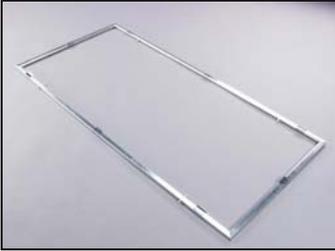

**GFR-V6**  
VistaBeam 600 Gel Frame

**GFR-V3**  
VistaBeam 300 Gel Frame

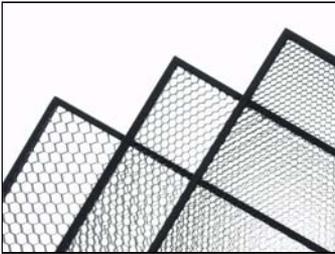

**LVR-V345** VistaBeam 300 Louver 45°  
**LVR-V360** VistaBeam 300 Louver 60°  
**LVR-V390** VistaBeam 300 Louver 90°

**LVR-V645** VistaBeam 600 Louver 45°  
**LVR-V660** VistaBeam 600 Louver 60°  
**LVR-V690** VistaBeam 600 Louver 90°



**MTP-V63C**  
VistaBeam 63 Center Mount Assembly



**MTP-V63H1**  
VistaBeam 63  
Center Hanging Adapter (28mm)



**MTP-V63JR**  
VistaBeam 63  
Center Junior Adapter (28mm)



**MTP-I80**  
Yoke Junior Pin (28mm)



**XLR-515**  
DMX Cable 5 Pin XLR, 15ft

**XLR-525**  
DMX Cable 5 Pin XLR, 25ft

## True Match® Lamps



**964-K29**  
96W Kino KF29 (Twin)  
**964-K32**  
96W Kino KF32 (Twin)  
**964-K55**  
96W Kino KF55 (Twin)

# Cases



**KAS-V61**



**KAS-V62**



**KAS-V31**

Part Number	Description	Dimensions	Weight (Empty)	Holds
<b>KAS-V61</b>	VistaBeam 600 Center Ship Case	41.5 x 15.5 x 44" (105.5 x 39.5 x 112cm)	94 lb (42.3 kg)	VistaBeam 600 (1) Louver (2)
<b>KAS-V62</b>	VistaBeam 600 Center Ship Case (2)	41 x 27 x 44" (102.5 x 67.5 x 112cm)	122 lb (55 kg)	VistaBeam 600 (2) Louver (4)
<b>KAS-V31</b>	VistaBeam 300 Center Ship Case	42 x 14.5 x 25.5" (107 x 37 x 65cm)	55 lb (24.8 kg)	VistaBeam 300 (1) Louver (2)
<b>KAS-VL8</b>	VistaBeam 8-Lamp Ship Case	38 x 14 x 7" (96.5 x 35.6 x 17.8cm)	13.4 lb (6 kg)	VistaBeam Lamps (8)
<b>KAS-VL8-C</b>	VistaBeam 8-Lamp Travel Case	37 x 7.5 x 14" (94 x 19.1 x 35.6cm)	13lb (5.9kg)	VistaBeam Lamps (8)

# Fixture Specifications



**VistaBeam 600  
Center Mount**

**Model: VIS-6C**  
**VistaBeam 600 DMX Center Mount**

**Power Requirements:** 120VAC or 230VAC  
**Amperage:** 9.1 amps at 120VAC  
4.6 amps at 230VAC  
**Weight w/ lamps:** 46.6lb / 21kg  
**Dimensions:** 37.5 x 36 x 8.5"  
(95.5 x 91.5 x 21.5cm)  
**Remote Lamp Select:** Phono jack input for  
Remote Control  
**Switching:** 1-6  
**Lamp type:** 96W CFL



**VistaBeam 300  
Center Mount**

**Model: VIS-3C**  
**VistaBeam 300 DMX Center Mount**

**Power Requirements:** 120VAC or 230VAC  
**Amperage:** 4.8 amps at 120VAC  
2.4 amps at 230VAC  
**Weight w/ lamps:** 28.6lb / 12.9kg  
**Dimensions:** 37.5 x 20 x 8.5"  
(95.5 x 51 x 21.5cm)  
**Remote Lamp Select:** Phono jack input for  
Remote Control  
**Switching:** 1-3  
**Lamp type:** 96W CFL



**VistaBeam 600  
Yoke Mount**

**Model: VIS-6Y  
VistaBeam 600 DMX Yoke Mount**

**Power Requirements:** 120VAC or 230VAC  
**Amperage:** 9.1 amps at 120VAC  
4.6 amps at 230VAC  
**Weight w/ lamps:** 47.5lb / 21.4kg  
**Dimensions:** 41.5 x 39.5 x 8.5"  
(105.5 x 100.5 x 21.5cm)  
**Remote Lamp Select:** Phono jack input for  
Remote Control  
**Switching:** 1-6  
**Lamp type:** 96W CFL



**VistaBeam 300  
Yoke Mount**

**Model: VIS-3Y  
VistaBeam 300 DMX Yoke Mount**

**Power Requirements:** 120VAC or 230VAC  
**Amperage:** 4.8 amps at 120VAC  
2.4 amps at 230VAC  
**Weight w/ lamps:** 28.6lb / 12.9kg  
**Dimensions:** 41.5 x 24.5 x 8.5"  
(105.5 x 62.2 x 21.5cm)  
**Remote Lamp Select:** Phono jack input for  
Remote Control  
**Switching:** 1-3  
**Lamp type:** 96W CFL



**VistaBeam 600  
Pole-Op Mount**

**Model: VIS-6P  
VistaBeam 600 DMX Pole-Op Mount**

**Power Requirements:** 120VAC or 230VAC  
**Amperage:** 9.1 amps at 120VAC  
4.6 amps at 230VAC  
**Weight w/ lamps:** 47.5lb / 21.4kg  
**Dimensions:** 41.5 x 39.5 x 8.5"  
(105.5 x 100.5 x 21.5cm)  
**Remote Lamp Select:** Phono jack input for  
Remote Control  
**Switching:** 1-6  
**Lamp type:** 96W CFL



**VistaBeam 300  
Pole-Op Mount**

**Model: VIS-3P  
VistaBeam 300 DMX Pole-Op Mount**

**Power Requirements:** 120VAC or 230VAC  
**Amperage:** 4.8 amps at 120VAC  
2.4 amps at 230VAC  
**Weight w/ lamps:** 29.5lb / 13.4kg  
**Dimensions:** 41.5 x 24.5 x 8.5"  
(105.5 x 62.2 x 21.5cm)  
**Remote Lamp Select:** Phono jack input for  
Remote Control  
**Switching:** 1-3  
**Lamp type:** 96W CFL

For latest Warranty information and Certifications,  
see Kino Flo website at [www.kinoflo.com](http://www.kinoflo.com).

**Environmental: Disposal of Old Electrical & Electronic Equipment.**



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. This product is made of recyclable materials and should be disposed of in accordance with local and state regulations.