

Kareme PT01

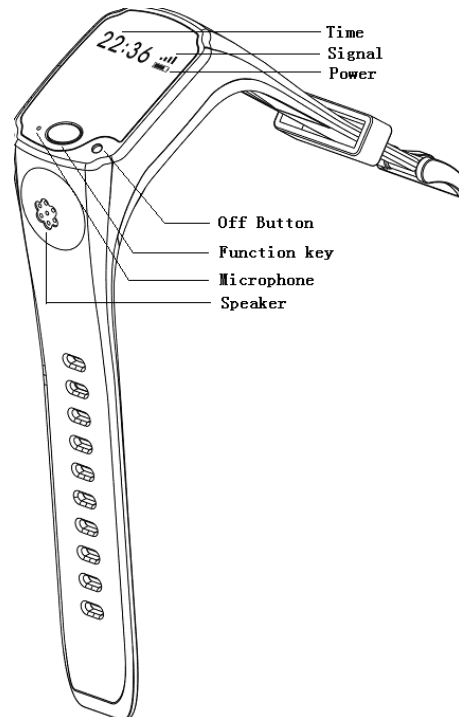
User Manual of TBIT Smart Kids' Watch

(Version 1.2)



Please carefully read this manual before use to ensure proper installation and use. Please refer to the actual product if any change in appearance or color!

I. Product Appearance


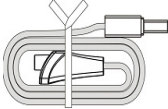
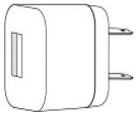




II. Quick Start

1. Properly install the SIM card and the battery of the smart watch first.
2. Time will be displayed on screen after long pressing the Function key for 3 seconds.
3. Download mobile APP:
The guardian may use a smart phone to scan the QR code on PT01 package or directly access to www.tbit.com.cn to download the APP corresponding to your phone operating system through clicking APP Center and Kareme Login, and then install it.

4. Register and bind with smart watch:
Register after installation and then bind with your smart watch.
5. Use:
After logging, in the main interface of APP in your phone, the guardian may check the information of watch wearer in position, historical track and alarm and also enable the intercom.

III. Components

		
Watch	Charging Cable	Charger
		
Exclusive Screwdriver	User Manual	

IV. Technical Parameters

1. GPS Performance

Tracking sensitivity: < -160dBm
 Start-up time: 35 seconds for cold start and 2 seconds for warm start
 Location accuracy: 5m
 Accuracy of speed: 0.3m/second

2. GSM Performance

Frequency: GSM 850/900/1800/1900MHz

3. Main Technical Parameters of Watch







Overall dimension: 40mm×31mm×14.5mm (exclusive of watchband)



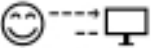


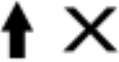

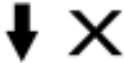
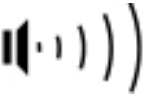
Battery capacity: 400mAh



Working temperature: -20°C ~ +70°C

Working humidity: 20% ~ 95%

V. Description on Icon Functions

Icon	Meaning
	Boot screen
	Battery indicator
	Animated icon when charging
	GSM signal strength indicator
	GPRS connection failure
	No SIM card detected.

	Animated icon when recording
	Recording failed
	Watch is connecting to the server.
	Voice is uploading.
	Voice uploading completed.
	Voice uploading failed.
	Downloading a voice from server
	Voice download failed.
	Voice playing

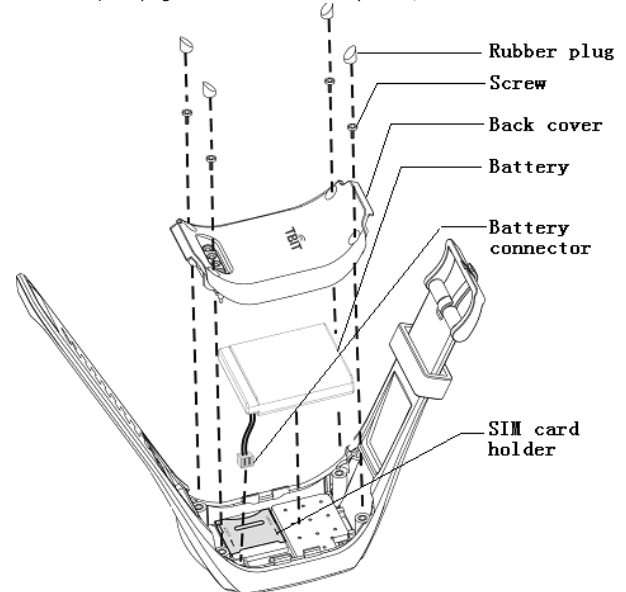
	Unread voice message prompt
	Voice play failed

VI. SIM Card and Battery Installation Instructions

SIM card and the battery have been properly installed when delivering from factory. Only disassemble it when you need to replace the SIM card.

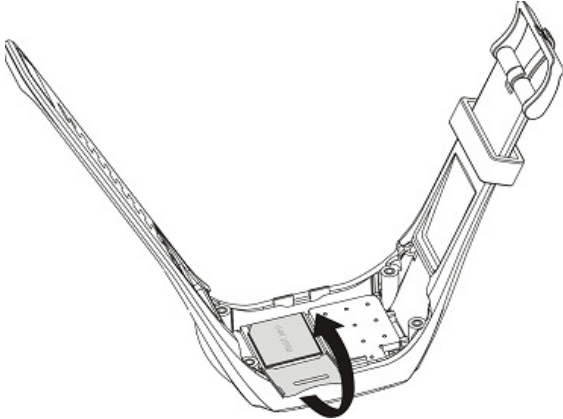
1. Open the back cover

- 1) Remove the rubber plug;
- 2) Unscrew the screws;
- 3) Remove the back cover;
- 4) Unplug the connector from battery holder;



2. Install the SIM card

- 1) Be sure the battery has been removed;
- 2) Insert the SIM card (Micro SIM card only) according to the direction of the card gap;
- 3) Fasten the buckle of the SIM card;



3. Install the back cover

- 1) Be sure the SIM card is properly installed;
- 2) Insert the battery cable into the battery holder properly;
- 3) Secure the back cover;
- 4) Tighten the screws;
- 5) Install well the rubber plug.

VII. Instructions for Charging

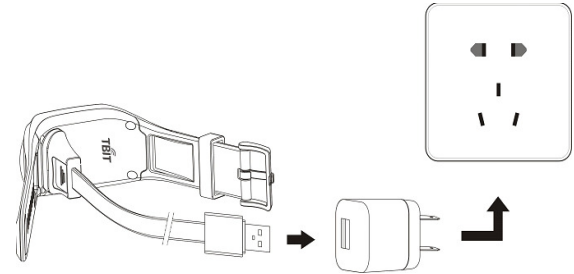
1. Low power


You need to charge your smart watch with the charging cable when you see the


low power icon  is flashing.

2. Charging

- 1) The right charging wiring diagram is as shown below;




2) After connection with the charging cable, the animated charging icon  20% flashes on watch screen;

3) When fully charged, the icon will turn into  100%.


VIII. Instructions for Use

1. Boot


After long pressing the Function key for 3 seconds, the smart watch will start up and present the boot animation (if failure, please charge it first with the charger).

Please check the installation of the SIM card if an icon  appears on screen when booting.


2. Display the time

 
The system enters the main interface after booting, with the time, signal and battery power displayed on screen. To save power, the screen will be off automatically in 10 seconds. If you want to look at the time, please short press the Function key and then the current time **22:36**  (the time when you press the key) will be displayed on screen.

3. Intercom

An animated recording icon  appears after long pressing the Function key for 3 seconds, then, you may start recording. After releasing the Function key, the watch will automatically upload your voice to server. The recording can last for 15 seconds at most. If it exceeds 15 seconds, the watch will stop recording and then automatically upload the completed 15-second voice to server. After successful uploading, you may continue to record.

4. Play a voice

If an envelope icon  appears on screen, it indicates there is a voice message.

To play it, please press the Function key. 

5. Report positions on time

The smart watch will automatically report GPS positions and tracks of the wearer at 4 set points of time every day by default, and the guardian can set the time

interval in which the GPS works with mobile APP.

6. Automatic alarm

1) Low power alarm

Indicate that the watch's battery is in low power.

2) Alarm on entry or exit of area

Indicate that the wearer enters or leaves a designated area within the set time.

7. Online inquiry

To visit TBIT website:

<http://www.tbitt.com.cn>

Click App Center and then Kareme Login;

Type in your account and password on the login interface:

Account: the guardian's mobile number

Password: the password set by the guardian

8. Operation of mobile APP

You may download Android or iPhone App on the Kareme login interface or through scanning the QR code.

After downloading and installation, you need to register an account in first use.

After registration, type in your account name and password to log in. The guardian may check the information of watch wearer in position, historical track and alarm and also can enable the intercom.

Notice: see the instructions for Use of Smart Kids' Watch Android APP for instructions of using the mobile APP.




9. Power off

To power off the watch, use a sharp object to press the concaved key in the lower right corner of watch screen for 3 seconds.

IX. Attentions

- When installing this watch, be sure to remove the battery first and then insert or remove the SIM card, or the watch will not work normally.
- Please don't swim with the watch as it is not allowed to be immersed in water, although it is water resistant. It will be damaged if any water penetrating into it. Damages arising from water penetration will be exclusive of the warranty by TBIT.
- Please don't use the watch under high temperature.
- The SIM card used in the watch is small-sized, and the large ones are not supported.
- The watch supports GSM card only, that is, cards issued by China Mobile and China Unicom. CDMA card issued by China Telecom is unavailable.
- The charger attached to the watch is exclusive, and TBIT will not be responsible for damages arising from improper use of the charger.

X. Common Troubles

Trouble	Solutions
Abnormalities	a) The SIM card is in arrear. Solution: recharge your SIM card to guarantee sufficient balance. To know if your SIM card is in arrear, you may dial the mobile number shown inside your watch and then operate following the voice prompt.
	b) Delay in message sending Solution: the delay in sending message will occur occasionally due to SMS jams arising from busy GSM network, which is normal. You may wait for a moment or try again.
	c) The SIM card isn't properly installed. Solution: if the SIM card icon  flashes on watch screen, it indicates the SIM card is installed improperly. So please power off the watch and then remove the battery and reinsert the SIM card. Notice: never hot plug the SIM card, or the SIM card or the watch will be damaged.
	d) Failure of connection to Internet Solution: if an icon  appears on watch screen in first use, please contact the operator to confirm if the SIM card has enabled its GPRS wireless Internet access.
	e) Failure of uploading a voice Solution: if an icon  appears when uploading a voice, it indicates the watch is under a poor GPRS wireless network access and you need to record and upload again.

Warranty Card (Side A)

Important Statements:

- The techniques of the watch could be amended at any time in the future without prior notice.
- Please refer to the actual product if any change in product appearance and color.
- The warranty card is only applicable to the product with a serial number shown below.
- Please properly keep this warranty card which, together with the original receipt of purchase, must be presented when warranty service is requested.
- Please see the contents on the warranty card (side B) for details of warranty scope.

This card is the basic voucher of warranty. Please fill it clearly and keep it properly.

User Name		Tel.	
Address			
Product Type		Product No.	Serial No.
Date of Purchase		Place of Purchase	of
Local Sales Outlet			
Local After-sales Service Hotline			
Customer Service Tel.	石小姐 15013660281		

Warranty Card (Side B)

Description on Scope of Warranty:

1. The watch and its accessories without troubles from artificial damage are guaranteed for one year and three months respectively since the date of purchase.
2. The watch will not be guaranteed in either of the following cases, but the paid maintenance is available:
 - 1) Out of the warranty period;
 - 2) Damages caused due to unauthorized disassembly or maintenance by TBIT;
 - 3) Troubles arising from immersion of watch into water, dropping to the ground or the burned printed circuit board;
 - 4) Loss caused due to improper installation, use, maintenance or storage;
 - 5) The serial number or warranty label is torn off or indefinable;
 - 6) The information on warranty card is not consistent with product type or is altered;
 - 7) Damages caused due to force majeure.

Product Certificate

Inspector : _____

Date : _____