

Chapter I: Product structure

Preview/Volume –

Press momentarily: TF card mode, play last one mp3/wma/wav file;

AUX mode: invalid

Press & Hold: decreases the volume

Pause/Play

Press momentarily: TF card mode: play or pause; AUX mode: mute

Press & Hold: TF card mode: change folders; /AUX mode: invalid

Next/Volume+

Press momentarily: TF card mode: play next one mp3/wma/wav file; AUX mode: invalid

Press & Hold: increase volume

- **Turn off/MP3/FM**
- **TF card slot**
- **AUX port**
- **MINI-USB port**

Chapter II: Specifications

Category	Item	Description
Audio	Speaker unit	40mm
	Rated Power	3W
	Response frequency	100Hz~18KHz
	S/N	S/N≥85 dB
	RATED IMP	4 OHM
	THD	THD≤10%
Music	File Format	MP3、WAV、WMA
Saving Device	Type	TF (Micro SD) card
	Data Transfer	Via USB cable
Power	Type	Built-in Lion battery
	Rated Power	3.7V
	Voltage	4.2V
Interface	AUX input	3.5mm port
	MIC input	3.5mm port
	DC-IN input	Mini USB
Spec	Gift box Size	125mm*80mm*75mm
	Speaker Size	Φ65mm*66mm
	Speaker Weight	183.5g

Chapter III: Packing accessories

Package including

- ECHO Speaker: 1 pc
- User manual: 1 pc
- USB power cable: 1 pc
- 3.5mm Aux cable: 1 pc

Chapter IV: Indicator Light

There are 4 kinds OF Indicator Light Mode: red, blue, green and off

4.1 Red shows battery Situation

Constant: Recharging

Blinking: Low power, need to recharge

Disappeared: Battery full

4.3 Green shows TF card situation

Constant: TF card mode

Blinking slowly: playing mp3/wma/wav files

Blinking quickly: increase/decrease volume

Chapter V: Battery Description

5.1 Caution

- The first 3 times, please recharge for 10 hours; After that recharge 6 hours is enough

5.2 Energy Saving

If there is No activity for 60 seconds, the speaker will enter into energy saving mode and the indicator light will turn off.

When Insert TF card, connect AUX cable or press any key, it will go back to work situation

Chapter VII:TF card

7.1 TF Music Play

Insert the TF card, turn on the speaker, it will play mp3/wma/wav files in the card automatically

Chapter VIII: AUX input

AUX input

Whatever task the speaker is performing, it will carry out the latest task. So when you insert AUX cable, it will stop to carry out AUX task!

Data Transfer

Keep the speaker Turned, connect it to PC via USB cable, then you can copy the music files to the TF card in your speaker directly and you can delete files from TF card directly

RHYTHMZTM