



**Avaya Integrated Management
Release 5.0**
Software Update Manager

14-300168
Issue 6
January 2008

© 2008 Avaya Inc.
All Rights Reserved.

Notice

While reasonable efforts were made to ensure that the information in this document was complete and accurate at the time of printing, Avaya Inc. can assume no liability for any errors. Changes and corrections to the information in this document may be incorporated in future releases.

For full legal page information, please see the complete document, Avaya Legal Page for Software Documentation, Document number 03-600758.

To locate this document on the website, simply go to <http://www.avaya.com/support> and search for the document number in the search box.

Documentation disclaimer

Avaya Inc. is not responsible for any modifications, additions, or deletions to the original published version of this documentation unless such modifications, additions, or deletions were performed by Avaya. Customer and/or End User agree to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation to the extent made by the Customer or End User.

Link disclaimer

Avaya Inc. is not responsible for the contents or reliability of any linked websites referenced elsewhere within this documentation, and Avaya does not necessarily endorse the products, services, or information described or offered within them. We cannot guarantee that these links will work all of the time and we have no control over the availability of the linked pages.

Warranty

Avaya Inc. provides a limited warranty on this product. Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this product, while under warranty, is available through the following website:

<http://www.avaya.com/support>

Copyright

Except where expressly stated otherwise, the Product is protected by copyright and other laws respecting proprietary rights. Unauthorized reproduction, transfer, and or use can be a criminal, as well as a civil, offense under the applicable law.

Avaya support

Avaya provides a telephone number for you to use to report problems or to ask questions about your product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya website:

<http://www.avaya.com/support>

Contents

Preface	7
The Purpose of This Manual	7
Who Should Use This Manual.	7
Organization of This Manual	7
Chapter 1: Introduction	9
Avaya Software Update Manager Overview	9
Using Avaya Software Update Manager	10
The User Interface	11
Toolbar	12
View Tabs	13
Dialog Area.	13
Status Line	13
Using Tooltips	14
Using Avaya Software Update Manager Help	14
Opening the Help to the Contents Page	15
Opening the Help to a Topic of Interest	15
What's New in This Release.	15
Chapter 2: Getting Started	17
Starting Avaya Software Update Manager	17
Defining Website Download Parameters	18
Defining Download Intervals	19
Defining Server Proxy Settings	19
SFAP Login Parameters	20
Chapter 3: The Targets Table	21
Targets Table Views	21
Gateways, Data Switches, and Circuit Packs View	22
IP Phones View	22
CM Software Management View	22
Status Icons	23
The Gateways, Data Switches, and Circuit Packs Targets Table	24
The IP Phones Targets Table	25
The CM Software Management Targets Table	26
Sorting the Targets Table	27
Customizing the Targets Table	28
Filtering the Targets Table.	29

Contents

Filtering the Targets Table - Gateways, Data Switches, and Circuit Packs View	29
Filter Criteria - Gateways, Data Switches and Circuit Packs View	30
Filtering the Targets Table - IP Phones View	31
Filter Criteria - IP Phones View	33
Filtering the Targets Table - CM Software Management View	33
Filter Criteria - CM Software Management View	35
Filtering by Device Type.	36
Printing the Targets Table	36
Saving the Targets Table	36
Chapter 4: Detecting Targets	37
Starting the Detection Process	37
Detecting All Targets	38
Detecting New Targets.	39
Updating Information for Selected Targets (Refresh)	39
Detecting Targets Using Filters	40
Using Wildcards and Ranges in an IP Address	41
Chapter 5: The Log File	43
Viewing the Log	43
Saving the Log	44
Clearing the Log	44
Closing the Log	44
Chapter 6: The ASCA Reporting Tool	45
Avaya Software Compatibility Audit Report Overview	45
Downloading and Installing the Inventory Collection Script (R2.x and R3.x) . . .	46
Downloading the Service Pack to your Computer.	46
Copying the Service Pack to the Communication Manager	47
Installing the Service Pack onto the Communication Manager	49
Setting up a Telnet Session for accessing the CLI	49
Setting up a secure shell (SSH) for accessing the CLI	49
Installing the Service Pack	51
Running the Inventory Script on the Communication Manager	52
Downloading the Inventory File to your Computer	53
Generating and Filtering an ASCA Report	53
Filtering the ASCA Report.	54

Chapter 7: Downloading Software to Targets	55
Download Files Overview	55
Configuring Software Libraries	56
Defining a Remote Software Library	57
Software Libraries Parameters	58
Viewing Files Available to Download.	59
Adding, Editing, or Deleting a File	60
Configuring Download Parameters	61
Download Parameters	62
Configuring the Media Server Software Repository.	64
Media Server Release Management	65
Managing Software Releases	65
Media Server Operations	66
Media Server Updates	66
Media Server License and Authorization Files	68
Downloading	69
The Download Process - Gateways, Data Switches, and Circuit Packs View	69
The Download Process - CM Software Management View	70
Upgrades and Updates to the Communication Manager	71
Upgrading or Updating Media Server Releases	71
Installing a CM Service Update	72
Installing a Platform/Security Update	73
Assigning License and Authentication Files	73
Viewing Assigned License and Authentication Files	74
Assigning License and Authentication Files to a Device	74
Adding a file to the License & Authentication Files Table	74
Deleting Files From the License & Authentication Files Table	75
Download Process Status Messages.	75
Scheduling Downloads	77
Opening the Schedule Download Dialog Box	77
Viewing Schedule Download Information	78
Scheduling Software Downloads	79
Cancelling A Scheduled Download.	80
Resetting Modules.	81
Setting Product Defaults	82

Chapter 8: Analyzing and Retrieving from the Web. 85

 Requirements for Retrieving Software from the Web 85

 Performing Web Analysis 86

 Retrieving New Versions from the Web 86

 Manually Adding Files. 90

Chapter 9: Managing IP Phone Software 93

 The IP Phones Interface. 94

 Downloading Software 95

 Downloading Software to Selected Devices 96

 Viewing Log Files 98

 Importing Files to the Local Software Library 98

Appendix A: Remote Library Index File 101

Appendix B: Menus 103

 File Menu 103

 Edit Menu. 103

 View Menu 104

 Actions Menu 104

 Tools Menu 105

 Help Menu 105

Appendix C: Troubleshooting 107

Index 109

Preface

This chapter provides an introduction to the structure and assumptions of this manual. It includes the following sections:

- [The Purpose of This Manual](#) - A description of the goals of this manual.
- [Who Should Use This Manual](#) - The intended audience of this manual.
- [Organization of This Manual](#) - A brief description of the subjects contained in the various chapters of this manual.

The Purpose of This Manual

The Avaya Software Update Manager User's Manual contains information needed to use Avaya Software Update Manager efficiently and effectively.

Who Should Use This Manual

This manual is intended for network managers familiar with network management and its fundamental concepts.

Organization of This Manual

This manual is structured to reflect the following conceptual divisions:

- [Preface](#) - Describes the manual's purpose, intended audience, and organization.
- [Chapter 1: Introduction](#) - Provides an introduction to the Avaya Software Update Manager, and a description of the user interface.
- [Chapter 2: Getting Started](#) - Explains how to start Avaya Software Update Manager and how to define the authorization information and parameters required to download software from the Avaya Website.
- [Chapter 3: The Targets Table](#) - Explains how to use the Targets Table, which lists all detected targets.

Preface

- [Chapter 4: Detecting Targets](#) - Explains how to add targets to the Targets Table.
- [Chapter 5: The Log File](#) - Explains how to view, save, clear, and close the log file.
- [Chapter 6: The ASCA Reporting Tool](#) - Explains how to enable users without access to Avaya Software Update Manager to view inventory reports using the ASCA reporting tool.
- [Chapter 7: Downloading Software to Targets](#) - Explains how to download software to targets for Gateways, Data Switches, Circuit Packs, and the Communication Manager.
- [Chapter 8: Analyzing and Retrieving from the Web](#) - Explains how to use the Avaya Software Update Manager Analyzer, which compares software versions currently in use against the newest releases available on the Avaya website and lets you download new releases to your hard disk.
- [Chapter 9: Managing IP Phone Software](#) - Explains how to manage firmware and configuration scripts for IP phones.
- [Appendix A: Remote Library Index File](#) - Provides an example of the structure of an index file to be used in the remote software libraries accessed by Avaya Software Update Manager.
- [Appendix B: Menus](#) - Provides the full structure of the menus in Avaya Software Update Manager.
- [Appendix C: Troubleshooting](#) - Explains how to identify and find solutions for errors that may occur when downloading.

Chapter 1: Introduction

This chapter provides an introduction to the Avaya Software Update Manager. It includes the following sections:

- [Avaya Software Update Manager Overview](#) - An overview of Avaya Software Update Manager.
- [Using Avaya Software Update Manager](#) - An outline of the tasks required to effectively use Avaya Software Update Manager.
- [The User Interface](#) - Describes the Avaya Software Update Manager user interface.
- [Using Tooltips](#) - Explains the Avaya Software Update Manager tooltip feature.
- [Using Avaya Software Update Manager Help](#) - Explains the options for accessing on-line help in Avaya Software Update Manager.

Avaya Software Update Manager Overview

Avaya Software Update Manager is an application that downloads software to managed Avaya devices. Avaya Software Update Manager can also check the software versions currently in use against the latest versions available from Avaya and recommend updates when a newer version is available. In this guide, the word target is used to define any device to which software can be downloaded.

Avaya Software Update Manager can download a new release from Avaya's website and store it on your hard disk for subsequent downloading to the appropriate devices.

Avaya Software Update Manager includes a server hosted on the workstation running Avaya Network Manager in Standalone Mode. The server stores all the software retrieved from the web and can download the software to appropriate devices. Files containing embedded software can also be copied to the server.

The server can be reached locally or via remote access. This provides the ability to update the software on your devices from anywhere in the world.

Using Avaya Software Update Manager

Avaya Software Update Manager is used to retrieve software from the web and download it to appropriate devices in your network. Using Avaya Software Update Manager, you can perform the following tasks:

- Starting Avaya Software Update Manager. For instructions on starting Avaya Software Update Manager, refer to [Starting Avaya Software Update Manager](#) on page 17.
- Detecting the download targets associated with devices in the network. For instructions on detecting targets, refer to [Chapter 4: Detecting Targets](#) on page 37.
- Analyzing the software on the network devices to determine if there are new versions. For instructions on analyzing device software, refer to [Performing Web Analysis](#) on page 86.
- Retrieving new versions of software from the Web. For instructions on retrieving software from the web, refer to [Retrieving New Versions from the Web](#) on page 86.
- Downloading the new software to the relevant devices in your network. For instructions on downloading software to devices, refer to [Downloading](#) on page 69.
- Resetting devices in the network as necessary. For instructions on resetting devices, refer to [Resetting Modules](#) on page 81.


To start Avaya Software Update Manager, refer to [Starting Avaya Software Update Manager](#) on page 17.

The User Interface

The user interface consists of the following elements:

- **Menu Bar** - Menus for accessing Avaya Software Update Manager's functions. For a list of menu items, refer to [Appendix B: Menus](#).
- **Toolbar** - Toolbar buttons for accessing Avaya Software Update Manager's main functions.
- **View Tabs** - Tabs for switching between the different Targets Table views.
- **Dialog Area** - An area where all dialog boxes are displayed. When no dialog box is open, the Dialog Area disappears and the Targets Table expands to take its place.
- **Log File Area** - Log file detailing all activities performed in Avaya Software Update Manager. For information on the Log File area, refer to [Chapter 5: The Log File](#).
- **Status Line** - The status line displays the currently logged in user name, indicates when the Targets Table is filtered, and shows progress during discovery.

Figure 1: Avaya Software Update Manager User Interface

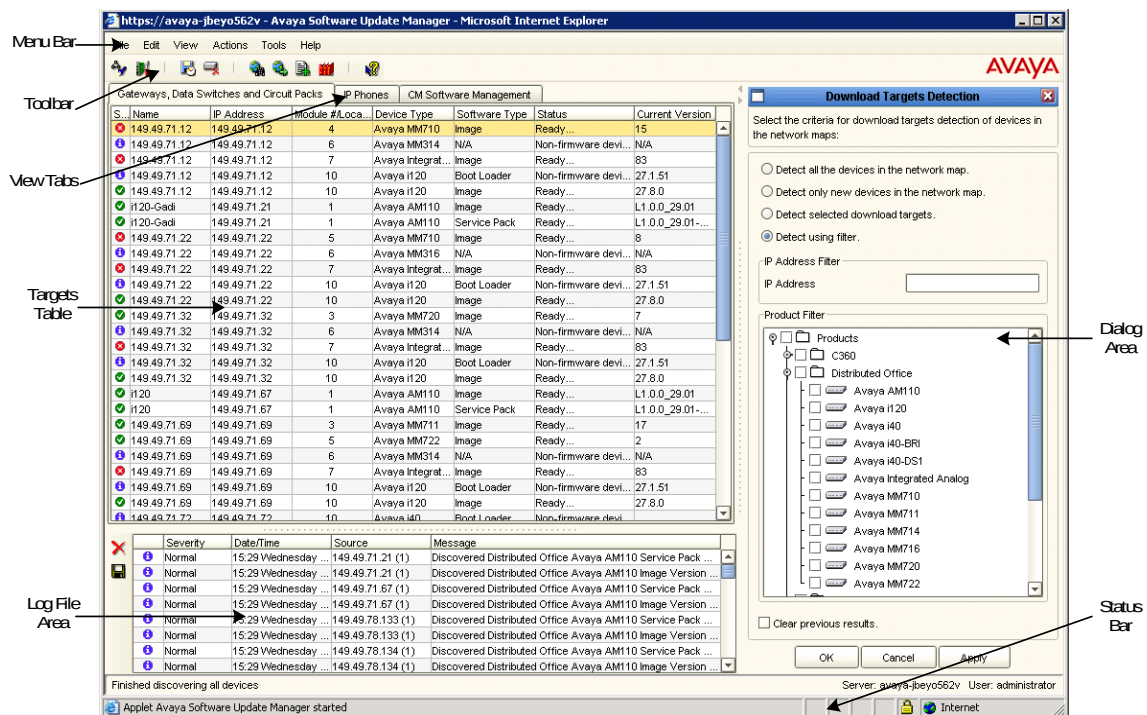

Toolbar

The Toolbar provides shortcuts to the main Avaya Software Update Manager functions.

The table below describes the buttons on the Toolbar and gives the equivalent menu options for the relevant view:

Table 1: Toolbar Buttons

Button	Description	Menu Item
	Displays the Download Targets Detection dialog box.	Actions > Download Targets Detection
	From Gateways, Data Switches, and Circuit Packs view: Displays the Target Details dialog box. From IP Phones view: Displays the Files Inventory for Selected Device dialog box. From CM Software Management view: Displays the Target Details dialog box.	Actions > Target Details
	From Gateways, Data Switches, and Circuit Packs view: Displays the Schedule Download dialog box. From IP Phones view: Displays the Manage IP Phones Software on Gateway dialog box. From CM Software Management view: Displays the Media Software Management dialog box.	Actions > Schedule Download
	From Gateways, Data Switches, and Circuit Packs view: Resets the selected modules. From IP Phones view: Resets all connected IP Phones (AM110 models only).	Actions > Reset
	From Gateways, Data Switches, and Circuit Packs view: Performs web analysis on targets in the Targets Table. From CM Software Management view: Performs web analysis on targets in the Targets Table.	Tools > Image Analyzer
	From Gateways, Data Switches, and Circuit Packs view: Displays the Retrieve From the Web dialog box. From CM Software Management view: Displays the Retrieve From the Web dialog box.	Tools > Retrieve Image From the Web
	From Gateways, Data Switches, and Circuit Packs view: Displays the Software Libraries dialog box - Files tab. From CM Software Management view: Displays the Software Libraries dialog box - Files tab.	Tools > Add Image File
1 of 2		

Table 1: Toolbar Buttons (continued)

Button	Description	Menu Item
	From Gateways, Data Switches, and Circuit Packs view: Displays the Software Libraries dialog box - Software Libraries tab. From IP Phones view: Displays the IP Phones Software Libraries dialog box. From CM Software Management view: Displays the Software Libraries dialog box - Software Libraries tab.	Tools > Software Libraries
	Activates context-sensitive help.	Help > Help ON
<i>2 of 2</i>		

View Tabs

The Targets Table has the following viewing options:

- [Gateways, Data Switches, and Circuit Packs View](#)
- [IP Phones View](#)
- [CM Software Management View](#)

To display a specific view, click the appropriate view tab. The selected view opens. For information regarding the information provided and actions performed in the different views, refer to [Chapter 3: The Targets Table](#).

Dialog Area

The area to the right of the Targets Table is where all dialog boxes open. This area can be resized by dragging the vertical splitter bar with the mouse. When a dialog box opens, it replaces the current dialog box in the Dialog Area. When no dialog box is open, the Dialog Area disappears and the Targets Table expands to take its place.

Status Line

The Status Line displays the name of the currently logged in user. In addition, it displays and discovery progress, and shows when the Targets Table is filtered.

Using Tooltips

Avaya Software Update Manager includes a tooltip feature which enables you to display additional information about targets and software versions. Tooltips are available in the Targets Table.

To display additional information about a target, place the cursor on the target's row. After about one second, a tooltip appears with information about the target (for example, see [Figure 2](#) below).

Figure 2: Tooltip - (CM Software Management view)

Name	s8300-78-160
IP Address	149.49.78.160
Device Type	S8300
Software Type	Communication Manager
Main CM	149.49.78.163/149.49.78.164
Software Version	R014x.00.0.730.5
Server Type	S8300 (isp)
Server Config	Isip
Server Status	active
Active Partition	00.0.730.5
Standby Partition	00.0.730.3
R1onHD	04.0-00.0.730.3
R2onHD	04.0-00.0.730.4
R3onHD	04.0-00.0.730.5
CD-ROM	none
Last Refresh Time	Mon Mar 12 20:15:38 IST 2007
Download Status	Ready...
Update State	Latest version
Available Service Pack	
Entitled Service Pack	
Available Platform/Security Update	
Entitled Platform/Security Update	

Update ID	Status	Type	Update description	Overwrite
00.0.730.5-1003	unpacked	cold	load 730.5 update 1003	
00.0.730.5-1004	unpacked	cold	load 730.5 update 1004	
00.0.730.5-1005	activated	cold	load 730.5 update 1005	no

Note:

Tooltips are not available in the IP Phones view.

Tooltips are disabled by default. To toggle the tooltips feature, select **View > ToolTip**.

Using Avaya Software Update Manager Help

This section explains how to use the on-line help in the Avaya Software Update Manager. The on-line help can be opened to the contents page or directly to a topic of interest.

Opening the Help to the Contents Page

To open the help to the contents page, select **Help > Contents**. The on-line help opens to the contents page.

Opening the Help to a Topic of Interest

To open the help directly to a topic of interest:

1. Click .

Or

Select **Help > Help ON**. The cursor changes to the shape of an arrow with a question mark.

2. Click a point of interest in the Avaya Software Update Manager. The help opens to a topic explaining the feature that was clicked.

What's New in This Release

Avaya Software Update Manager Release 5.0 introduces the following enhancements:

- Ability to upgrade Avaya Communication Manager Release 5.0 systems.
- Ability to upgrade the S8300C (Avaya Communication Manager/SES co-residency).
- Support for the G450 branch gateway.
- Support for the S8730.
- Enhanced support the IG550 Integrated Gateway:
 - Inventory reporting for J2320, J2350, J4350, and J6350.
 - Inventory reporting for all TIM modules.
 - Inventory of DSP resources.
 - Inventory and upgrade capability for TGM550.
 - Report includes hardware and software versions, serial number, license, and part number.
- ASCA enhancements:
 - SES versions reported and analyzed.
 - Inventory support for 96xx and 16xx IP phones.

Introduction

- Display of latest available firmware vintage for TN circuit packs takes into account compatibility with release of Avaya Communication Manager.
- Ability for you to change the Target CM Release field and view the updated “Latest Available” recommendation. If the particular hardware vintage for the TN board can not be supported by the target CM release, this information will be highlighted.
- The ability to download IP Office firmware R4.1.
- The ability to edit file size, file name, version number and hardware compatibility fields for an existing entry the Software Library.

Chapter 2: Getting Started

This chapter explains how to define the authorization information and parameters required to gain access to download software from the Avaya Website. It contains the following sections:

- [Starting Avaya Software Update Manager](#) - Explains how to access Avaya Software Update Manager from your management platform.
- [Defining Website Download Parameters](#) - Describes how to specify the download source website and download intervals.
- [Defining Server Proxy Settings](#) - Describes how to specify the Proxy settings for your server.
- [SFAP Login Parameters](#) - Describes how to define the SFAP Login download parameters required to begin downloading software from the Avaya Website.

Starting Avaya Software Update Manager

This section describes how to start Avaya Software Update Manager.

To start Avaya Software Update Manager:

From Avaya Network Management Console, select
Tools > Avaya Software Update Manager.

The Avaya Software Update Manager Targets Table opens.

To begin working in Avaya Software Update Manager, and to be able to download software, you need to do the following from the Options dialog box:

- Define a Source Website - refer to [Defining Website Download Parameters](#) on page 18.
- Define Proxy Settings - refer to [Defining Server Proxy Settings](#) on page 19.
- Define SFAP Login Parameters - refer to [SFAP Login Parameters](#) on page 20.

Getting Started

To access the Options dialog box:

Select **File > Options**. The Options dialog box opens.

Figure 3: Options Dialog Box

The Options dialog box contains the following settings:

- Web Site:** ☒ Avaya Support Web Site; ☐ Other:
- Retry Download:** Maximum Download Retries: ; Delay Between Retries [seconds]:
- Server Proxy Settings:** Use Proxy: ☒; Host: ; Port:
- SFAP Login Parameters:** Use SFAP: ☒; User Name: ; Password: ; Confirm Password: ; Sold To: ;

Buttons at the bottom: Refresh, OK, Cancel, Apply.

For information about the Targets Table, refer to [Chapter 3: The Targets Table](#) on page 21.

Defining Website Download Parameters

To enable downloading of files from the Avaya Website, it is necessary to define the Avaya source website and download intervals in the Options dialog box.

To define the Avaya Support website as the source website:

1. Select **File > Options**. The Options dialog box opens.
2. Select **Avaya Support Web Site** in the Web Site area.

Or

To define another website as the source website, select **Other** and type the web address of the source website you want to use in the text box.

3. Click **Apply**.

Defining Download Intervals

You can configure Avaya Software Update Manager to automatically retry downloading files in the event of a download failure.

To define the download intervals parameter:

1. Select **File > Options**. The Options dialog box opens (see [Figure 3](#)).
2. In the **Maximum Download Retries** field, enter the maximum number of download retries you want Avaya Software Update Manager to attempt. (The maximum number is 10.)
3. In the **Delay Between Retries (seconds)** field, enter the number of seconds delay you require between download attempts. (The maximum time delay is 600 seconds.)
4. Click **Apply**.

Defining Server Proxy Settings

If you use a proxy server to connect to the internet, you must define your server proxy settings in the Options dialog box before you can begin downloading software from the Avaya Website.

To define your server proxy settings:

1. Select **File > Options**. The Options dialog box opens (see [Figure 3](#)).
2. In the Server Proxy Settings area, click the **Use Proxy** checkbox to enable server proxy settings.
3. In the **Host** field, specify the proxy host.
4. In the **Port** field, specify the proxy port number.
5. Click **OK**. The changes are applied and the dialog box closes.

Or

Click **Apply**. The changes are applied and the dialog box remains open.

SFAP Login Parameters

The Avaya website displays all software, firmware, and security downloads for Avaya supported devices. To retrieve the files you are entitled to, SFAP authorization information for your account must be defined in Avaya Software Update Manager.

To define SFAP login information:

1. Select **File > Options**. The Options dialog box opens (see [Figure 3](#)).
2. Click the **Use SFAP** checkbox.
3. Enter the following parameters:

- a. **User Name**
- b. **Password**
- c. **Confirm Password**

4. Click **Retrieve Sold To's**. A list of Sold To's appears in the Sold To drop-down list.

A Sold To represents the location at which a device is installed. The association between device and location is taken into consideration when checking entitlements to install software onto that device. You will only be able to download software for devices associated with the selected Sold To.

5. From the **Sold To's** drop-down list, select the **Sold To** you want to use.
6. Click **OK**. The changes are applied and the dialog box closes.

Or

Click **Apply**. The changes are applied and the dialog box remains open.

Note:

For more information regarding SFAP login parameters, go to:

<http://support.avaya.com/japple/css/japple?PAGE=OpenPage&temp.template.name=SFAP>

Chapter 3: The Targets Table

This chapter explains how to use the Targets Table. The Targets Table lists detected download targets and displays information about them. It includes the following sections:

- [Targets Table Views](#) - Describes the different views of the Targets Table.
- [The Gateways, Data Switches, and Circuit Packs Targets Table](#) - Describes the information displayed in the various columns of the Gateways, Data Switches, and Circuit Packs Targets Table.
- [The IP Phones Targets Table](#) - Describes the information displayed in the various columns of the IP Phones Targets Table.
- [The CM Software Management Targets Table](#) - Describes the information displayed in the various columns of the CM Software Management Targets Table.
- [Sorting the Targets Table](#) - Describes how to sort the order of targets listed in the Targets Table.
- [Customizing the Targets Table](#) - Describes how to show and hide columns in the Targets Table.
- [Filtering the Targets Table](#) - Describes how to filter targets in the Targets Table.
- [Printing the Targets Table](#) - Describes how to print the Targets Table.
- [Saving the Targets Table](#) - Describes how to save the Targets Table as a text file.

Targets Table Views

The Targets Table has the following viewing options:

- [Gateways, Data Switches, and Circuit Packs View](#) - From this view you can manage software related to Gateways, Data Switches, and Circuit Packs.
- [IP Phones View](#) - From this view you can manage firmware related to IP phones.
- [CM Software Management View](#) - From this view, you can manage software related to the Communication Manager.

Gateways, Data Switches, and Circuit Packs View

From the Gateways, Data Switches, and Circuit Packs view you can detect and download software to targets associated with Gateways, Data Switches, and Circuit Packs.

When you open Avaya Software Update Manager for the first time, the Gateways, Data Switches, and Circuit Packs Targets Table appears with no entries until you detect targets from the network. The table is populated during the detection process. Each row of the table displays information about a target to which software can be downloaded. A separate row in the Targets Table appears for each type of software that can be downloaded to a specific device. For more information on detecting targets, refer to [Chapter 4: Detecting Targets](#).

Use the Gateways, Data Switches, and Circuit Packs view to check the software versions currently used by the listed targets against the newest releases on Avaya's website and on your hard disk. For information on checking software status and downloading new software from Avaya's website, refer to [Chapter 8: Analyzing and Retrieving from the Web](#).

IP Phones View

From the IP Phones view you can manage firmware images and configuration scripts to be placed on IP Telephony gateways for distribution to IP phones.

When you open Avaya Software Update Manager for the first time, the Targets Table appears with no entries until you detect targets from the network. The table is populated by the detection process. Each row of the table displays information about a device from which software can be downloaded. For more information on detecting targets, refer to [Chapter 4: Detecting Targets](#).

For more information on managing software for IP Phones, refer to [Chapter 9: Managing IP Phone Software](#).

CM Software Management View

From the CM Software Management view you can detect and download software to targets associated with the Communication Manager (also referred to as the Media Server).

When you open Avaya Software Update Manager for the first time, the CM Software Management Targets Table appears with no entries until you detect targets from the network. The table is populated by the detection process. Each row of the table displays information about a target to which software can be downloaded. A separate row in the Targets Table appears for each type of software that can be downloaded to a specific device. For more information on detecting targets, refer to [Chapter 4: Detecting Targets](#).

Use the CM Software Management view to check the software versions currently used by listed targets against the newest releases on Avaya's website and on your hard disk. For information on checking software status and downloading new software from Avaya's website, refer to [Chapter 8: Analyzing and Retrieving from the Web](#).

Status Icons

The Targets Table displays a status icon for each target to indicate the update status of the software currently running in the target. The table below displays the icons and explains what they indicate.

Table 2: Software Version Status Icons

Icon	Description
	The software version displayed in the target is the newest version available.
	A newer software version is available on your server.
	A newer software version is available on Avaya's website, but not available on your local server.
	The selected row contains read-only information. No action or operation can be performed on this row.
	An upgrade for this target is available, but you are not entitled to access it.
	No information is available for this target.

The Gateways, Data Switches, and Circuit Packs Targets Table

The Gateways, Data Switches, and Circuit Packs Targets Table displays the following information about each target:

Table 3: Gateways, Data Switches, and Circuit Packs Target Table Parameters

Field	Description
State	The update status of the software currently running in the target. For more information, refer to Status Icons on page 23.
Name	The host name of the target.
IP Address	The IP address of the target.
Module #/Location	The number and location of the slot that the module occupies in the target. For stackable devices, this is the module's position in the stack.
Device Type	The type of device associated with the target.
Software Type	The software entity to be downloaded to the target. Options are: - Image - An executable file for running the device. - Boot Loader - A low-level executable for starting up the device. - Web Management - An executable file providing web management capability to the device.
Status	Displays the date and time of the scheduled download. During a download, this column displays download process messages.
Current Version	The software version currently running on the target.
Available Version	The latest version of the software available from Avaya's website. This field is updated each time you run a web analysis. For more information on web analysis, refer to Chapter 8: Analyzing and Retrieving from the Web .
Entitled Version	The latest version of software available on the Avaya website that you have the authority to install.
Download Progress	During a download, this column displays the percentage of the file which has been downloaded to the target.
1 of 2	

Table 3: Gateways, Data Switches, and Circuit Packs Target Table Parameters (continued)

Field	Description
File Size	During a download, this column displays the number of bytes that have been downloaded to the target.
Port Network	The port network associated with the TN Board. This applies to TN Boards only.
Serial Number	The serial number of the target.
Hardware Version	The device hardware version or vintage.
Last Refresh Time	The last time the row in the Targets Table was refreshed.
2 of 2	

Note:

You can select which columns to display by using the Column Chooser. For information on showing and hiding columns in the Targets Table, refer to [Customizing the Targets Table](#) on page 28.

The IP Phones Targets Table

The IP Phones Targets Table displays the following information about each target:

Table 4: IP Phones Target Table Parameters

Field	Description
Name	The host name of the target.
Device Type	The type of device associated with the target.
IP Address	The IP address of the target.
Location	The physical location of the selected gateway.
Status	The communication status between the Avaya Software Update Manager and the target during the upgrade process.
Last Refresh Time	The last time the row in the Targets Table was refreshed.
Download Progress	During a download, this column displays the percentage of the file which has been downloaded to the target.

Note:

You can select which columns to display by using the Column Chooser. For information on showing and hiding columns in the Targets Table, refer to [Customizing the Targets Table](#) on page 28.

The CM Software Management Targets Table

The CM Software Management Targets Table displays the following information about each target:

Table 5: CM Software Management Target Table Parameters

Field	Description
State	The update status of the software currently running in the target. For more information, refer to Status Icons on page 23.
Name	The host name of the target.
Main IP Address	- For simplex servers: The IP address of the server. - For duplex servers: The IP address shared by both servers. - For ESS or LSP servers: The primary CM server IP address for the ESS or LSP listed.
IP Address	The IP address of the target.
Server Status	The status of the server displayed. - For simplex servers the status is displayed as either active or dormant. - For duplex servers, the status is displayed as active, standby, busy out, or dormant.
Server Type	The type of server selected. The internal server name is displayed in parentheses.
Server Config	The configuration of the server (Main , ESS , or LSP).
Software Version	The software version, including details of the release and load number.
Available Service Pack	The latest service pack update currently available on the Avaya website.
1 of 2	

Table 5: CM Software Management Target Table Parameters (continued)

Field	Description
Entitled Service Pack	The service pack update that you have the authorization to install.
Available Platform/ Security Update	The latest platform/security update currently available on the Avaya website.
Entitled Platform/ Security Update	The platform/security update that you have the authorization to install.
R1 on Hard Drive	The first release available to install on the Media Server.
R2 on Hard Drive	The second release available to install on the Media Server.
R3 on Hard Drive	The third release available to install on the Media Server.
CD-ROM	Software releases available to copy to the hard drive from the CD-ROM.
Status	The communication status between the Avaya Software Update Manager and the target during the upgrade process.
Last Refresh Time	The last time the row in the Targets Table was refreshed.
Available SES Service Pack	The latest SES service pack available on the Avaya website.
Entitled SES Service Pack	The latest SES service pack that you can download from the Avaya website.
2 of 2	

Note:

You can select which columns to display by using the Column Chooser. For information on showing and hiding columns in the Targets Table, refer to [Customizing the Targets Table](#) on page 28.

Sorting the Targets Table

To sort the Targets Table, click the column title of the information by which you want to sort. An arrow appears in the heading of the column by which the Targets Table is being sorted. An arrow pointing up indicates that the Targets Table is being sorted in ascending order. An arrow pointing down indicates that the Targets Table is being sorted in descending order. Click the column title again to toggle between ascending and descending order.

You can sort by any column in the Targets Table.


Customizing the Targets Table

The Targets Table can be customized to show and hide columns. This enables you to view only relevant columns. You can customize columns in the Targets Table at any time, without having to re-detect download targets.

To customize columns in the Targets Table:

1. Click the view in which you want to customize the columns (either Gateways, Data Switches, and Circuit Packs view or CM Software Management view). The Target Table for the selected view opens.
2. Right-click any column in the Targets Table. The Column Chooser dialog box for that view opens.

Figure 4: Column Chooser Dialog Box (CM Software Management View)

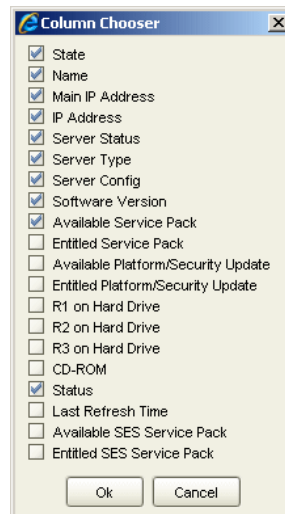

-
3. Select the columns you want to display.
 4. Click **OK**. The dialog box closes and the selected columns are displayed.

Filtering the Targets Table


You can filter the Targets Table in order to reduce the number of targets currently displayed in the selected view. This makes it easier to work by eliminating targets from the display. You can later add these targets back to the list by running the filter again, without having to re-detect the targets.

Filtering the Targets Table - Gateways, Data Switches, and Circuit Packs View

To filter the Targets Table from the Gateways, Data Switches, and Circuit Packs view:

1. Select the Gateways, Data Switches, and Circuit Packs tab.
2. Select **View > Filter** from the menu. The Filter Devices dialog box opens (see [Figure 5](#)).

Figure 5: Filter Devices Dialog Box - Gateways, Data Switches, and Circuit Packs View

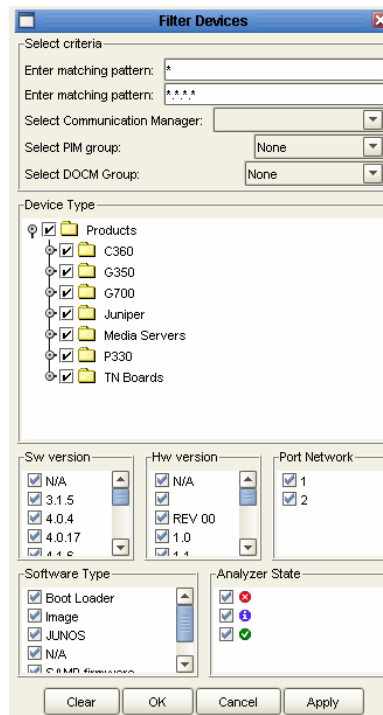

3. Select the criteria for the targets you want to display. For more information on filter criteria, refer to [Filter Criteria - Gateways, Data Switches and Circuit Packs View](#) on page 30.

The Targets Table

- Click **OK**. The filtering criteria are activated and the dialog box closes.

Or

- Click **Apply**. The filtering criteria are activated and the dialog box remains open.

Note:

The Targets Table only displays targets that meet all the selected criteria.

To deactivate filtering:

- Click **Clear**. All filtering criteria are cleared.
- Click **OK**. Filtering is deactivated and the dialog box closes.

Note:

When filtering is active,  appears in the Status Line.

Filter Criteria - Gateways, Data Switches and Circuit Packs View

The following table displays the list of fields you can use to filter the information displayed in the Targets Table from the Gateways, Data Switches, and Circuit Packs view. You can filter by any combination of these fields:

Table 6: Filter Criteria Fields - Gateways, Data Switches and Circuit Packs View

Field	Description
Device Name	In the Enter matching pattern field, enter the name of the target you want to display. The name can contain only one wildcard (*).
IP Address	In the Enter matching pattern field, enter the IP address of the target you want to display. The IP address can contain a wildcard (*), or a range (0-255), or a number in the range (0-255).
Main IP Address	In the Enter matching pattern field, enter the main IP address of the target you want to display. The IP address can contain a wildcard (*), or a range (0-255), or a number in the range (0-255). (Only available in CM Software Management view.)
Communication Manager	In the Select Communication Manager field, select the communication manager used for the targets you want to display. (Only available in Gateways, Data Switches, and Circuit Packs view.)
Select PIM Group	In the Select PIM Group field, select the PIM group to filter. This enables filtering devices by device groups defined in the Avaya Provisioning and Installation Manager.
1 of 2	

Table 6: Filter Criteria Fields - Gateways, Data Switches and Circuit Packs View (continued)


Field	Description
Select DOCM Group	In the Select Group field, you can show the AM 110 devices that belong to a specific DOCM group. Select the DOCM group used for the devices you want to display from the drop-down box (AM110 devices only).
Device Type	In the Device Type section, select the product categories and sub-categories you want to display. For more information on filtering by device type, refer to Filtering by Device Type on page 36.
Software Version	In the Sw version section, select the software version used for the target you want to display.
Hardware Version	In the Hw version section, select the hardware version currently running the target you want to display. (Only available in the Gateways, Data Switches, and Circuit Packs view.)
Port Network	In the Port Network section, select the port network number for the TN boards you want to display. (Only available in the Gateways, Data Switches, and Circuit Packs view.)
Software Type	In the Software Type section, select the software entity (Boot Loader, Image, or Web Management) to display targets using that type of software. (Only available in the Gateways, Data Switches, and Circuit Packs view.)
Server Status	In the Server Status section, select the status of the server that you want to display. (Only available in the CM Software Management view.)
Analyzer State	In the Analyzer State section, select the icon or icons representing the version update status of targets you want to display.
<i>2 of 2</i>	

Filtering the Targets Table - IP Phones View

To filter the Targets Table from the IP Phones view:

1. Select the IP Phones tab.
2. Select **View > Filter** from the menu. The Filter Devices dialog box opens for the IP Phones view (see [Figure 7](#)).

Figure 6: Filter Devices Dialog Box - IP Phones View

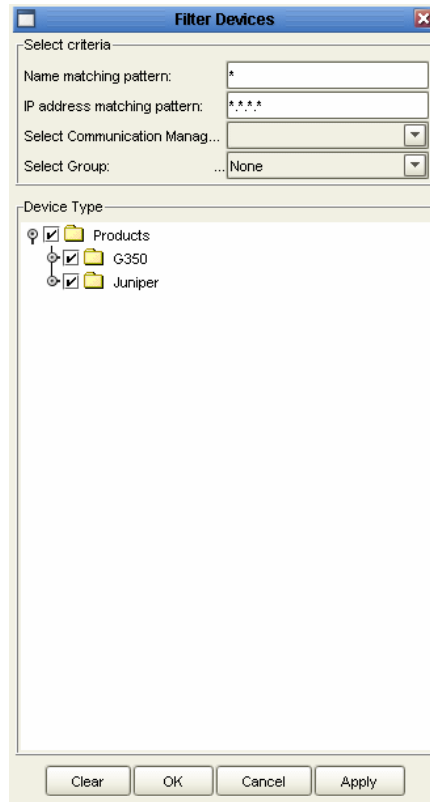

3. Select the criteria for the targets you want to display. For more information on filter criteria, refer to [Filter Criteria - Gateways, Data Switches and Circuit Packs View](#) on page 30.

4. Click **OK**. The filtering criteria are activated and the dialog box closes.

Or

Click **Apply**. The filtering criteria are activated and the dialog box remains open.

Note:

The Targets Table only displays targets that meet all the selected criteria.

To deactivate filtering:

1. Click **Clear**. All filtering criteria are cleared.
2. Click **OK**. Filtering is deactivated and the dialog box closes.

Note:

When filtering is active,  appears in the Status Line.

Filter Criteria - IP Phones View

The following table displays the list of fields you can use to filter the information displayed in the Targets Table. You can filter by any combination of these fields:

Table 7: Filter Criteria Fields

Field	Description
Device Name	In the Name matching pattern field, enter the name of the target you want to display. The name can contain only one wildcard (*).
IP Address	In the IP address matching pattern field, enter the IP address of the target you want to display. The IP address can contain a wildcard (*), or a range (0-255), or a number in the range (0-255).
Communication Manager	In the Select Communication Manager field, select the communication manager used for the targets you want to display.
Select Group	In the Select Group field, select the PIM group to filter. This enables filtering devices by device groups defined in the Avaya Provisioning and Installation Manager.
Device Type	In the Device Type section, select the product categories and sub-categories you want to display. For more information on filtering by device type, refer to Filtering by Device Type on page 36.

Filtering the Targets Table - CM Software Management View

To filter the Targets Table from the CM Software Management view:

1. Select the CM Software Management tab.
2. Select **View > Filter** from the menu. The Filter Devices dialog box opens for the CM Software Management view (see [Figure 7](#)).

Figure 7: Filter Devices Dialog Box - CM Software Management View

The screenshot shows the 'Filter Devices' dialog box with the following settings:

- Device Name:** Enter matching pattern: *
- IP Address:** Enter matching pattern: *.*.*.*
- Main IP Address:** Enter matching pattern: *.*.*.*
- Device Type:** A tree view with 'Products' expanded, showing 'Media Servers' with sub-items 'S8300', 'S8400', and 'S8500B', all of which are checked.
- Software Version:** A list of versions: R014x.00.0.726.0, R014x.00.0.730.3, R014x.00.0.730.4, and R014x.00.0.730.5, all checked.
- Available on Media Server:** A list of versions: 04.0-00.0.725.0, 04.0-00.0.730.0, 04.0-00.0.730.2, and 04.0-00.0.730.3, all unchecked.
- Server Status:** 'active' is checked.
- Server Config:** 'ess', 'icc', 'isp', and 'main' are all checked.
- Analyzer State:** A green checkmark is shown.

Buttons at the bottom: Clear, OK, Cancel, Apply.

3. Select the criteria for the targets you want to display. For more information on filter criteria, refer to [Filter Criteria - Gateways, Data Switches and Circuit Packs View](#) on page 30.
4. Click **OK**. The filtering criteria are activated and the dialog box closes.

Or

Click **Apply**. The filtering criteria are activated and the dialog box remains open.

Note:

The Targets Table only displays targets that meet all the selected criteria.

To deactivate filtering:

1. Click **Clear**. All filtering criteria are cleared.
2. Click **OK**. Filtering is deactivated and the dialog box closes.

Note:

When filtering is active,  appears in the Status Line.

Filter Criteria - CM Software Management View

The following table displays the list of fields you can use to filter the information displayed in the Targets Table. You can filter by any combination of these fields:

Table 8: Filter Criteria Fields

Field	Description
Device Name	In the Enter matching pattern field, enter the name of the target you want to display. The name can contain only one wildcard (*).
IP Address	In the Enter matching pattern field, enter the IP address of the target you want to display. The IP address can contain a wildcard (*), or a range (0-255), or a number in the range (0-255).
Main IP Address	- For simplex servers - the Main IP Address represents the address of the server. - For duplex servers - the Main IP Address represents the shared IP address that represents both servers. - For ESSs and LSPs - the Main IP Address represents the IP address of the CM that the ESS or LSP is backing up. In the Enter matching pattern field, enter the main IP address of the target you want to display. The IP address can contain a wildcard (*), or a range (0-255), or a number in the range (0-255).
Device Type	In the Device Type section, select the product categories and sub-categories you want to display. For more information on filtering by device type, refer to Filtering by Device Type on page 36.
Software Version	In the Sw version section, select the software version used for the target you want to display.
Available on Media Server	In the Available on Media Server section, select the release that you want to display from the list of releases available for installation on the Media Server hard drive or CD-ROM drive.
Server Status	In the Server Status section, select the status of the server that you want to display. Options are active, standby, busy out or dormant.
Server Configuration	In the Server Config section, select the type or types of server that you want to display. Options are main, LSP, ESS or ICC.
Analyzer State	In the Analyzer State section, select the icon or icons representing the version update status of targets you want to display.

Filtering by Device Type

When filtering by device type, you can select families of devices and specific module types. Under each device family name, one or more module types are listed. To display module types, select the device family or click its name.

When you select a device family, all the module types are automatically selected. You can then clear any module types that you do not want to select.

Printing the Targets Table

To print the Targets Table:

1. Select **File > Print**. A standard print dialog box opens.
2. Select a printer.
3. Click **OK**. The Targets Table is printed.

Saving the Targets Table

To save the information in the Targets Table as a text file:

1. Select **File > Save As**. A file browser dialog box opens.
2. Enter the path and filename.
3. Click **Save**. The information in the Targets Table is saved in the specified file.

Chapter 4: Detecting Targets

This chapter describes how to add targets to the Targets Table. You can use Avaya Software Update Manager to download software only to targets listed in the Targets Table. For more information about the Targets Table, refer to [Chapter 3: The Targets Table](#).

This chapter includes the following sections:

- [Starting the Detection Process](#) - Describes how to start the detection process.
- [Detecting All Targets](#) - Describes how to detect all targets associated with devices from the management platform.
- [Detecting New Targets](#) - Describes how to detect targets associated with devices added to the network map.
- [Updating Information for Selected Targets \(Refresh\)](#) - Describes how to detect targets selected in the Targets Table.
- [Detecting Targets Using Filters](#) - Describes how to detect targets using a set of filters based on device type and IP address.

Starting the Detection Process

When you open Avaya Software Update Manager for the first time, the Targets Table appears with no entries. In order to populate the Targets Table, you need to detect new targets.


To start the detection process:

1. Select the view in which you want to work.
2. Click .

Or

Select **Actions > Download Targets Detection**. The Download Targets Detection dialog box opens.

Figure 8: Download Targets Detection Dialog Box

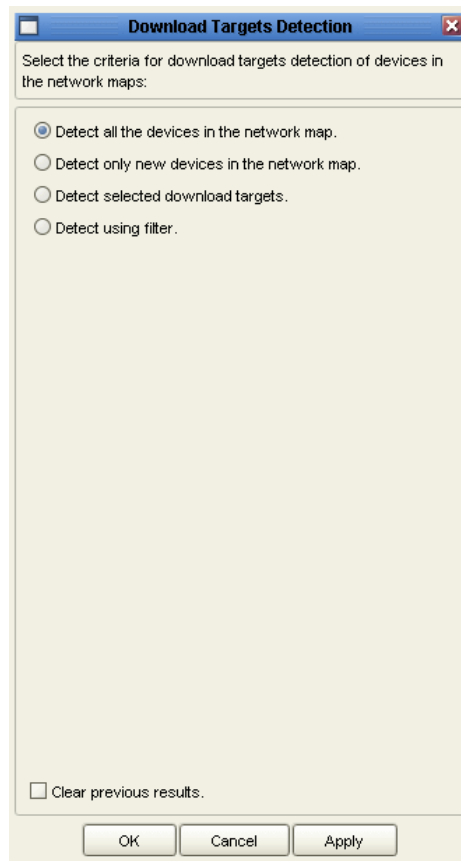

Detecting All Targets

The Software Update Manager server regularly detects the targets from the management platform. When you detect targets using Software Update Manager, the targets list is automatically retrieved from the server.

To detect all targets:

1. In the Download Targets Detection dialog box, select **Detect all the devices in the network map.**

2. Click **OK**. Targets associated with all managed devices in the selected view are detected and added to the Targets Table, and the Download Targets Detection dialog box closes.

Or

Click **Apply**. Targets associated with all managed devices in the selected view are detected and added to the Targets Table, and the Download Targets Detection dialog box remains open.

Detecting New Targets

Avaya Software Update Manager enables you to detect targets associated with new devices. This ensures that if devices were added to the Network Management Console either while you were working or since the last detection was performed, the targets associated with the new devices are added to the Targets Table.

To detect targets associated with new devices:

1. In the Download Targets Detection dialog box, select **Detect only new devices in the network map**.
2. Click **OK**. Targets associated with new devices are detected and added to the Targets Table, and the Download Targets Detection dialog box closes.

Or

Click **Apply**. Targets associated with new devices are detected and added to the Targets Table, and the Download Targets Detection dialog box remains open.

Updating Information for Selected Targets (Refresh)

To update or refresh information for selected targets in the Targets Table:

1. Select the targets in the Targets Table that you want to update.
2. In the Download Targets Detection dialog box, select **Detect selected download targets**.
3. Click **OK**. The targets selected in the Targets Table are detected, the information in the Targets Table is updated, and the Download Targets Detection dialog box closes.

Or

Click **Apply**. The targets selected in the Targets Table are detected, information in the Targets Table is updated, and the Download Targets Detection dialog box remains open.

Detecting Targets Using Filters


You can use filters to determine which targets should be detected. You can filter the targets based on:

- **Product Type**
- **IP Address**
- **Both Product Type and IP Address**

To detect targets using filters:

1. In the Download Targets Detection dialog box, select **Detect using filter**. An **IP Address Filter** section and a **Product Filter** section appear.

Figure 9: Download Targets Detection - Filters Dialog Box

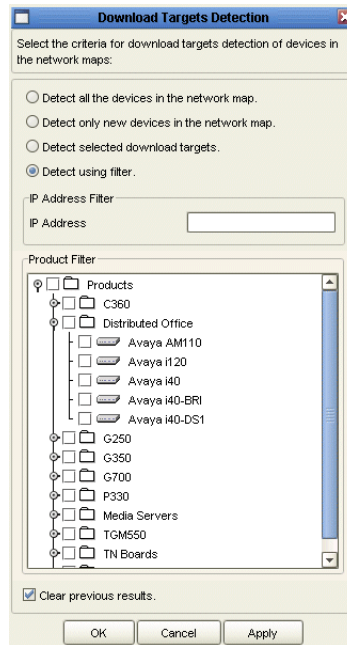

2. To filter by IP address, enter the IP address of the target you want to detect in the **IP Address Filter** section. You can use the asterisk (*) wildcard or enter a range of values to define a group of targets. For details, refer to [Using Wildcards and Ranges in an IP Address](#) on page 41.
3. To filter by product type, select the types of products you want to detect in the **Product Filter** section.

4. Click **OK**. The targets that meet the filter criteria are added to the Targets Table, and the Download Targets Detection dialog box closes.

Or

Click **Apply**. The targets that meet the filter criteria are added to the Targets Table, and the Download Targets Detection dialog box remains open.

Using Wildcards and Ranges in an IP Address

You can use an asterisk (*) wildcard in the IP address. The asterisk must replace an entire octet, rather than individual digits. For example, 149.49.50.* and 149.49.*.* are valid entries. However, 149.49.40.1* and 149.49.* are not valid entries.

You can use a range to represent the last octet. For example, 149.49.48.101-110 is a valid range. However, 149.49.48.101-9 and 149.49.35-40.101 are not valid ranges. The IP address must be written without any spaces.

Chapter 5: The Log File

This chapter describes the Avaya Software Update Manager log. Avaya Software Update Manager keeps a log of all activity. New log information is appended to the end of the existing log.

This chapter includes the following sections:

- [Viewing the Log](#) - Explains how to open the log, and describes the information contained in the log.
- [Saving the Log](#) - Explains how to save the log.
- [Clearing the Log](#) - Explains how to clear the log.
- [Closing the Log](#) - Explains how to close the log.


Viewing the Log

To open the log:

1. Select the view in which you want to work.
2. Select **View > Log Report**. The log opens underneath the Targets Table.

You can resize the log by dragging the horizontal splitter bar. When a dialog box is open, you can also resize the log by dragging the vertical splitter bar.

Figure 10: Log File

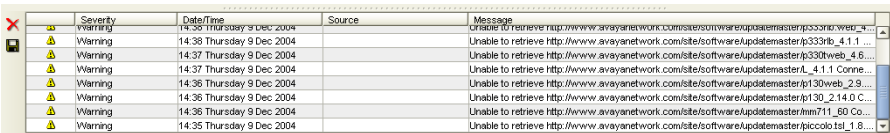

Severity	DateTime	Source	Message
Warning	14:35 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_4...
Warning	14:36 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_4.1.1...
Warning	14:37 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_4.6...
Warning	14:37 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_4.1.1 Conne...
Warning	14:36 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_2.9...
Warning	14:36 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_2.14.0 C...
Warning	14:36 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_7.11_60 Co...
Warning	14:35 Thursday 9 Dec 2004		Unable to retrieve http://www.avaya.com/.../piccolo/web_1.8...

The Log File

The log contains the following information about significant system events:

Table 9: Log Information

Item	Description
Severity	The severity of the event, as follows: •  Normal - A successful action, such as a completed download. •  Warning - An unsuccessful action, such as failure to detect a target. •  Major - An event relating to a failure to download to a target.
Date/Time	The date and time the event occurred.
Source	The IP address or the full identification of the target to which the event occurred.
Message	The nature of the event, such as a successful download to a target or retrieval from the web or an aborted or failed download or retrieval from the web.

Saving the Log

To save the log as a text file:

1. Click  to the left of the log area.

Or

Select **File > Save Log File**.

The Save dialog box opens.

2. Enter the path and filename.
3. Click **Save**. The log is saved as a text file.

Clearing the Log

To clear the contents of the log, click  to the left of the log area.

Closing the Log

Select **View > Log** to toggle the log window open or closed.

Chapter 6: The ASCA Reporting Tool

This chapter describes how to generate an inventory file from the Communication Manager and how to generate an HTML ASCA report using the inventory file. This chapter includes the following sections:

- [Avaya Software Compatibility Audit Report Overview](#) - Provides an overview of the process of generating an inventory file and outputting it to an HTML report using the ASCA reporting tool.
- [Downloading and Installing the Inventory Collection Script \(R2.x and R3.x\)](#) - Explains how to download and install the inventory script required for Release 2.x and 3.x of the Communication Manager.
- [Running the Inventory Script on the Communication Manager](#) - Explains how to run the Inventory script on the Communication Manager to create the inventory file.
- [Downloading the Inventory File to your Computer](#) - Explains how to download the Inventory file to your computer, once it has been created on the Communication Manager.
- [Generating and Filtering an ASCA Report](#) - Explains how to generate an ASCA HTML report from the inventory file and how to filter the HTML report.

Avaya Software Compatibility Audit Report Overview

The Avaya Software Compatibility Audit (ASCA) Report enables users without access to Avaya Software Update Manager to generate inventory reports. A script is run on the Communication Manager to generate an inventory file. ASCA then outputs the inventory file to an inventory report in HTML format. The information in the HTML report can be filtered, to display only the information you require.

The script that the Communication Manager uses to generate the inventory file can be found on Communication Manager release 4.0 or later. For Communication Manager release 2.x and 3.x, it is necessary to upload a service pack update containing the script and install it onto the Communication Manager.

This chapter describes the following:

- [Downloading and Installing the Inventory Collection Script \(R2.x and R3.x\)](#) - How to download and install the inventory script onto your Communication Manager for Release 3.x and 2.x.
- [Running the Inventory Script on the Communication Manager](#) - How to run the inventory script on the Communication Manager to generate the ASCA inventory file.

- [Downloading the Inventory File to your Computer](#) - How to download the inventory file from the Communication Manager to your computer.
- [Generating and Filtering an ASCA Report](#) - How to generate and filter the ASCA HTML report.

Downloading and Installing the Inventory Collection Script (R2.x and R3.x)

In order to generate the HTML report using ASCA, you must first run a script to generate an inventory file on the Communication Manager server.

On Communication Manager 4.0 release or later, the script can be found on the server. To run the script, refer to [Running the Inventory Script on the Communication Manager](#) on page 52.

For earlier models, you must upload and install a service pack (or patch) containing the script to your Communication Manager. The service pack can be copied to your computer from the Avaya Support website and uploaded to the Communication Manager server from your machine. This section describes how to upload and install the service pack.

Downloading the Service Pack to your Computer

If your Communication Manager is 3.x release or older, you need to download a service pack containing the inventory script from the Avaya support website.

To download the service pack to your computer:

1. Follow the link below to the avaya support website:
<https://support.avaya.com/japple/asca/help/patches.jsp>
2. Click **Download Inventory Collection Patches**.
3. Choose the correct service pack for your version of Communication Manager and click **Download**.
4. Save the file to your computer.

Note:

Do not change the name of the service pack file when saving it to your computer.

You are now ready to copy and install the service pack to the Communication Manager. Refer to [Copying the Service Pack to the Communication Manager](#) on page 47.


Copying the Service Pack to the Communication Manager

Once the relevant service pack has been downloaded to your computer, you need to copy it to the Communication Manager.

To copy a service pack from your computer to the Communication Manager:


1. Log into the Maintenance Web Interface on the Communication Manager (see [Figure 11](#)).

Figure 11: Communication Manager Maintenance Web Interface Login Window

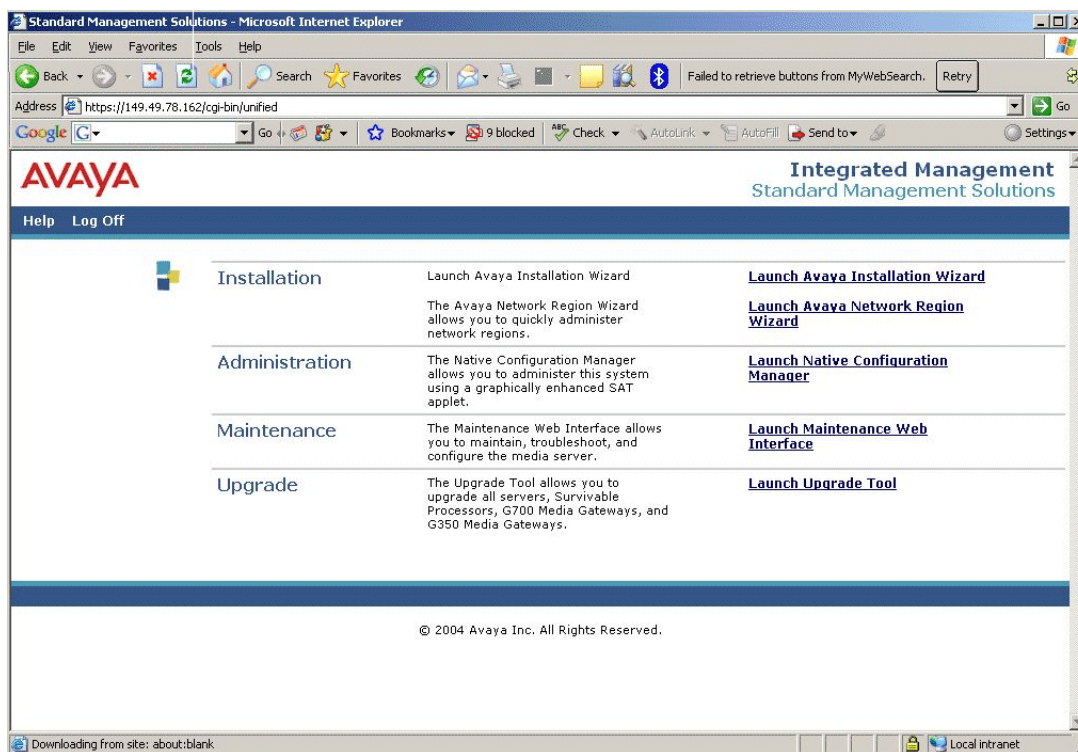

2. From the Maintenance Web Interface menu, select **Miscellaneous > Download Files** (see [Figure 12](#)).

Figure 12: Maintenance Web Interface Menu

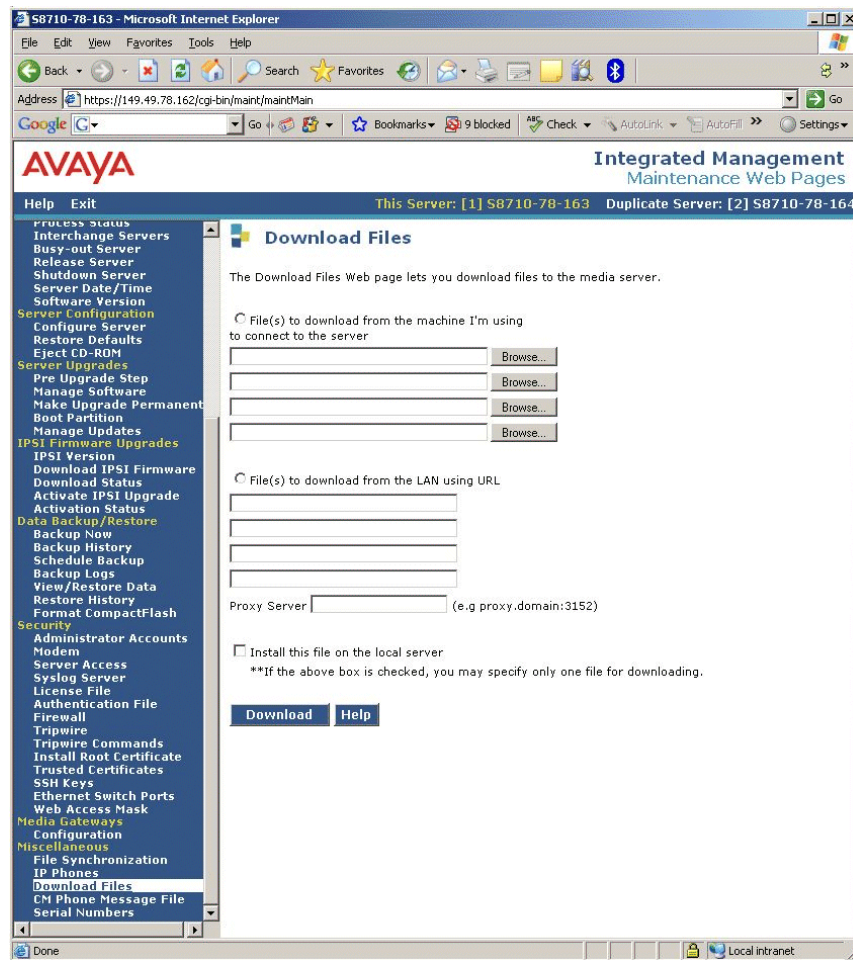

3. From the list of download methods, select **Files to download from the machine I'm using to connect to the server**.
4. Click **Browse** to get to the directory on the computer that contains the service pack.
5. Select the service pack and click **Download**.

You are now ready to install the service pack to the Communication Manager. Refer to [Installing the Service Pack onto the Communication Manager](#) on page 49.

Installing the Service Pack onto the Communication Manager

Once the service pack has been copied to the Communication Manager, you need to install it on the Communication Manager. This is done using the command line interface (CLI) on the Communication Manager. For Communication Manager Release 3.x and above, you must set up a telnet session and use a secure shell (SSH) to access the CLI on the Communication Manager.

Setting up a Telnet Session for accessing the CLI

When using Communication Manager older than version 3.0, you must set up a telnet session to access the CLI.

To set up a telnet session:

1. From the MS Windows start menu, click **Start > Run**. The Run dialog box opens.
2. From the Run dialog box, type `telnet 192.11.13.6` and press **Enter** to access the communication server.

Note:

For Communication Manager 3.0 and newer, you should set up a secure shell (SSH) for accessing the CLI. Do not use a Telnet session.


Setting up a secure shell (SSH) for accessing the CLI

When using Communication Manager 3.0 or newer, you need to set up a secure shell (SSH) to access the CLI. To use SSH, a third party client, such as PuTTY, must be installed on your computer. To download PuTTY, point your browser to <http://www.putty.nl/download.html>

To log on to the CLI using PuTTY:

1. Click **Start > Programs > PuTTY > PuTTY**. The PuTTY Configuration dialog box opens with the Basic Options for your PuTTY Session category displayed by default (see [Figure 13](#)).

Figure 13: PuTTY Configuration - Basic Options For Your PuTTY Session Dialog Box

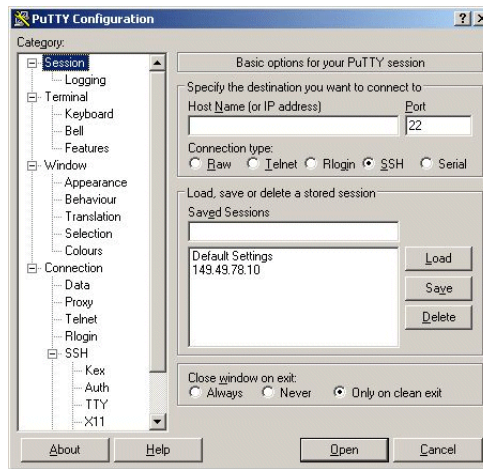

2. In the **Host Name (or IP address)** field:

- If access is directly through the Services port, enter the IP address 192 . 11 . 13 . 6 .

Or


- If access is via LAN or WAN, enter the IP address or Host Name of the server.

3. In the Port field, enter **22**.

4. In the Connection Type field, click **SSH**.

5. In the Category area, click **Connection > SSH**. The Options controlling SSH connections category is displayed (see [Figure 14](#)).

Figure 14: PuTTY Configuration - Options Controlling SSH Connections Dialog Box

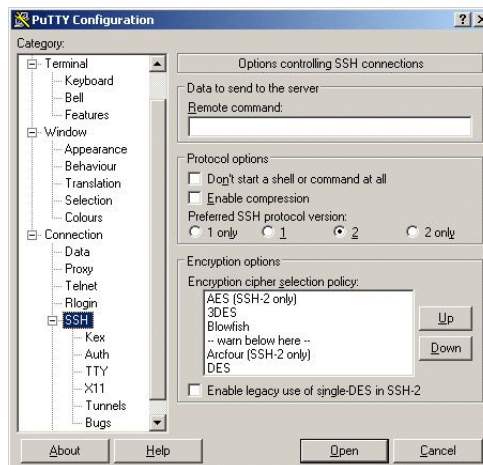

6. In the **Preferred SSH Protocol Version** field of the Protocol options area, select **2**.
7. In the Encryption options area, use the **Up** and **Down** buttons to set AES (SSH-2 only) as the first option and 3DES as the second option.
8. Click **Open**.
9. Click **Yes** to accept the host key. The PuTTY dialog box opens.

Note:

The first time you connect to the server, SSH prompts you to accept the server's host key. Save the host key to ensure you are not prompted for the host key in the future.

Note:

Many Avaya products support access with SSH. However, Avaya does not provide support for third party clients used for SSH access. Problems with SSH client, including PuTTY, are the responsibility of the user or the SSH client vendor.

Installing the Service Pack

Once you have started a telnet session or an SSH session you can begin installing the service pack to the Communication Manager.

Note:

The service pack must be copied to the `/var/home/ftp/pub` directory before starting the installation.

To install the service pack on the Communication Manager:

1. From the telnet or SSH session, type `192.11.13.6` if access is directly through the Services port.

Or

Type the IP address or the host name of the server if access is over the LAN or WAN.

2. Log in using the appropriate Login ID and password.
3. Type `update_unpack <update filename>` and press **Enter**.
4. Select the number corresponding to the service pack file and press **Enter**.

For example, `00.339.4-xxxx.tar.gz`.

5. To list Communication Manager files, and verify that the new service pack file was unpacked, type `update_show` and press **Enter**.

6. Type `update_activate <update name>`, where *update name* is the file name without the .tar.gz release or issue number of the service pack file and press **Enter**.

For example, `update_activate 00.0.339.4-xxxx`.

The Communication Manager may reboot. If the server reboots, you must wait until the restart or reset completes before entering additional commands. The Communication Manager displays a message that the service pack was applied.

Note:

If during a system reboot, you receive the message `opt/ecs/sbin/drestart 2 4 command failed`, no action is required.

7. To list the Communication Manager files, and verify that the service pack file was activated, type `update_show` and press **Enter**.
8. At the prompt `commit this software?`, type `y`.
9. To close the telnet window, type `q`.

Running the Inventory Script on the Communication Manager

The inventory script generates the inventory file that the ASCA reporting tool uses to generate an HTML ASCA report.

To generate the inventory file on the Communication Manager:

1. From a telnet or SSH session, log into the active Communication Manager server using an account with root privileges.
2. From the CLI, change the directory to `/opt/ecs/sbin`.
3. To run the script, type `asca_poll_script`.

The inventory file is generated and saved to the `/var/opt/platform/ASCA` folder. The script will automatically log into each gateway using `root/root`.

Note:

If you have changed passwords on any gateway, you will need to manually log into those gateways. To do this, you must execute the script with the `-u` option, i.e. **`asca_poll_script -u`**.

Note:

It is possible to run a more specific inventory when you run the script on the Communication Manager. Type `man asca_poll_script` for a complete guide to running the script.

Downloading the Inventory File to your Computer

Once the inventory file has been generated on the Communication Manager, you can download it onto your computer.

To download the inventory file to your computer:

1. From your computer, use FTP or SSH to navigate to the file.
2. Go to the /var/opt/platform/ASCA folder on the Communication Manager.
3. Copy the file ASCA_Inventory.txt to your computer.

You are now ready to generate the ASCA report. Refer to [Generating and Filtering an ASCA Report](#) on page 53).


Generating and Filtering an ASCA Report

The ASCA report displays information relating to all the elements of the CM, including the following groups: main servers, ESS's, LSPs, H.248 Gateways, TN Circuit Packs, DCP Endpoints, and IP Endpoints. For each element that has a version, you can display the currently installed version, and the latest available version. Installed versions that are not the latest version are highlighted in red.

To generate an ASCA Report:

1. From Avaya Software Update Manager, select **Tools > Generate ASCA Report**. The ASCA Report dialog box opens.

Figure 15: ASCA Report Dialog Box

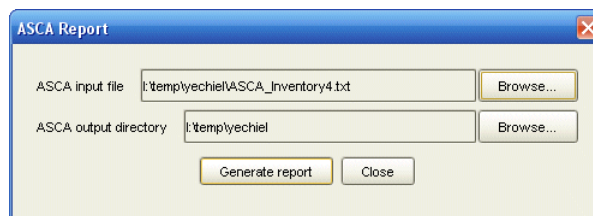

2. Click the ASCA input file **Browse...** button. The Open dialog box opens, enabling you to select the input inventory file.
3. Click the ASCA output directory **Browse...** button. The Open dialog box opens. Select the directory in which you want the ASCA HTML report file to be saved.
4. Click **Generate report** to create the report. A confirmation dialog box opens.

5. Click **OK** in the confirmation dialog box. The ASCA HTML report opens.

Figure 16: Avaya Software Compatibility Audit (ASCA) Report Dialog Box

Avaya Software Compatibility Audit Report

General script information:

Avaya Software Compatibility Audit Tool
Powered by Integrated Management Software Update Manager
Script Run Date: Wed Mar 21 13:05:32 EDT 2007
Script Version: 1.10
Script Option: -a -d
Script Result: Success
SysID: 42190

Groups filter

☒ Select / Unselect all
☒ Main Server
☒ ESS Servers
☒ LSPs
☒ H.248 Gateways
☒ TN Circuit Packs
☒ DCP Endpoints
☒ IP Endpoints

Version filter

☐ Select / Unselect all
☒ Not the latest
☐ Latest version
☐ Newer than the latest
☐ Non upgradeable

H.248 Gateways:

Gateway Name	Gateway IP Address	Platform Type	Serial Number
Lancaster	157.89.20.11	g350	061S38000047

Media Modules:

Slot	Type	Code	Suffix	HW Vintage	FW Vintage		VOP FW	
					Currently installed	Latest available	Currently installed	Latest available
v0	G350		D	1	25.33.0(A)	26.31.0		
v3	Analog	MM711	A	31	86	87		
v7	Analog (on-board)	A	6		86	87		

6. Click **Close** to close the ASCA Report dialog box.

Filtering the ASCA Report

You can filter the information contained in the ASCA report by hardware type, using the Group filter or by software version using the Version filter.

To filter the ASCA report:

1. To filter the report by group, select or clear the checkbox of the group or groups you want to display or hide.
2. To filter the report by version, select the checkbox of the version type you want to display.

Chapter 7: Downloading Software to Targets

This chapter describes how to download software to the targets in the Targets Table in the Gateways, Data Switches, and Circuit Packs view and CM Software Management view. It includes the following sections:

- [Download Files Overview](#) - Provides a short overview about download files and where they are located.
- [Configuring Software Libraries](#) - Describes how to configure the library for downloading software.
- [Configuring Download Parameters](#) - Describes how to view and configure download parameters.
- [Configuring the Media Server Software Repository](#) - Describes how to manage the software repository on the Media Server. Includes information on how to install license and authentication information and manage updates to a single CM Server.
- [Downloading](#) - Describes how to download software from both the Gateways, Data Switches, and Circuit Packs view and the CM Software Management view.
- [Scheduling Downloads](#) - Describes how to schedule a download for a later time or date.
- [Resetting Modules](#) - Describes how to reset devices after a download.
- [Setting Product Defaults](#) - Describes how to view and change default filenames.

Download Files Overview

Download files contain embedded software for Avaya modules. When a file is downloaded to a module, it affects the capabilities of the module. There are three types of download files:

- **Image** - An executable file for running the device.
- **Boot Loader** - A low-level executable for starting up the device.
- **Web Management** - An executable file providing web management capability to the device.

Note:

Not all download file types can be downloaded to all devices.

Downloading Software to Targets

All download files are stored in the `x:\Avaya_dir\mode_dir\userver\backup` directory of the server station, where:

- `x:\Avaya_dir` is the directory in which Avaya Network Manager was installed.
- `mode_dir` is CVS if you are running Avaya Network Configuration Manager in Standalone Mode.

Note:

Do not modify or delete the directory in which download files are stored.

The server station is the station running Avaya Network Manager in Standalone Mode. If you are running Avaya Software Update Manager remotely, all files retrieved from the Web and added manually are saved on the server, and only files on the server can be downloaded to modules.

You can copy files from the remote station to the server. For instructions on copying files to the server, refer to [Manually Adding Files](#) on page 90.

Configuring Software Libraries

This section explains how to configure the software libraries for downloading files from different locations. The local library is the NMS library. You can have many remote libraries, but only one local library.

To configure the software libraries:

1. Select the view in which you want to work (Gateways, Data Switches, and Circuit Packs view or CM Software Management view only).
2. Click .

Or

Select **Tools > Software Libraries**. The Software Libraries dialog box opens. The NMS (Network Management Server) local software library is selected by default.

Figure 17: Software Libraries Dialog Box - Software Libraries Tab

Software Libraries

Software Library Properties

Name	IP	Type
NMS	149.49.78.19	scp & ftp & tftp
myServer	135.64.102.133	ftp

Name: myServer

IP: 135.64.102.133

Location: Remote

Description: my Server

Type: ftp

TFTP Server Secure Path

FTP User Name: ftpUser

FTP Password:

Retype FTP Password:

FTP Server Path

SCP User Name:

SCP Password:

Retype SCP Password:

SCP Server Path

Refresh Add Delete Apply

Defining a Remote Software Library

To define a remote software library:

1. From the Software Libraries dialog box, select the **Software Libraries** tab.
2. Click **Add** to insert a new line in the Software Libraries Properties Table. A new line appears and the software parameters become available to edit.
3. Edit the software parameters (see [Figure 17](#)). For more information on software parameters, refer to [Software Libraries Parameters](#) on page 58.
4. Click **Apply**. The selected software library is updated with the new parameters.

Software Libraries Parameters

The following table displays the list of software parameters by which you can define a remote library:

Table 10: IP Software Library Parameters

Parameter	Description
Name	The name of the software library.
IP	The IP address of the software library.
Location	The location of the software library.
Description	A description of the software library.
Type	The protocol type supported by the server where the software library resides (FTP, TFTP, SCP, or any combination).
TFTP Server Secure Path	The path of the file to download on the TFTP server. This field is enabled for NMS only.
FTP User Name	The user name for the FTP server. This field is enabled for FTP only.
FTP Password	The password for the FTP server. This field is enabled for FTP only.
Retype FTP Password	Password confirmation for the FTP server. This field is enabled for FTP only.
FTP Server Path	The path of the file to download on the FTP server. This field is enabled for NMS only.
SCP User Name	The user name for the SCP server. This can be a local or domain user name. This field is enabled for SCP only. Note: For details of setting domain users for SCP, please refer to the Avaya support website (www.support.avaya.com).
SCP Password	The password for the SCP server. This field is enabled for SCP only.
Retype SCP Password	Password confirmation for the SCP server. This field is enabled for SCP only.
SCP Server Path	The path of the file to download on the SCP server. This field is enabled for NMS only.


Viewing Files Available to Download

In the Files tab of the Software Libraries dialog box, you can view the files available for download.

To view the files available for download from the selected software library:

1. From the Software Libraries dialog box, click the **Files** tab.
2. From the **Software Library** drop-down list, select the software library whose files you want to view. The files in the selected software library are displayed in the table.

Figure 18: Software Libraries Dialog Box - Files Tab

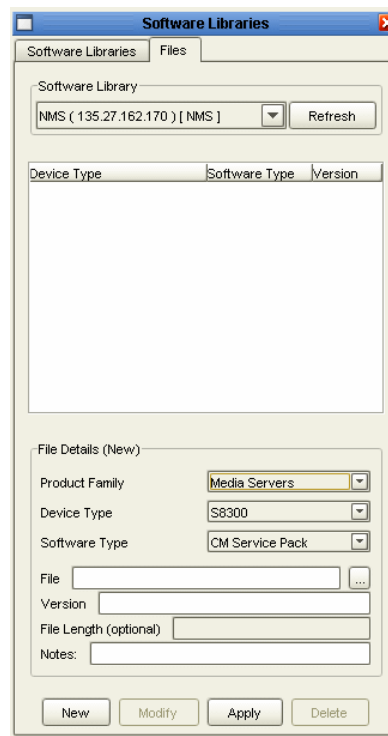


Adding, Editing, or Deleting a File

To add a file to the NMS (local) Software Library:

1. From the Software Libraries dialog box, click the **Files** tab.
2. From the **Software Library** drop-down list, select the NMS Software Library. A table of files available in that library is displayed. File Details parameters appear below the table in read-only format.
3. Click **New** to enter new file details. The File Details Parameters now appear in read-write format.
4. From the **Product Family** drop-down list, select the relevant Product Family for the file.
5. From the **Device Type** drop-down list, select the relevant Device Type for the file.
6. From the **Software Type** drop-down list, select the relevant Software Type for the file.
7. To the right of the **File** field, click  to select the file you want to add. The Open dialog box opens.
8. Select the file you want to add and click **Open**. The file path appears in the **File** field.
9. In the **Version** field, enter the version of the file. (Avaya Software Update Manager populates this field when you choose the file from the local file system.)
10. In the **File Length** field, specify the length of the file. (Avaya Software Update Manager populates this field when you choose the file from the local file system.)
11. In the **Notes** field, add any notes you want. (This parameter is optional.)
12. Click **Apply** to add the file to the Software Library. The progress of the file download is displayed in the Progress Information bar (refer to [Figure 19](#)).

 Figure 19: Software Libraries File Download - Progress Information Bar



You can add file details to a Remote Software Library. Avaya Software Update Manager cannot add/delete files in remote libraries.

To modify file details in the Software Library:

1. From the Software Libraries dialog box, click the **Files** tab.
2. From the Software Library drop-down list, select the Software Library. A table of files available in that library is displayed. The File Details parameters appear below the table in read-only format.
3. Select the file entry you want to modify.
4. Click **Modify** to enter file details. The File Details parameters appear in read-write format.

5. From the **Product Family** drop-down list, select the relevant Product Family for the file.
6. From the **Device Type** drop-down list, select the relevant Device Type for the file.
7. From the **Software Type** drop-down list, select the relevant Software Type for the file.
8. In the File field, enter the full path name.
9. In the Version field, enter the version of the file.
10. In the File Length field, specify the length of the file. (This parameter is optional.)
11. Click **Apply** to update the file details in the Software Library. The progress of the file download is displayed in the Progress Information bar (refer to [Figure 19](#)).

To delete a file from the Software Library:

1. From the Files tab of the Software Library dialog box, select the file you want to delete from the Devices Table.
2. Click **Delete**. The file is deleted from the library. Avaya Software Update Manager cannot delete files in remote libraries.

Configuring Download Parameters

This section explains how to view and configure the download parameters from the Gateways, Data Switches, and Circuit Packs view or the CM Software Management view.

To configure the download parameters:

1. Select the view for which you want to configure the download parameters (Gateways, Data Switches, and Circuit Packs view or CM Software Management view).
2. In the Targets Table, select the target or targets you want to configure.

Note:

When you open Avaya Software Update Manager for the first time, the Targets Table appears with no entries. To populate the Targets Table with data, see [The Targets Table](#) on page 21.


3. Click .

Or

Select **Actions > Target Details**. The Target Details dialog box opens. If you selected multiple targets, only the fields which are the same for all the selected targets appear with data. All other fields appear empty.

4. Specify the download parameters. (For more information on download parameters, refer to [Download Parameters](#) on page 62.)

Figure 20: Target Details Dialog Box

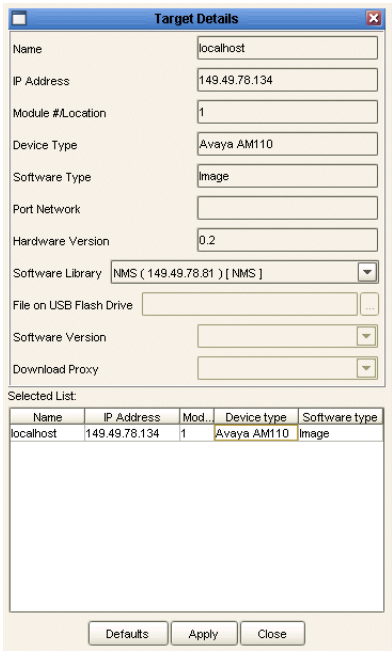

The Target Details dialog box is a window with a title bar and a close button. It contains several input fields and a table. The fields are: Name (localhost), IP Address (149.49.78.134), Module #/Location (1), Device Type (Avaya AM110), Software Type (Image), Port Network (empty), Hardware Version (0.2), Software Library (NMS (149.49.78.81) [NMS]), File on USB Flash Drive (empty), Software Version (empty), and Download Proxy (empty). Below these fields is a 'Selected List' table with columns: Name, IP Address, Mod., Device type, and Software type. The table contains one row: localhost, 149.49.78.134, 1, Avaya AM110, Image. At the bottom are buttons for Defaults, Apply, and Close.

Name	IP Address	Mod.	Device type	Software type
localhost	149.49.78.134	1	Avaya AM110	Image

Download Parameters

The following table displays a list of download parameters:

Table 11: Download Parameters

Parameter	Description
Name	The logical name of the selected target(s).
IP Address	The IP address of the selected target(s).
Module #/Location	The number and location of the slot that the selected target occupies in the device(s).
Device Type	The type of device associated with the selected target(s).
Software Type	The type of software downloaded to the selected target(s).
Port Network	The port network associated with the TN Board. Only applies to TN Boards.
	1 of 2

Table 11: Download Parameters (continued)

Parameter	Description
Hardware Version	The device hardware version or vintage.
Software Library	The location from where to download the new file.
File on USB Flash Drive	The name of the USB flash drive file associated with the selected target.
Software Version	The software version of the new file.
Download Proxy	The IP address of the CM to use when downloading files to TN Boards.
	2 of 2

Note:

If multiple targets are selected, only parameters whose value is the same for all selected targets are displayed.

Configuring the Media Server Software Repository

This section explains how to manage the software repository on the Media Server. From the Media Server Details dialog box, you can manage updates and install license or authentication files to the software repository on a single Media Server.

Note:

The Media Server Details dialog box is only accessible from the CM Software Management tab.

To access the Media Server Details dialog box:


1. From the Avaya Software Update Manager User Interface, select the **CM Software Management** tab.

2. Click .

Or

Select **Actions > Target Details**. The Media Server Details dialog box opens.

Figure 21: Media Server Details Dialog Box - Release Management Tab

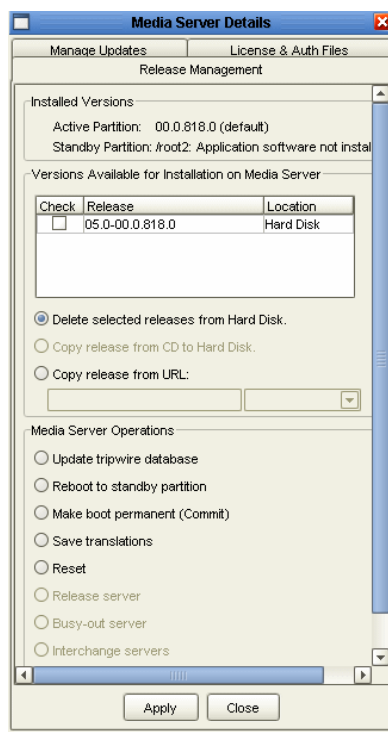

Media Server Release Management

The Release Management tab enables you to copy a release from an HTTP server to the hard drive. It lists the currently installed versions of Media Server software for both the active and standby partitions. In addition, it lists up to three newer versions available for installation on the Media Server and the functions required to install or delete a release to the hard disk.

The currently installed versions of the Media Server software for both the active and standby partitions appear in the Installed Versions area of the dialog box.

Managing Software Releases

A table of up to three versions available for installation on the Media Server and their current location (Hard Disk, CDROM or URL) is displayed in the Versions Available for Installation on Media Server area (see [Figure 21](#)).

To delete a software release from the table:

1. From the Versions Available for Installation on Media Server Table, click the checkbox of the version you want to delete.
2. Select **Delete selected releases from Hard Disk**.
3. Click **Apply**.

To copy a release from a CD-Rom to the hard disk:

1. From the Versions Available for Installation on Media Server Table, click the checkbox of the version you want to install.
2. Select **Copy release from CD to Hard Disk**.
3. Click **Apply**.

To copy a release from a URL to the Hard Disk:

1. From the Versions Available for Installation on Media Server Table, click the checkbox of the version you want to install.
2. Select **Copy release from URL**.
3. Specify the address of the URL in the **Copy release from URL** field.
4. Specify the software version you want from the drop-down list adjacent to the **Copy release from URL** field.
5. Click **Apply**.

Media Server Operations

The Media Server Operations area of the Release Management Tab enables you to perform a number of functions on the Media Server.

To perform one of the Media Server Operations:

1. In the Media Server Operations area, click the operation that you want to perform from those listed.

The following options are available:

- **Update tripwire database** - Clears all changes following an upgrade.
- **Reboot to standby partition** - Reboots the system to the standby partition.
- **Make boot permanent (Commit)** - Makes the active partition the boot partition.
- **Save Translation** - Saves all translations configured through SAT.
- **Reset** - Resets the Media Server.
- **Release server** - Releases a server currently in busy out service.
- **Busy-out server** - Switches server from standby to busy out service. (Only duplex servers.)
- **Interchange servers** - Switches between active and standby servers. (Only duplex servers.)
- **Force interchange**


2. Click **Apply**.

Media Server Updates

The Manage Updates tab displays a table with the updates available for installation and their current status (packed, unpacked, or activated). You can install or remove a service update from the Media Server.

The table of installed updates provides the following information - Update ID (containing the release version and service update number), Status, and Type.

Figure 22: Media Server Details Dialog Box - Manage Updates Tab

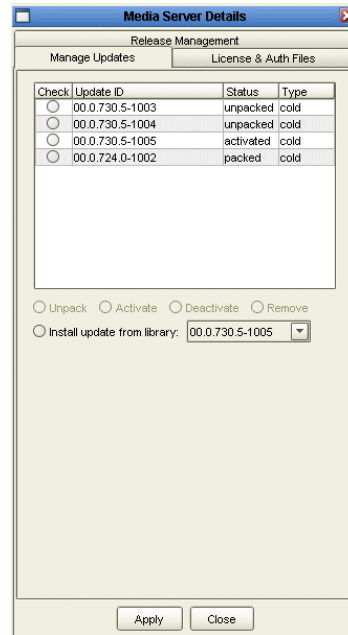

To unpack, activate, or remove a service update:

1. Select the service update that you want to use from the List of installed updates table.
2. Click the operation you want to perform from the options listed below the List of installed updates table.

The operations that may be performed on a selected service update depend on the status of the update. The following list describes the service update status and the operations that may be performed on a service update with the status described:

- **Packed** - The service update file is located on the media server. You may choose to **unpack** the patch or **remove** it from the `/var/home/ftp/pub` directory.
- **Unpacked** - The service update file was unpacked. You may choose to **activate** the service update or **remove** the extracted files from the `opt/updates` directory.
- **Activated** - The service update was unpacked and activated. You may choose to **deactivate** the service update. When you deactivate the service update, the status reverts to **Unpacked**.

3. Click **Apply**.
4. Click **Close**. The dialog box closes.

To install a service update from a library:


1. Select the library from the drop-down list. A list of available updates is displayed.
2. Select the service update you want to install.

3. Click **Unpack** from the options listed below the List of installed updates table.
4. Click **Apply**. The service update is copied and unpacked. Its status appears as **Unpacked**.
5. To activate the service update, select **Activate**.
6. Click **Apply**. The status changes to **Activated**.
7. Click **Close**. The dialog box closes.

Media Server License and Authorization Files

The License & Auth Files tab displays license status information for the Media Server. It also enables you to install license and authorization files.

Figure 23: Media Server Details Dialog Box - License & Auth Files Tab

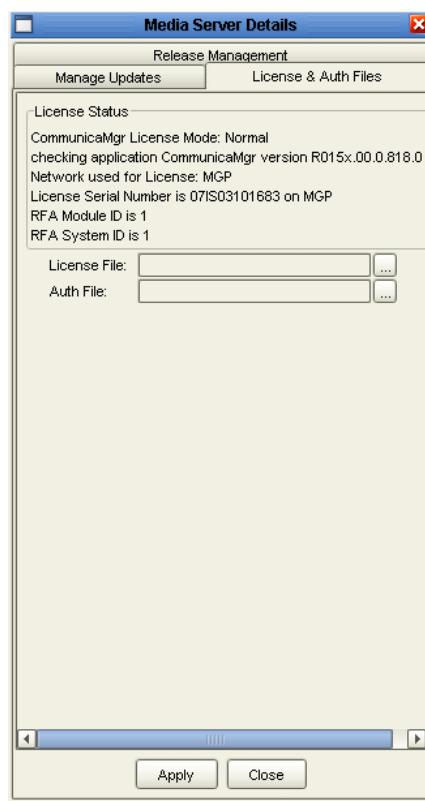

To install a license file:

1. Click  in the License File row of the License & Auth File tab in the Media Server Details dialog box. The Open dialog box opens.
2. Select the license file you wish to install and click **Open**. The path of the selected file is displayed in the License File field.

3. Click **Apply**.
4. Click **Close** to close the dialog box.

To install an authorization file:

1. Click  in the Authorization File row of the License & Auth File tab in the Media Server Details dialog box. The Open dialog box opens.
2. Select the authorization file you wish to install and click **Open**. The path of the selected file is displayed in the Auth File field.
3. Click **Apply**.
4. Click **Close** to close the dialog box.

Downloading

This section describes how to download software to targets, and explains the download status messages that are displayed while the files are downloading. This section includes:

- [The Download Process - Gateways, Data Switches, and Circuit Packs View](#) - Describes the download process from the Gateways, Data Switches, and Circuit Packs view.
- [The Download Process - CM Software Management View](#) - Describes the download process from the CM Software Management view
- [Download Process Status Messages](#) - Lists and explains the download status messages.

The Download Process - Gateways, Data Switches, and Circuit Packs View

To start the download process for Gateways, Data Switches, and TN Boards:

1. Select the **Gateways, Data Switches, and Circuit Packs** tab.
2. In the Targets Table, select the target or targets to which you want to download.

Note:

When you open Avaya Software Update Manager for the first time, the Targets Table appears with no entries. To populate the Targets Table with data, see [The Targets Table](#) on page 21.

3. Click .

Or

Select **Actions > Download Now**. The download process begins.

Note:

Once the download process begins, it cannot be stopped.

The Download Process - CM Software Management View

The CM Software Management dialog box is used to install and upgrade CM Server (Media Server) software and install license or authentication files to the software repository on the CM Server. You can perform upgrades on multiple servers at the same time.

Note:

The CM Software dialog box is only accessible from the CM Software Management tab.


To access the CM Software Management dialog box:

1. Select the **CM Software Management** tab.
2. Click .

Or

Select **Actions > Target Details**. The CM Software Management dialog box opens.

Figure 24: CM Software Management Dialog Box - CM Software Upgrade/Update Tab

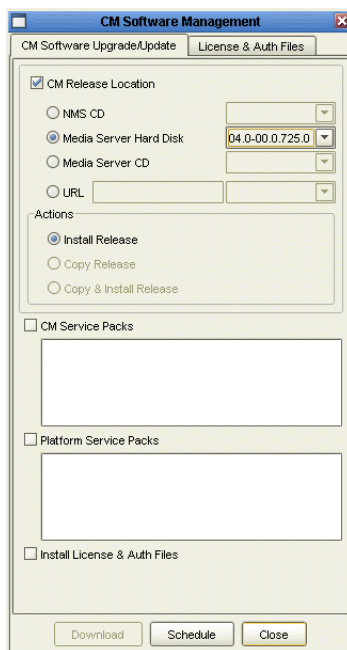

Upgrades and Updates to the Communication Manager


The CM Software Upgrade/Update tab enables you to copy a release from an HTTP server to the hard drive of one or more CM Servers. You can choose the source location of the release you want to download, copy and/or install a release, and install associated updates, license files, and authentication files.

Upgrading or Updating Media Server Releases

To install a release on one or more Media Servers:

1. Click the **CM Software Upgrade/Update** tab in the CM Software Management dialog box (see [Figure 24](#)).
2. Select one or more of the targets that you want to upgrade in the Targets Table.
3. Click the **CM Release Location** checkbox.
4. Click one of the following sources from which you want to download the software release:
 - **NMS CD**
 - **Media Server Hard Disk**
 - **Media Server CD**
 - **URL** - specify the URL from which you want to download the software.
5. From the drop-down list next to the selected media source, choose the software version you require.
6. Select one of the following actions to perform:
 - **Install Release** - installs the release to the selected Media Server(s).
 - **Copy Release** - copies the release to the selected Media Server(s).
 - **Copy & Install** - copies the release to the selected Media Server(s) and unpacks and installs it.
7. Click **Download** to begin. The Job Summary window opens in the CM Software Management dialog box, displaying a summary of the download currently being performed (see [Figure 25](#)).

Figure 25: CM Software Management - Job Summary Window

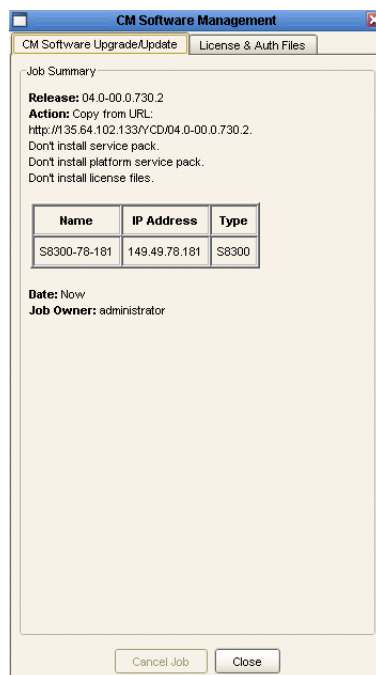

Note:

The Cancel Job button is disabled during a download. It is not possible to cancel a job after the download has started.

8. Click **Close** to close the dialog box.

Installing a CM Service Update

To install a CM service update:

1. Click the **CM Software Upgrade/Update** tab in the CM Software Management dialog box.
2. Select one or more of the targets that you want to upgrade in the Targets Table.
3. Click the **CM Service Packs** checkbox. A list of CM Service Packs appears in the CM Service Packs table.
4. Select the service update you want to install.
5. Click **Download**. The Job Summary window opens in the CM Software Management dialog box, displaying a summary of the download currently being performed (see [Figure 25](#)).
6. Click **Close** to close the dialog box.

Installing a Platform/Security Update


To install a platform/security update:

1. Click the **CM Software Upgrade/Update** tab in the CM Software Management dialog box.
2. Select one or more of the targets in the Targets Table that you want to upgrade.
3. Click the **Platform/Security Update** checkbox.
4. Select the service update you want to install.
5. Click **Download**. The Job Summary window opens in the CM Software Management dialog box, displaying a summary of the download currently being performed (see [Figure 25](#)).
6. Click **Close** to close the dialog box.

Assigning License and Authentication Files

The License and Authentication tab of the CM Software Management dialog box enables you to view, add, assign or delete license and authentication files for devices selected. The Assignment Table lists the licenses and authentication files assigned to the devices selected in the Targets Table. The License & Authentication files Table displays files available to assign.

Figure 26: CM Software Management Dialog Box - License & Auth Files Tab

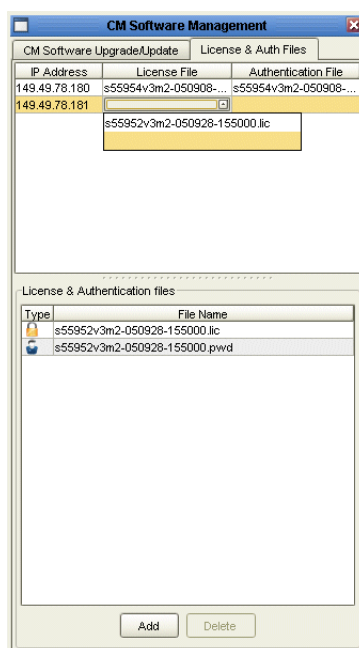

Viewing Assigned License and Authentication Files

To view license and authentication files currently assigned to devices in the Targets Table:

1. In the Targets Table, select the devices you want to view.
2. Click the **License & Auth Files** tab in the CM Software Management dialog box. The Devices Table (upper table) displays licensing and authentication file information for the devices selected.

Assigning License and Authentication Files to a Device

The License & Authentications Files Table (lower table) lists the license and authentication files available for installation.

To assigning a file from the License & Authentication Files Table to a device:

1. Click the **License & Auth Files** tab in the CM Software Management dialog box.
2. Select the file that you want to assign from the License & Authentication Files Table.
3. In the Devices Table, click the row of the device to which you want to assign the file. A drop-down list with available files opens.

Note:

If you click the Authentication file row when trying to assign a License file, or click the License file row when trying to assign an Authentication file, the option to assign the file is not available and the Assign tab is disabled.

4. To assign the file to the selected device, select the appropriate file from the drop-down list.
5. In the CM Software Upgrade/Update tab, click the **Install License & Auth Files** checkbox. This ensures that the file is assigned when the software upgrade is performed.

Note:

A License or Authentication file can only be assigned once.

Adding a file to the License & Authentication Files Table

To add a file to the License & Authentication Files Table:

1. Click the **License & Auth Files** tab in the CM Software Management dialog box.
2. Click **Add**. The Open dialog box opens.
3. Select the file you want to add.
4. Click **Open**. The selected file now appears in the License & Auth Files Table.

Deleting Files From the License & Authentication Files Table

To delete files from the License & Authentication Files Table:

1. Click the **License & Auth Files** tab in the CM Software Management dialog box.
2. From the License & Authentication Files Table, select the file that you want to delete.
3. Click **Delete**. The selected file is removed from the License & Authentication Files Table. This action also deletes any assignments to devices in the Targets Table associated with the deleted file.

Download Process Status Messages

During the download process, Avaya Software Update Manager displays the download progress for each target in the Download Progress and File Size columns of the Targets Table.

Avaya Software Update Manager also displays the download status in the Status column of the Targets Table. The statuses that are displayed vary from device to device. The table below lists the different statuses, with a description of each status and the device types to which the status is applicable. For more information about the Targets Table, refer to [Chapter 3: The Targets Table](#). For a list of errors that can occur during download, refer to [Appendix C: Troubleshooting](#).

Table 12: Download Status Messages

Status	Description	Devices
Ready	The target is idle and downloading can begin. Only displayed before the first download for the target after the target was added to the Targets Table, or after a delayed download was cancelled.	All.
Waiting	Download process is waiting while software is being downloaded to other targets.	All.
Waiting for download on [time and date]	User requested download to begin later.	All.
Setting Parameters	Configuration details are being sent to the agent.	Only for Avaya P330 Devices.
Testing	The agent is testing whether download is possible.	Only for Avaya P330 Devices.
Erasing Flash	The agent is erasing flash memory.	Only for Avaya P330 M400, Devices.
1 of 2		

Table 12: Download Status Messages (continued)

Status	Description	Devices
Downloading	The software is being downloaded.	All Devices.
Rebooting After Download	The device associated with the target is rebooting.	All except for Avaya P330, Devices.
Data Connection Established	The software is being downloaded.	All.
Download Successful	The download was completed successfully.	All.
Download Failed	The download failed.	All.
Download Failed with error: <i>Error description</i>	The download failed due to the listed error. For more information about error messages, refer to Appendix C: Troubleshooting .	All.
Setting Default Flash	The version that was downloaded was made into the default version.	All.
Downloading Boot Image	A Boot Image is being downloaded.	All.
Downloading Image to APP1	The Image is being downloaded to Bank A of the device.	All.
Downloading Image to APP2	The Image is being downloaded to Bank B of the device.	All.
Synchronizing Standby Supervisor	After a successful download, the files are being copied to the backup agent, if it exists.	All.
2 of 2		

Scheduling Downloads

This section explains how to schedule a download for a later time or date.

Opening the Schedule Download Dialog Box

To open the Schedule Download dialog box from the Gateways, Data Switches, and Circuit Packs view:

1. Select the **Gateways, Data Switches, and Circuit Packs** tab.
2. Select the target or targets to which you want to download from the Targets Table.
3. Select **Actions > Schedule Download**. The Schedule Download dialog box opens (see [Figure 28](#)).

To open the Schedule Download dialog box from the CM Software Management view:

1. Select the **CM Software Management** tab.
2. Click .

Or

Select **Actions > Schedule Download**. The CM Software Management dialog box opens.

3. From the CM Software Upgrade/Update tab in the CM Software Management dialog box, click **Schedule** (see [Figure 24](#)). The Schedule Download dialog box opens (see [Figure 28](#)).

Figure 27: Schedule Download Dialog Box

Schedule Download (Edit)

Retry Download

Maximum Download Retries: 0

Delay Between Retries [seconds]: 0

Job date: 18:56 Wednesday 18 Apr 2007

Job owner: administrator ☒ Reset after download

Name	IP Address	Module #/L...	Device type	Software t...
AM110-135	149.49.78...	1	Avaya AM...	Image

Details

Software Library: MyTest

Software Version: L1.0.0_29.01

Add Remove

Download Schedule Cancel Job Close

Viewing Schedule Download Information

The Schedule Download dialog box enables you to view schedule information and target details for the targets you have selected. Select the target you want to view from the Schedule Download Table.

The Schedule Download dialog box displays the following information about the selected target:

Table 13: Schedule Download Parameters

Parameter	Description
Maximum Download Retries	The maximum number of times for Avaya Software Update Manager to retry downloading in the event of a download failure.
Delay Between Retries (Seconds)	The number of seconds delay between download retries, in the event of a download failure.
Job Date	The date the download is to be executed for the selected target.
Job Owner	The owner of the scheduled job.
1 of 2	

Table 13: Schedule Download Parameters (continued)

Parameter	Description
Reset After Download	Resets the device following a successful download if this checkbox is selected.
Software Library	The Software Library from which the software is downloaded.
Software Version	The Software Version of the selected target.
2 of 2	


Scheduling Software Downloads

To schedule downloads:

1. In the Retry Download area, specify the Maximum Download Retries and the Delay Between Retries in the event of a download failure.
2. Click the **Reset after download** checkbox to automatically reset the device after a successful download.
3. Click **Download** to download immediately.

Or

Click **Schedule** to schedule the download to take place at a later date. The Schedule Calendar opens (see [Figure 28](#)).

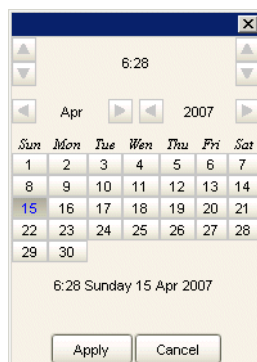Figure 28: Schedule Calendar

4. From the Schedule Calendar, set the time, date, and month at which you want the download to begin, as follows:
 - Use the change hour buttons to set the hour.
 - Use the change minute buttons to set the minute.
 - Use the change year buttons to set the year.
 - Use the change month buttons to set the month.
 - In the calendar section, click the day of the month to set the day.
5. Click **Apply**. In the Targets Table, the Status column for the device set for scheduled download displays *Waiting for download on [time and date of download]* until the download begins.

Cancelling A Scheduled Download

To cancel a scheduled download, from the relevant view:

1. Select the device or devices for which you want to cancel a scheduled download.
2. Select **Actions > Schedule Download**. The Schedule Download dialog box opens.
3. Select the targets for which you want to cancel the scheduled download.
4. Click **Remove**. The scheduled downloads are cancelled.

Note:

This option is only available if all the devices you selected are configured for scheduled download.

Resetting Modules

Some device modules need to be reset before a change to their software takes effect. Avaya Software Update Manager provides the ability to reset selected modules on your network.

**CAUTION:**

Resetting an individual module in a device may cause the entire device to reset. For example, if you reset the module which is currently the device's master agent, the entire device resets. This may disrupt traffic on your network.

To reset modules on your network:

1. Click the view that you require (Gateways, Data Switches, and Circuit Packs view or CM Software Management view).
2. Select targets for the modules you want to reset in the Targets Table.

Note:

Each type of software for a module is represented by a row in the Targets Table. Some modules may have more than one entry in the table.

3. Click .

Or

Select **Actions > Reset**. The selected modules are reset.


Setting Product Defaults

This section explains how to view and change the default filenames for the software files that are downloaded to targets.


To view and change default filenames:

1. Select **Tools > Product Defaults**. The Product Defaults dialog box opens.

Figure 29: Product Defaults Dialog Box

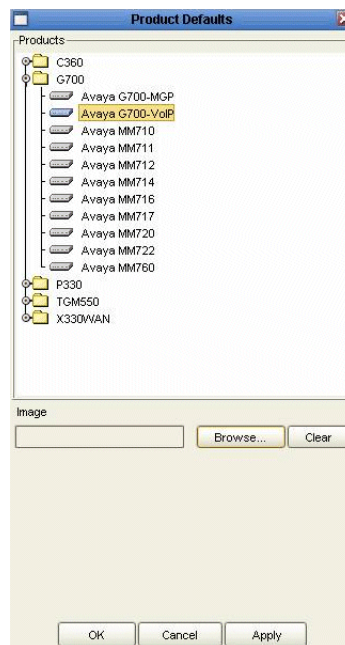

2. Click on the name of a product family to display a list of product types belonging to that family underneath the family name.
3. Select a product type. The default filename for each relevant download file type appears in the appropriate field.
4. Click **Browse...** to look for a different default file. The Software Version Selection dialog box opens. The Software Version Selection dialog box lists the files on the server.

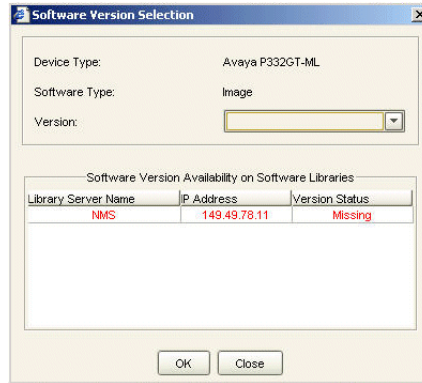Figure 30: Software Version Selection Dialog Box

-
5. Select a file version. A version number that appears in green is present in all of the displayed libraries. A version number that appears in red is present in only some of the displayed libraries.
 6. Click **OK**. The Software Version Selection dialog box closes.
 7. Click **Apply** to apply the new filename. Click **OK** to apply the new filename and close the Product Defaults dialog box.

Chapter 8: Analyzing and Retrieving from the Web

This chapter explains how to check software currently loaded in devices against the latest release of the software on the Avaya website. It also describes how to manually add files to the Avaya Software Update Manager server. If a device is not using the newest software, you can use Avaya Software Update Manager to retrieve and download the relevant software for the device.

This chapter includes the following sections:


- [Requirements for Retrieving Software from the Web](#) - Describes the information you need to begin retrieving software from the web using Avaya Software Update Manager.
- [Performing Web Analysis](#) - Explains how to check the update status of currently loaded software versions against the newest versions on the Avaya website.
- [Retrieving New Versions from the Web](#) - Explains how to retrieve new software versions from the Avaya website.
- [Manually Adding Files](#) - Explains how to add files from other sources to the Avaya Software Update Manager server.

Requirements for Retrieving Software from the Web

In order to be able to use the downloading tools in Avaya Software Update Manager, you need to define the SFAP Login Parameters, the website through which to download software, and your proxy server information. You will be unable to begin the download process in any view in Avaya Software Update Manager until you have completed these steps.

If you attempt to retrieve software versions from the web before defining SFAP Login parameters, you will receive the following error message:

Figure 31: Error Message - SFAP Login Parameters not defined

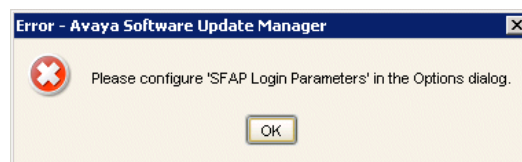

For information on how to define SFAP Login Parameters, refer to [Chapter 2: Getting Started](#) on page 17.

Performing Web Analysis

Avaya Software Update Manager analyzes the Avaya website and compares the software versions currently loaded in devices against the newest versions available on the web.

To perform web analysis:

1. Click the view within which you want to work (Gateways, Data Switches, and Circuit Packs view or CM Software Management view only).
2. Click .

Or

Select **Tools > Image Analyzer**. Avaya Software Update Manager analyzes the software versions available on Avaya's website and updates the **State** column in the Targets Table. For information on the status icons used in the Targets Table, refer to [Status Icons](#) on page 23.

Retrieving New Versions from the Web

You can use Avaya Software Update Manager to retrieve software versions from Avaya's website. Avaya Software Update Manager places the retrieved version in your default directory. You can then download the versions to targets. For information on downloading software to targets, refer to [Chapter 7: Downloading Software to Targets](#).

Note:

To be able to retrieve software from the web, SFAP Login Parameters must be defined in Avaya Software Update Manager. If you have not already defined SFAP Login Parameters, refer to [Chapter 2: Getting Started](#) on page 17.


To retrieve new versions from the web:

1. Click the view within which you want to work (Gateways, Data Switches, and Circuit Packs view or CM Software Management view only).
2. Click .

Or

Select **Tools > Retrieve Image From the Web**. The Retrieve From the Web dialog box opens.

Figure 32: Retrieve From the Web Dialog Box

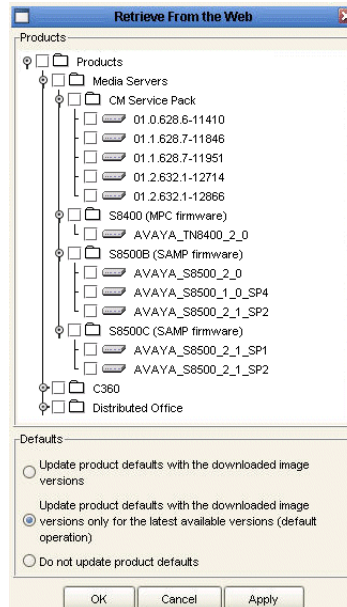**Note:**


If you have already performed a web analysis, device types for which newer software is available on the website (but not on your hard disk) are automatically selected. If you have not performed a web analysis, or if the Targets Table is empty, you must manually select the device types for which you want to retrieve new software.

Note:

You can display information about the new software version by placing the cursor on a row in the Targets Table. For further information, refer to [Using Tooltips](#) on page 14.

3. Select the defaults option you want use for downloading in the **Defaults** section of the Retrieve From the Web dialog box.

Figure 33: Retrieve From the Web Dialog Box

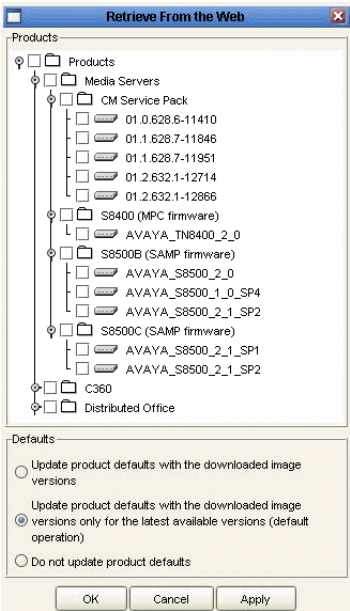

The following table lists the available options.

Table 14: Retrieve From the Web Defaults Options


Option	Description
Update product defaults with the downloaded image versions	Select this option to update the product default with the downloaded version.
Update product defaults with the downloaded image versions only for the latest available versions (default operation)	Select this option to update the product default only if the downloaded version is the latest version available for this product. This is the default option selected.
Do not update product defaults	Select this option to leave the product default unchanged.

4. Click **OK**. The Retrieve From the Web dialog box closes.


Or

Click **Apply**. The Retrieve From the Web dialog box remains open.

The Retrieve From the Web status is displayed in the status window (see [Figure 34](#)). It shows the name of the file currently being retrieved and the progress of the current retrieval.

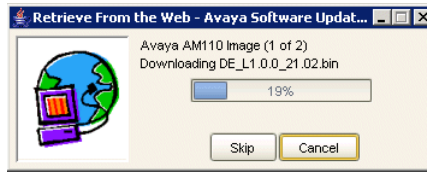Figure 34: Retrieve from the Web - Status Window

In the event of a download failure, Avaya Software Update Manager will generate an error message to inform you that the selected files were not downloaded (see [Figure 35](#)).

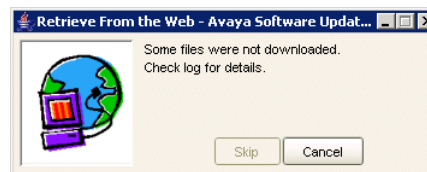Figure 35: Retrieve from the Web - Download Failure Message Window

Note:

Files retrieved from the web are placed in the local software library directory on the Network Management Station (NMS). The local software library is the directory `x:\Avaya_dir\mode_dir\userver\backup\library\` directory of the server station, where:

`x:\Avaya_dir` is the directory in which Avaya Network Manager was installed.

`mode_dir` is CVS if you are running Avaya Network Configuration Manager in Standalone Mode.

Note:

Do not modify or delete the directory in which download files are stored.

5. To abort the current retrieval and go on to the next file, click **Skip**. To abort the current retrieval and cancel all the remaining retrievals, click **Cancel**.

Manually Adding Files

You can manually copy image files to the software library.


To copy a download file to the server:

1. Click .

Or

Select **Tools > Add Image File**. The Software Libraries dialog box opens.

Figure 36: Software Libraries Dialog Box - Files Tab

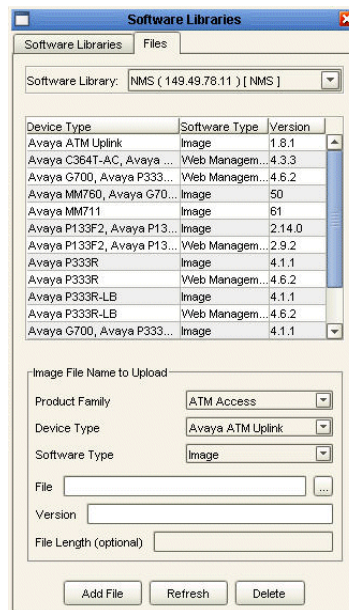

2. Select the software library where the new file is located.
3. Select the product family, device type, and software type of the new file in the **Image File Name to upload** section.
4. Click  in the **File** field to browse to the location of the file and click **Open**.
5. Enter the file's version number in the **Version** field (for Remote Mode only).

Note:

If you are not running Software Update Manager in Remote Mode, the Version field is populated automatically when the image from the NMS server is selected.

6. Enter the file's size in the **File Length (optional)** field.
7. Click **OK**. The file is copied to the server, and the Software Libraries dialog box closes.

Or

Click **Apply**. The file is copied to the server, and the Software Libraries dialog box remains open.

Note:

For a remote software library, the file is registered at the specified location for the device and file type entered.

Chapter 9: Managing IP Phone Software

This chapter explains how to manage IP phone software distribution and IP phone configuration updates to gateway devices. IP phones receive their firmware updates and configuration scripts from the gateways through a TFTP or HTTP server selected by the DHCP server function.

Each gateway device contains a TFTP or HTTP server which stores firmware files and script files. Firmware files are stored in device RAM and phone scripts (composed of a settings script with phone configuration and an upgrade script with instructions for software upgrade) are stored in device NVRAM.

Avaya Software Update Manager can manage IP Phone scripts on the following devices only:

- G250 devices
- G350 devices
- G450 devices
- IP Office devices
- AM110 devices

AM110 devices are able to store up to 16 firmware images and 40 script files (including language files) per device. The G250, G350, and G450 devices are able to store up to six firmware files and four setting script files per device.

The IP Phones view includes facilities for detecting gateways, managing software images and settings scripts, and transferring configuration files to IP phones.


This chapter includes the following sections:

- [The IP Phones Interface](#) - An overview of the IP Phones Software Libraries user interface.
- [Downloading Software](#) - Procedures for downloading IP phone software to Avaya gateway devices.
- [Importing Files to the Local Software Library](#) - Procedures for creating a software library to be stored locally on a gateway or Network Management Server.

The IP Phones Interface

To view the IP Phones Interface, click the IP Phones tab in the View Tabs section of Avaya Software Update Manager User Interface.

Figure 37: IP Phones Software Libraries Interface

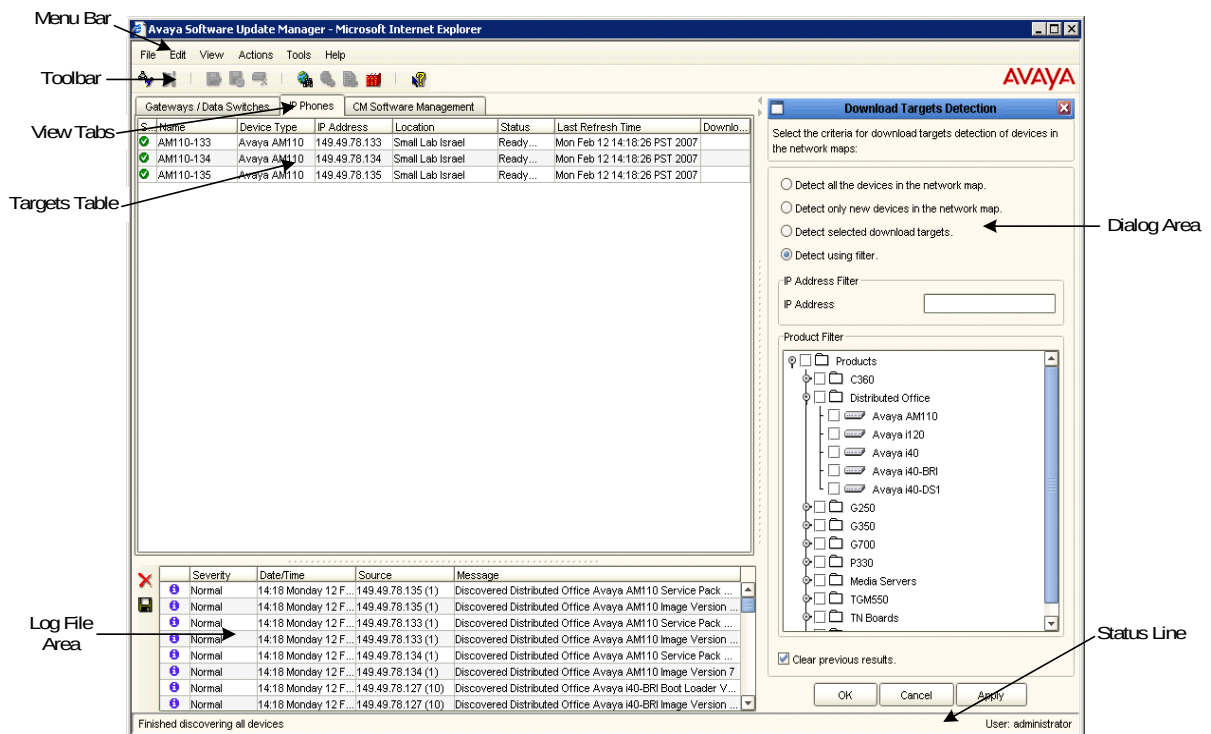

The IP Phones Software Libraries interface includes the following areas:

- **Toolbar** - Toolbar buttons for accessing Avaya Software Update Manager's main functions.
- **View Tabs** - Enables you to switch views between the IP Phones view and views for managing software distribution on other devices.
- **Targets Table** - Displays information on available gateways, software images, scripts, and software libraries. For information about the Targets Table and the IP Phones view in particular, refer to [The Targets Table](#) on page 21.
- **Log File Area** - Displays error and status messages from the system. For information about the log file area, refer to [The Log File](#) on page 43.

- **Dialog Area** - An area where all dialog boxes are displayed. When no dialog box is open, the Dialog Area disappears and the Devices Table expands to take its place.
- **Status Line** - Displays the currently logged in user, filter indication and discovery progress.

Note:

Only the **Help On** option is available in the Toolbar for the IP Phones tab.

Downloading Software

The IP Phones view enables you to download firmware and configuration scripts for IP phones to any supported Avaya gateway device from the Software Update Manager server. The Targets Table displays a list of available gateway devices. The Files inventory for selected device dialog box provides information about the software and script files residing on each device, when accessed from the IP Phones view.

To view the software and script files residing on a device:

1. Select the **IP Phones** tab.
2. Select the device you want to view in the Targets Table.

Note:


When you open Avaya Software Update Manager for the first time, the Targets Table appears with no entries. To populate the Targets Table with data, see [The Targets Table](#) on page 21.

3. Click .

Or

Select **Actions > Target Details**. The Files inventory for selected device dialog box opens.

Figure 38: Files Inventory For Selected Device Dialog Box

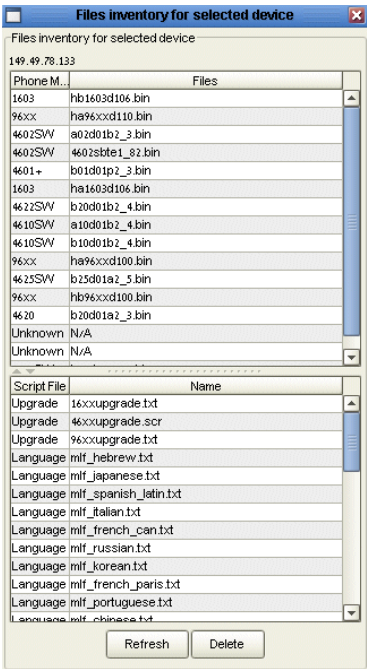

The Phones Software Table displays an entry for each type of software residing on the selected device. The Script File Table displays a entry for each available upgrade script and configuration settings script for the selected device.

Perform the following steps to upload software to a device:

- [Downloading Software to Selected Devices](#) - Select the software from an NMS library or directory and download it to the device or devices you wish to upgrade.
- [Viewing Log Files](#) - View the file transfer logs for upload success status.

Downloading Software to Selected Devices

IP phone firmware images and configuration settings scripts to be uploaded to devices can be located either in a file on the client workstation or on the Network Management Server. Software for upload is selected from the Manage IP Phones Software on the gateway dialog box.


To access the Manage IP Phones Software on the gateway dialog box, from the IP Phones tab:

1. Click .

Or

Select **Actions > Download Now**. The Manage IP Phones Software on the gateway dialog box opens.

Figure 39: Manage IP Phones Software on the Gateway Dialog Box

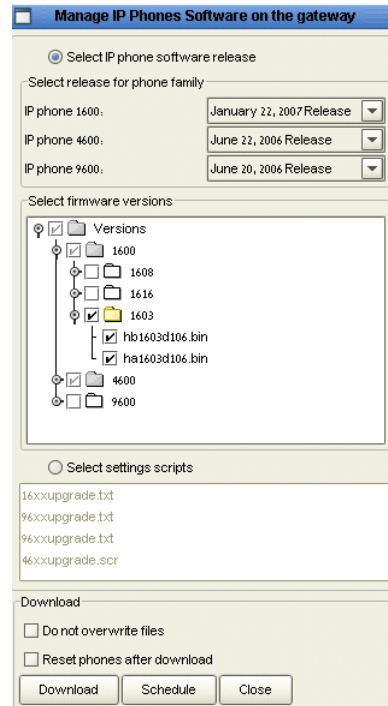

To select files for upload:

1. From the Targets Table, select one or more devices to which you want to upload the files.
2. Click **Select IP phone software release**.
3. From the drop-down lists in the **Select release for phone family** area, select the releases for the phone families applicable to the IP Phones connected to the selected device(s).

Note:

If the selected device is an AM110 device, the release(s) applicable to the phone families connected to the device are automatically selected.

4. Select the phone models that you wish to update. For firmware files, select the firmware files you wish to update from the list of checkboxes appearing in the **select firmware versions** area. The list only displays firmware versions applicable to the phone releases for the phone families selected in the **Select IP phone software release** area.

To upload the setting scripts:

1. Select **select settings scripts**. A list of scripts appears.
2. Choose the scripts you require from the files listed.

To begin or schedule selected files for download:

1. In the **Download** area, select **Do not overwrite files** if you do not want files that already exist on the gateway to be overwritten.
2. In the **Download** area, select **reset phones after download** to reset phones automatically after copying the file to the gateway.

Note:

This option is only available for AM110 gateways.

3. Click **Download** to begin uploading software to targeted gateways immediately.

Or

Click **Schedule** to schedule software upload in the future. For more information about the scheduler, refer to [Scheduling Downloads](#) on page 77.

4. Click **Close** to close the dialog box.

Viewing Log Files

You can review the results of your uploads in the Log File area. For more information on the Log Files in Software Update Manager, refer to [The Log File](#) on page 43.

Note:

There is no unique log file for IP Phone software distribution functions. Upload activity appears as a normal log entry and is included in all log events. New entries appear at the top of the log file.

Importing Files to the Local Software Library

You can use the Network Management Server software library to store IP phone software and configuration files, enabling you to view files distributed to gateways and to initiate file distribution to gateways from the Update Manager client without storing the files on the client workstation. Software images can be obtained directly from Avaya. Refer to [Retrieving New Versions from the Web](#) on page 86 for instructions on retrieving files from Avaya.

The IP Phones Software Libraries dialog box provides a tree view of available software releases and settings scripts contained in the Network Management Server software library and enables you to import them.


To open the IP Phones Software Libraries dialog box:

1. Click .

Or

Select **Tools > Software Libraries**. The IP Phones Software Libraries dialog box opens.

Figure 40: IP Phones Software Libraries Dialog Box

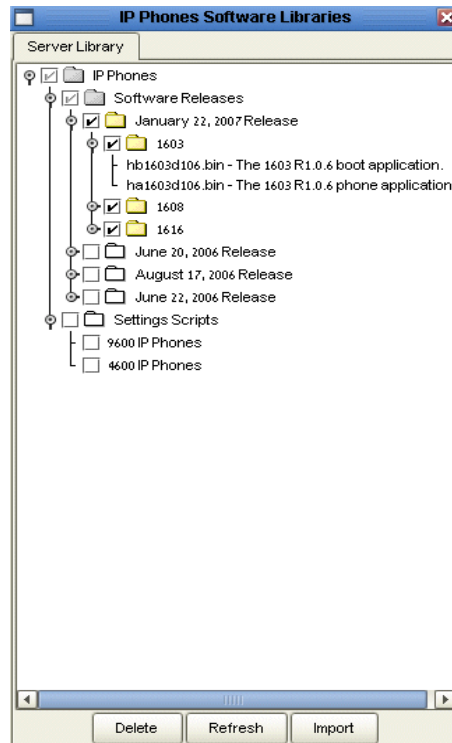

To Import new files into the IP Phones software library:

1. Click **Import**. The Import window opens.
2. Select the file you want to import from the client workstation and click **Import**. The selected file is imported into the IP Phones Software Library.
3. View log files to confirm the import, if desired. For more information on log files, refer to [Viewing Log Files](#) on page 98.

To delete files from the IP Phones Software Library:

1. Select the file or files that you want to delete in the Server Library tree.
2. Click **Delete**. The files are deleted from the tree.

Appendix A: Remote Library Index File

This appendix provides an example of the structure of an index file you can create for use in the remote software libraries accessed by Avaya Software Update Manager.

An index file is an XML file that you create and maintain with the information of the different software update files stored on the remote server.

When an index file is present on a remote directory, the Avaya Software Update Manager reads the index file and displays its contents to the Avaya Software Update Manager user. This enables the user to view information on the software update files currently stored on the remote server. With this list, the user can determine which files to download to update the specific devices in the network.

The following is an example of the structure of an XML index file. You can use this example and insert the relevant information for the files stored on your remote server.

```
<?xml version="1.0" ?>

<!--
  FileServer contains File elements.

  Attributes:
  =====
  description - The software library description.
-->

<FileServer description="1.0.0 - 01/26/04">

  <!--
    File element:
    Contains information for a specific file

    Attributes:
    =====
    name          - The name of the file.
                   In case it is not in the root, add the relative path in
                   the beginning (e.g. name="p330/p330tweb_1.2.3")
    version       - The version of the file.
    contentLength - The size of the file in bytes.
    contentType   - The type of the file (Image/Web Management/Boot Loader/
                   )
  -->

  <File name="p330tweb_4.5.2" version="4.5.2" contentLength="1491847"
  contentType="Web Management">

    <!--
```

```
DeviceClassification element:
Attributes:
=====
deviceFamily - The family of the device (P330/W310/...).
deviceType   - The type of the device (Avaya P333T/Avaya P333T-PWR/
                Avaya G700).

-->
<DeviceClassification deviceFamily="P330" deviceType="Avaya P334T" />
<DeviceClassification deviceFamily="P330" deviceType="Avaya P333T" />
<DeviceClassification deviceFamily="P330" deviceType="Avaya P333T-PWR" />
<DeviceClassification deviceFamily="P330" deviceType="Avaya G700" />
</File>
<File name="G350.web" version="2.0.2" contentLength="2441403" contentType="Web
Management">
  <DeviceClassification deviceFamily="G350" deviceType="Avaya G350" />
</File>
<File name="w310web_1.0.03" version="1.0.03" contentLength="6051" contentType="Web
Management">
  <DeviceClassification deviceFamily="W310" deviceType="Avaya W310" />
</File>
<File name="W310_1.0.2.web" version="1.0.2" contentLength="6051" contentType="Web
Management">
  <DeviceClassification deviceFamily="W310" deviceType="Avaya W310" />
</File>
<File name="c360_4.3.19" version="4.3.19" contentLength="16051" contentType="Image">
  <DeviceClassification deviceFamily="W310" deviceType="Avaya W310" />
</File>
</FileServer>
```

Appendix B: Menus

This appendix provides the full structure of the menus in Avaya Software Update Manager.

File Menu

Table 15: File Menu

Item	Description
Save As	Saves the current table as a text file.
Save Log File	Saves the current log file as a text file.
Options	Opens the Options dialog box
Print	Prints the Targets Table.
Exit	Exits Avaya Software Update Manager. This option is unavailable in Remote Mode.

Edit Menu

Table 16: Edit Menu

Item	Description
Select All	Selects all rows in the current table.

View Menu

Table 17: View Menu

Item	Description
Filter	Opens the Filter Devices dialog box.
Log Report	Toggles the Log Report below the Main window.
ToolTip	Enables tool tips in the Targets Table. (This menu item is disabled by default.)

Actions Menu

Table 18: Actions Menu

Item	Description
Download Targets Detection	Opens the Download Targets Detection dialog box for detecting targets on the network.
Target Details	Opens the Target Details dialog box for configuring target parameters.
Download Now	Initiates downloading of software to the targets selected in the Targets Table.
Schedule Download	Opens the Schedule Download dialog box for scheduling a software download to the targets selected in the Targets Table.
Reset	Resets the selected module(s).

Tools Menu

Table 19: Tools Menu

Item	Description
Software Libraries	Opens the Software Libraries dialog box for selecting the location from which to download an image.
Image Analyzer	Analyzes the software versions available on Avaya's website.
Retrieve Image From the Web	Opens the Retrieve From the Web dialog box for retrieving the latest software versions for selected targets from the Avaya website.
Add Image File	Opens the Software Libraries dialog box.
Generate ASCA Report	Opens ASCA Reporting dialog box.
Product Defaults	Opens the Product Defaults dialog box for viewing or changing the default software filenames.

Help Menu

Table 20: Help Menu

Item	Description
Contents	Opens the help module contents page for information.
Help ON	Activates context-sensitive help.
About Avaya Software Update Manager	Opens a window containing: • Copyright information about Avaya Software Update Manager. • Version information about updates for specific devices.

Appendix C: Troubleshooting

This chapter contains a list of common Avaya Software Update Manager error messages, an explanation of each message, and some possible solutions.

Table 21: Download Error Messages

Error Message	Cause	Possible Solutions
Access Violation	Access to file denied.	Check file permissions.
Cannot Start TFTP Server	The TFTP server cannot be started.	This error may be caused by Windows socket problems. Try restarting your computer.
Failed to activate download	The device is in another download session.	Wait a few minutes and try the download again.
Failed to activate download process monitoring	The device did not respond to SNMP or the read community is invalid.	Check the community and try the download again.
Failed to copy file	The application was incapable of creating a temporary copy of the software.	Check disk space and directory permissions.
Failed to erase flash	Device internal error.	
Failed to get new version	The download was completed successfully, but failed to retrieve the new software version from the device. This can be the result of a long rebooting timeout or the device still rebooting.	Insert the target into the table using Download Targets Detection.
Failed to open local file or filename is empty	The download file does not exist or cannot be opened.	Check the download filename, path, and permissions.
Failed to set TFTP parameters.	The application could not set the TFTP parameters when trying to download.	Check the write community.
1 of 2		

Table 21: Download Error Messages (continued)

Error Message	Cause	Possible Solutions
File Format Unknown	Wrong download file.	Check the download filename and path.
File Not Found	The agent cannot connect to the TFTP server or cannot get the download file.	Check if the file exists.
File Too Big	Wrong download file.	Check the download filename and path.
Flash Erasure Error	Device internal error.	
Flash Write Error	Device internal error.	
I/O Error While Reading Local File	An error occurred while reading from the local download file.	If the problem persists replace the download file on your local machine.
Out Of Memory	Device internal error.	
Server is Unreachable	Device can not reach the server.	Check the device's routing parameters.
SNMP Error	Agent is not responding to SNMP.	1. Check if the device responds to ping. 2. Check the SNMP community. Note: This error may be the result of a long network delay. Try the download again.
SNMP Error After Download	The device did not respond to SNMP after the download was completed.	This error may be the result of a long network delay. Try to insert the device again and check that the version matches the one downloaded.
The file is not accessible according to TFTP server configuration	The file is not located in a subdirectory of the TFTP secure server path.	Check file, path, and product defaults.
2 of 2		

Index

A

Actions menu	104
Adding targets	37
Adding, license an authentication files	74
Analyzer State, Filtering By	30 , 33 , 35
ASCA Reporting	
downloading inventory file to your PC	53
downloading inventory script.	46
filtering report.	53 , 54
generating report	53
installing inventory script	49
overview	45
running inventory script	52
Assigning, license and authentication files	74
Authentication Files	
adding	74
assigning.	74
deleting	75
viewing.	74
Avaya Software Compatibility Audit (ASCA)	
filtering	53
generating	53
overview	45
Avaya Software Update Manager	
starting.	17
toolbar	12
user interface.	11
using.	10
Avaya Software Update Manager Overview	9

C

Cancelling a delayed download	80
Clearing the log file	44
CM Service Pack, installing.	72
CM Software Management View	22
customizing table	28 , 29
detecting targets	37
downloading	69
license and authentication files	73
license and authorization files	68
media server release management	65
media server software repository	64
media server updates	66
printing table	36
schedule download	77
sorting table	27
updating	70
upgrading	70

Communication Manager	
upgrading and updating	71
Comparing software versions	86
Configuring download parameters	61
Configuring software library	56
Copying files to the server.	90
Customizing the Targets Table	28

D

Defining, server proxy settings.	19
Delayed download, cancelling	80
Deleting, license and authentication files	75
Detecting	
all targets	38
new targets	39
selected targets	39
targets	37
using filters	40
Device Type, filtering	36
Devices, update modules	105
Dialog	
area	13
boxes.	13
Download	
defining source website	18
intervals	19
retries	19
Download files	
configuring software library.	56
manually adding.	90
overview	55
viewing	59
Downloading	
later	77
software	95
software to targets.	69
status messages	75

E

Edit menu	103
Error Messages	107

Index

F

File menu	103
File names, viewing	59
Filter Criteria, targets table	30 , 33 , 35
Filter, ASCA Report	54
Filtering	
product type	36
the Targets Table	29
Filters	
IP address	40
product type	40
to detect targets	40

G

Gateways, Data Switches, and Circuit Packs View	22
customizing table	28 , 29
downloading	69
printing table	36
schedule download	77
sorting table	27
Gateways, Data Switches, and Circuit packs View	
detecting targets	37
Generate, ASCA Report	54

H

Help	14
Help menu	105
How to	
add targets to the Targets Table	37
assign license and authentication files	74
cancel a delayed download	80
check software update status	86
clear the log file.	44
compare software versions	86
configure download parameters	61
copy files to the server	90
customize the Targets Table.	28
define download intervals	19
define remote software library	57
define server proxy settings	19
define SFAP login parameters	20
define source website	18
download ASCA inventory file to your PC.	53
download ASCA inventory script	46
download software	69
Filter ASCA Report	54
filter the Targets Table	29
generate ASCA HTML Report	53
generate ASCA report	45
import files to a software library	98
install ASCA inventory script.	49

install media server updates	66
manage software releases	65
manually add files to the server.	90
print the Targets Table.	36
reset modules.	81
retrieve new versions from the web	86
run the ASCA inventory script	52
save the log file	44
save the Targets Table	36
schedule a download	77
set product defaults	82
sort the Targets Table	27
specify software library	56
start Avaya Software Update Manager	17
upgrade or update media server releases	71
use on-line help	14
use tool tips	14
view download parameters.	61
view files to download	59
view the log file	43

I

Icons, status icons	23
Importing Files to a Software library	98
Importing targets	37
Installing	
CM service update	72
platform/security update	73
IP Phones Software Libraries	
downloading	95
importing files	98
IP Phones Software Libraries View	94
IP Phones View	22

L

License and Authentication Files	
adding	74
deleting.	75
viewing	74
License and Authentication files	
assigning	74
installation	73
management	73
License and authorization file management	68
Log file	
clearing.	44
saving	44
viewing	43 , 98
Login Parameters, SFAP	20

M

Manually adding files to the server	90
Media Server	
configuring software repository	64
license and authentication files	73
license and authorization file management	68
release management	65
service update installation	66
updating	70
upgrading	70
Media Server Operations	66

O

On-line help	14
Overview	
ASCA Reporting	45
Avaya Software Update Manager	9
download files	55

P

Parameters	
download	62
software libraries	58
Platform/Security Update, installing	73
Printing the Targets Table	36
Product Defaults, setting	82
Product type, filtering by	36
Proxy Settings, Defining	19

R

Remote library, XML index file	101
Resetting modules	81
Retrieving, Software from the Web	86

S

Saving	
the log file	44
the Targets Table	36
Scheduled Downloads	77
cancelling	80
Scheduling, Software Downloads	79
Server Proxy Settings, defining	19
Service Packs	
cm software management	70
installation	66
SFAP	
defining	17
login parameters	20

Software	
checking update status	86
comparing versions	86
retrieving versions	86
Software Downloads, scheduling	79
Software Library	
parameters	58
Software library	
add file	60
configuring	56
define remote library	57
delete file	60
Software Releases, managing	65
Software Type, Filtering By	30 , 33 , 35
Sorting the Targets Table	27
Starting Avaya Software Update Manager	17
Status	
downloading messages	75
icons	23
Status Line	13

T

Table	
of targets	24 , 26
views	24 , 26
Tabs	13
Targets	
adding to the Targets Table	37
detecting	37
downloading software to	69
importing	37
viewing parameters	61
Targets Table	24 , 26
adding targets	37
cm software management view	22 , 26
customizing	28
filter criteria	30 , 33 , 35
filtering	29
gateways, data switches, and circuit packs view	22 , 24
parameters	24 , 26
printing	36
saving	36
sorting	27
views	21
Toolbar	12
Tools menu	105
Tooltips	14
Troubleshooting	107

Index

U

Update modules	105
Updates, Communication Manager	71
Upgrading, Communication Manager	71
User interface	11
cm software management targets table	26
cm software management view	22
dialog area	13
gateways, data switches, and circuit packs targets table 24	
gateways, data switches, and circuit packs view	22
IP phones software libraries view	94
IP phones view	22
on-line help.	14
table tabs	13
table views	24 , 26
Targets Table	24 , 26
toolbar	12
tooltips	14

V

View	
CM software management view	22
IP phones software libraries	22
View menu	104
View tabs	13 , 21
Viewing	
download parameters	61
license and authentication files	74
log file	43 , 98

W

Website, defining download website.	18
Wildcards	41

X

XML index file	101
--------------------------	---------------------