

USER MANUAL



BAG-LESS **VACUUM CLEANER**

SY-AS107

Welcome

Dear Customer,

Welcome to Sytech! Thank you for purchasing the new Vacuum Cleaner SY-AS107. Please read this manual carefully before operating your product and pay close attention to the precautions which are mentioned below. Store this user manual in a safe place for future reference. We are sure that the new Vacuum Cleaner will satisfy your needs!

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING THIS VACUUM CLEANER.

WARNING

To reduce the risk of fire, electric shock, or injury :


- Do not use outdoors or on wet surfaces.
- **Do not leave vacuum cleaner when plugged in.** Turn off the switch and unplug the electrical cord when not in use and before servicing.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center before using.
- Do not pull or carry by cord, use cord as a handle, close door on cord, or pull cord around sharp edges or corners. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
- Do not use extension cords or outlets with inadequate current carrying capacity.
- Turn off all controls before unplugging.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or vacuum cleaner with wet hands or operate without shoes.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- This vacuum cleaner creates suction and contains a revolving brushroll. Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust cup or filter in place.
- Use extra care when cleaning on stairs.
- Do not use to pick up flammable or combustible liquids such as gasoline, or use in areas where they may be present.
- Store your cleaner indoors in a cool, dry area.
- Keep your work area well lighted.
- Unplug electrical appliances before vacuuming them.

Note: For any repairs or technical faults, please always contact Sytech Service Centre for further assistance. Never try to manipulate the unit by yourself.

Contents

Parts of the SY-AS107	Page 2
Assembly	Page 2
Instructions for Use	Page 3
Cleaning the unit	Page 4
Specifications	Page 6
Declaration of Conformity	Page 6

Parts of the SY-AS107

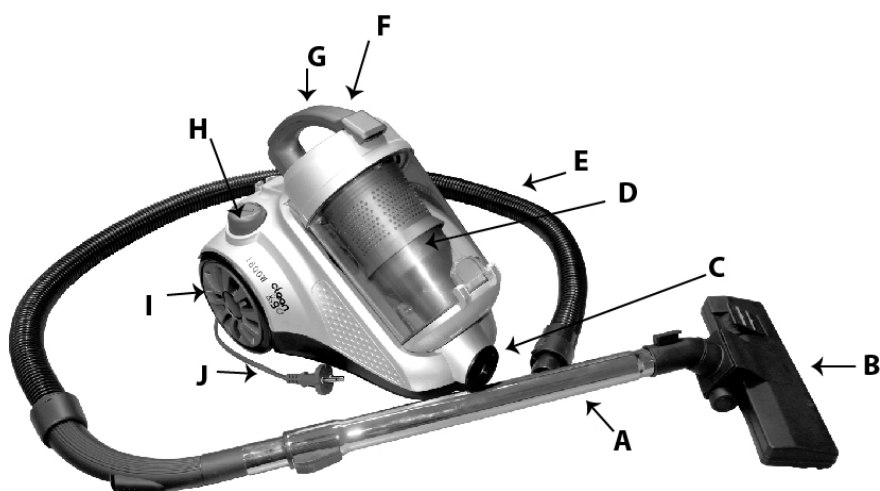


- | | |
|-------------------|------------------------------|
| A) Metallic tube | F) Cord Rewinding Pedal |
| B) Floor brush | G) Handle |
| C) Hose Connector | H) Power and Power regulator |
| D) Filter cover | I) Rubber Wheels |
| E) Hose | J) Power Cord |

Assembling the SY-AS107

To insert the flexible tube, place the tube inside the air intake duct and press firmly until you hear a “click” **(1)**. To remove the flexible tube, firstly, remove the plug from the power socket, and then press the buttons on the end of the tube and pull the tube firmly from the air intake duct **(2)**.

 
1)

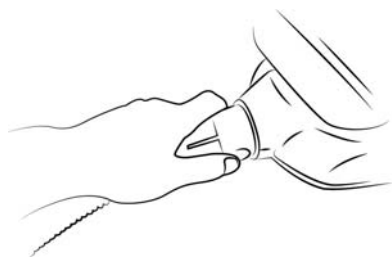


2)




Assembling the handle and the accessories

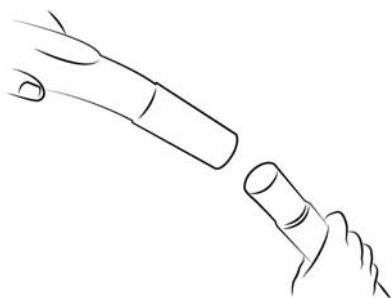

 Fitting the extension tube to the Handle.

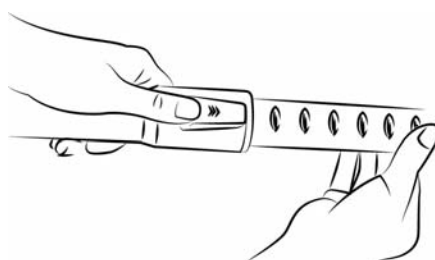


Fitting the extension tubes.

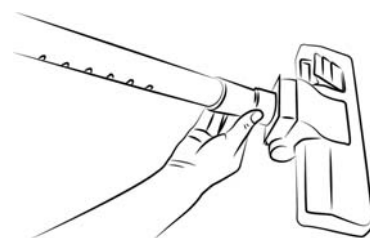 


Fitting the accessories to the Extension tube.

Instructions for use

Before using the appliance, unwind the cable **(1)** and insert the plug into the power socket. A YELLOW mark on the power cable shows the ideal cable length **(2)**. Do not extend the cable beyond the RED mark **(3)**. To rewind the power cable, press the rewind button with one hand, and guide the cable with the other hand to ensure that it does not whip causing damage **(4)**.

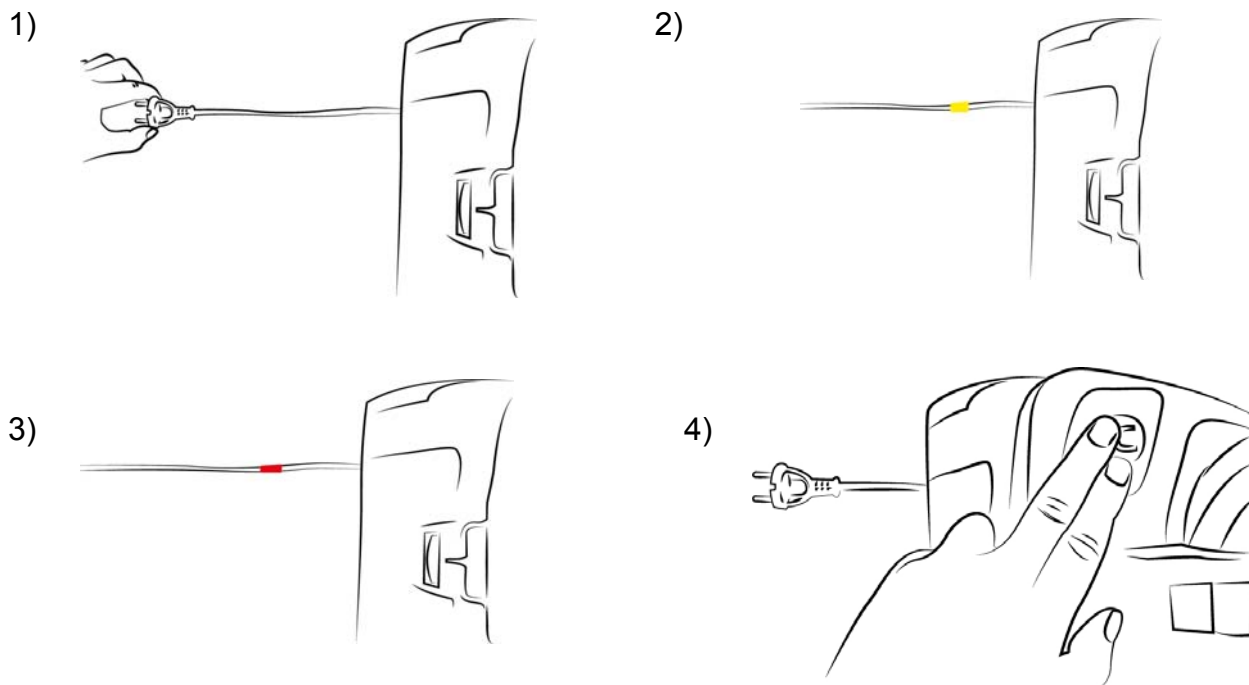

Press the ON/OFF button **(5)** to switch the appliance on. It is advisable to set the power regulator to MIN before switching the appliance on **(6)**.

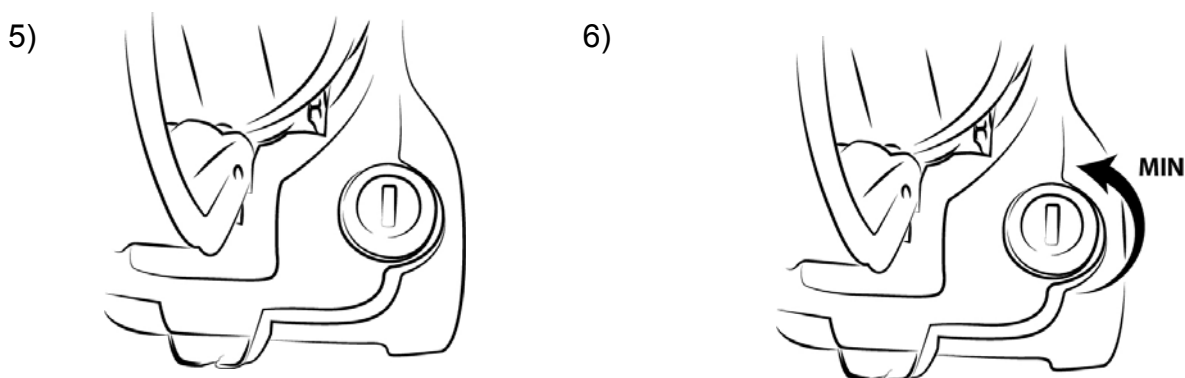


Using the cleaning accessories

Dual-position carpet / floor brush.

Pic.1: bristles extended for hard floors



Pic.2: bristles retracted for carpets

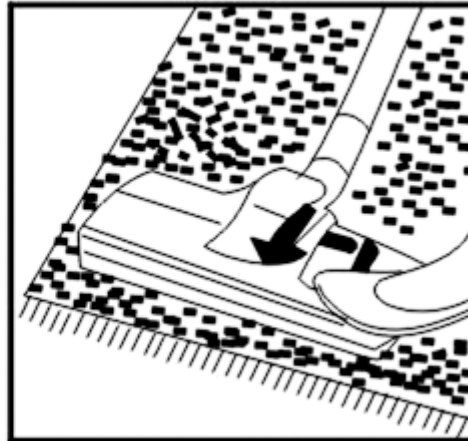

Narrow nozzle

For cleaning radiators
corners, edges, drawers etc.



Small brush for cleaning curtains, bookshelves, inlaid
Furniture, lamps and other delicate objects



Cleaning the dust cup + Hepa filter

1. Lift up the handle, press the button as shown & take out the dust cup



2. Open the cover of the dust cup to empty the dust out **(A)**. Then, separate the dust cup and the hepa filter **(B)**.

A)



B)



3. Wash the dust cup thoroughly and let it dry naturally before use.



4. Separate all the parts of the dust cup and clean them thoroughly before using again. Leave all parts to dry naturally before mounting and using them.



Precautions:

1. Do not clean the Hepa filter with the help of a washing machine.
2. Do not dry the Hepa filter with the help of Heating equipment's
3. Do not use chemical products to clean the vacuum cleaner. Use a brush with water and soap
4. Do not let water penetrate into the vacuum cleaner. This could damage the unit and the motor.
5. The vacuum cleaner SY-AS107 is only to be used for domestic purpose.
6. Do not let children or disable use the vacuum cleaner without any supervision.
7. In the case the power cable is damaged, it should be replaced immediately by the manufacturer or the official technical department to avoid any hazard.
8. For security reasons, this appliance should not be used by (including small children) with physical disability, sensory, mentally handicapped or lack of experience unless supervised.

Specifications

Powerful Cyclonic Vacuum Cleaner
High efficiency for energy saving
Dust capacity 1.8L
Washable HEPA filter
Removable dust cup
Floor Brush and Narrow Nozzle accessories
Rubber wheels
Light weight for easy carrying
High suction power
Voltage: 230V 50Hz
Power: 1600-1800W MAX
Suction power: 230W / 23 KPA
Noise level (dB). ≤ 75 dB
Weight: NW: 3.8kgs
Dimensions: 365x254x310mm

Declaration of Conformity

Manufacturer Name: Satyatrade S. L.
Address: Pol.Ind.La Raya. C/ Guadalquivir, 2.
Camarma de Esteruelas, 28816 Madrid
Tel: 902 430 967
Fax: 91 8864285
NIF: B83254763
Manufacturing country: China
Description: Bag less Vacuum Cleaner
Sytech® SY-AS107 complies with the following directives:

EMC Standard: Directive 2004/108 CE

LVD Standard: Directive 2006/95/CE

ROHS Standard: 2011/65/EU Restriction of Hazardous Substances

Signed: Ajeet Nebhwani Utamchandani
Sole Administrator

