



CAM2200 / 2400
Megapixel Box
Network Camera
User Manual

Release 1.5
July, 2010

All Rights Reserved © Surveon Technology 2010

Copyright Statement

No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written consent of Surveon Technology Inc.

Disclaimer

Surveon Technology makes no representations or warranties with respect to the contents hereof and specifically disclaim any implied warranties of merchantability or fitness for any particular purpose. Furthermore, Surveon Technology reserves the right to revise this publication and to make changes from time to time in the content hereof without obligation to notify any person of such revisions or changes. Product specifications are also subject to change without notice.

Trademarks

Surveon and Surveon logo are trademarks of Surveon Technology Inc. All other names, brands, products or services are trademarks or registered trademarks of their respective owners

Table of Contents

Copyright Statement	1
Table of Contents	2
Chapter 1. Overview.....	4
1.1. Network Camera Introduction	4
1.2. Network Camera Features.....	4
1.3. Network Camera Specifications	5
System Structure	7
1.4. Network Camera Hardware Installation	7
Chapter 2. Connecting to the Network Camera.....	8
2.1. Connecting with a Web Browser	9
Logging into the System for the First Time	10
Installing Active X Components in Internet Explorer	11
Logging Out of the System	12
Using the Help Interface	12
2.2. Connecting with an RTSP Player	13
Connecting with a Mobile Device RTSP Player	13
Chapter 3. Web Interface.....	14
3.1. Interface Layout	14
Control Descriptions	15
3.2. Settings	17
General.....	17
Basic Settings	17
User Account	19
Date & Time	22
Network.....	23
Network Configuration.....	24
Port Settings.....	25
UPnP	26
Video & Audio Settings	27

Basic Settings	27
Image Appearance for CAM2200	28
Image Appearance for CAM2400	31
Video Streams.....	35
Audio Settings.....	37
PTZ.....	38
Recording	39
Recording Basic Settings	39
Recorded File Management	40
Event Notification	42
Event Server	42
Motion Detection	44
Tampering Detection	45
Tampering Detection	46
DI & DO.....	47
Event Settings.....	49
System.....	55
MicroSD Card Management	55
System Status	56
System log	57
Firmware Upgrade.....	58
Reset to Factory Default	59
Export/Import & Reboot	60

Chapter 1. Overview

1.1. Network Camera Introduction

CAM2200 and CAM2400 are professional IP network cameras that use Internet Protocol (IP) to transmit video streams and control signals over networks. Capable of operating over both LANs and WANs, they provide a complete budget-conscious remote surveillance solution that are ultra clear and highly integrated. CAM2200/2400 combine a user-friendly interface and simplified installation with a powerful feature set, including Motion Detection and Tampering Detection to provide users an easy upgrade path to new digital surveillance system in a virtual environment. These highlights make CAM2200/2400 ideal choices for environments that require remote surveillance or video transmission.

1.2. Network Camera Features


- Supports up to 10 simultaneous users
- Built-in web server to allow real-time remote surveillance and control using standard web browsers
- Built-in microSD card slot for local backup
- Supports dynamic IP, LAN, and the Internet (ADSL, Cable modem)
- Supports most network protocols including: HTTP, TCP/IP, SMTP, DDNS, DNS, DHCP, FTP, RTSP, CIFS, PPPoE
- Supports 2-way audio
- Automatically adapts image compression rate to available bandwidth
- Provides signal loss and motion-detection alerts (adjustable area and sensitivity level)
- Supports most PTZ camera protocols
- Supports image recording and still image capture
- Self-recovery feature automatically re-establishes broken network connections.

1.3. Network Camera Specifications

	CAM2200	CAM2400
Image sensor	1/3" 1.3 megapixel progressive scan CMOS	1/3" 1.25 megapixel progressive scan SONY EXviewHAD CCD
Lens	Changeable (CS/C mount)	
Day/Night	N/A	Yes
Min illumination	1 lux @ F1.0, 2856K	Color: 0.5 lux; B/W: 0.05 lux @ F1.0, 2856K
Iris control	N/A	DC drive
Shutter time	1/5 ~ 1/15,000 s	1/50 ~ 1/10,000 s
Video compression	H.264 / MPEG-4 / MJPEG	
Resolution	Up to 1280 x 1024	Up to 1280 x 960
Video control	Auto Gain Control, Auto White Balance, Auto Electronic Shutter, Back Light Compensation, Image Adjustment	
Frame rate	15 fps at SXGA (1280 x 1024), 15 fps at HD720 (1280 x 720), 30 fps at VGA (640 x 480), 30 fps at QVGA (320 x 240)	15 fps at SXGA (1280 x 960), 30 fps at HD720 (1280 x 720), 30 fps at VGA (640 x 480), 30 fps at QVGA (320 x 240) Note: Use of 1280x960 for Stream 1 will limit Stream 2 to a maximum of 15 fps.
Video stream	2 simultaneous streams at H.264, MPEG-4, and MJPEG	
Bit rate	32K ~ 10Mbps, VBR, CBR, controller frame rate and quality	
Intelligent video	Motion detection, tempering detection (blocked, redirected, defocused, or spray-painted)	
Built-in MIC	Yes	
Audio compression	32KHz, ADPCM	
Audio input	3.5mm phone jack	
Audio output	3.5mm phone jack	
Alarm in	2, terminal block	
Alarm out	1, terminal block	
Video buffer	2 second pre-alarm 30 second post-alarm	
Event action	Send snapshot or video clip by FTP or email, record to NAS, record to local storage, trigger DO	
Supported protocols	IPv4, ARP, TCP, UDP, ICMP, DHCP, NTP, DDNS, SMTP, FTP, HTTP, CIFS, PPPoE, UPnP, RTP, RTSP, RTCP, 3GPP,	
Ethernet	10/100 Base-T / RJ45	

	CAM2200	CAM2400
Local storage	microSD / SDHC slot x 2 (Class 4/Class 6 only)	
RS-485	1 (2 pins on terminal block)	
SDK	Surveon SDK 2.0	
OS	Microsoft Windows XP / Vista / 7 (32 bit)	
Browser	Microsoft IE 6.0 or above	
Software	Surveon VMS 2.0	
Temperature	Operation: -10 ~ 50 °C (14~122°F) Storage: -30 ~ 70 °C (22~158°F)	
Humidity	20 to 95%	
Power	12VDC PoE (IEEE 802.3af) with Class 3	
Power consumption	Max. 5W without AUX Power	Max. 7W without AUX Power
Dimension (WxHxD)	75mm x 58mm x 150mm (2.95" x 2.28" x 5.9")	
Weight	Net: 385g (0.88 lb) Gross 1035g (2.29 lb)	Net: 450g (0.99 lb) Gross: 1085g (2.4 lb)
Certification	FCC, CE, UL	

System Structure

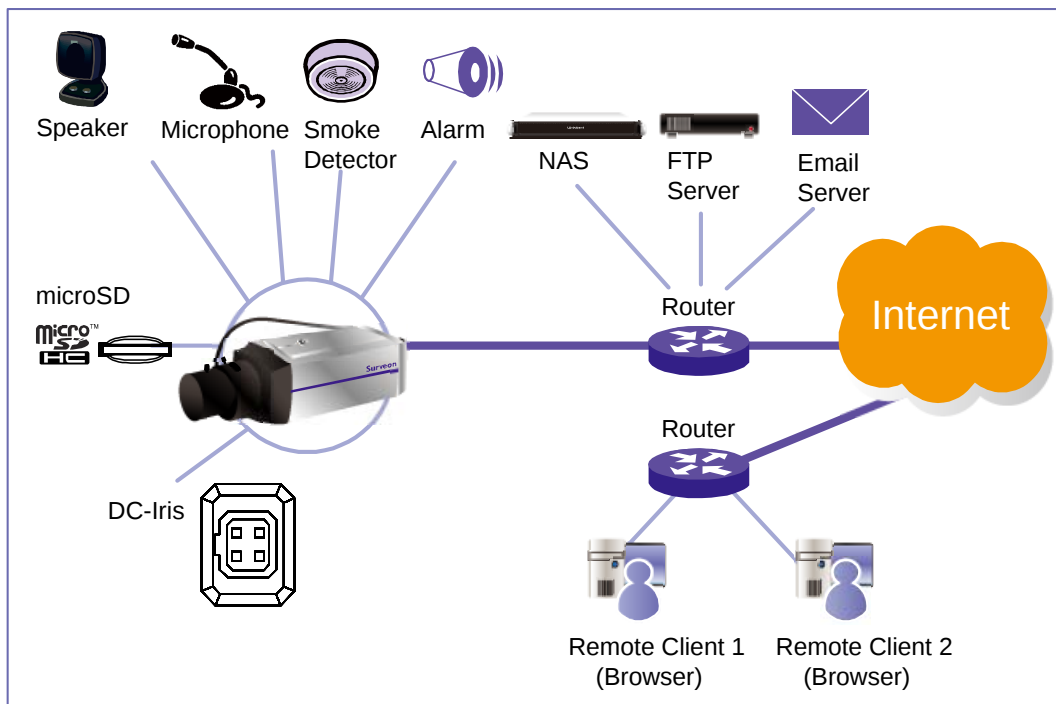

1.4. Network Camera Hardware Installation

Before the network camera is configured:

1. Install the camera in a suitable spot. The camera should have an unobstructed view of the area to be surveyed.
2. Connect the camera to a power source. CAM2200/2400s can accept power from a power adapter or from Power over Ethernet enabled switches.
3. Connect the camera to a switch using an Ethernet cable. The Ethernet port is located on the rear of the camera.

Chapter 2. Connecting to the Network Camera


This section demonstrates how to connect to the network camera through two methods:

- Web Browser – A simple web-based interface. Internet Explorer is the recommended web browser for use with Surveon network cameras, and our examples will be from this browser. Usage on other browsers will be similar.
- RTSP Player – These include common streaming media players, such as *RealPlayer* or *Quicktime Player*. These players can provide live view of the camera using the Real-Time Streaming Protocol (RTSP).

2.1. Connecting with a Web Browser

To connect to the Network Camera with a web browser:


1. Launch the web browser (Microsoft ® Internet Explorer 6.0 or higher is recommended).
2. Enter the IP address of the network camera in the address bar of your browser and press enter. The IP address can be obtained using the Surveon IP Utility, or if your network does not have DHCP service, the default IP address is 192.168.88.10.
3. The camera will start the web interface with a live-view page. Click the Login button at the top of this page.

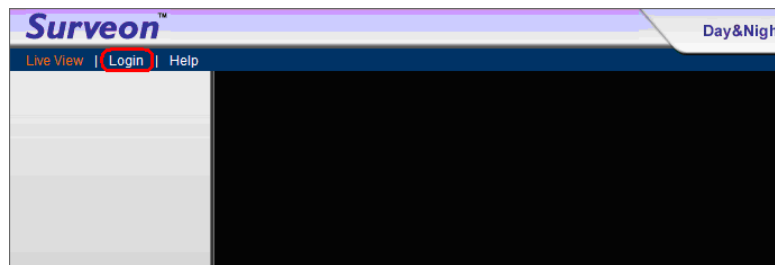

4. The camera will prompt for a user name and password. The default user name and password is admin/admin. Enter your user name and password, and click **OK** to login. If this is your first time accessing the camera, please read the subsections to set up a new password and/or install ActiveX, otherwise the live feed from the network camera will be displayed in your web browser.

Logging into the System for the First Time

If this is the first time that the network camera is being accessed, the camera will prompt you to change the administrator password after your first login. Click Okay

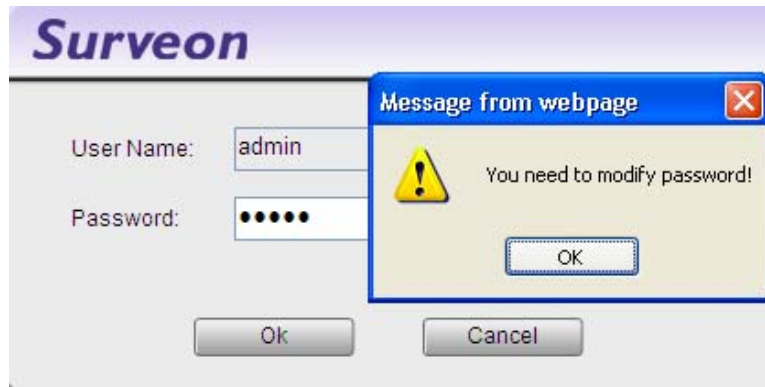

1. Click **OK** when informed of the need to change your password. This will cause a *Configure Admin Password* popup to display.


2. In the *Old password field*, fill in the old password (default is *admin*).
3. In the *New password* and *Confirm new password* field, fill in the new password.
4. Click **OK** to change the password. If at any time you lose this password, performing a hard reset of the camera will restore the password back to *admin*.

Installing Active X Components in Internet Explorer

You may be prompted to install ActiveX® components when accessing the network camera's Live View page; click **Yes** when prompted. You will be able to access the camera after installation is completed. Under Windows, this action may require administrator privileges.

If the dialog box suggests that you are not allowed to install ActiveX components, try resolving the problem using the following steps:

1. In Internet Explorer, open **Tools> Internet Options> Security**. Click the Custom level button.
2. Search for *Download signed ActiveX controls*. Under this heading select **Prompt** and then click **OK**.

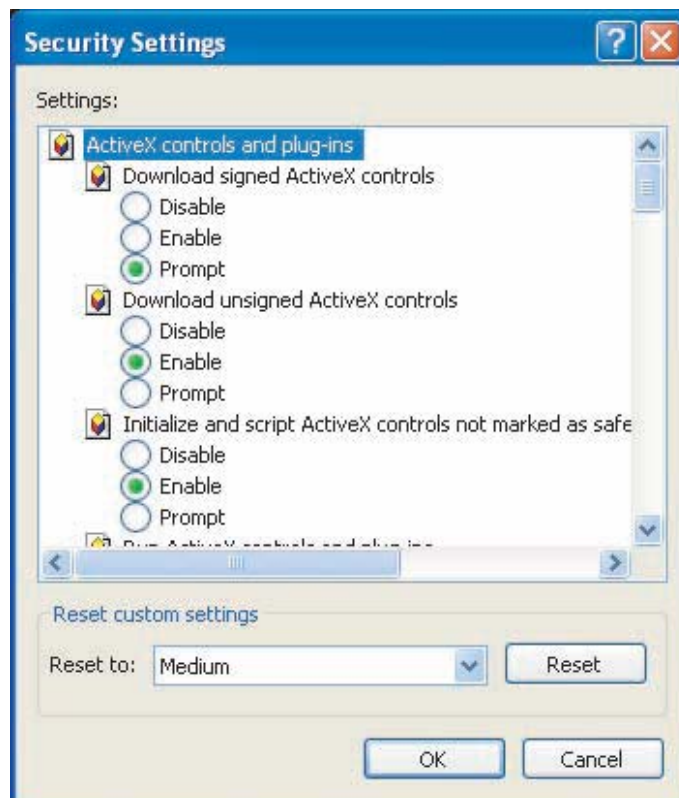


3. Continue installing the Active X components.
4. After installing ActiveX, go to **Tools> Internet Options> Trusted Websites> Sites** and add the IP Address of the camera.

Logging Out of the System

Logging off of the camera can be performed by closing the browser window.


Users can also choose to click the **Logout** link located at the top of the screen.

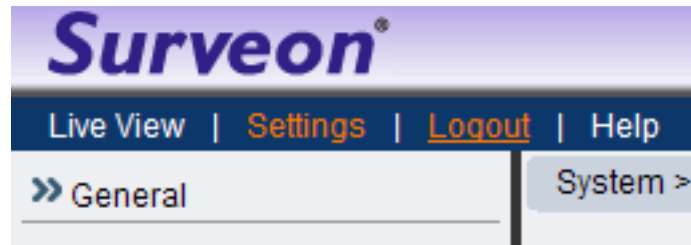

Using the Help Interface

While using the web interface, you may click on the **Help** link located under the title bar. This will bring up a pop-up containing the IP Camera Help manual. This provides simple explanation of the camera settings, and will automatically open to the page relevant to your current screen.


The help manual is organized so that it matches the system menus, with sections corresponding to each settings menu and the Live-view window.

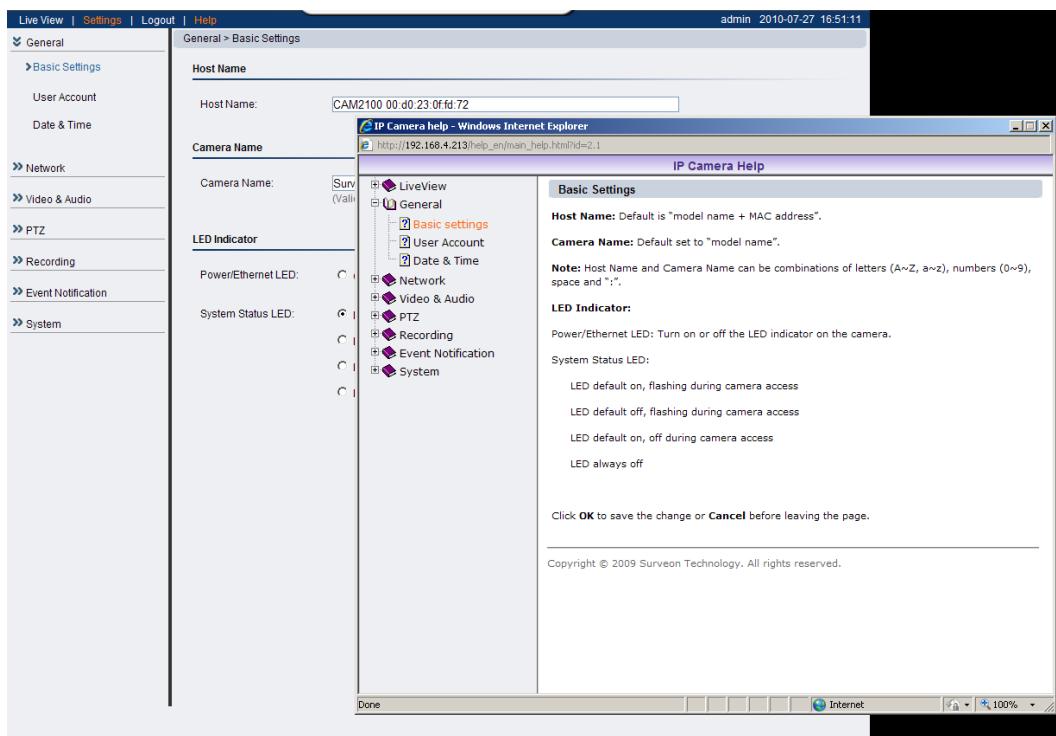

2.2. Connecting with an RTSP Player

Surveon cameras support connections through RTSP Media Players such as *Real Player* and *QuickTime Player*.

1. Launch Real Player or QuickTime Player ;
2. Select **File> Open URL**, to open a URL dialog box.
3. Enter the camera URL in the address bar.

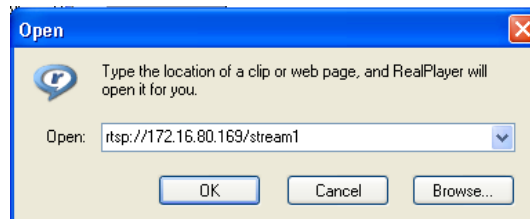

Note: The format for RTSP is: `rtsp://<IP Address>/<Access>`, where `<Access>` can be found at **Settings> Network> Port Settings> RTSP Setting**. By default the `<Access>` value should be `stream1` and `stream2`.

4. Click **OK**, the stream should begin playing.

Connecting with a Mobile Device RTSP Player

In order to access streaming video on 3GPP mobile devices, please make sure the network camera is already online and connected to the Internet. In the **IP** field under the *IP Address* section of the window, enter the IP address of the IP camera.

1. Change the settings under **Settings> Video & Audio> Stream2 Setting** to 3GPP Mode
2. Launch the RTSP Player on the 3GPP mobile device and enter the URL address for the camera. The video should start playing.

Note: The format for RTSP is: `rtsp://<IP Address>/<Access>`, where `<Access>` can be found at **Settings> Network> Port Settings> RTSP Setting**. By default the `<Access>` value should be `stream1` and `stream2`.

Chapter 3. Web Interface

3.1. Interface Layout






This section demonstrates the layout of the network camera's main interface. The 4 main areas on the interface are:



- 1. Menu Bar** - The links on this bar allow users to toggle between live-view and settings screens, as well as logout and pull up the help menu.
- 2. Live View Controls** - These controls allow users to configure the live view streams and camera live view functionality.
- 3. Button Bar** - These controls allow the user to quickly access common features such as live view window resizing, video and still frame capture, interface language, and audio controls.
- 4. Live View Window** - This portion of the screen displays the stream selected in the **Live View Control** section of the web interface.

Control Descriptions

Control	Description
	Adjust Window Size: When clicked, the display window size can be adjusted manually to fit the screen. The screen size changes back to the actual image size (resolution).
	Full-Screen: Goes to full-screen when clicked; press “ESC” to return to windowed view.
	Image Capture: When clicked, captures the current screen as an image in a new pop-up window and saves it in <i>C:\Surveon\Record</i> . This location can be changed under Settings> Recording> Recording Basic Settings . The file name is set to “Camera Name”+yyyymmdd_hhmmss (the Camera Name can be changed under Settings> General> Basic Settings).
	Manual Record: When clicked, records the current live video. Stops recording when clicked again. The default location for storing the recording is <i>C:\Surveon\Record</i> . This location can be changed under Settings> Recording> Recording Basic Settings .
	Play Back: Enables video playback by linking to the <i>Record File Management</i> page when clicked.
	Audio-In: Turned off by default; clicking once allows audio to be transmitted from a local microphone to the camera. Clicking again stops audio transmission. Multiple users may access the live view page and receive audio from the camera, but only one user at once is allowed to send audio to the camera.
	Mute: Mutes the audio captured by the camera when clicked, un-mutes the audio when clicked again.
	Volume: Sets to the current computer volume; Dragging the slider adjusts the volume.

 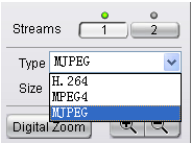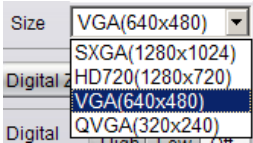  Control	Description
	Language: Sets the UI language. Available languages include English, Simplified Chinese, and Traditional Chinese.
	Streams: Allows users to choose which camera stream to view. The indicator above the stream will turn light green when the stream is selected.
	Video Format: Sets the compression format for the current stream. Available formats are H.264, MPEG4, and MJPEG.
	Image size (resolution): Sets the resolution of the stream currently selected. 3 options are available for each stream: SXGA (1280 x 1024 in CAM2200, 1280 x 960 in CAM2400), HD720 (1280 x 720), VGA (640 x 480), QVGA (320 x 240) for stream 1 and VGA (640 x 480), QVGA (320 x 240), QQQGA (160 x 120) for stream 2.
	Digital Zoom: When clicked, activates digital zoom in the current live-view stream. 2 options are available when clicked:  Zoom In  Zoom Out
	Digital Output: Sets the Digital Output to High, Low, or Off. Default is Off.

3.2. Settings

Camera settings may be changed by clicking on the **Settings** link located in the title bar. This will bring up a menu list of configuration menus for all major camera settings.

General

General setting menus are found under **Settings> General**.

Basic Settings

The screenshot shows the 'General > Basic Settings' configuration page. The left sidebar contains a menu with options: General, Basic Settings (selected), User Account, Date & Time, Network, Video & Audio, PTZ, Recording, Event Notification, and System. The main content area is titled 'General > Basic Settings' and includes the following settings:

- Host Name:** A text field containing 'CAM2100 00:d0:23:0f:fd:72'.
- Camera Name:** A text field containing 'Surveon CAM2100'. Below the field, it says '(Valid characters: A-Z, a-z, 0-9, :, space)'.
- LED Indicator:**
 - Power/Ethernet LED:** Radio buttons for 'Off' and 'On' (selected).
 - System Status LED:** Radio buttons for 'LED on when camera is on' (selected), 'LED on during camera access', 'LED off during camera access', and 'LED always off'.

At the bottom of the page are 'OK' and 'Cancel' buttons.

Basic settings may be accessed under **General> Basic Settings**. The following settings can be made:

- **Host Name:** by default set to "model name + MAC address"; displays on the center of the main page. Users may replace the default name with a new name consisting of alphanumeric characters, spaces and the ":" character.
- **Camera Name:** by default set to "Surveon + model name"; after selecting "Camera Name" from **Settings> Video & Audio> Basic Settings**, the Camera Name will show on the display. Users may replace the default name with a new name consisting of alphanumeric characters, spaces and the ":" character.
- **Power/Ethernet LED:** turns on or off the power and Ethernet LEDs indicator on the rear of the camera.

- **System Status LED:** changes the behavior of the status LED on the front of the camera. There are four possible behaviors:
 - o **LED on when camera is on** - LED default on, flashing during camera access.
 - o **LED on during camera access** - LED default off, flashing during camera access
 - o **LED off during camera access** - LED default on, off during camera access
 - o **LED always off** - LED always off

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

User Account

The User Account section, found under **General > User Account**, controls the user account information and privileges.

The screenshot shows the 'User Account' settings page. On the left is a navigation menu with options: General, Basic Settings, User Account (selected), Date & Time, Network, Video & Audio, PTZ, Recording, Event Notification, and System. The main content area is titled 'General > User Account' and contains two sections: 'User Account' and 'User Login Settings'.

User Account Section:

User Name	User Group
test	Administrator
admin	Administrator
guest	Operator

Below the table, it states: 'Maximum number of administrators/operators is 10.' There are 'Add', 'Edit', and 'Remove' buttons.

User Login Settings Section:

☒ Enable access without login

Maximum number of simultaneous viewers limited to: [1..10]

At the bottom are 'OK' and 'Cancel' buttons.

There are two pre-configured accounts:

- **admin** - This is the default administration account, and cannot be deleted.
- **guest** - This is an account with only live view capability.

There are also two basic settings under user account settings:

- **Enable access without login** - Checking the checkbox will allow users to view the camera stream without having to login. This option is enabled by default.
- **Maximum number of simultaneous viewers limited to** - Enter a number from 1 to 10 in this field to limit the number of users that can view the live view stream for this camera. This option will only be displayed once you add an account.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Adding Accounts

In **General> User Account** under the **User Account** heading, click on “Add”.

Up to 10 accounts can be added to the system.



All User Names and Passwords must be combinations of alphanumeric characters, “.”, “-”, “_” between 4 and 20 characters in length, and must begin with an alphabet letter. Fill out the following fields:

- **User Name** - The identifier name used to login to the system.
- **User Group** - The system allows for 2 types of users.
 - o **Administrator** - Administrators have full access privileges.
 - o **Operator** - Operators can only access the live view page.
- **Password** - a passkey used to control user access. This password should be retyped in the **Confirm password** field, to ensure that the correct key is saved.

Click **OK** when finished to add the user to the system.

Editing Accounts

In **General> User Account** under the **User Account** heading, select an existing account by clicking on the account entry. The entry will be highlighted in yellow. Clicking **Edit** will allow you to change the following fields:

- **User Group** - The system allows for 2 types of users.
 - o **Administrator** - Administrators have full access privileges.
 - o **Operator** - Operators can only access the live view page.
- **Password** - Aar passkey used to control user access. The password must be a combination of alphanumeric characters, “.”, “-“, “_” between 4 and 20 characters in length, and must begin with an alphabet letter. This password should be retyped in the **Confirm password** field to ensure that the correct key is saved.

Click **OK** when finished to save any changes.

Note: Only accounts that are not currently logged-in can be edited.

Deleting Accounts

In **General> User Account** under the **User Account** heading, select an existing account by clicking on the account entry. The entry will be highlighted in yellow. Click **Remove** and, when prompted to confirm deletion, click **OK** to remove the account.

Date & Time

Date and time settings can be accessed at **General > Date & Time**.

The screenshot displays the 'General > Date & Time' configuration window. On the left is a sidebar with navigation links: General (selected), Basic Settings, User Account, Date & Time, Network, Video & Audio, PTZ, Recording, Event Notification, and System. The main content area is titled 'General > Date & Time' and includes the following sections:

- Current Date & Time:** Shows 'Date: 2010-07-23' and 'Time: 14:56:47'.
- Time Zone Settings:** Features a dropdown menu for 'Time Zone' currently set to '(GMT +8:00) Beijing, Perth, Singapore, Hong Kong, Taipei'.
- Time Settings:** Contains three radio button options:
 - Synchronize with NTP server** (selected): Includes a text field for 'NTP server' with the value '64.236.96.53'.
 - Manual Update:** Includes separate text fields for 'Date' and 'Time'.
 - Synchronize with Computer Time:** Includes text fields for 'Date' (showing '2010-07-23') and 'Time' (showing '14:56:42').

At the bottom of the window are 'OK' and 'Cancel' buttons.

Current Date & Time displays the current system date and time.

Time Zone Settings

The time zone can be set using the dropdown menu. This menu is only applicable when selectable when **Synchronize with NTP Server** is chosen under **Time Settings**.

Time Settings

There are 3 ways to set the system time:

- **Synchronize with NTP server** - NTP is a protocol for synchronizing the system clock to an external server. If this option is chosen, enter the IP address of a known NTP server in the **NTP Server** field. You must also choose the appropriate time zone under **Time Zone Settings**.
- **Manual update** - Updates the time manually. Choose the appropriate date and enter a time for the system.
- **Synchronize with computer time** - Synchronizes the time with the computer's internal clock.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Network

The network settings, including network configuration, port configuration, and universal plug and play (UPnP) settings are used to configure camera connectivity. These settings are found under the **Settings > Network** context.

The screenshot displays the 'Surveon' web interface for a 'Day&Night Megapixel Network Camera'. The top navigation bar includes 'Live View', 'Settings' (highlighted), 'Logout', and 'Help'. The user is logged in as 'admin' on '2009-12-18 10:30:38'. A left sidebar lists configuration categories: 'General', 'Network' (selected), 'Video & Audio', 'PTZ', 'Recording', 'Event Notification', and 'System'. Under 'Network', sub-options are 'Network Configuration', 'Port Settings', and 'UPnP'. The main content area is titled 'Network > Network Configuration' and contains three sections: 'IP & DNS Settings', 'PPPoE Settings', and 'DDNS Settings'. In 'IP & DNS Settings', 'Use fixed IP address' is selected, with fields for IP address (192.168.5.22), Subnet mask (255.255.255.0), Default gateway (192.168.1.253), Primary DNS (61.139.2.69), and Secondary DNS (119.6.6.6). 'PPPoE Settings' has an unchecked 'Enable PPPoE' checkbox and fields for User name, Password, and Confirm password. 'DDNS Settings' has an unchecked 'Enable DDNS' checkbox, a dropdown for DDNS service, and fields for Host name, User name, and Password. 'OK' and 'Cancel' buttons are at the bottom.

Surveon Day&Night Megapixel Network Camera

Live View | **Settings** | Logout | Help admin 2009-12-18 10:30:38

» General

» **Network**

» Network Configuration

» Port Settings

» UPnP

» Video & Audio

» PTZ

» Recording

» Event Notification

» System

Network > Network Configuration

IP & DNS Settings

☐ Get IP address automatically

☒ Use fixed IP address

IP address: 192.168.5.22

Subnet mask: 255.255.255.0

Default gateway: 192.168.1.253

Primary DNS: 61.139.2.69

Secondary DNS: 119.6.6.6

PPPoE Settings

☐ Enable PPPoE

User name:

Password:

Confirm password:

DDNS Settings

☐ Enable DDNS

DDNS service:

Host name:

User name:

Password:

OK Cancel

Network Configuration

These settings are used to configure basic network access for the camera. They are found under **Network> Network Configuration**.

Most of these settings vary with your specific hardware setup; therefore the defaults are set for common SOHO level usage. If you are using the camera in an enterprise environment, please check with your IT department to determine the correct settings for this section.

IP & DNS Settings

These settings are used to determine the IP address of the network camera.

- **Get IP address automatically** - Automatically acquires IP address from a DHCP service. This is the default setting
- **Use fixed IP address** - Sets a fixed IP address. You must also manually fill in IP address, Subnet mask, Default gateway, Primary DNS, and Secondary DNS fields. The network camera can be connected to the network upon completion.

PPPoE Settings

This feature is disabled by default. Connecting to the network using PPPoE requires a user name and password from your ISP. Select **Enable PPPoE** and fill in valid user name and password to connect the camera to the Internet.

DDNS Settings

DDNS (Dynamic Domain Name Server) is a protocol that enables the camera to maintain a static connection address, even when its IP changes. Access using this feature is disabled by default.

Connecting using DDNS requires registration on third-party websites for DDNS services. Select desired DDNS service website, check the **Enable DDNS** option, and fill in valid user name and password. You can then access the camera through the registered domain name.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Port Settings

Ports are a software construct used to multiplex the transmission information to and from the camera. They act as separate endpoints within an IP address where software "listens" for incoming information. This section, which can be accessed under **Network > Port Settings**, includes *HTTP Port Settings* and *RTSP Settings*.

Note: The default port numbers in this section are, for the most part, well-known or commonly known values. We recommend that they not be changed unless there is a specific reason to do so.

HTTP Port Settings

The **HTTP port** number is used access the camera via the HTTP protocol.

The **LiveView Port** number is used to transmit live-view information.

RTSP Settings

Real-Time Streaming Protocol (RTSP) is a protocol used to establish and control media sessions between end points.

You may change the access name for stream 1, stream 2, the RTSP port number, the RTP port for video, the RTCP port for video, RTP port for audio, and RTCP port for audio.

Note: The RTP port number must be an even number. After entering the RTP port number, the RTCP port number will automatically be set to the RTP port number + 1.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

UPnP

Universal plug and play (UPnP) is a protocol that simplifies the implementation of networks by allowing new hardware to connect seamlessly to a network. The settings for this feature can be found under **Network>UPnP**.

To enable UPnP, first check the **Enable UPnP** box. If you wish to change the default values, there are two fields that can be edited.


- **Friendly Name** - An identifier for the camera on the network.
- **Interval** - The time between camera-sent UPnP updates.

Click **OK** to activate UPnP or **Cancel** to abort the changes before you leave the page. Once activated, the camera will be visible to other devices on the network.

Note: If the computer does not have UPnP installed, you can add it by going to **Start> Control Panel> Add or Remove Programs**. In the Add or Remove Programs page, select **Add/Remove Windows Components>Networking Services** and click **Details**. Select **UPnP** from the popup window, and **OK** out to install **UPnP** services.

Video & Audio Settings

Video and audio are the heart of a network camera's functionality. The settings for video and audio can be found under **Settings> Video & Audio**. Under this section, you can access basic video and audio settings, video appearance parameters, video stream settings, as well as audio parameters.

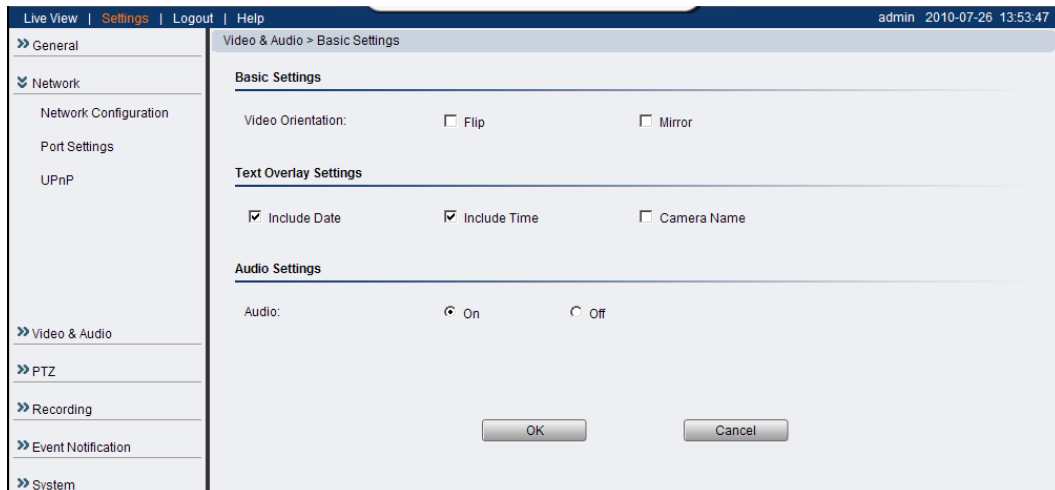

Basic Settings

Basic settings pertain to simple live-view tweaks. These parameters can be found under **Video & Audio> Basic Settings**.

Video Orientation

In certain mounting situations, the default video output may not be oriented correctly. This setting allows you to change the orientation of the output video.

- **Flip** - flips the image vertically.
- **Mirror** - flips the image horizontally.

Text Overlay Setting

The text overlay involves is the text displayed in the black bar at the top of the output screen. You can display multiple text messages at the same time. (Only the camera name will display if the resolution is 160 x 120).

- **Include Date** - Displays the current date.
- **Include Time** - Displays the current time.
- **Camera Name** - Displays the name of the camera.

Audio Settings

Select the desired button to turn audio from the camera on or off.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Image Appearance for CAM2200

These settings, found under **Video & Audio > Image Appearance**, deal with the video output of the CAM2200. There are two tabs, *Image Attributes* and *Sensor Configuration*, as well as *Advanced Settings*.

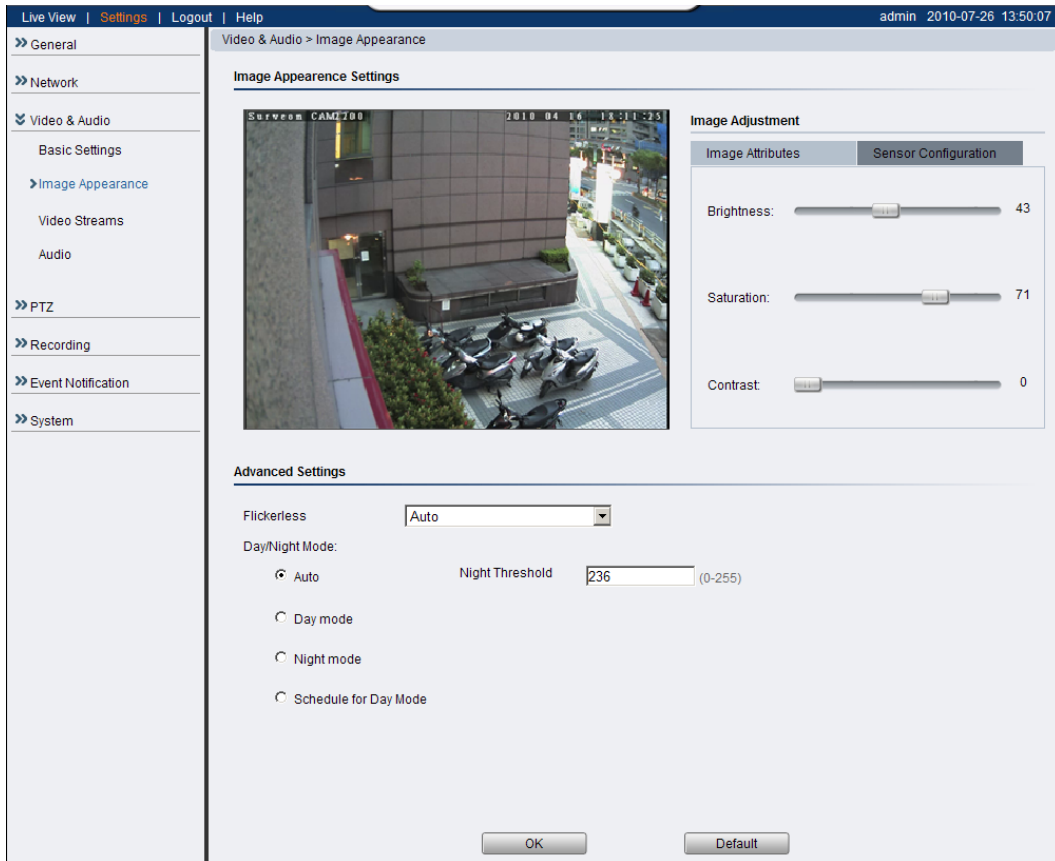


Image Attributes


These parameters deal with the image lighting and color. All parameters are values ranging from (0) to (100). Dragging the slider to the right increases the value, while dragging to the left lowers the value. The adjustments will be displayed in real-time in the window to the left of the sliders.

- **Brightness** - Adjusts the brightness of the image.

Note: In certain situations, the sensor may experience banding issues. In these cases, please turn raise the brightness.

- **Saturation** - Adjusts the saturation of the image.
- **Contrast** - Adjusts the contrast of the image.

Sensor Configuration for CAM2200

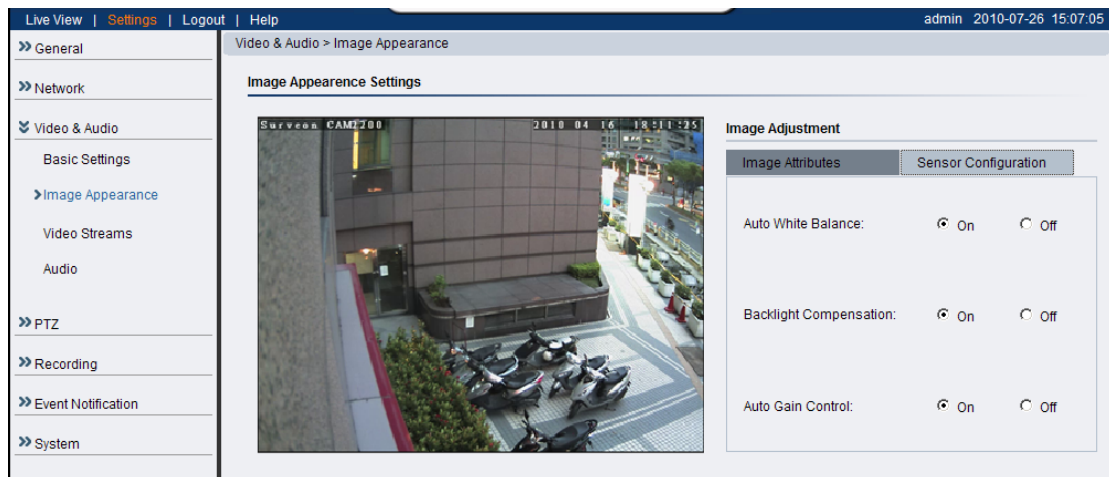

The *Sensor Configuration* can be accessed by clicking on the tab to the right of the *Image Attributes* tab. The following features can be activated or deactivated:

- **Auto White Balance** - Artificial lighting or varied lighting conditions may skew the colors in the video image. **Auto White Balance** will attempt to correct the color balance to a more natural state.
- **Backlight compensation** - Backlight compensation adjusts video gain to automatically correct the exposure of objects that are strongly backlit. This brightens the image, at the cost of overexposing areas of high illumination.
- **AGC Gain** - Automatic gain control (AGC) adjusts the video gain level to a variety of inputs to preserve a correct exposure levels.

Advanced Settings for CAM2200

The *Advanced Settings* allow you to make changes to the following parameters:

- **Flickerless** - Reduces flickering caused by the difference in frequency of the system and the environment lighting.
 - o **Auto** - Automatically determines the compensation frequency.
 - o **50Hz** - Compensates for 50Hz lighting.
 - o **60Hz** - Compensates for 60Hz lighting.

Note: In certain situations, the sensor may experience banding issues. In these cases, please turn the flickerless feature on.

- **Day/Night Mode** - Sets the day (color) and night (black and white, IR cut filter off where applicable.) Night mode sacrifices color information to produce a clear picture with less light.
 - o **Auto** - The camera will determine when the light levels require a switch.
 - **Night Threshold** - The threshold which the camera will switch to night mode.
 - o **Day mode** - Forces day mode.
 - o **Night mode** - Forces night mode.
 - o **Schedule for day mode** - Allows the user to set a time for day/night transitions.
 - **From:** - The time, in hours and minutes, when the camera will be in day mode.
 - **To:** - The time, in hours and minutes, when the camera will switch to night mode.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Image Appearance for CAM2400

These settings, found under **Video & Audio > Image Appearance**, deal with the video output of the CAM2400. There are two tabs, *Image Attributes* and *Sensor Configuration*, as well as *Advanced Settings*.

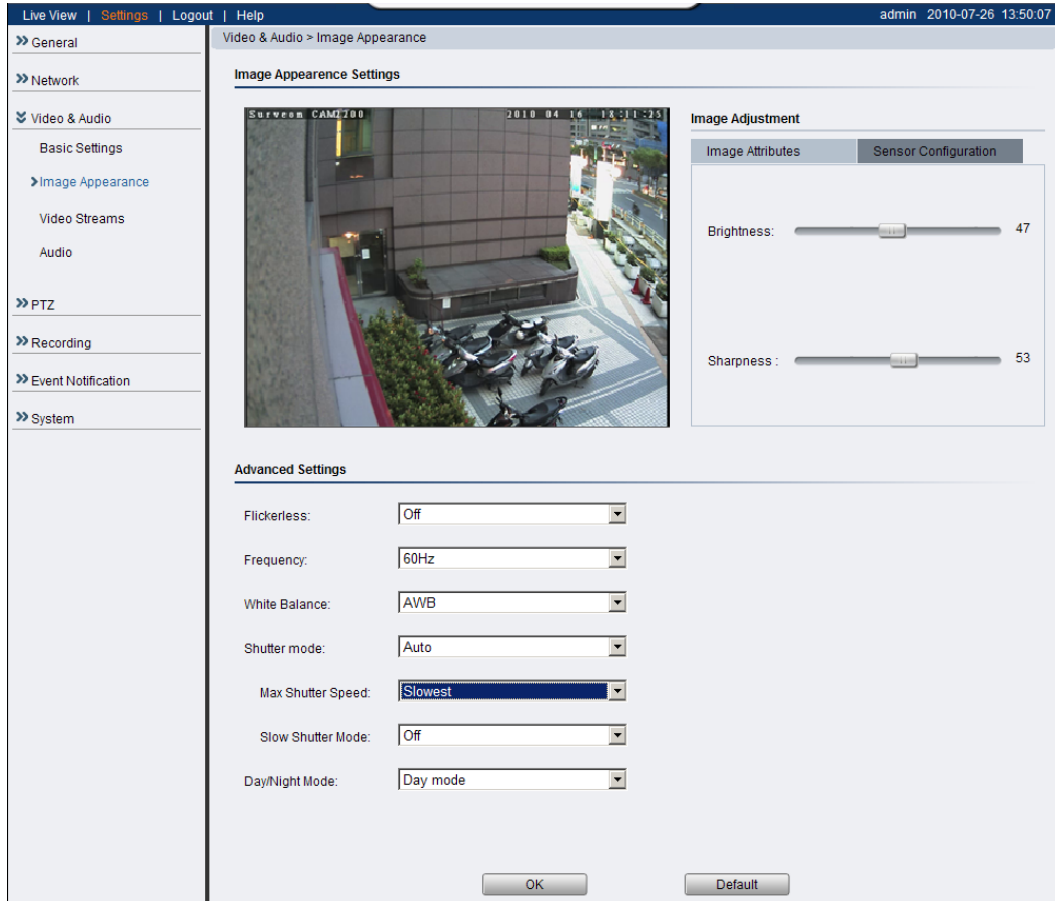


Image Attributes


These parameters deal with the image lighting and color. All parameters are values ranging from (0) to (100). Dragging the slider to the right increases the value, while dragging to the left lowers the value. The adjustments will be displayed in real-time in the window to the left of the sliders.

- **Brightness** - Adjusts the brightness of the image.

Note: In certain situations, the sensor may experience banding issues. In these cases, please turn raise the brightness.

- **Sharpness** - Adjusts the sharpness of the image.

Sensor Configuration for CAM2400

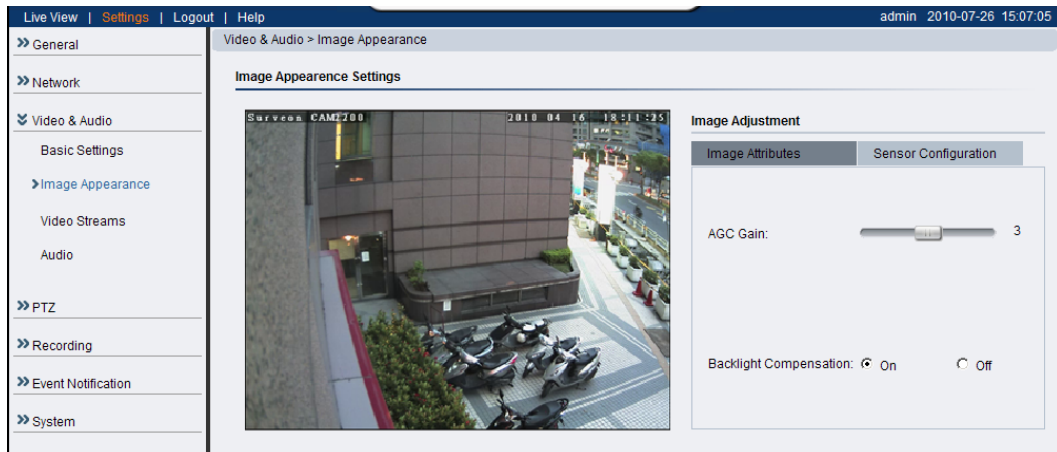

The *Sensor Configuration* can be accessed by clicking on the tab to the right of the *Image Attributes* tab. The following parameters can be changed:

- AGC Gain** - Automatic gain control (AGC) adjusts the video gain level to a variety of inputs. This setting provides a baseline value for the AGC. Values higher than this will be darkened, and values that are lower will be brightened. AGC should be adjusted so that the area of interest is best lit.
- Backlight Compensation** - Backlight compensation adjusts video gain to automatically correct the exposure of objects that are strongly backlit. This brightens the image, at the cost of overexposing areas of high illumination.

Advanced Settings for CAM2400

The *Advanced Settings* allow you to make changes to the following parameters:

Advanced Settings	
Flickerless:	Off
Frequency:	60Hz
White Balance:	AWB
Shutter mode:	Auto
Max Shutter Speed:	Slowest
Slow Shutter Mode:	Off
Day/Night Mode:	Day mode

- **Flickerless** - Reduces flickering caused by the difference in frequency of the system and the environment lighting.
 - o **Frequency** - Used in conjunction with the flickerless function. The user can choose to compensate for 50Hz or 60Hz lighting.

Note: In certain situations, the sensor may experience banding issues. In these cases, please turn the flickerless feature on.

- **White Balance** - This setting allows users to choose the color balancing method used.
 - o **AWB** - Automatically chooses white level.
 - o **MWB** - The user must specify the red and blue gain levels to achieve the correct white level.
 - **R Gain** - The gain applied to the red video channel.
 - **B Gain** - The gain applied to the blue video channel.
 - **Indoor 3200 K**
 - **Indoor 3800 K**
 - **Outdoor 4800K**
 - **Outdoor 6700K**
- **Shutter Mode** - Sets the camera shutter mode. Longer shutter times allow more light into the sensor, resulting in a cleaner picture, however longer shutter times can result in motion blur.
 - o **Auto** - The camera will automatically change the shutter speed to adjust to the lighting conditions.

- **Max Shutter Speed** - This setting limits the shutter speed to slowest, slow, normal or fast.
- **Slow Shutter Mode** - Used in conjunction with **Auto** shutter mode. Forces a slower shutter when **Night Mode** is activated
 - **Slow Shutter Speed** - Drag the slider bar to adjust the slow shutter speed used.
- o **Manual** - This setting allows users to specify a shutter speed.
 - **Shutter Speed** - The user may choose the following shutter speeds: 1/60s, 1/120s, 1/250s, 1/500s, 1/1000s, 1/2000s, 1/5000s, and 1/10000s.
 - **DC Iris** - This setting activates or deactivates the DC Iris
- **Day/Night Mode** - Sets the day (color) and night (black and white, IR cut filter off where applicable.) Night mode sacrifices color information to produce a clear picture with less light.
 - o **Auto** - The camera will determine when the light levels require a switch.
 - **Night Threshold** - The threshold which the camera will switch to night mode.
 - **Day Threshold** - The threshold which the camera will switch back to day mode.
 - o **Day mode** - Forces day mode.
 - o **Night mode** - Forces night mode.
 - o **Schedule for day mode** - Allows the user to set a time for day/night transitions.
 - **From:** - The time, in hours and minutes, when the camera will be in day mode.
 - **To:** - The time, in hours and minutes, when the camera will switch to night mode.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Video Streams

The configuration for video streams, including resolution, framerate and image quality parameters can be found under **Video & Audio > Video Streams**.

The screenshot shows the 'Video & Audio > Video Streams' configuration page. The left sidebar contains a tree view with the following items: General, Network, Video & Audio (expanded), PTZ, Recording, Event Notification, and System. Under 'Video & Audio', there are sub-items: Basic Settings, Image Appearance, Video Streams (selected), and Audio. The main content area is titled 'Video & Audio > Video Streams' and contains two sections: 'Video Stream 1 Settings' and 'Video Stream 2 Settings'. Each section has a 'Video Format' dropdown, 'Video Resolution' dropdown, 'Video Frames per Second' dropdown, 'Key Frame Interval' dropdown, and 'Video Quality Settings' section. The 'Video Quality Settings' section has two radio buttons: 'Constant Bit Rate' and 'Fixed Quality'. For Stream 1, the settings are: Video Format: H.264, Video Resolution: SXGA (1280 x 1024), Video Frames per Second: 15, Key Frame Interval: 1 sec, Constant Bit Rate: 4 Mbps, and Fixed Quality: Medium. For Stream 2, the settings are: Video Format: MPEG4, Video Resolution: QQVGA(160x120), Video Frames per Second: 15, Key Frame Interval: 1 sec, Constant Bit Rate: 256 kbps, and Fixed Quality: Medium. At the bottom of the page, there are 'OK' and 'Cancel' buttons.

The page is split into settings for 2 streams. Common settings are:

- **Video format** - The compression format for the video stream.
 - o **H.264** - Provides the best compression, and clear picture, but is processor intensive.
 - o **MPEG4** - Provides more compression than MJPEG, but loses picture quality.
 - o **MJPEG** - Provides minimal compression, with the best picture quality. Each frame is stored as a discrete JPEG. This option is only available in Stream 1.
- **Video Resolution** - Sets the resolution of the video output. 4 options are available: SXGA (1280 x 1024 in CAM2200, 1280 x 960 in CAM2400, Stream 1 only), HD720 (1280 x 720, Stream 1 only), VGA(640x480), QVGA(320x240), QQVGA(160x120, Stream 2 and MPEG4 only).
- **Video Frames per Second** - Sets the number of frames per second. 1, 3, 5, 10, 15, 20, 25, 30 FPS are possible values.

- **Key Frame Interval** - Sets the period between minimally compressed recovery frames that don't require other video frames to decode. 1/4s, 1/2s, 1s, 2s, 3s, and 4s are possible values.
- **Video Quality Settings** - Sets the quality of the video image.
 - o **Constant Bit Rate** - In this mode, the camera will maintain a constant bit rate output, regardless of video quality. Bit rates available are dependent on the video resolution chosen, and range from 32 kbps to 6 Mbps.
 - o **Fixed quality** - In this mode, the camera will attempt to maintain a constant quality output, up to a maximum bandwidth of 6 Mbps.

There are 2 modes in the *Video Stream 2 Settings*:

- **Normal Mode** - All parameters may be changed.
- **3GPP Mode** - All parameters will default to settings that are compatible with mobile viewing. The default in this case is 5fps QQVGA video, with MPEG4 compression at 128kbps and 10 seconds between key frames. None of the parameters can be changed.

Video Stream2 Settings

☐ Normal Mode ☒ 3GPP Mode

Video format: MPEG4

Video resolution: QQVGA (160 x 120)

Video frames per second: 5

Key frame interval: 10

Video quality settings

☒ Constant bit rate: 128kbps

☐ Fixed quality: Medium

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Audio Settings

The audio settings, under **Video & Audio > Audio Settings**, contain parameters dealing with audio coming from the cameras built in mic, or an external microphone.

- **Mute** - Selects whether or not to mute the incoming audio from the camera.
- **Audio In** - Selects the source for the camera audio feed. **Line In** specifies an external source connected to the camera's line-in port, while **Microphone** is the camera's internal microphone.
- **ADPCM Bit Rate** - Adaptive differential pulse-code modulation (ADPCM) is a method for digitally encoding audio signals. Only one bit rate, 32 Kbps, is currently supported. Audio will be encoded at this bit rate.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Note: Only Stream 1 supports audio.

PTZ

RS-485 is a control standard that is used as a basis for controlling point-tilt-zoom (PTZ) cameras or mounts. The PTZ menu **Settings> PTZ> RS-485 Settings** allows configuration of the RS-485 controls.

The screenshot shows the 'PTZ > RS-485 Settings' configuration window. On the left is a sidebar with navigation links: General, Network, Video & Audio, PTZ (selected), RS-485 Settings (sub-selected), Recording, Event Notification, and System. The main area is titled 'PTZ > RS-485 Settings' and contains two sections. The 'RS-485 Settings' section has a 'Baud Rate' dropdown menu currently showing '9600'. The 'PTZ Settings' section has a checked 'Enable PTZ' checkbox, a 'PTZ Decoder Address' text input field containing the number '1', and a 'PTZ Protocol' dropdown menu showing 'Pelco-P'. At the bottom of the settings area are 'OK' and 'Cancel' buttons. The top of the window shows a navigation bar with 'Live View', 'Settings', 'Logout', and 'Help', along with the user 'admin' and timestamp '2010-07-26 17:16:02'.

The following parameters are configurable:

- **Baud rate** - The baud rate to be used with the RS-485 device. Options are 2400, 4800, 9600, 19200, 11520 bd.
- **Enable PTZ** - This check box activates PTZ service, allowing PTZ controls to be displayed.
 - o **PTZ decoder address** - The address of the PTZ decoder, which decodes commands and turns them into electrical signals to drive the PTZ mechanism. This address is a discreet number based on PTZ decoder's connection.
 - o **PTZ protocol** - The protocol used by the PTZ. Two of the most common protocols are supported: Pelco-D and Pelco-P.


Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Recording

The Recording menu, **Settings> Recording**, deals with recording settings and managing recorded video files.

Recording Basic Settings

Recording basic settings, **Recording> Recording Basic Settings** are parameters which deal with the recording location and scheduling.

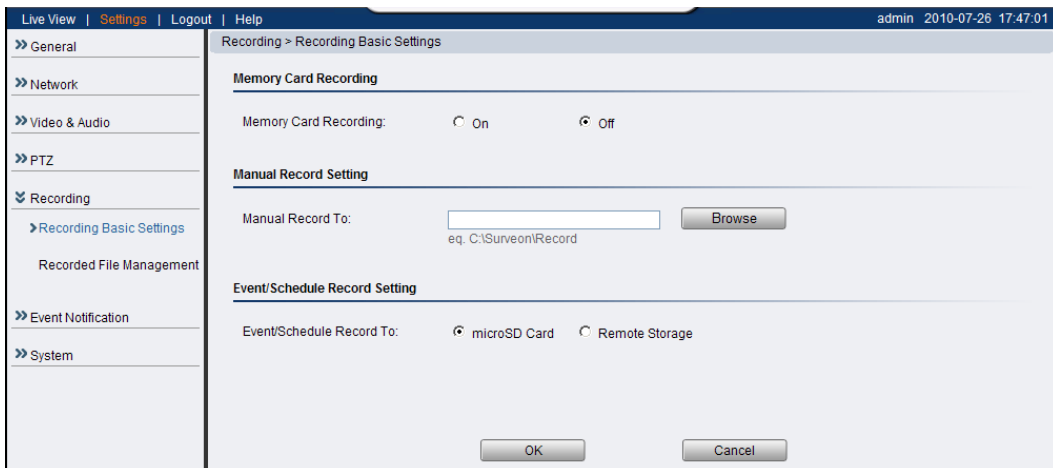


The following parameters can be configured within this menu:

- **Memory Card Recording** - When turned on, video will automatically be recorded onto the microSD card if the network connection is lost. When a network connection is re-established, recording will switch back to the remote destination. If this feature is turned off, there will be no recording at all when if network connection is lost.
- **Manual Record To:** - Defines the path for manual recording. Screenshots and user recordings will be saved in this location.
- **Event/Schedule Record To:** - Allows the user to set the destination for event or scheduled recording. Event and scheduled recording settings are found under **Settings> Event Notification**.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Recorded File Management

This section, located at **Recording > Recorded File Management** allows users to manage videos recorded on the microSD cards.

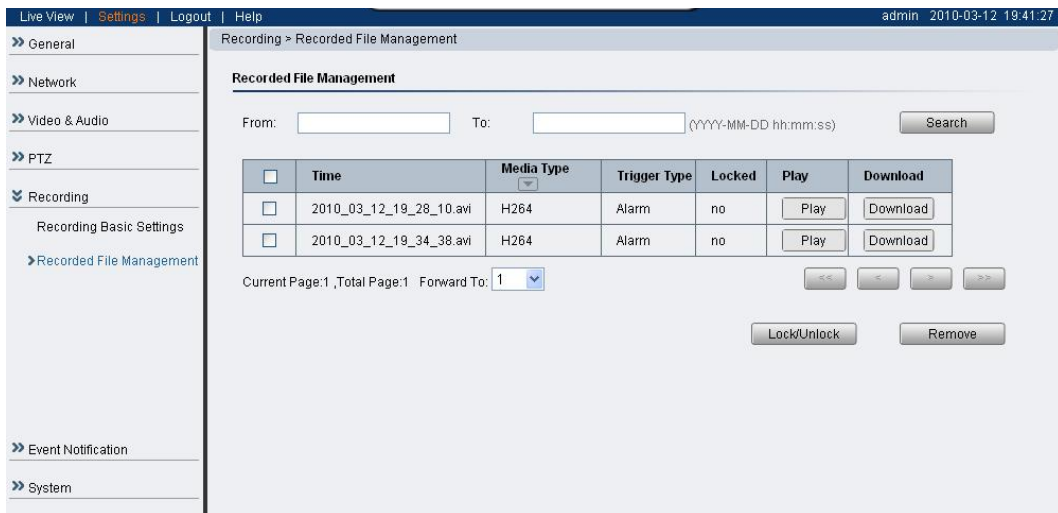

Locating Video Files

To locate video files from a specific time frame, enter a begin and end time in the **From:** and **To:** fields below, and click **Search**.

Each video file will have an entry containing:

- **Time** - The time the video was recorded, also the filename of the entry: YYYY_MM_DD_HH_MM_SS.avi
- **Media Type** - The encoding/compression method
- **Trigger Type** - What type of action triggered this recording eg. if it was alarm recording or scheduled recording.
- **Locked** - The lock state of the alarm.

The video records located will be split into pages. The information on these

- **<<** - Click to go to the first page of the recorded files list.
- **<** - Click to go to the previous page of the recorded files list.
- **>** - Click to go to the next page of the recorded files list.
- **>>** - Click to go to the last page of the recorded files list.
- **Forward To:** - This dropdown can be used to skip to a page number.

You may also narrow the entries displayed by clicking on the **Media Type** column. This will give you the option of choosing *All*, *H264*, *MPEG4*, or *MJPEG* types. The system will only show video files of the format selected.

Managing Video Files

Once you have located the video files of interest you may select them by checking the box in the leftmost column of the entry. You can also select all displayed entries by checking the box in the header row.

There will be two buttons in each entry:

- **Play** - Plays the video file in local helper application.
- **Download** - Downloads video files. Select one or more video files and click **Download**; Choose location to save the video file(s) onto your local PC.

Other actions that you can perform:

- **Lock/Unlock** - Locks/Unlocks video files. Locked files cannot be removed. Select one or multiple video files and click Lock/Unlock. When a file is locked, the Locked status will display yes.
- **Remove** - Manually deletes stored video files. Select one or more video files and click **Remove** to delete the file(s).

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Note: The video files shown in Recorded File Management are files stored in the microSD card. You can also record live video by clicking the record button in the Live View screen, which will be stored directly into your local computer, and are not managed by this function. Please refer to the section on [Manual Record](#) for more information on this functionality.

Event Notification

Event Notification settings, found under **Settings> Event Notification**, deal with the event detection, scheduled recording, and notification abilities of the camera.

Event Server

The event server, which can be configured under **Event Notification> Event Server**, is the communications center of the camera. This section deals with the configuration of E-mail and FTP notifications, as well as remote recording.

The screenshot shows the 'Event Notification > Event Server' configuration page. The left sidebar contains a navigation menu with options: General, Network, Video & Audio, PTZ, Recording, Event Notification (selected), Event Server (selected), Motion Detection, Tampering Detection, DI & DO, Event Settings, and System. The main content area is divided into three sections:

- Email Settings:**
 - Sender Email Address: (placeholder: eg:template@surveon.com)
 - Recipient Email Address: (placeholder: eg:template@surveon.com)
 - Server Address:
 - User Name:
 - Password:
 - SMTP Server Port:
- FTP Settings:**
 - Server Address:
 - FTP Server Port:
 - User Name:
 - Password:
 - FTP Folder Name:
- NAS Settings:**
 - Server Address:
 - User Name:
 - Password:
 - Folder Name:

Email Settings

Email settings are used to configure e-mail notifications.

- **Sender Email Address** - The return e-mail address for notifications. This should be your notification address.
- **Recipient email address** - The e-mail address notification emails will be sent to. Only one email address can be entered.
- **Server address** - The IP or address of the e-mail server.
- **User Name** - The user name of the notifications e-mail account.
- **Password** - The password of the e-mail account.
- **SMTP Server Port** - the SMTP port of the email server; Default 25.
- **Test** - Click this button to send a test email. E-mails will only be sent if all parameters are entered correctly.

FTP Settings

FTP settings are used to configure recording to a remote location via the file transfer protocol.

- **Server Address** - The address of the FTP server.
- **FTP Server Port** - The port number of the FTP server; Default 21.
- **User Name** - The user name of the FTP account.
- **Password** - The password of the FTP account.
- **FTP Folder Name** - The name of the folder on the FTP site which video files will be stored in.

NAS Settings


NAS settings are used to configure recording to network attached storage.

- **Server Address** - The address of the NAS server.
- **User Name** - The user name of the NAS account.
- **Password** - The password of the NAS account.
- **Folder Name** - The name of the CIFS account folder on the server.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Motion Detection

The motion detection functionality of the camera can be found under **Event Notification> Motion Detection**.

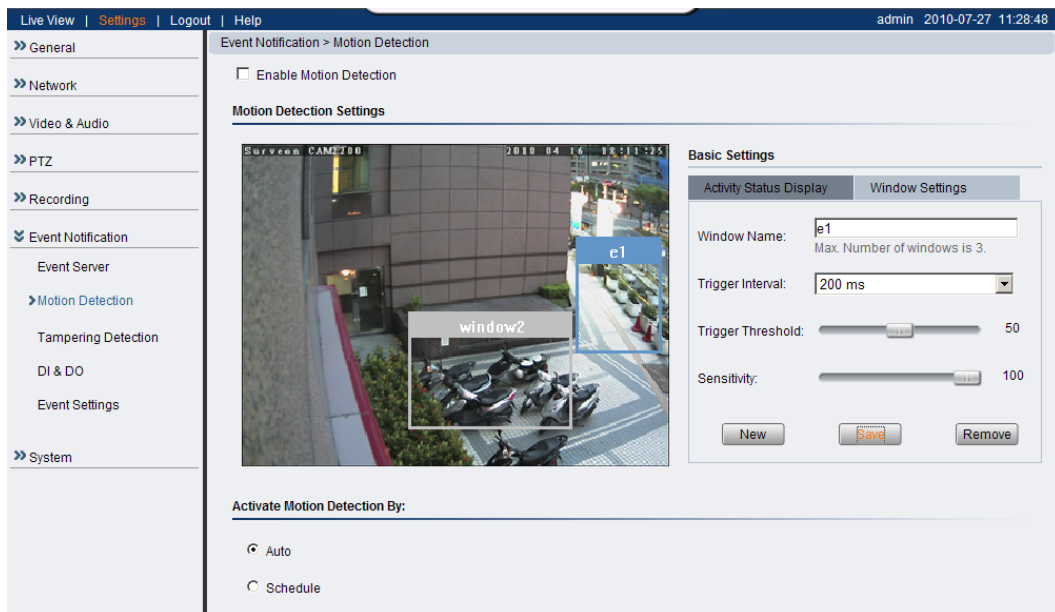

Motion Detection Window Management

To detect motion, first a detection window must be created. First click the *Window Settings* tab to enter the window configuration, and click **New** to add a new detection window. A maximum of 3 motion detection windows can be added. Each new window will be created with a default name *Window N*, where *N* is the number of the window. After creating the window, clicking it will select the window. You can drag and resize the window using your mouse. You can also change the following parameters:

- **Window Name** - The name of the motion detection window.
- **Trigger Interval** - The time interval between motion triggers. Options available are: 200 ms , 400 ms, 800 ms, and 1000 ms.
- **Trigger Threshold** - The percentage change in the window before a motion alarm is triggered.
- **Sensitivity** - The sensitivity of the motion box.

Click **Save** to save all settings. Settings of existing windows can also be changed by selecting the window and changing the settings. To delete a window, select a window in and click **Remove**.


After windows are set, you can activate motion detection by checking the **Enable Motion Detection** box.

Activating and Scheduling Motion Detection

Motion detection is activated by checking the **Enable Motion Detection** box.

Activate Motion Detection By: denotes when motion detection will be triggered as an event.

- **Auto** - As long as **Enable Motion Detection** is checked, an event is triggered.
- **Schedule** - Selecting this option allows to manually schedule the

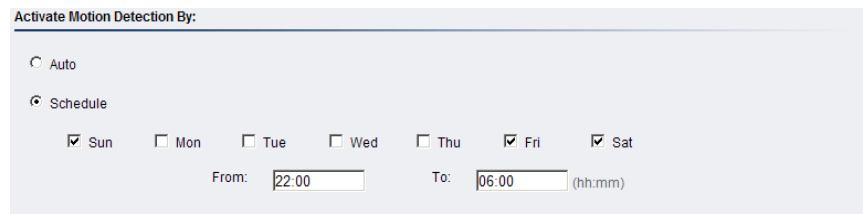


times motion detection will be active. Select the days of the week that Motion Detection is active by checking the corresponding boxes, and fill in a start time and end time for motion detection in the **From:** and **To:** boxes.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Triggering a Motion Event

The video displaying on the window is the live streaming video. The *Activity Status Display* tab displays the amount of motion detected in a selected window. By raising the **Sensitivity** of the window the motion values for a given motion, which are shown in yellow, will be higher. When the motion value reaches or crosses the **Trigger Threshold**, denoted by the red line, a motion event will be triggered. Motion alarm handling and notifications can be configured under [Event Settings](#).

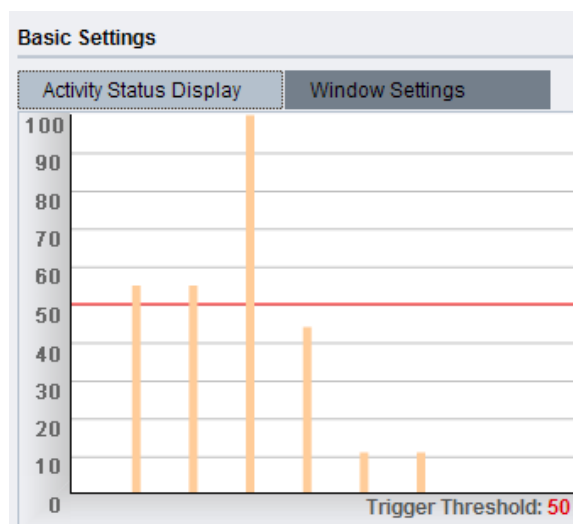


Tampering Detection

Tampering detection is similar to motion detection in that it detects where there is a sudden unexpected change in the whole camera view. Parameters for this feature are found under **Event Notification > Tampering Detection**.

Tampering alarm handling and notifications can be configured under [Event Settings](#).

The tampering detection parameters include:

- **Tampering Detection** - Turns tampering detection on or off.
- **Tampering Sensitivity** - Sets the sensitivity of Tampering Detection.

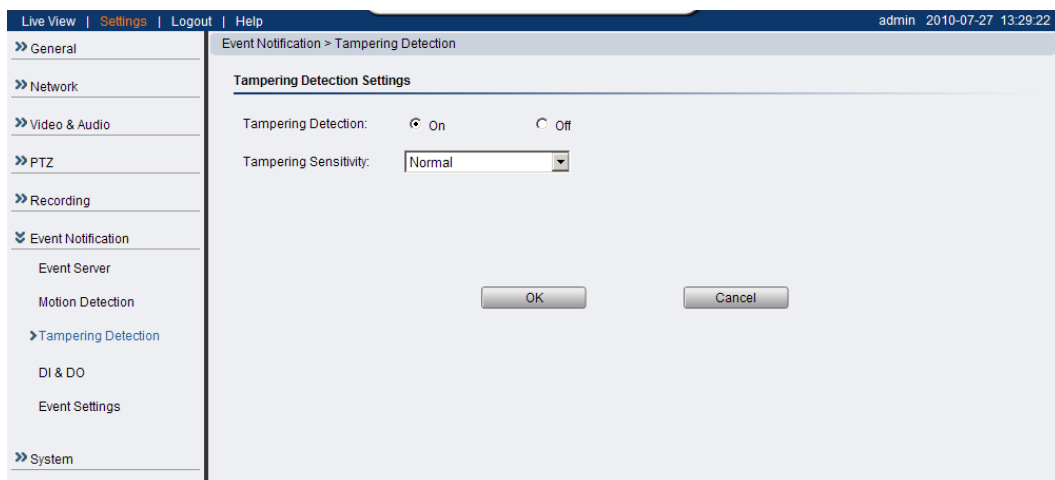


Options are *Very Low, Low, Normal, High, and Very High*. Higher sensitivities can detect more tampering attempts, but also increase the chances that the camera will produce a false alarm.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

DI & DO

Digital Input (DI) and Digital Output (DO) stand are used for event triggering. The camera has 1 DO and 2 DI ports. Settings for these ports can be found under **Event Notification > DI & DO**. Conditions for DI and DO triggering, as well as notifications for can be set under [Event Settings](#).

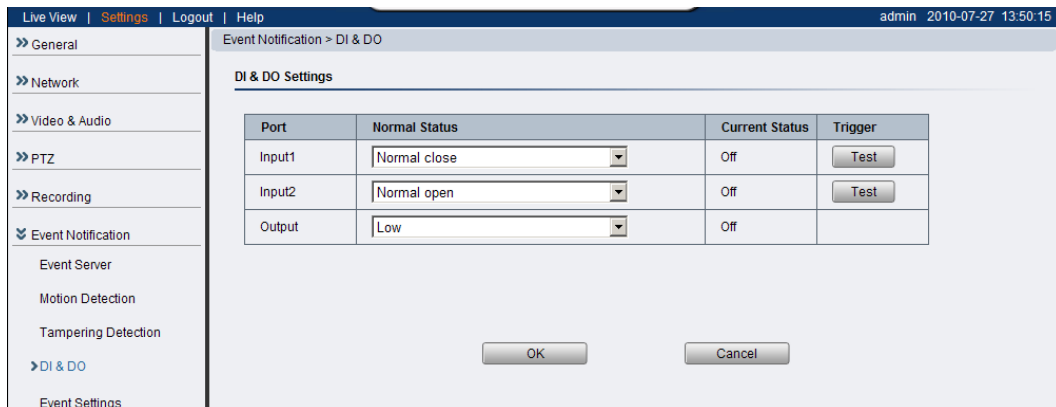

Digital Input

The two inputs are listed as Input1 and Input2 and connect to external circuits such as window break detectors. These inputs can be tested by clicking the **Test** button in the input entry.


Each input has a **Normal Status**:

- **Normal Open** – the DI requires a low voltage input, with the following configuration.



It is triggered when it does not receive this input.

- **Normal Close** – the DI requires a high voltage input (+12V), with the following configuration.

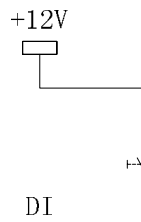

It is triggered when it does not receive this input.


- **Off** - DI inputs are closed at all times. The camera will not respond to any signals on this DI.

Digital Output


The camera can also be configured to send signals through the digital output.

Each output has a **Normal Status**:

- **High** - DO outputs a high voltage when triggered, and is connected to the output circuit in the following manner:

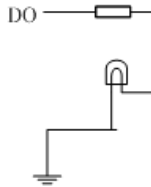

- **Low** - DO acts as a ground when triggered, and is connected to the output circuit in the following manner:

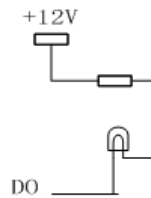


- **Off** - Closes DO output; no signals will be sent.

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Event Settings

Event settings deal with alarm handling and notification, as well as feature scheduling. These settings can be found under the **Event Notification > Event Settings** menu.

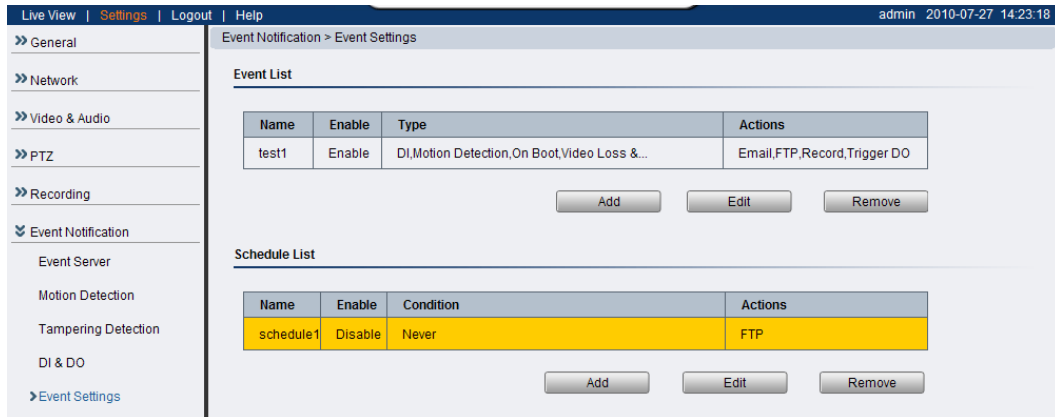

The event handler is rule based. There are lists for both two types of rules:

- **Event List** - Contains rules based on triggered events such as motion detection or DI triggers.
- **Schedule List** - Contains time-based rules.

Each rule has an action list. When the conditions for rule are met, the actions specified by the rule are carried out. Users may perform the following actions in both Event and Schedule lists:

- **Add** - Clicking on the **Add** button adds a new rule to a list.
- **Select** - Clicking on an existing rule selects the rule, highlighting it in yellow.
 - o **Edit** - A selected rule may be edited by clicking on the **Edit** button.
 - o **Delete** - A selected rule may be deleted by clicking on the **Delete** button.

Adding/Editing an Event Rule

The Add and Edit screens contain the following triggering actions:

The screenshot shows the 'General' tab of an event rule configuration window. It includes fields for 'Name' (set to 'TriggeredEvent') and 'Set Time Interval Between Triggers (min)' (set to '01:01:01'). Below these is the 'Enable Triggering By' section with radio buttons for 'Always', 'Recurrence Pattern' (selected), and 'Never'. The 'Recurrence Pattern' section includes checkboxes for days of the week (Sun, Mon, Tue, Wed, Thu, Fri, Sat) and time range fields 'From' (01:00) and 'To' (03:00). The 'Triggered By' section has checkboxes for 'Motion Detection' (checked), 'On Boot', 'Video Loss & Tampering Detection', 'Disk Full', and 'DI'. The 'Motion Detection' checkbox is accompanied by an 'In Window' dropdown menu set to 'Window 1-e1'.

Note: If editing a rule that has not been triggered, the rule will not be triggered after until after editing is complete. If the rule is triggered, any changes will not be applied until the current trigger is resolved.

General


The following general fields should be filled in:

- **Name** - Specifies the name of the Event.
- **Minimum time interval between triggers** - The time frame in which a subsequent trigger of the same event will be ignored (maximum 23:59:59).

Enable Triggering By

The next step is to specify the frequency of trigger response. 3 options are available:

- **Always** - The default setting; Triggers event when conditions are met.
- **Recurrence Pattern** - Enables triggering only if conditions are met during a specified time period. To specify the period, select the days of the week that the trigger is active by checking the corresponding boxes, and fill in a start time and end time for motion detection in the **From:** and **To:** boxes.

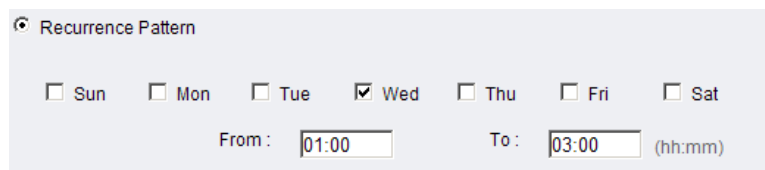

The screenshot shows a configuration window titled "Recurrence Pattern". It features a row of checkboxes for the days of the week: Sun, Mon, Tue, Wed, Thu, Fri, and Sat. The "Wed" checkbox is checked. Below the checkboxes, there are two input fields labeled "From:" and "To:". The "From:" field contains "01:00" and the "To:" field contains "03:00". To the right of the "To:" field, the text "(hh:mm)" is displayed.

- **Never** - The event is never triggered.

Enable Triggering By

After the frequency is selected, triggering conditions can be set. Multiple conditions can be set at once. Available options include:

- **Motion Detection** - Trigger when motion is detected.
 - **In Window** - Specifies the detection window that will trigger the event.

Please refer to the section on [Motion Detection](#) for details.

- **On Boot** - Trigger when camera reboots.
- **Video Loss & Tampering Detection** - Trigger when video signal is lost or tampering is detected. Please refer to the section on [Tampering Detection](#) for more detail.
- **Disk Full** - Trigger when the SD disk installed in the camera is full.
- **DI** - Trigger when a DI trigger occurs. For more information please refer to the section on [DI & DO](#).

When Triggered

The actions to take when trigger conditions are met are configured here.

The screenshot shows the 'Trigger Actions' configuration window. At the top, there's a 'Streams' dropdown menu set to '1'. Below it, several actions are listed with checkboxes: 'Email' (checked), 'FTP' (checked), 'Record' (checked), and 'Trigger DO' (checked). The 'Email' section has two text input fields: 'Subject' and 'Additional Information'. Below these are two radio buttons: 'Snapshot' (selected) and 'Video'. The 'FTP' section also has two radio buttons: 'Snapshot' (selected) and 'Video'. At the bottom, there's a 'Trigger duration' dropdown menu set to '5 sec'.

The following options are available:

- **Streams** – Selects the stream from which the snapshot or recording will be obtained.
- **Email** – E-mails notifications to the email address specified in the [Event Server](#) settings. If this option is chosen, fill in the following:
 - o **Subject** - The subject line of the notification e-mail.
 - o **Additional Information** - Contents of the notification e-mail.
 - o **Snapshot/Video Clip** - Choose to send a snapshot or video attachment from 5s before to 30s after the trigger.
- **FTP** - uploads a snapshot or video clip to a FTP location specified in the [Event Server](#) settings.
 - o **Snapshot/Video Clip** - Choose to upload a snapshot or video file from 5 seconds before to 30 seconds after the trigger. Files are sent as attachments.
- **Record** - Records video to the server specified in the [Event Server](#) settings and the microSD card when triggered. The video clip stored on both remote storage server and local storage is a video file 35 seconds in length (5 seconds before and 30 seconds after the trigger)
- **Trigger DO** – A Digital output signal is sent when triggered.
 - o **Trigger Duration** - The length of time that the DO signal is sent. Options are 1, 2, 5, 10, 20 or 30 seconds. For more information please refer to the section on [DI & DO](#).

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

Adding/Editing a Scheduled Rule

The Add and Edit screens contain the following actions:

General

Name:

Set Time Interval (When Activated): (hh:mm)

Activate Event Time By

☐ Always

☐ Recurrence Pattern

☒ Never

Note: If editing a rule that has not been triggered, the rule will not be triggered after until after editing is complete. If the rule is triggered, any changes will not be applied until the current trigger is resolved.

General

The following general fields should be filled in:

- **Name** - Specifies the name of the Event.
- **Set Time Interval (When Activated)** - The trigger time of the event (00:00 to 23:59).

Enable Triggering By

The next step is to specify the frequency of trigger response. 3 options are available:

- **Always** - The default setting; Triggers event when conditions are met.
- **Recurrence Pattern** - Enables triggering only if conditions are met during a specified time period. To specify the period, select the days of the week that the trigger is active by checking the corresponding boxes, and fill in a start time and end time for motion detection in the **From:** and **To:** boxes.

☒ Recurrence Pattern

☐ Sun ☐ Mon ☐ Tue ☒ Wed ☐ Thu ☐ Fri ☐ Sat

From: To: (hh:mm)

- **Never** - The event is never triggered.

When Triggered

The actions to take when trigger conditions are met are configured here.

The screenshot shows the 'Trigger Actions' configuration window. At the top, there's a 'Streams' dropdown menu set to '1'. Below it, there are several checked options: 'Email', 'FTP', 'Record', and 'Trigger DO'. The 'Email' section has two text input fields: 'Subject' and 'Additional Information', and two radio buttons: 'Snapshot' (selected) and 'Video'. The 'FTP' section also has two radio buttons: 'Snapshot' (selected) and 'Video'. The 'Record' section has no further options. The 'Trigger DO' section has a 'Trigger duration' dropdown menu set to '5 sec'.

The following options are available:

- **Streams** – Selects the stream from which the snapshot or recording will be obtained.
- **Email** – E-mails notifications to the email address specified in the [Event Server](#) settings. If this option is chosen, fill in the following:
 - o **Subject** - The subject line of the notification e-mail.
 - o **Additional Information** - Contents of the notification e-mail.
 - o **Snapshot/Video Clip** - Choose to send a snapshot or video attachment from 5s before to 30s after the trigger.
- **FTP** - uploads a snapshot or video clip to a FTP location specified in the [Event Server](#) settings.
 - o **Snapshot/Video Clip** - Choose to upload a snapshot or video file from 5 seconds before to 30 seconds after the trigger. Files are sent as attachments.
- **Record** - Records video to the server specified in the [Event Server](#) settings and the microSD card when triggered. The video clip stored on both remote storage server and local storage is a video file 35 seconds in length (5 seconds before and 30 seconds after the trigger)
- **Trigger DO** – A Digital output signal is sent when triggered.
 - o **Trigger Duration** - The length of time that the DO signal is sent. Options are 1, 2, 5, 10, 20 or 30 seconds. For more information please refer to the section on [DI & DO](#).

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

System

The system settings, which deal with hardware and firmware parameters, logs, and configuration lists, can be found under **Settings> System**.

MicroSD Card Management

Surveon cameras can all access MicroSD class 4/6 cards for offline video storage and upgrade purposes. MicroSD installed in the camera can be managed under **System> MicroSD Card Management**.

The status of the current microSD card can be obtained under *Basic Settings*:

- **MicroSD card Status** – If a readable card is present this will show *ready*, otherwise it will display *no*.
- **Total Size** – The size of the card.
- **Free** – The total space left on the card.
- **Used** – The occupied space on the card.
- **Use(%)** – The percentage of the card that has been used.

The user may also enter the administrator password if necessary and click **Format** to format the microSD card.


In *MicroSD Card Management*:

- **Available Recording Time** - Calculates how much recording time is available based on current settings.
- **Storage Recycle Settings** - Turning the function **On** will clear the microSD card once it is full.
- **Max Duration for Automatic Disc cleanup ___ days** – If storage recycling is activated, the card will be cleared when this number of days has elapsed. (100 days max. Locked files will not be cleared).

Click **OK** to save or **Cancel** to abort the changes before you leave the page.

System Status

The camera status can be found under **System > System Status**.

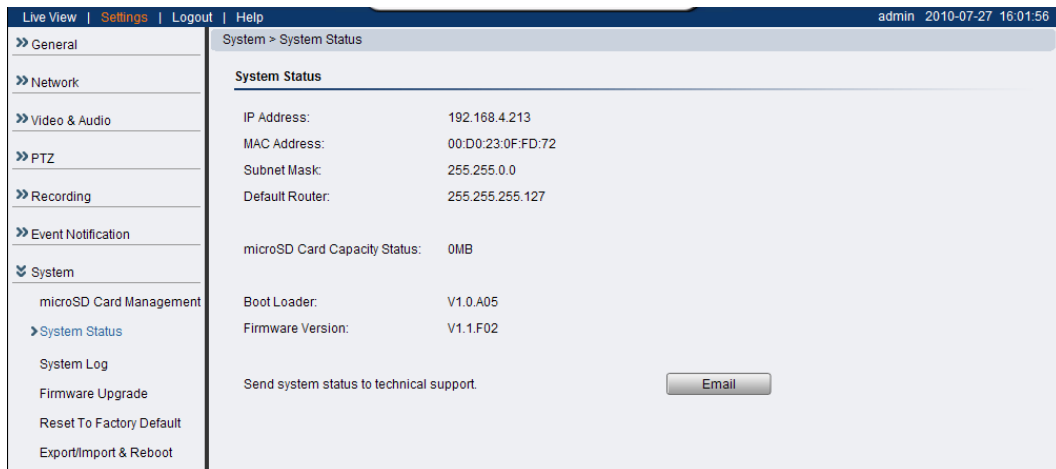

This section displays useful system information including:


- [Network Configuration](#) defined manually or obtained from DHCP
 - o **IP Address**
 - o **MAC Address**
 - o **Subnet Mask**
 - o **Default Router** address
- microSD Card Capacity
- Camera System Information
 - o **Boot Loader** Version
 - o **Firmware Version**

Clicking on the **Email** button will send the system status information out to the notification e-mail address specified in [Event Server](#) for troubleshooting or reference purposes.

System log

The system log, **System> System Log**, provides a log for system messages and events. The log lists important information such as login information, changes to camera settings (both successful and unsuccessful), triggered events, and error messages.

This information can be very useful in the event of a camera failure or unauthorized entry.

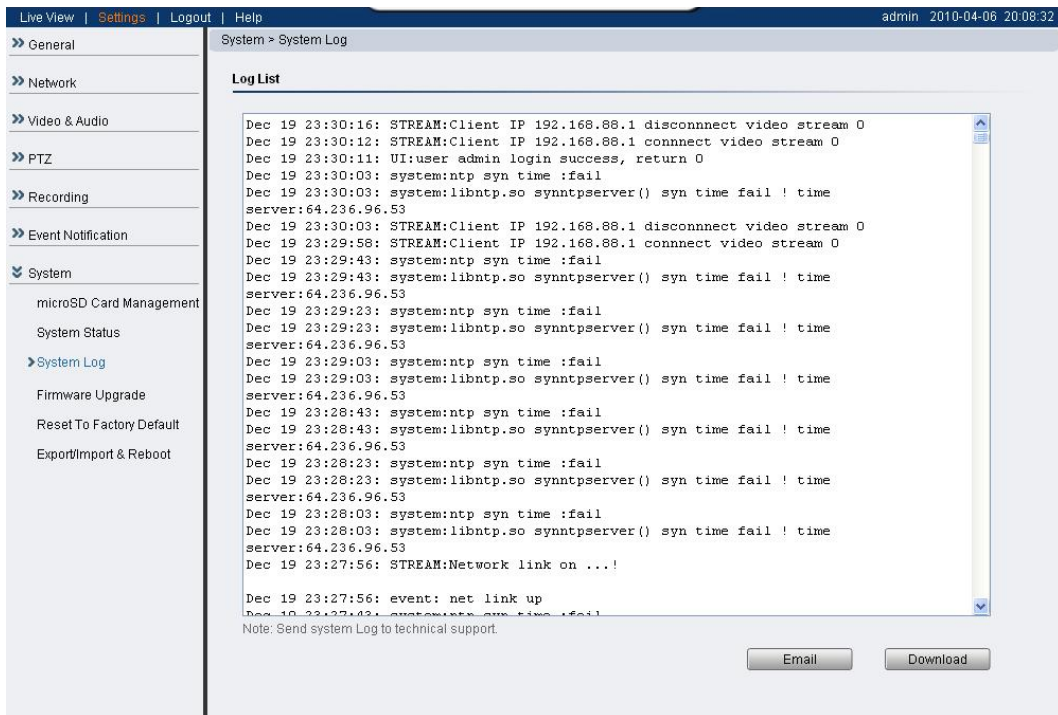

Clicking **Email** will send the log out as an email the notification e-mail address specified in [Event Server](#); Clicking **Download** will begin the browser download process to download the log to the local PC.


Firmware Upgrade

In certain cases, improvements to the camera firmware will be made to improve the image quality or enhance the usability of the camera. These upgrades will be made available via Surveon support or our website www.surveon.com. Once you have obtained a new firmware file, firmware upgrades can be performed under **System > Firmware Upgrade**.

There are 2 ways to upgrade the firmware:

- Upgrading through firmware stored locally on a PC
- Upgrading through firmware stored in a microSD card

If upgrading through firmware stored locally, enter the path of the file in the provided field or click **Browse** to find the file.

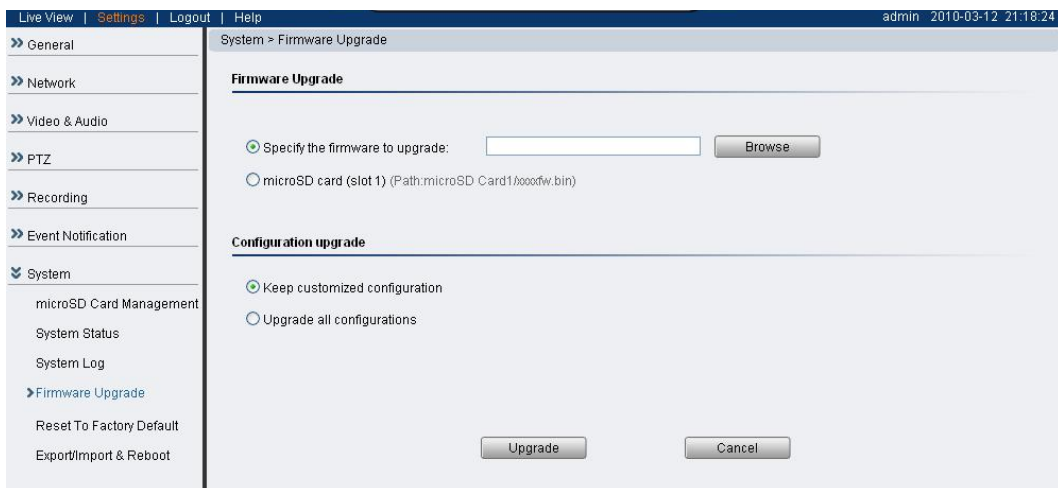

Select **Keep customized configuration** to keep current configuration settings, or **Upgrade all configurations** to clear all settings back to factory defaults.


Click **Upgrade** to start the upgrade. Upon completion of firmware upgrade, the camera will reboot (you will be logged off). During the firmware upgrade, the LED indicator in front of the camera will show steady amber. When the LED indicator turns green, the firmware upgrade is complete.

Click **Cancel** to exit without upgrading.

To perform a firmware upgrade from the MicroSD card, copy the new firmware onto the MicroSD card, and reboot (cycle camera power) or reset the camera. The camera will automatically detect the firmware and perform the upgrade. Remove the MicroSD card and delete the firmware when the upgrade is complete.

Reset to Factory Default

Camera resets can be performed under **System> Reset To Factory Default**.

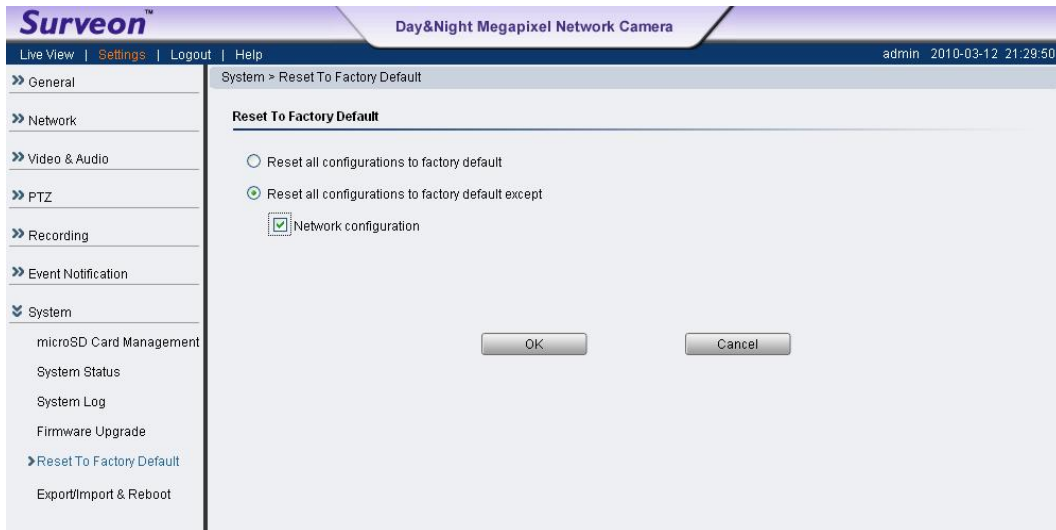


There are 2 types of reset. You can either reset all settings and configurations, or you can choose to keep the Network configuration, and reset all other settings and configurations.

Click **OK** after choosing a reset option to perform a reset.

Alternately, you may press the “Reset” button on the bottom of the camera to perform a complete reset of the camera (no configurations retained). To reset the camera by pressing the “Reset” button on the bottom of the camera, press and hold the “Reset” button for 3 seconds. During this time, the LED indicator in front of the camera will blink in red.

Export/Import & Reboot

In certain situations it may be necessary to restart your network camera (network settings changed, DHCP added, etc). The settings under **System> Export/Import & Reboot** allow you to restart the camera.

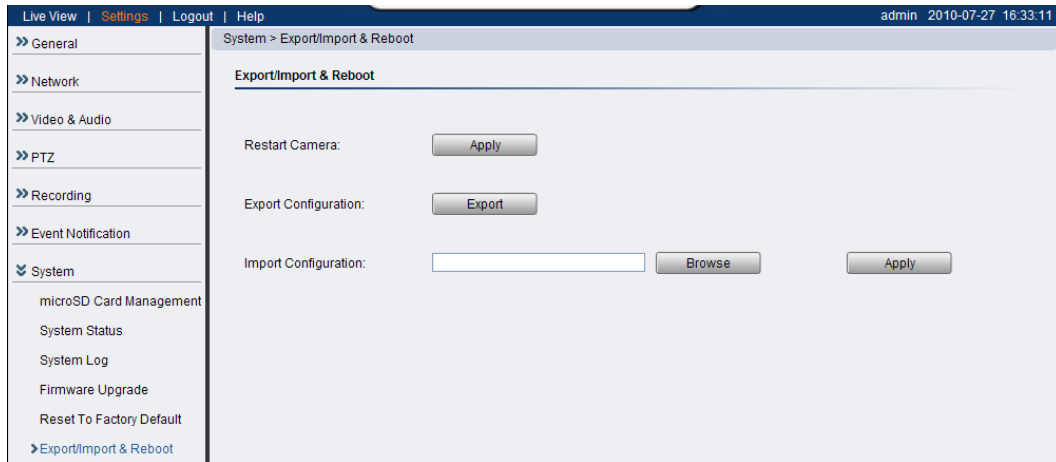

This menu also contains options to export configuration details (for backup or replication purposes), as well as import configuration details. The following options are available:

- **Restart Camera** - Resets the camera when **Apply** is clicked.
- **Export Configuration** - Export the camera's settings and configurations by clicking **Export**, this will start a browser dialogue to download the configuration.
- **Import Configuration** - Imports previously exported camera settings. The field should contain the path for the camera configuration file. Click **Browse**: to browse your PC for the configuration file. Click **Apply** to import the settings.