



Conveyor Toaster



Models: T140

11/2010

Please read and keep these instructions. Indoor use only.

Installation, Operation and Care

Unpacking

Great care has been taken during the packing and shipment of your Avantco conveyor toaster. However, if you notice any signs of damage when unpacking the unit, please call the manufacturer.

- Do not remove any tags or labels until unit is installed and working properly.

General Installation and Operation Instructions



IT IS ESSENTIAL TO MAKE SURE THAT THE INCOMING VOLTAGE IS THE SAME AS THE RATED VOLTAGE OF THE UNIT AS FOUND ON THE SERIAL PLATE. THE SERIAL PLATE IS LOCATED AT THE REAR OF THE UNIT ADJACENT TO THE INCOMING CORD ENTRY.

 
1. This conveyor toaster has been designed to continuously produce toasted bread or buns. The desired toasted color of the product can be adjusted by changing the belt speed of the conveyor. Depending on installation position, the toasted product can be discharged to the front or rear of the unit.
2. Before operating this unit, thoroughly clean as described in the cleaning section of this manual (page 5).




ENSURE THE SUPPORT FEET ARE ASSEMBLED TO THE UNIT BEFORE COMMENCING OPERATION.

3. As detailed in the diagrams below, the unit can either be assembled with front or rear discharge depending on installation position and preference.

i. FRONT DISCHARGE

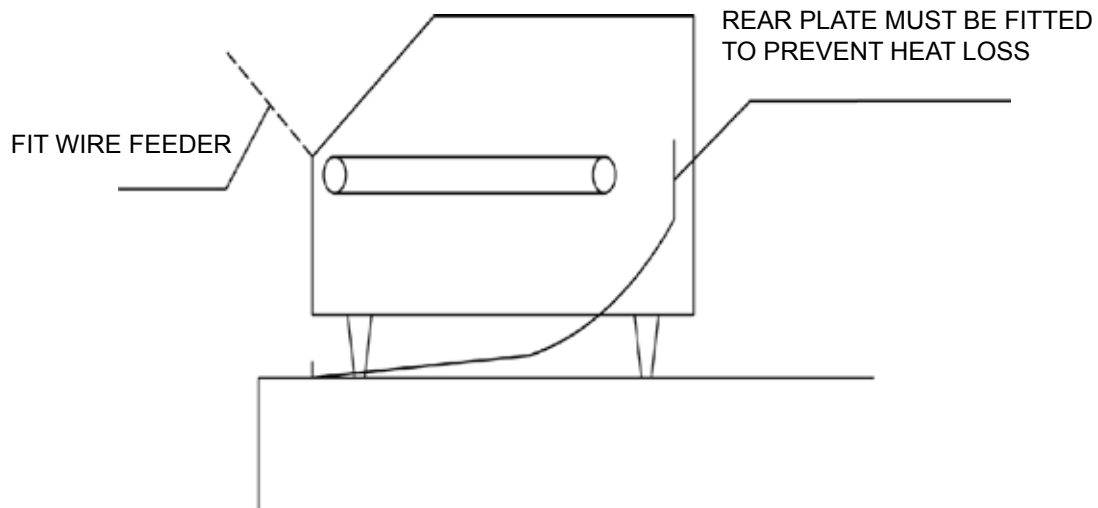

ii REAR DISCHARGE

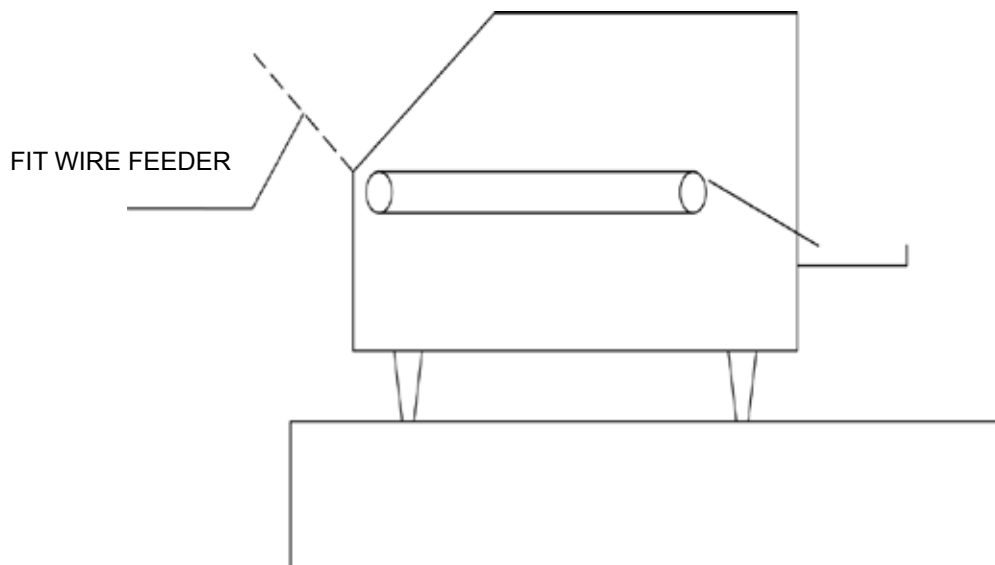 

(Operation Instructions)

4. The unit has two controls.

- i. Speed or color control determines the length of time the toast or product is in the heating chamber. The slower the speed, the longer the exposure and the darker the product.
- ii. The heat control switch has 4 settings.
 - a. "OFF" - In this position, the unit is off.
 - b. "STANDBY" - In this position, the conveyor belt will run and both top and bottom elements will operate at 25% capacity. This mode is designed to keep the unit warm in quiet periods to reduce start-up time and conserve energy.
 - c. "BREAD" - In this position, both top and bottom elements operate at full capacity. This is the ideal mode for toasting bread.
 - d. "BUNS" - In this position, only the top element operates at full capacity. This is the ideal setting for toasting one side only of a bun.

5. For best results, allow the unit to preheat for 20-25 minutes before use so that the correct operating temperature can be reached. As described above, product appearance or color is dependent on conveyor speed and type of product. These other factors may also affect the toasting color:

- i. Moisture content of the product.
- ii. Sugar content of the product.
- iii. Initial product temperature.

Cleaning

1. Always ensure that the unit is disconnected from the main power supply.



THIS APPLIANCE SHOULD NOT BE IMMERSSED IN WATER. USE ONLY A DAMP CLOTH OR SPONGE DIPPED IN SOAPY WATER. DO NOT USE STEEL-WOOL AS IT WILL DAMAGE THE BRIGHT STAINLESS STEEL FINISH.

2. Wipe off the unit with a dry cloth and wait at least half an hour before reconnecting to the power outlet.
3. Remove the crumb tray from the unit by pulling forward. Dispose of the crumbs and clean the tray as described above, refit the tray before reusing the appliance.

Specific Cleaning Instructions

The following applies to cleaning of the conveyor belt only.


1. Turn off the toaster and allow the unit to cool down.
2. Switch on the unit to standby mode and adjust the belt to slow speed.
3. Using an abrasive pad, wipe the conveyor belt in a back and forth motion (ie: side to side) to remove baked on product.
4. Finally, clean the belt with a damp cloth in the same manner as described in number 3.

Safety

1. When this unit is to be positioned in close proximity to a wall, partitions, kitchen furniture, decorative finishes, etc, it is recommended that they be made of non-combustible material. If not, they shall be clad with a suitable non-combustible heat insulating material, and the closest attention be paid to fire prevention regulations.
2. Use the unit on an individual 15A power outlet only.
DO NOT OVERLOAD THE CIRCUIT.
3. Ensure that the power cord does not come into contact with hot surfaces.
4. Do not touch moving parts while operating the unit.
5. Close supervision is necessary when the appliance is used in close proximity to children.
6. Do not operate the unit if the power cord becomes damaged or frayed. Contact your local service agent.

Electrical Connection Information

MODEL	DESCRIPTION	VOLTS (V/HZ)	POWER (WATTS)	PLUG TYPE
T140	CONVEYOR TOASTER	120/60	1750	NEMA 5-15P

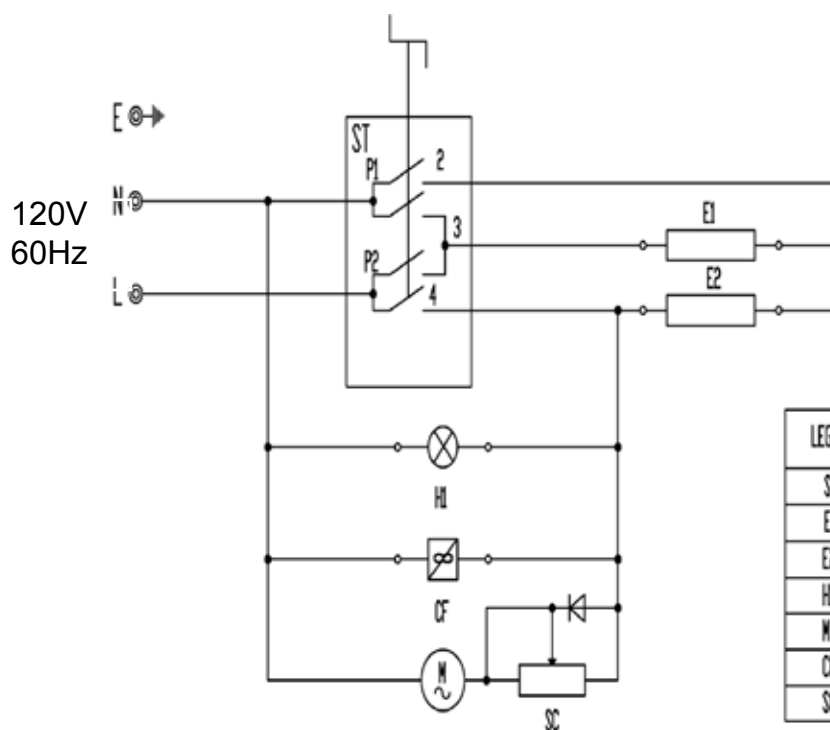 

WIRING DIAGRAM

MODEL : CONVEYOR TOASTER
MODEL CODE : T140

LEGEND	DESCRIPTION	PART NUMBER
SW	STAGE SWITCH	1 - SW - CTA 7001
E1	TOP ELEMENT - 1040W / 120V	5-120V-1040W-CT
E2	BOTTOM ELEMENT 710W / 120V	5-120V-710W-CTA
HL	CONTROL PILOT LIGHT 120V	1 - PL - AMB
M	CONVEYOR MOTOR 120V	1-MOT-CTA7001
CF	COOLING FAN 120V	1- FAN-CTA7001
SC	CONVEYOR SPEED CONTROL 120V	1-SC-CTA7001

User Manual

