

User Manual  
**Vodafone 845**



**vodafone**

**Make the most of now.**

Vodafone 845 Mobile phone

User Manual

<b>Reading Before Proceeding</b> .....	<b>1</b>
Safety Precautions.....	1
Notice .....	4
<b>Getting to Know Your Mobile Phone</b> .....	<b>5</b>
Box Clever with Your Mobile Phone .....	5
Mobile Phone View .....	6
Installing Your Mobile Phone .....	8
Turning Your Mobile Phone On and Off .....	11
Using the Touchscreen .....	13
Locking and Unlocking the Screen.....	14
Home Screen .....	15
Notifications and Status .....	18
Connecting to a Computer via USB.....	21
<b>Calling</b> .....	<b>24</b>
Making a Call .....	24
Answering and Rejecting a Call .....	28
Using Call log.....	30
Other Operations During a Call.....	31
Using the Airplane Mode.....	33
<b>Contacts</b> .....	<b>34</b>
Opening and Viewing Contacts.....	34
Adding and Deleting Contacts .....	39
Editing a Contact .....	41
Importing Contacts from a SIM Card .....	43
Searching for a Contact.....	44
Communicating with Your Contacts .....	44

<b>Using the Onscreen Keyboard</b> .....	<b>46</b>
Displaying the Keyboard Panel.....	46
Customizing Keyboard Settings.....	51
<b>Messaging</b> .....	<b>55</b>
SMS and MMS.....	55
Email .....	62
<b>Getting Connected</b> .....	<b>68</b>
GPRS/3G .....	68
Wi-Fi .....	69
Browser.....	70
Bluetooth.....	74
Connecting to a Computer via USB.....	77
Modem Behavior.....	78
<b>Entertainment</b> .....	<b>80</b>
Taking Photos and Recording Videos .....	80
Using the Gallery .....	85
Enjoying Music.....	87
Listening to FM Radio .....	91
<b>Google Services</b> .....	<b>95</b>
Creating a Google Account .....	95
Using Gmail.....	96
Using Talk .....	100
Using Maps .....	102
Using YouTube .....	104
Using Market .....	105
<b>Synchronizing Information</b> .....	<b>109</b>

Managing Your Accounts .....	109
Customizing Your Account Synchronization .....	112
Using the PC Suite to Synchronize .....	114
<b>Using Other Applications .....</b>	<b>115</b>
Using the Calendar .....	115
Using the Alarm .....	123
Using Sound Recorder .....	126
Using the File Manager .....	128
Using the Calculator .....	132
Using the Notepad .....	132
<b>Managing Your Mobile Phone .....</b>	<b>134</b>
Setting the Date and Time .....	134
Setting the Display .....	135
Setting Ringers .....	137
Setting Phone Services .....	139
Setting Text-to-Speech .....	141
Protecting Your Mobile Phone .....	142
Managing Applications .....	143
Resetting Your Mobile Phone .....	145
Upgrading the Software Version .....	146
<b>Appendix .....</b>	<b>149</b>
Warnings and Precautions .....	149

# Reading Before Proceeding

## Safety Precautions

Please read the safety precautions carefully to ensure the correct use of your mobile phone. For detailed information, refer to the section "Warnings and Precautions" on page 149.



Do not crash, throw, or puncture your mobile phone. Avoid the falling, squeezing, and bending of your mobile phone.



Do not use your mobile phone in a moist environment, such as the bathroom. Prevent your mobile phone from being soaked or washed in liquid.



Do not switch on your mobile phone when it is prohibited to use phones or when the phone may cause interference or danger.



Do not use your mobile phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your mobile phone near medical apparatus.



Switch off your mobile phone in aircraft. The phone may cause interference to control equipment of the aircraft.



Switch off your mobile phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your mobile phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your mobile phone or its accessories in containers with a strong electromagnetic field.



Do not place magnetic storage media near your mobile phone. Radiation from the phone may erase the information stored on them.



Do not put your mobile phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your mobile phone and its accessories away from children. Do not allow children to use your mobile phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless devices. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions of this manual while using the USB cable. Otherwise your mobile phone or PC may be damaged.

# Notice

## **All Rights Reserved**

Your phone is made exclusively for Vodafone by Huawei Technologies.

No part of this manual may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

## **Trademarks**

VODAFONE, the Vodafone logos are trade marks of the Vodafone Group. Other product and company names mentioned herein may be trade marks of their respective owners.

## **Notice**

The information in this manual is subject to change without notice. Every effort has been made in the preparation of this manual to ensure accuracy of the contents, but all statements, information, and recommendations in this manual do not constitute a warranty of any kind, expressed or implied.

Read the safety precautions and safety informations carefully to ensure that you use wireless device in a correct and safe manner.

# Getting to Know Your Mobile Phone

Ready to get hands-on with your touchscreen? To take every last gadget and gizmo for a spin? Great – here is where you will get to grips with the basics and best bits of your new mobile phone. So thumb through our manual and get up to speed with your mobile phone!


## Box Clever with Your Mobile Phone

Take a peak in your mobile phone box and you will find much more in there than your new mobile phone– in fact, you will have all these handy items to play with:

- Mobile phone
- Battery
- Charger
- USB cable
- 3.5 mm headset
- Quick start guide
- Safety information

# Mobile Phone View

## Key features at a glance

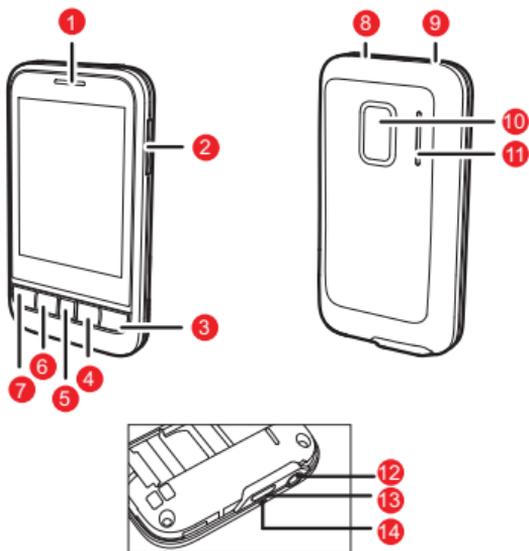

1	Earpiece	2	Volume control keys
3	End key	4	Home/Back key
5	Optical Finger Navigation	6	<b>MENU</b> key
7	Send key	8	Power key

9	Connectors on the top	10	Main camera
11	Speaker	12	Headset jack
13	Charging/Data interface	14	Microphone

## Key functions at your fingertips

Power key	<ul style="list-style-type: none"> <li>• Press to turn on your mobile phone.</li> <li>• Press and hold to open the <b>Phone options</b> menu.</li> <li>• Press to lock the screen when your mobile phone is on.</li> </ul>
Send key	Press to go to the <b>Phone</b> screen.
<b>MENU</b> key	<ul style="list-style-type: none"> <li>• Press to open the menu on an active screen.</li> <li>• Press and hold to open the keyboard so you can perform quick searches.</li> <li>• Press to unlock the screen.</li> </ul>
Optical Finger Navigation	<ul style="list-style-type: none"> <li>• Drag to navigate selectable items on the screen.</li> <li>• Press to select a highlighted item or action.</li> </ul>

---

Home/  
Back key

- Press to return to the previous screen.
- Press to exit any application you are running.

---

End key

- Press to hang up a call.
  - Press to return to the Home screen.
- 

**Tip:** The sensitivity level of the **Optical Finger Navigation** can be adjusted.

On the Home screen, press **MENU**, and then touch **Settings > General info & option > Trackpad**. Please refer to the "Adjusting the Trackpad" on page 136.

---

**Note:**


You can customize the function of the End key by selecting **Settings > General info & option > End button behavior**.

---

## Installing Your Mobile Phone


### How to slot in your SIM card

It takes just two simple steps to install your SIM card:

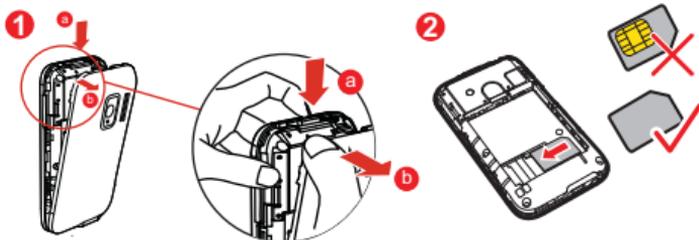

1. Remove the battery cover.
2. Insert the SIM card.

## How to pop in your battery

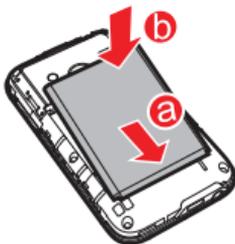

---

### Note:

Make sure the printed side of the battery points upwards.


---

1. Angle the edge labelled **a** (with the contacts) into the bottom end of the battery slot.
2. Push down the edge labelled **b** until the battery clicks firmly into place.

## How to charge your mobile phone

Before charging the battery, make sure that the battery has been properly inserted into your mobile phone.

Before you charge the battery, read the following instructions:

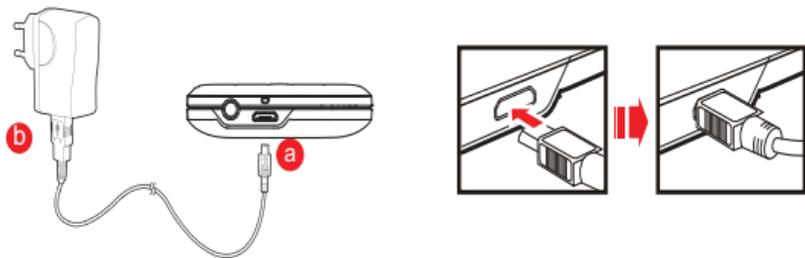

1. Connect your USB cable to your mobile phone, as shown in a.
2. Connect the other end of the cable to the charger, as shown in b.
3. Plug the charger into a power socket.

## How to keep your battery in top shape

- If your battery has not been used for a long time, your mobile phone might not turn on instantly when it's on charge. Keep the battery on charge a little longer and the mobile phone should turn on fine.
- Over time, your battery may not last as long as it did at first. This is down to general wear and tear and if your battery life is noticeably shorter, it is best to get a new battery.
- Using data services will reduce the standby time significantly.
- The time your battery takes to charge is influenced by its age and the local temperature.

- When your battery is running low, your mobile phone will make a sound and alert you on screen. When it is extremely low, your mobile phone will turn off automatically.

## Turning Your Mobile Phone On and Off

### How to turn on your mobile phone

1. Press the Power key.
2. The first time you do this, you will be asked to sign in to your account and set up your mobile phone.

---

**Note:**

When personal identification number (PIN) protection is enabled on your mobile phone, you need to enter the PIN before using the mobile phone.

---

### How to set up your mobile phone

1. Press the Power key to turn on the mobile phone.
2. Touch the Android image. After reading the setup information, touch **Begin**.
3. You will be prompted to use your onscreen keyboard.
  - To use the onscreen keyboard, touch any text field to open the keyboard and start typing.

- To continue, touch **Skip**.
4. You will be asked to sign in to your accounts. Once you sign in, all the emails on your account will automatically synchronize with your mobile phone.

---

**Note:** You will need an active data connection set up on your mobile phone to create or sign in to your account.

---

- If you do not have a account, you can select an account type and follow the instructions to make one.
  - You can touch **Skip** and save it till later.
5. Your mobile phone will ask you to enable the data service. This is because some of the features on your mobile phone need permanent data connection. Please check you have a data tariff option before enabling the data service.
  6. When you have signed in or created an account, you will be asked if you want to enable Google location. This service give you basic information about your surrounding location without using GPS.
  7. Set the date and the time. Then touch **Finish setup**.

## **How to turn off your mobile phone**

1. Press and hold the Power key to open the **Phone options** menu.

2. Touch **Power off**.
3. Touch **OK** when prompted to turn off the mobile phone.

## Using the Touchscreen

### Enjoying the touchscreen at your fingertips

- **Touch:** Touch a desired item with your finger to confirm your selection or start an application.
- **Touch and hold:** Touch and hold the screen until your mobile phone responds. For example, you can always touch and hold the screen to open the option menu of the active screen.
- **Flick:** Flick your finger vertically or horizontally across the screen. For example, you can flick your finger left and right to switch between pictures.
- **Drag:** Touch and hold your desired item with your finger. Then, drag the item to any part of the screen to move the item. For example, you can drag an icon on the screen to move or delete it.

### Rotating your mobile phone

Now you will never get in a spin – because when you turn your mobile phone, the screen twists too. And that means your screen is always the right way up, even if you are holding it portrait or landscape. But watch out – for this tricky technology to work, you will always have to turn your mobile phone anti-clockwise.

# Locking and Unlocking the Screen

## How to lock the screen

- When your mobile phone is on, press the Power key to lock the screen. When the screen is locked, you can still receive messages and calls.
- If you leave your mobile phone undisturbed for a while, the screen will lock automatically.

## How to unlock the screen

Press the **MENU**, Home/Back or Power key to wake up the screen. Then unlock it by doing any of the following:

- Press the **MENU** key to unlock the screen.
- Drag the unlock button from left to right.


---

### Note:

If you have set up a screen unlock pattern, you will be prompted to draw the pattern on the screen to unlock it.

---

# Home Screen

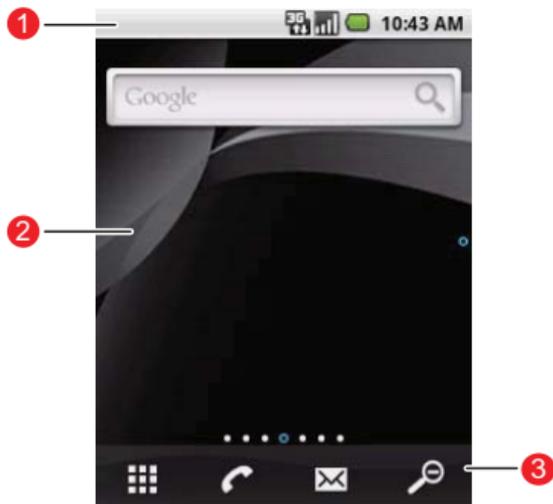

1	<b>Notification bar:</b> Displays the notifications and status icons of your mobile phone. Flick down to open the notification panel.
2	<b>Display area:</b> Shows the operation and display areas of your mobile phone.
3	<b>Application button:</b> Touch to displays the applications.

## How to extend the Home screen

On the Home screen, flick your finger across the screen to go to the extended Home screen.



## How to customize the Home screen

### To add a new screen item

1. Touch and hold the blank area on the Home screen until the **Add to Home screen** menu is displayed.
2. Select the item you want to add to the Home screen.

### To move a screen item

1. Touch and hold an icon on the Home screen until the icon magnifies and the mobile phone vibrates.

2. Without lifting your finger, drag the icon to the desired position on the screen, and then release it.

### **To remove a screen item**

1. Touch and hold an icon on the Home screen until the icon magnifies and the mobile phone vibrates.
2. Without lifting your finger, drag the icon to the recycle bin until the icon and the application button turn red, and then release it.

### **To change the wallpaper**

1. On the Home screen, press the **MENU** key, and then touch **Wallpaper**.
2. Do the followings:
  - Touch **Pictures** to select a picture and set it as a wallpaper.
  - Touch **Wallpaper gallery** to select a picture and set it as a wallpaper.
  - Touch **Live Wallpaper** to select an animation and set it as a wallpaper.

### **To create a new folder**

1. On the Home screen, press **MENU** key.
2. Touch **Add > Folders > New folder** to create a new folder.

## To rename a folder

1. Open a folder. Then touch and hold the folder's title bar.
2. Enter the new name of the folder, and then touch **OK**.

# Notifications and Status

## Notification and status icons

---

	Call in progress		Call via a Bluetooth device
	Call forwarding on		Call on hold
	Missed call		Connected to a PC
	System error		Memory is full
	Problem with sign-in/ sync		Preparing microSD card
	Downloading data		Uploading data
	Roaming		Signal strength

---



No signal



Airplane mode



Synchronizing data



Sync failed



Bluetooth is on



Connected to another  
Bluetooth device



Wi-Fi is on



Connected to a Wi-Fi  
network



GPS is on



GPS connected



More undisplayed  
notifications



No SIM card



Sound off



Loudspeaker on



Vibrate mode



Mobile phone is mute



GPRS connected



GPRS in use



3G connected



3G in use



Battery is full



Battery is very low



Battery is charging



Alarm is set



Music is playing



New calendar reminder

---



New email



New message

---



New voicemail



New instant message

---

## Notification panel

Your mobile phone will tell you when you receive a new message or when an event in your calendar is due. The notification panel also keeps you in the loop about alarms and settings—for example, when **Call forwarding** is activated. You can find out the wireless network operator, view a message, reminder, or event notification by opening the notification panel.

### To open the notification panel


1. When a new notification icon appears on the notification bar, touch and hold the notification bar, and then flick down to open the notification panel.
2. On the notification panel, you can do the following:
  - Touch a notification to open the related application.
  - Touch **Clear Notifications** to clear all notifications.

## To close the notification panel

Touch and hold the bottom of the panel. Then flick up to close the notification panel.

# Connecting to a Computer via USB

## How to install the microSD card

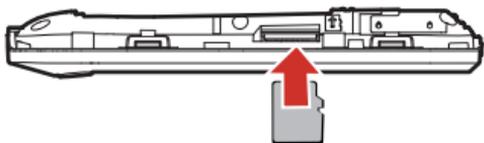

1. Remove the battery cover.
2. Insert the microSD card as shown in the diagram.

---

### **Note:**

When inserting the microSD card, make sure that the golden contact is facing downwards.

---

## Using the microSD Card as the USB Mass Storage

To transfer all your favorite music and pictures from your PC onto your mobile phone's microSD card, set the microSD card as the USB mass storage.

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the microSD card as a removable disk. You can now transfer files from your PC to your mobile phone's microSD card.
2. Open the notifications panel, and then touch **USB connected**.
3. Touch **Mount** in the dialog that opens to confirm that you want to transfer files.

---

**Tip:**

You can also touch  > **Settings** > **General info & option**, and then select the **USB Mass Storage** check box to use the microSD card as the USB mass storage.

---

**Note:**

When your microSD card acts as the USB mass storage, your mobile phone will not use this memory space. Your PC will tell you how to safely disconnect the USB mass storage device (that is your mobile phone by the way) when you have finished transferring files.

---

## Removing the microSD While Your Mobile Phone Is On

1. Touch  > **Settings**.
2. Scroll down the screen, and then touch **SD card & phone storage** > **Unmount SD card**.

3. Carefully remove the microSD card.

# Calling

To place a phone call, you can dial a number or touch a number in your contacts list, on a Web page, or from a document that contains a phone number. When you are on a call, you can either answer incoming calls or send them to your voicemail box. You can also set up conference calls with several participants.

## Making a Call

To make a call, you can use the **Phone** application, or select a number from **Contacts** or **Call log**.

While you are on a call, you can press  to return to the Home screen and use other functions. To return to the calling screen, flick the Notification bar down and touch **Current Call**.

## Making a Call with the Dialer

1. Touch  > **Dialer** to display the dialer.

---

**Tip:** If you are already working with **Contacts** or **Call log**, touch the **Dialer** tab.

---

2. Touch the appropriate numerical keys to enter the phone number.

---

**Tip:** Your mobile phone supports the SmartDial function, that is, when you touch numbers on the dialer, the phone automatically searches among your contacts and lists the matching results based on the accuracy. If no contact is matched with your entered information, the phone will not display any result.

---

3. Press  or touch  to initiate the call.

During a call, flick up the **Dialpad** tab to enter other numbers on the dialpad.

---

**Tip:** If you do not use the dialpad for a while, the screen will automatically lock to prevent the buttons from being pressed accidentally. To unlock the screen, touch the lock icon twice.

---

## Dialing Panel



1	Touch to switch between <b>Dialer</b> , <b>Call log</b> , <b>Contacts</b> , and <b>Favorites</b> .
2	Displays the number you enter.
3	Touch to enter the number.
4	Touch to make a voicemail.

5	Touch to dial.
6	Touch to erase each subsequent digit of a number. Touch and hold to erase the entire number.
7	Touch and hold to enter +.
8	Touch to display all the matching contacts.

## Making a Call from Contacts

1. Touch  > **Contacts** to display the contact list.

**Tip:** If you are already working with **Dialer** or **Call log**, touch the **Contacts** tab.

2. In the list, touch the contact you want to call.
3. Touch  to dial the phone number.

## Making a Call from Call log

1. Touch  > **Call log** to display the call log.

**Tip:** If you are already working with **Contacts** or **Dialer**, touch the **Call log** tab.

2. Touch  to the right of the log entry to dial.

---

**Tip:** If you touch and hold the log entry, to open the options menu for communicating with that contact in other ways will open.


---

## Answering and Rejecting a Call

### Answering an Incoming Call

When you receive a phone call, the incoming call screen opens with the caller ID and any additional information about the caller that you have entered in **Contacts**.

- Press  to answer the call.
- Drag the  to the right.

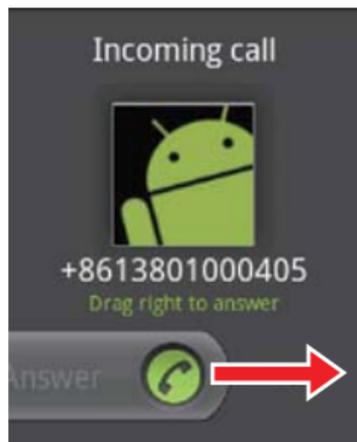


## Ending a Call

During a call, press  to hang up.

## Rejecting an Incoming Call

- Press  to reject a call.
- Drag the  to the left.

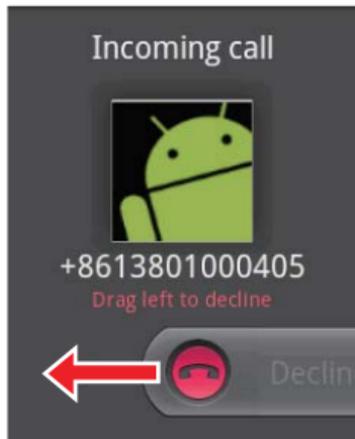

## Using Call log

The **Call log** contains a list of the last calls that you have dialed, received, or missed. You can use the call log to quickly find a recently called number or add an incoming number to your contact list.

### Adding an entry to Contacts

1. Touch  > **Call log** to display the call log.

2. Touch and hold the entry you want to add.
3. Touch **Add to contacts** in the options menu.
4. Touch **Create new contact** or scroll through the contact list and touch an existing contact name.

## Other Operations During a Call

### Making a Conference Call

If you receive a new call while you are already on a call, you can connect the second call to the call you are on. This feature is known as conference calling. You can also set up a conference call with multiple callers.

---

**Note:**

Contact your wireless service provider to learn whether it supports conference calls and how many participants you can add.

---

1. To initiate a conference call, dial the number of the first person to be on the call. While you are on that call, press , and then touch **Add call**.
2. Enter the phone number of the person you want to join the conversation and press , or select someone from your **Call log** or **Contacts**. The first call is automatically placed on hold.

3. Once you have connected to the person you have added, press , and then touch **Merge calls** to begin the conference call.
4. To add more people, touch **Add call** and repeat steps 2 and 3.
5. To drop someone from the call or to talk privately to one person, press , and then touch **Manage conference call**.
6. To end the conference call and disconnect everyone, press .

## Switching Between Calls

If you receive a new call while you are already on a call, you can switch between the two calls.

1. While you are on two calls, press , and then touch **Swap calls**.
2. The current call is placed on hold and you are connected to the other call.

---

**Tip:** You can also touch **Call on hold** icon on the notification bar to switch to the call.

---

# Using the Airplane Mode

Some locations may require you to turn off your phone's wireless connections. Rather than powering off your phone, you can place it in **Airplane mode**.

1. Press and hold the Power key.
2. Touch **Airplane mode** in the options menu.

# Contacts

The Contacts application enables you to save and manage information such as phone numbers and addresses of your contacts. After you save the contact information on your mobile phone, it gives you easy access to the people with whom you want to communicate.

## Opening and Viewing Contacts

### Opening the Contacts Application

If you have a new mobile phone and have not yet added any contacts, **Contacts** displays a message with hints on how to start adding contacts to your mobile phone.

- Touch  > **Contacts**.
- Press  and then touch the **Contacts** tab.

All of your contacts are displayed alphabetically in a scrolling list. Each contact is followed by the phone number that you have specified as the person's default phone number.

## **Quick Contact for Android**

As you build up your list of contacts on your phone, you can use Quick Contact for Android in many applications to quickly start a chat, email, or text message, to place a call, or to locate your contacts. Quick Contact for Android is a special icon that you can touch to open a bubble with options for quickly initiating a connection to that contact.

Contacts that you can access with Quick Contact are displayed differently in different applications, but usually with a picture frame.



Quick Contact icon with a picture frame.

- 1 Touch to open a bubble with icons for all the ways you can communicate with the contact.

A bubble with icons for all the ways you can communicate with the contact.

- 2 If there are more icons than can fit in the bubble, drag the icons left or right to view them all.

---

Touch an icon to open its application, and you can start communicating with your contact right away.

---

## Opening a List of Your Favorite Contacts


The **Favorites** tab contains a short list of the contacts with whom you communicate most often.

To open a list of your favorite contacts, touch the **Favorites** tab in the contacts list.

## Viewing Contact Details

To view contact details, touch the contact whose details you want to view. Detailed information such as the phone number, e-mail address, and physical address appears for each contact.

## Contact details

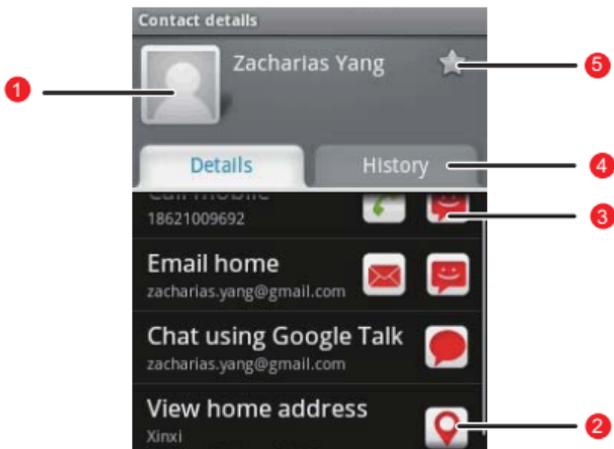

1	Touch an icon to open Quick Contact. Please refer to "Quick Contact for Android" on page 35.
2	Touch an address to view it on <b>Google Maps</b> .
3	Touch an icon to call, send a message, chat, and so on.

---

4

Touch the **History** tab to view a list of interactions you have had with this contact.

---

5

Touch to add the contact to your favorites.

---

---

**Tip:**

Press , and then touch **Edit contact** to edit the contact's information.

---

## Adding and Deleting Contacts

You can add or delete contacts on your mobile phone and synchronize them with the contacts in your accounts that support synchronizing contacts.

### Adding a Contact

1. In the contacts list, press , and then touch **Create contact**.

---

**Tip:** In the contacts list, you can touch  to add a new contact.

---

2. If you have more than one account with contacts, touch the account to which you want to add the contact.
3. Enter the contact's name, and then add any detailed information such as phone number or address.

4. When you are finished, touch **Done** to save the contact information.

## Deleting a Contact

1. In the contacts list, touch and hold the contact that you want to delete, and then touch **Delete contact** in the options menu.
2. Touch **OK** to confirm that you want to delete the contact.

## Adding a Contact to Your Favorites

To add a contact to your favorites, you can do any of the following while you are in the contacts list:

- Touch and hold the contact you want to add to **Favorites**. Then touch **Add to favorites**.
- Access the favorites list, press **MENU**, and then touch **Add favorites** to select the contacts you want to add to **Favorites**.
- Touch a contact, and then touch the star to the right of the contact's name. The star turns gold.

## Removing a Contact from Your Favorites

To remove a contact from your favorites, you can do any of the following while you are in the favorites list:

- Touch and hold the contact you want to delete from **Favorites**. Then touch **Remove from favorites**.
- Press **MENU** and then touch **Remove favorites** to select the contacts you want to remove from **Favorites**.
- Touch a contact, and then touch the star to the right of the contact's name. The star turns gray.

## Editing a Contact

You can always make changes to the information you have stored for a contact.

1. In the contacts list, touch and hold the contact whose details you want to edit, and then touch **Edit contact** in the options menu.

---


**Tip:** You can also press **MENU**, and then touch **Edit contact** while viewing a contact's details.

---

2. If you have more than one account with contacts, touch the account in which you want to edit the contact.
3. Touch a category of contact information, such as contact's name, phone number or email address, to enter that kind of information about your contact.

4. Make the desired changes to the contact information, and then touch **Done**. To cancel all changes you made to the contact information, touch **Cancel**.

## Contact Editing Screen

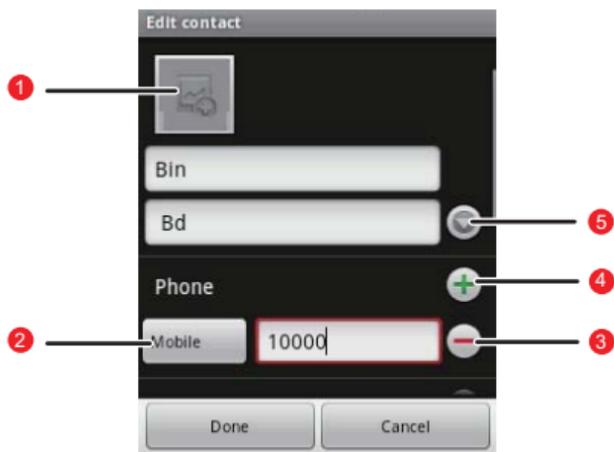

1

Touch the Picture Frame icon to select a picture to display next to the name in your list of contacts and in other applications.

- 
- |   |   |
|---|---|
| 2 | Touch to open a menu with preset labels, such as <b>Mobile</b> and <b>Work</b> for a phone number, or touch <b>Custom</b> in the menu to create your own label. |
| 3 | Touch to remove the entry from that category.   |
| 4 | Touch to add more than one entry for that category.   |
| 5 | Touch to display more text boxes for entering the name details such as middle name and last name.   |
- 

## Importing Contacts from a SIM Card

When you open the Contacts application for the first time, you are asked whether to import contacts from the SIM card to your phone. Select **Yes** to import the contacts, or **Cancel** to import them later.

1. In the contacts list, press **MENU**, and then touch **Manage contacts**.
2. Touch **Copy from SIM card**. Wait for the SIM card contents to be loaded.
3. Select the check box of the contact you want to import.

---

**Note:** If you want to deselect or select all, press **MENU**. Then touch **Deselect all** or **Select all**.

---

4. Touch **Copy**.
5. If you have more than one account on your phone, touch the account into which you want to import the contacts.

## Searching for a Contact

1. In the contacts list, press  and then touch **Search**.

---

**Tip:** In the contacts list, you can also touch  to search for a contact.

---

2. Enter the name of the contact for which you are searching. As you type, contacts with matching names appear below the search box.

## Communicating with Your Contacts

From the **Contacts** or **Favorites** tab, you can quickly call or send a text (SMS) or multimedia message (MMS) to a contact's default phone number. You can also open details to view a list of all the ways you can communicate with that contact. This section describes ways to initiate communication when viewing your list of contacts.

## Connecting Through Quick Contact for Android

1. Touch the contact's picture or picture frame (if you have not assigned a picture to the contact) to open Quick Contact for Android.
2. Touch the icon for the way you want to communicate with the contact.

---

**Note:** The icons available depend on the information you have for the contact and the applications and accounts on your mobile phone.

---

## Communicating with a Contact

1. In the contacts list, touch the contact that you want to communicate.
2. In the contact's details screen, touch the green icon to the right of the number to call or send messages.

# Using the Onscreen Keyboard

## Displaying the Keyboard Panel

To enter text, use the onscreen keyboard. Some applications open the keyboard automatically. In others, touch a text field to open the keyboard. To open the keyboard, do one of the following:

- Press and hold  to show the keyboard.
- Touch the space where you want to write text to show the keyboard.
- Touch and hold the space where you usually write your text to open the options menu.


Press  to hide the keyboard.

## Choosing an Input Method

1. On the text screen, touch and hold the space where you usually write your text until the **Edit text** menu is displayed.
2. Touch **Input method**.
3. Choose the input method.

The keyboard panel will be automatically displayed.

## Using the TouchPal Keyboard Panel

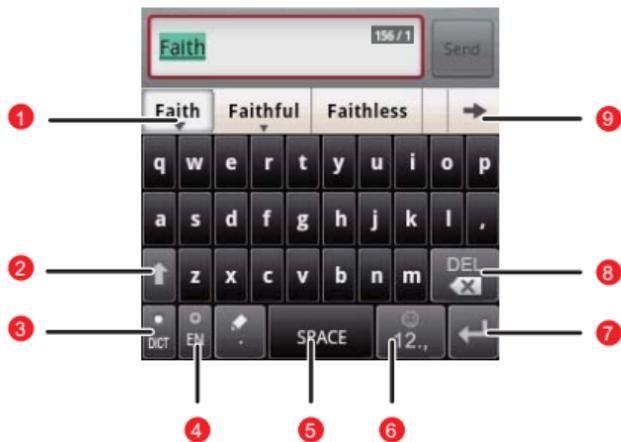

- 1 Displays the list of candidate words. Touch a word to insert it into your text. If word suggestions is enabled, the suggested word is highlighted. To enable the function, please refer to "Customizing Keyboard Settings" on page 51.
- 2 Change from uppercase to lowercase.
- 3 Enable the word prediction.

---

4	Set the language for your mobile phone. To select a language that your mobile phone supports, to  > <b>Settings &gt; Language &amp; keyboard &gt; TouchPal &gt; Select languages.</b>
5	Touch to insert a space.
6	Switch to the numbers and symbols keyboard panel.
7	Touch to add a carriage return.
8	Touch to delete the character to the left side of the cursor. Touch and hold to delete all characters to the left side of the cursor.
9	Touch to see more candidate words.

---

## Switching the Keyboard Layout

You can switch the keyboard layout only when **TouchPal** is selected. There are three keyboard layouts you can choose: **Full QWERTY**, **12-key PhonePad**, and **CooTek T+**.

To switch the keyboard layout, touch and hold one side of the keyboard panel, and then flick the panel to the edge of the screen.



1



2



3

- 
- |   |                  |
|---|------------------|
| 1 | Full QWERTY.     |
| 2 | 12-key PhonePad. |
| 3 | CooTek T+.       |
- 

**Note:**

When you switch the keyboard layout, you need to touch and hold anywhere on the panel and then flick the panel to the edge of the screen.

---

## Using the Android Keyboard



- |   |  |
|---|--|
| 1 | Change from lowercase to uppercase.  |
| 2 | Change from the text mode to the symbol/number mode. Touch again to change back.   |
| 3 | Touch to insert a space.   |
| 4 | Touch to insert a smile in your text.  |
| 5 | Touch to delete a character to the left of the cursor.<br>Touch and hold to delete all characters to the left of the cursor. |

## Using the Landscape Keyboard

If you find the keyboard a little inconvenient or difficult to use, turn your mobile phone sideways to have a wider keyboard layout. The screen will present the keyboard with a landscape orientation.

## Customizing Keyboard Settings

Touch  > **Settings** > **Language & keyboard** > **TouchPal** to customize the TouchPal settings.

<b>Word prediction</b>	Select to enable the word prediction while typing.
<b>Key press sound</b>	Select to play a brief sound each time you touch a key on the onscreen keyboard.
<b>Key press vibration</b>	Select to have the phone vibrate briefly each time you touch a key on the onscreen keyboard.
<b>Layout in portrait mode</b>	Select the layout to display in portrait mode.

<b>Layout in landscape mode</b>	Select the layout to display in landscape mode.
<b>Swipe to switch layout</b>	Select check box to be able to swipe horizontally over the keyboard to switch layout.
<b>Mixed language input</b>	Select check box to enable mobile phone to auto detect language if no more than 3 languages have been selected.
<b>Select languages</b>	Select the languages you want to use.
<b>Predict next word</b>	Select check box to enable the ability to predict the next word when you are typing.
<b>Correct mistyping</b>	Select to automatically correct some common misspellings as you type.
<b>Slide-down symbols</b>	Select check box to enable you to slide down on keys to enter symbols.

<b>Relevant words</b>	Select check box to enable you to slide on candidate words for synonyms or other relevant.
<b>Help</b>	Access the online user manual for using TouchPal.
<b>TouchPal</b>	View the version of TouchPal.

TouchPal  > **Settings > Language & keyboard > Android keyboard** to customize the Android keyboard settings.

<b>Vibrate on keypress</b>	Select to have the phone vibrate briefly each time you touch a key on the onscreen keyboard.
<b>Sound on keypress</b>	Select to play a brief sound each time you touch a key on the onscreen keyboard.
<b>Auto-capitalization</b>	Select to have the onscreen keyboard automatically capitalize the first letter of the first word after a period, the first word in a text field, and each word in name fields.

<b>Quick fixes</b>	Select to automatically correct some common misspellings as you type.
<b>Show suggestions</b>	Select to show suggested words in a strip above the onscreen keyboard as you type.
<b>Auto-complete</b>	Select to automatically enter a suggested word, highlighted in orange in the strip above the keyboard, when you enter a space or punctuation.

# Messaging

The Messaging application allows you to exchange text messages (SMS) and multimedia messages (MMS) with your friends on their mobile phones. With the **Email** application you can read and send email.

## SMS and MMS

**Text messages:** One text message can contain up to 160 characters. You can send a text message of any length, but every 160 characters or portion thereof will be charged as one text message. For recipients, the message will count as just one text message.

**Multimedia messages:** Multimedia messages make everyday messages extra special. You can record a message and send it as an audio file or send a slideshow of photographs. For example, you can sing "Happy Birthday" to someone, send them a video message, or send photos of a special event.

## Opening Messaging

- Touch  on the Home screen.
- Touch  > **Messaging**.

## Creating and Sending a Text Message

1. Touch  > **Messaging** > **New message**.
2. Enter a phone number in the **To** field, or touch **+** to select a number from **Contacts**.

---

**Tip:** As you enter the phone number, matching contacts appear. You can touch a suggested recipient or continue entering the phone number.

---

3. Touch the composition text box to start entering your message.

---

**Tip:** If you press  while composing a message, it is saved as a draft in your message list. Touch the message to resume composing it.


---

4. Once you are done, touch **Send**.



The message list opens, and your name appears in the list, followed by the message you just sent. Responses appear in the window. As you view and send additional messages, a message thread is created.

## Text Message Editing Screen

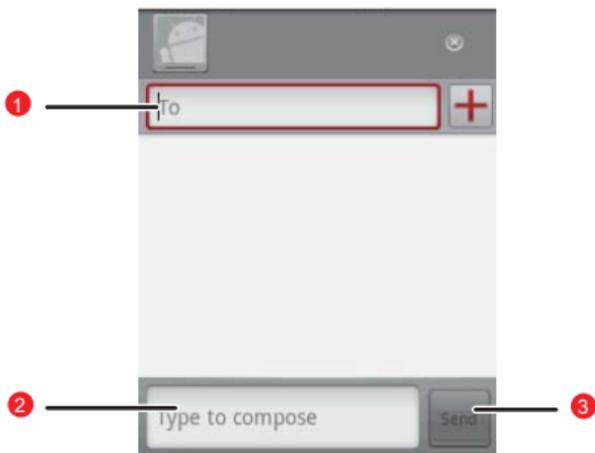

1

Touch to enter a mobile phone number or the name of a contact with a mobile number.

2

Touch to start entering your message.

3

Touch to send the message.

## Creating and Sending a Multimedia Message

1. Touch  > **Messaging** > **New Message**.

2. Enter a phone number in the **To** field, or touch **+** to select a number from **Contacts**.

---

**Tip:** You can also press **MENU**, and then touch **Add recipient** to add more recipients.

---

3. Touch the composition text box to start entering your message.

---

**Tip:** If you want to enter a smiley face, **MENU**, and then touch **Insert smiley**.

---

4. Press **MENU** to display the options panel.
5. Touch **Add subject** to add the message subject. Your mobile phone is now in multimedia message mode.
6. Touch **Attach** to add a picture, music, or video file. Then touch any of the following:
  - **Slideshow:** A screen opens where you can assemble photos into a slideshow of up to 10 slides to attach to the message. Please refer to “Adding a Slideshow” on page 60.
  - **Pictures:** You are prompted to touch a picture to attach it.
  - **Capture picture:** The camera opens so you can take a picture and attach it.
  - **Videos:** You are prompted to select a video to attach.

- **Capture video:** The camcorder opens so you can record a video and attach it.
- **Audio:** You are prompted to select an audio file to attach.
- **Record audio:** A screen opens where you can record a voice message and attach it.

7. When the message is ready to be sent, touch **Send**.

## Adding a Slideshow

If you want to attach more than one file to your message, use the Slideshow option.

1. On the message editing screen, press  to display the options panel.
2. Touch **Attach > Slideshow**, and then select a slide to start editing it.
3. Press  and then touch **Add slide** to add more slides.

---

**Tip:** You can touch the green arrow icon to switch between slides.

---

4. Touch **Done** to finish composing your message and return to the multimedia message screen.

5. To alter your multimedia message, touch **Edit** on the multimedia message screen. When the message is ready to be sent, touch **Send**.

## Opening and Viewing a Multimedia Message

1. In the message list, touch the message thread to open it.
2. Touch the Play button at the top of a multimedia message to view the message.
3. Press  followed by **Next slide** to view the next slide.

## Replying to a Message

1. In the message list, touch a text or multimedia message thread to open it.
2. Touch the text box to compose your message, and then touch **Send**.

## Customizing the Message Settings

In the message list, press  and then touch **Settings** to customize the message settings.

# Email

Your mobile phone puts email at your fingertips, too. Using your Email application, you can add versions of Yahoo!, AOL, and other popular email services to your phone. These kinds of email accounts are known as POP3, or IMAP accounts.

## Adding an Email Account

When using the **Email** application for the first time, you must configure your email account. The Email setup wizard helps you set up your account for many popular email systems, so you can read and work with the same email that you do on a computer in a web browser, or with another email application.

1. Touch  > **Email**.
2. To customize your email settings, answer the onscreen prompts, and then touch **Next**. Or touch **Manual Setup** if you want to set the mail server yourself.

---

**Note:** If you touch **Manual Setup**, contact your email service provider for the values required for your account if you don't know what they are.

---

3. Enter the name for your account and the name you want other people to see when they receive an email from you.
4. Touch **Done**.

Your mobile phone starts downloading your email messages and you can start using the phone to send and receive messages.

---

**Note:**

After the initial setup, your email application opens to the last screen you were viewing or, if you have not used **Email** recently, it displays the contents of your Inbox or the accounts screen (when you have more than one account).

---

## Adding Other Email Accounts

After creating your initial email account, press  on the accounts screen, and then touch **Add account** to create another email account.

---

**Tip:**

When adding a subsequent email account, you can also select the option to use the new account to send all outgoing messages.

---

## Deleting an Email Account

1. On the accounts screen, touch and hold the email account you want to delete.

2. Touch **Remove account**.
3. Touch **OK** to confirm.

## Changing Email Account Settings

You can change a number of settings for an account, including how often you check for emails, how you are notified of a new mail, and details about the servers the account uses to send and receive mails.

---

### Note:

Your account's incoming and outgoing settings depend on the kind of email service for your account: IMAP, or POP3. You can enter the necessary details manually, although you will typically need to contact your email service provider to determine the right settings for the account.


---

1. Touch  > **Email**.
2. On the **Your accounts** screen, touch and hold the email account you want to change.
3. Touch **Account settings**.
4. Change Email account settings, **Incoming settings**, or **Outgoing settings**.

## Viewing an Email Message

1. On the accounts screen, touch the email account you want to use.
2. Access a folder, and then touch the message that you want to view.

### Email Message Screen

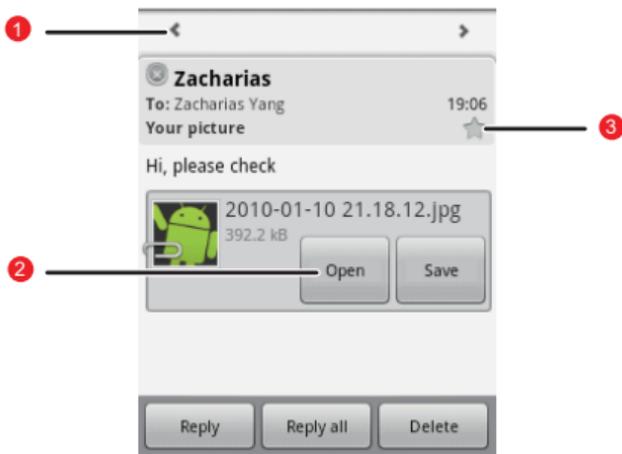

1	Touch to read the next or previous message in the folder.
2	Touch to open an attachment.
3	Touch to place a star next to an important message to make it easy to locate.

## Creating and Sending an Email Message

1. On the **Your accounts** screen, touch the email account you want to use.
2. On the **Inbox** screen, press , and then touch **Compose** in the options panel.
3. In the **To** field, enter the name or the email address.
4. Write the subject and email.

---

**Tip:** To send an attachment with the message, press , and then touch **Add attachment**.

---

5. When you are finished, touch **Send**.

---

**Tip:** If you are not quite ready, touch **Save as draft** or press  to save the message as a draft.

---

## Replying to an Email Message

1. On the **Your accounts** screen, touch the email account you want to use.
2. Touch the email message you want to view and reply to.
3. Touch **Reply** or **Reply all** to reply to the email message.

# Getting Connected

## GPRS/3G

Your mobile phone will be automatically configured to use your wireless service provider's GPRS/3G service when you turn on your mobile phone (if the SIM card is inserted) for the first time.

### Checking the Network Connection

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**.
3. Touch **Network operators** or **Access Point Names** to check the network connection.

---

#### Note:

Generally your mobile phone will automatically read the access point of the SIM card. For this reason, do not change the parameters of the access point, or you might not be able to access network sources.

---

### Turning on the Data Service

1. Touch  > **Settings**.
2. Touch **Wireless & networks** > **Mobile networks**.

3. Select the **Data Service** check box to turn on the data connection.

## Wi-Fi

Wi-Fi (WLAN) gives you wireless access to broadband Internet access. To use Wi-Fi on your mobile phone, you need access to a wireless access point called a “hotspot”. The range of a Wi-Fi signal is affected by the obstacles that may be in its way.

### Turning On Wi-Fi

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Wi-Fi** check box to turn on the Wi-Fi.

### Connecting to a Wireless Network

1. After turning on the Wi-Fi, touch  > **Settings**.
2. Touch **Wi-Fi settings**. You will see a list of detected Wi-Fi networks in the **Wi-Fi networks** section.
3. Touch a Wi-Fi network to connect to it.
  - If you select an open network, you will be automatically connected to the network.

- If you select a network that is secured with Wired Equivalent Privacy (WEP), enter the password, and then touch **Connect**. If you connect to a secured wireless network that you have already used, you will not be prompted to enter the WEP/WPA key again unless you reset your mobile phone to its default settings.

---

**Tip:**

On the **Wi-Fi settings** screen, touch **Add Wi-Fi network** to add a new Wi-Fi network.


---

## Browser

Your mobile phone comes with a browser. You can access and browse the Internet through **Browser**.

### Opening the Browser

Touch  > **Browser** to open the browser on the home page.

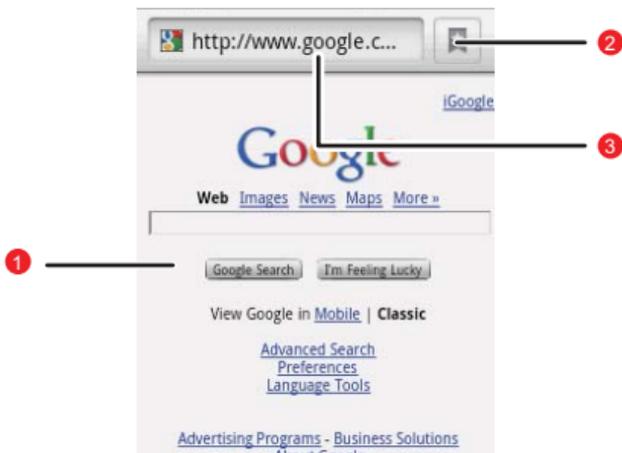

- |   |                                      |
|---|--------------------------------------|
| 1 | Web page view area.                  |
| 2 | Touch to open the <b>Bookmarks</b> . |
| 3 | Touch to enter the desired website.  |

Open the browser options menu and perform one of the following operations, press **MENU**:

- **New window:** Touch to open a new window.
- **Bookmarks:** Touch to open a favorite folder.
- **Windows:** Touch to go to the web preview screen. You can switch to another web page or open a new web page on the screen.

- **Refresh:** Touch to refresh the current page.
- **Forward:** Touch to browse the next web page.
- **More:** Touch to open other menus and perform operations such as searching, selecting text, downloading, and setting options.

## Opening a Web Page

1. On a browser window, touch the URL field at the top of the screen.
2. Use the keyboard to enter the web page address.
3. As you enter the address, matching web page addresses will appear on the screen. Touch an address to go directly to that web page or continue entering the web page address.
4. Touch **Go**.

## Setting a Home Page

1. On a browser window, press .
2. Touch **More > Settings > Set home page**.
3. Enter the home page address, and then touch **OK**.

## Managing Bookmarks

You can store as many bookmarks as you want on your mobile phone.

### Adding a Bookmark

1. On a browser screen, go to the web page you want to bookmark.
2. Press **MENU**, and then touch **Bookmarks > Add**. The add bookmark screen opens.
3. Edit the bookmark name if needed and then touch **OK**.

### Opening a Bookmark

1. On a browser window, press **MENU**, and then touch **Bookmarks**.

---

**Tip:** On the **Bookmarks** screen, touch the **History** tab to view the pages you have visited. Or touch the **Most visited** tab to view the pages you have visited most frequently.

---

2. Touch the bookmark you want to open.

## Customizing the Browser Settings

Customize the browser to suit your browsing lifestyle. Set display, privacy, and security options when using **Browser**. On the browser screen, press , and then touch **More > Settings**.

## Bluetooth

Your mobile phone has Bluetooth, which allows you to create a wireless connection with other Bluetooth devices so you can share files with your friends, talk hands-free with a Bluetooth headset, or even transfer your phone photos onto your PC.

If you are using Bluetooth, remember to stay within 10 meters of other Bluetooth devices. Be aware that obstacles may interfere with the connection, including walls or other electronic equipment.

## Turning On Bluetooth

1. Touch  > **Settings**.
2. Touch **Wireless & networks**, and then select the **Bluetooth** check box to turn on Bluetooth. You will know it is on when the Bluetooth icon appears in the notification bar.

3. Touch **Bluetooth settings**, and then select the **Discoverable** check box to make the mobile phone visible to other Bluetooth devices.

## Pairing and Connecting a Bluetooth Device

Your mobile Bluetooth lets you do the following:

- Hands Free Profile (HFP): allows you to use a hands-free Bluetooth device.
- Headset Profile (HSP): allows you to use a mono Bluetooth headset.
- Object Push Profile (OPP): allows you to transfer files through Bluetooth.
- Advanced Audio Distribution Profile (A2DP): allows you to use a stereo Bluetooth headset.
- A/V Remote Control Profile (AVRCP): allows you to control what plays through the Bluetooth headset remotely.

Before you use Bluetooth, you need to pair your mobile phone with another Bluetooth device as follows:

1. Ensure that the Bluetooth function on your mobile phone is enabled.
2. Touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**. Your mobile phone will then scan for Bluetooth

devices in range (or touch **Scan for devices** to scan for Bluetooth devices).

3. Touch the device you want to pair with your mobile phone.
4. Enter the pairing password to complete the connection.

## Sending Files via Bluetooth

With Bluetooth, you can share pictures, videos, or music files with your family and friends. To send files via Bluetooth, do as follows:

1. Touch  > **File Manager** to open the file manager.
2. Touch and hold the file to be sent. The active options menu is displayed.
3. Touch **Share**, and then touch **Bluetooth** to select a paired device.

## Disconnecting or Unpairing a Bluetooth Device

1. Touch  > **Settings** > **Wireless & networks** > **Bluetooth settings**.
2. Navigate to the **Bluetooth devices** section, and then touch and hold the connected device.
3. Touch **Disconnect & unpair** or **Unpair** to disconnect the device.

# Connecting to a Computer via USB

## Using the microSD Card as USB Mass Storage

To transfer all your favorite music and pictures from your PC onto your mobile phone's microSD card, set the microSD card as USB mass storage for your PC.

1. Connect your mobile phone to your PC with the USB cable. Your PC will detect the microSD card as a removable disk. You can now transfer files from your PC to your mobile phone's microSD card.
2. Open the notification panel, and then touch **USB connected**.
3. Touch **Mount** in the dialog box that opens to confirm that you want to transfer files.

---

### Tip:

You can also touch  > **Settings** > **General info & option**, and then select the **USB Mass Storage** check box to use the microSD card as the USB mass storage.

---

### Note:

When your microSD card acts as USB mass storage, your mobile phone will not use this memory space. Your PC will tell you how to safely disconnect the USB mass storage device (that is, your mobile phone) when you have finished trans-

## Removing the microSD while Your Mobile Phone Is on

1. Touch  > **Settings**.
2. Scroll down the screen, and then touch **SD card & phone storage** > **Unmount SD card**.
3. Carefully remove the microSD card from your mobile phone.

## Modem Behavior

You can use the dialup software in your mobile phone to set the mobile phone as a modem.

1. Use your USB cable to connect the mobile phone to a computer.
2. Select the **Start Mobile Modem** button and follow the instructions to install it on your PC.

## Making Your Mobile Phone Act As a Modem

To make your mobile phone act as a modem, do as follows:

1. Make sure your mobile phone's data connection is turned on.
2. Use your USB cable to connect the mobile phone to a computer.

3. Run the dialup software on your PC. For more information, refer to the PC Suite help.

# Entertainment

In addition to being a communication device and personal assistant, your mobile phone also provides you with endless entertainment possibilities. You can take photos, create videos and audio clips, and download and listen to music.

## Taking Photos and Recording Videos

The camera is a combination camera and camcorder that you can use to shoot and share pictures and videos.

### Opening Your Camera

- Touch  > **Camera** to open the camera. The camera opens in landscape mode, ready to take a picture or shoot a video.
- Press  on the picture capture screen to close the camera.

## Capture Screen



---

### Tip:

On the capture screen, touch the screen to show the zoom in or out controls.

---

- |   |   |
|---|---|
| 1 | Touch to open the settings panel.                               |
| 2 | Touch to zoom in or out.  |
| 3 | Thumbnail of last photo. Touch to preview the photos or videos. |

---

4

Drag up to shoot videos (camcorder mode), drag down to take photos (camera mode).

---

5

Touch to take a photo or shoot a video.

---

---

**Tip:**

On the capture screen, press **MENU** key to show the capture panel.

---

## Taking a Photo

1. Open your camera, and then switch to the camera mode.
2. If necessary, open the settings panel to change the camera settings. The preview image changes as you change the settings.
3. On the photo capture screen, frame the photo within the screen.
4. Touch and hold the Capture button. Your camera has autofocus, and when the frame turns green, the content of the frame is in focus.
5. Release the Capture button to take your photo.

The photo you just took is displayed for a moment. You can take another photo or preview your photos.

## Viewing Your Photos

1. After taking a photo, a thumbnail of the photo you have just taken is shown in the upper right corner of the Capture screen. Touch the thumbnail to view it.
2. Touch the onscreen button to do any of the following:
  - Touch **DELETE** to delete the photo.
  - Touch **SHARE** to send the photo in a message or post it online.
  - Touch **SET AS** to set the photo as a wallpaper or a contact icon.

---

**Tip:** Press **MENU**, to edit the photo, view the details of the photo, or show the photo on Maps.

---

3. If you want to view more photos, touch the screen, and then touch ◀ or ▶.

## Shooting a Video

1. Open the camera, and then switch to camcorder mode.
2. If necessary, open the settings panel to change the camcorder settings.
3. Frame the scene where you want to start.

4. Touch  to start recording a video. The camcorder starts shooting the video.
5. Touch  to stop shooting. You can shoot another video or preview your videos.

## Viewing Your Videos

1. After recording a video, a thumbnail of the video you have just recorded is shown in the upper right corner of the Capture screen. Touch the thumbnail to view it.
2. Touch the onscreen button to do any of the following:
  - Touch **Delete** to delete the video.
  - Touch **SHARE** to send the video in a message or post it online.
  - Touch **PLAY** to play the video.

---

**Tip:** On the video playing screen, touch the controls to skip forward or back or to play or pause the video.

---

**Tip:** Press  to view the details of the video.

---

3. If you want to view more videos, touch the screen, and then touch  or .

# Using the Gallery

Your **Gallery** application can automatically search for pictures and videos on your mobile phone and microSD card. It can also sort them into folders, and let you view and edit pictures, watch videos, and set a picture as the wallpaper or photo for a contact.

## Opening the Gallery

Touch  > **Gallery** to open the viewer.

The **Gallery** application categorizes your pictures and videos by storage location and stores these files in folders. To view pictures or videos, touch one of the folders to view pictures or videos.

Press  to display the Gallery panel. On the panel, you can do the following:

- Touch **Capture picture** to open the camera and switch to the picture capture mode.
- Touch **Capture video** to open the camera and switch to the video capture mode.
- Touch **Settings** to go to the Gallery settings screen. There, you can set the size of a picture, arrange pictures, specify whether to prompt confirmation when you delete a picture, and play a slideshow.

## Viewing a Picture

In **Gallery**, touch the album that contains the picture you want to view.

1. Touch the folder that contains the pictures you want to view.
2. Touch the picture to view it in full-screen mode. When viewing a picture in full-screen mode, flick the picture left or right to view the previous or next picture.
3. Touch the screen.  
Then the zoom panel appears. You can zoom in or zoom out on the picture.

---

**Tip:** The picture viewer supports the automatic rotation function. When you rotate your mobile phone, the picture adjusts itself to the rotation.

---

## Rotating a Picture

1. When viewing a picture, press  to display more operations panel.
2. Touch **Rotate**.
3. Select either **Rotate left** or **Rotate right**. The picture is saved with the new orientation.

## Cropping a Picture

1. When viewing a picture, press **MENU** to display the more operations panel, then touch **Crop**.
2. Use the cropping tool to select the portion of the picture to crop.
  - Drag from the inside of the cropping tool to move it.
  - Drag an edge of the cropping tool to resize it to any proportion..
  - Drag a corner of the cropping tool to resize it with fixed proportions.
3. Touch **Save** to save the cropped picture. Or touch **Rotate** to rotate the onscreen picture. Or touch **Discard** to discard the changes.

## Enjoying Music

You can download music files onto your PC or insert a CD and copy the files to your microSD card so you can listen to music on your mobile phone.

### Copying Music to the microSD Card

1. Connect the phone to your computer with a USB cable and mount the microSD card.


2. On the PC, navigate to the USB drive and open it.
3. Create a folder on the root folder of the microSD card (for example, **Music**).
4. Copy the music from your computer to the folder you have created.
5. After copying music, unmount or eject the drive as required by your PC's operating system to safely remove the mobile phone.
6. Disconnect the mobile phone from the PC.

## Opening the Media Library

Touch  > **Music** to display the media library.

### Library Screen

The **Music** application organizes your music files by storage location. It contains four tabs: **Artists**, **Albums**, **Songs** and **Playlists**.

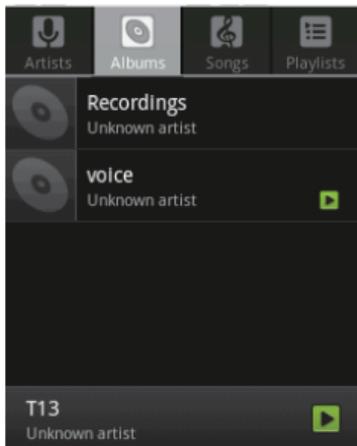

---

**Tip:**

To randomly play your songs, press **MENU** key, and touch **Party shuffle** or **Shuffle all** .

---

## Playing Music

1. Touch a category on the music library screen.
2. Touch the song you want to play.

---

**Tip:**

When you are listening to music, press **⏏** key to use another application. Your music continues to play. To return to the music controls, open the notification panel and then touch the song.

---

## Music Player Screen



- |   |   |
|---|---|
| 1 | Touch and hold to search for information. |
| 2 | Touch to control the music.               |
| 3 | Touch to set the repeat mode.             |
| 4 | Touch to turn the shuffle on or off.      |
| 5 | Touch to open the current playlist.       |

## Adding Music to a Playlist

1. Touch a category on the music library screen.
2. In the list that appears, use the Navigator key to reach the song you want to add to the playlist.
3. Touch and hold the song, and then touch **Add to playlist** in the options menu.
  - Touch **Current playlist** to add the song to an existing playlist.
  - Touch **New** to create a playlist and add the song to it.

## Playing a Playlist

1. Touch the **Playlists** tab on the music library screen.
2. Touch and hold the playlist you want to play.
3. Touch **Play** to play the playlist.

## Listening to FM Radio

FM Radio lets you listen to FM radio stations on your mobile phone. Since FM Radio uses the provided wired stereo headset as the antenna, connect the headset first to the audio jack of your phone before you open the application.

## Opening the FM Radio

1. Touch  > **FM Radio** to open the application.
2. The first time you open FM Radio, touch **Auto tuning**, which automatically scans for available FM channels, saves them as presets, and plays the first FM channel found.

## FM Radio Screen



1	Shows the channel name.
2	Shows the FM radio frequency.
3	Touch to search the FM band for the next lower frequency FM channel.
4	Touch to switch between the headset and the speaker.
5	Touch to view all presets list.
6	Touch to stop listening to the FM radio.
7	Touch to search the FM band for the next higher frequency FM channel.

Press **MENU** to display the operations panel and set more **FM Radio** options.

## Tuning the FM Radio

Open the **FM Radio** application, and then press **MENU** to do the following:

- Touch **Inching tuning**, then touch the tuning button to tune the frequency by  $-0.05$  MHz or  $+0.05$  MHz, and then touch **OK**. After tuning, press **MENU**, and then touch **Save channel** to save it.
- Touch **Auto tuning** to automatically scan for available FM channels.

# Google Services

When you turn on your mobile phone for the first time, touch the Google services such as **Talk**, **Gmail**, and **Market**, and you will be prompted to sign in to your Google account.

---

**Note:**

Ensure that your mobile phone has an active data connection (3G/GPRS) before you sign in to your Google account.

---

If you already have a Google account, touch **Sign in** and enter your username and password.

## Creating a Google Account

If you do not have a Google account, you can create one:

1. Read the setup information, and then touch **Next**.
2. Touch **Create**.
3. Enter a first name, last name and username for your Google account, and then touch **Next**. The mobile phone will connect to the Google server to check whether the username is available. If the username you entered is already in use, you will have to think of another one or select one from a list.
4. Enter and confirm your Google account password.

5. Select a security question from the drop down menu, and then enter the answer.
6. Touch **Create**.
7. When the **Google Terms of Service** screen appears, touch **I agree, Next**.
8. Enter the characters that appear on the screen, and then touch **Next**.

---

**Tip:**

To use another Google account, go to the **Accounts & sync settings** screen, and touch **Add account** to select which type of accounts you want to add.

---

## Using Gmail

**Gmail** is Google's web-based email service. When you first set up your phone, you may have configured it to use an existing **Gmail** account, or you created a new account. The first time you open the **Gmail** application on your phone, your Inbox will contain the messages from your **Gmail** account on the web.

### Opening Gmail

Touch  > **Gmail**. The **Inbox** mail list appears. Any emails you decide to keep on your mobile phone will go to your **Inbox** folder.

## Switching Between Accounts

1. In the mail list, press **MENU**, and then touch **Accounts**.
2. Touch the account that contains the email you want to read.

## Creating and Sending an Email

1. In the mail list, press **MENU**, and then touch **Compose**.
2. Enter the message recipient's email address in the **To** field. If you are sending the email to several recipients, separate the email addresses with a comma. You can add as many message recipients as you want.

---

**Tip:** If you want to send a copy (Cc) or a blind copy (Bcc) of the email to other recipients, press **MENU**, and then touch **Add Cc/Bcc**.

---

3. Enter the email subject and write your message.

---

**Tip:** If you want to add a picture attachment, press **MENU**, and then touch **Attach** to select the picture you want to attach.

---

4. After composing your email, touch **Send**.

## Replying To or Forwarding an Email

1. In the mail list, touch the email that you want to reply to or forward, and then scroll down to the end of the email.
2. Touch **Reply**, **Reply to all**, or **Forward**.
3. Do one of the following:
  - If you selected **Reply** or **Reply all**, enter your reply message.
  - If you selected **Forward**, specify the message recipients and add any text you may want to put into the message.
4. Touch **Send**.

## Searching for an Email

1. In the mail list, press , and then touch **Search**.
2. Enter the search keyword in the box, and then touch .

## Customizing Your Gmail Settings

1. In the mail list, press , and then touch **Settings**.
2. Set the following options:
  - **Signature:** Touch to enter a signature that is appended at the end of your email.

- **Confirm delete:** Select the check box to show a confirmation box when you delete a mail.
- **Batch operations:** Select the check box to show the batch operations feature. The batch operations feature lets you archive, delete, or apply a label to multiple emails at once.
- **Clear search history:** Touch to remove the history of the results you obtained when searching for messages.
- **Labels:** Touch to select which **Gmail** labels to synchronize.
- **Email notifications:** Select the check box to show a notification icon on the notification bar when you receive a new email.
- **Select ringtone:** Touch to choose a ringtone for a new email message. A short sample of the ringtone will play when you select it. If you do not want a ringtone to play when you receive a new email message, touch **Silent**. Then touch **OK** to confirm your ringtone selection.
- **Vibrate:** Select the check box if you want your mobile phone to vibrate when you receive a new email message.

# Using Talk

**Talk** is Google's instant messaging service. You can use it to communicate in real time with other people who also use Talk, on a phone or on the web.

## Opening Google Talk

Touch  > **Talk** to open the application.

---

### **Note:**

Your Talk account is based on the Google account you set up with your mobile phone.

---

## Adding a Friend

1. In the friends list, press , and then touch **Add friend**.
2. Enter the **Talk** instant messaging ID or Google email address of the friend you want to add.
3. Touch **Send invitation**.

## Accepting an Invitation

1. In the friends list, press , and then touch **Invites**. If you have invited anyone to chat or if someone else has invited you to chat, this information will appear on the pending invitations screen.
2. Touch a pending invitation, and then touch **Accept** or **Decline**.

## Starting a Chat

1. In the friends list, do one of the following:
  - Touch a friend's name in the friends list.
  - Use the Navigation key to a friend's name, and then press .
2. Use the onscreen keyboard to enter text and chat with your friend.
3. After entering your message, touch **Send**.

## Setting Notifications for New Instant Messages

Whenever you receive an instant message, your mobile phone can play a sound, vibrate, or display an icon. To set up one of these handy notifications, start in the friends list, and then press . Then touch **More > Settings**. Now choose from one of the following:

<b>IM notifications</b>	Select the check box to receive a notification on the notification bar when you receive an instant message.
<b>Select ringtone</b>	Touch to choose the ringtone used for a new instant message. You will hear a short sample of the ringtone when you select it. To turn the ringtone off, select <b>Silent</b> .
<b>Vibrate</b>	Select the check box to make your mobile phone vibrate when you receive a new instant message.

## Signing Out of Talk

In the friends list screen, press , and then touch **More > Sign out** to quit **Talk**.

## Using Maps

**Maps** lets you find your current location, view real-time traffic situations (depending on availability), and get detailed directions to different destinations (on different types of maps, like a satellite, traffic, or other map).

## Enabling Location Source

Before you open **Maps** and find your location or search for places of interest, you must enable "location source".

1. Touch  > **Settings**.
2. Touch **Location & security**.
3. In the **My Location** section, select the **Use wireless networks** check box, **Use GPS satellites** check box, or both.

## Opening Maps

Touch  > **Maps** to open the application.

## Searching for Places of Interest

1. On the map, press , and then touch **Search**.
2. Enter the place you want to search for in the search box, and then touch the Search icon.
3. Your search results will then be displayed. Touch a place you are interested in, so the application can show where it is on the map.

## Getting Directions

1. While viewing a map, press , and then touch **Directions**.
2. Enter the starting point in the first text box, and then enter your destination in the second text box.
3. Touch the icon for car, public transit, or walking directions.
4. Touch **Go**. Your directions will then appear in a list.
5. Touch a direction instruction on the list to show the map.
6. When you finish viewing or following the directions, press , and touch **More > Clear map** to reset the map.

## Using YouTube

**YouTube** is Google's free online video streaming service for viewing, searching for, and uploading videos.

### Opening YouTube

Touch  > **YouTube**. You will then see the YouTube screen. The videos will be grouped into categories, such as **Most viewed**, **Most discussed**, **Most recent**, **Top rated**, and more.

## Searching for a Video

1. On the **YouTube** screen, press , and then touch **Search**.
2. Enter a search keyword, and then touch the Search icon.
3. You will see the number of search results displayed below the notification bar. Scroll through the results and touch a video to watch it.

## Sharing a Video

1. On the **YouTube** screen, do one of the following:
  - While viewing a list of videos, touch and hold a video entry, and then touch **Share** on the options menu.
  - While watching a video, press , and then touch **Share**.
2. A new email message appears with the video link automatically added to the email message.
3. Compose your email, address it, and then send it.

## Using Market

Android Market provides direct access to applications and games to download and install on your phone.

## Opening Market

1. Touch  > **Market**.
2. When you open **Market** for the first time, the **Android Terms of Service** window will appear. Touch **Accept** to continue.

## Searching for Applications

There are a few different ways to find applications on the **Market** home screen, including:

- Featured applications: Scroll horizontally to view more.
- List of applications by category: Includes subcategories, which you can sort by popularity (most to least) or by date (newest to oldest).
- List of games.
- Search function.
- Your downloads.

## Installing an Application

---

### Note:

If you want to install a non-Market application, touch  > **Settings** > **Applications**, and then select the **Unknown source** check box to allow instal-

lation of the non-Market application.

---

1. In the **Market**, touch **Apps**.
2. Touch a category, and then touch the item you want to download.
3. On the item details screen, read more about the application, including its cost, overall rating, and user comments. If you scroll down to the **About the developer** section, you can see other applications the developer has developed, visit the developer's website, and send the developer an email.
4. To install the item, touch **Install** (if the item is free) or **Buy**, whichever is displayed.
5. To check the progress of the download, open the notification panel. Most applications are installed within seconds. To stop an item from downloading, touch **Cancel download**.
6. After the application is downloaded and installed on your mobile phone, the content download icon appears in the notification bar.

## Uninstalling an Application

1. On the **Market** screen, touch **Downloads**.

2. Touch the application you want to uninstall, and then touch **Uninstall**.
3. When prompted, touch **OK** to remove the application from your mobile phone.
4. Choose the reason for removing the application, and then touch **OK**.

# Synchronizing Information

Some applications on your mobile phone give you access to the same personal information that you can add, view, and edit on your computer. When you add, change, or delete your information in any of these applications on the web, the updated information also appears on your mobile phone.

This is made possible through over-the-air data synchronization. The process occurs in the background and does not interfere when you are using your mobile phone. When your phone is synchronizing, a data synchronization icon will be shown in the notification bar.

## Managing Your Accounts

You can synchronize contacts, email, and other information on your mobile phone with multiple Google accounts, or other kinds of accounts, depending on the applications installed on your mobile phone.

For example, you can start by adding your personal Google account, so your personal email, contacts, and calendar are always available. Then you can add an account from work, so you can read your work email and have your work contacts handy. You can even add multiple Google accounts and other accounts.

## Adding an Account

When you add an account, **Contacts** compares any new contacts that you synchronize to your mobile phone with your existing contacts. This does not merge that data for the accounts themselves; it just presents it as a single contact.

1. Touch  > **Settings > Accounts & sync**. The screen displays your current synchronization settings and a list of your current accounts.

---

**Note:** To add some accounts, you may need to obtain details from an IT support representative about the service to which the account connects. For example, you may need to know the account's domain or server address.

---

2. Touch **Add account**.
3. Touch the kind of account to add.
4. Follow the onscreen steps to enter the required and optional information about the account. Most accounts require a username and password, but the details depend on the kind of account and the configuration of the service to which you are connecting.

5. Configure the account. Depending on the kind of account, you may be asked to configure what kind of data you want to sync to the mobile phone, name the account, and other details. When you are finished, the account is added to the list in the **Accounts & Sync settings** screen.

Depending on how you configured the account, email, contacts, and other information start syncing to your mobile phone.

## Removing an Account

You can remove an account to delete it and all information associated with it from your mobile phone, including email, contacts, settings, and so on. You cannot remove some accounts, such as the first account you signed into on the mobile phone, if you attempt to remove certain accounts, all the personal information associated with it will be deleted.

1. On the **Accounts & sync settings** screen, touch the account to delete.
2. Touch **Remove account**.
3. Confirm that you want to remove the account.

# Customizing Your Account Synchronization

You can configure background data use and synchronization options for all the applications on your phone. You can also configure what kind of data you synchronize for each account.

Some applications, such as **Contacts** and **Gmail**, can synchronize data from multiple applications. Others, such as **Calendar**, synchronize data only from the first Google account you signed into on your phone, or from an account associated specifically with that application.

For some accounts, synchronizing is two-directional; changes that you make to the information on your mobile phone are made to the copy of that information on the web. Your Google account works this way. Other accounts support only one-way synchronize; the information on your mobile phone is read-only.

## Configuring General Sync Settings

On the **Accounts & sync settings** screen, do the following:

- Select or clear the **Background data** check box to control whether applications and services can transmit data when you

are not working with them directly (that is, when they are running in the background).

If you clear this option, **Gmail** stops receiving new mail, **Calendar** stops synchronizing events, and so on, until you touch the **Refresh** menu item or send an email.

- Select or clear the **Auto-sync** check box to control whether changes you make to information on the phone or on the web are automatically synchronized with each other.

For example, when this option is selected, changes that you make in **Contacts** on the phone are automatically made in Google Contacts on the web.

## Changing an Account's Synchronization Settings

1. On the **Accounts & sync settings** screen, touch the account whose synchronization settings you want to change. The data and synchronization screen opens, displaying a list of the kinds of information the account can synchronize.
2. Selected items are configured to synchronize to your mobile phone.
3. Select or clear the check box of information you want to synchronize to the mobile phone.

# Using the PC Suite to Synchronize

Install the **PC Suite** stored in your mobile phone. Follow the instructions on your computer to complete the installation. You can now synchronize your contacts and calendar appointments between your PC and mobile phone. For more details, please refer to the **PC Suite** help.

---

**Note:**

The **PC Suite** is designed to work on Windows 2000 SP4, Windows XP SP2, Windows Vista and Windows 7. We recommend you use one of these systems.

---

# Using Other Applications

## Using the Calendar

Use **Calendar** to create and manage events, meetings, and appointments. Depending on your synchronization settings, the calendar on your phone stays in synchronization with your calendar on the web.

### Opening the Calendar

Touch  > **Calendar** to open the application.


---

#### Tip:

To access Google calendar, touch , and then touch **More > Launch Google Calendar**. The Google calendar service can be synchronized with the Google server, whereas your mobile phone calendar cannot.

---

## Calendar Panel

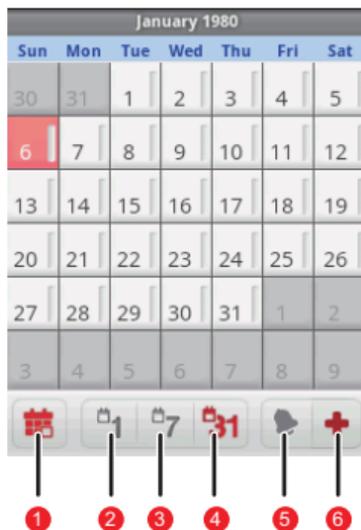

- 1 Touch to switch to the current day or time.
- 2 Switch to **Day** view.
- 3 Switch to **Week** view.
- 4 Switch to **Month** view.


5 Switch to **Agenda** view.

6 Touch to create an event.

## Changing the Calendar View


On the **Calendar** screen? touch , , , or  to change the view of your calendar.

### Agenda View

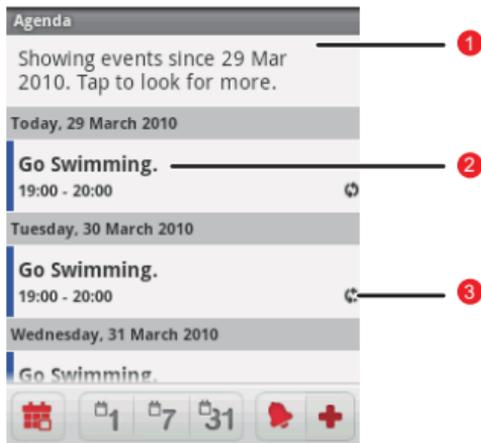

1	Flick up or down to view earlier or later events.
2	Touch an event to view its details.
3	Indicates that this event repeats.

## Day View

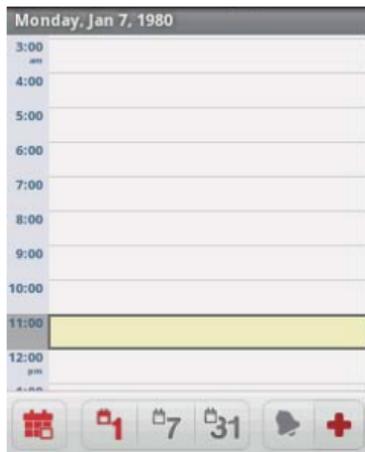

- 1 Flick left or right to view earlier or later days.
- 2 Touch an event to view its details.
- 3 Touch and hold a time slot or an event to create a new event at that time.

## Week View



- 1 Flick left or right to view earlier or later days.
- 2 Touch an event to view its details.
- 3 Touch and hold a time slot or an event to create a new event at that time.

## Month View

January 1980						
Sun	Mon	Tue	Wed	Thu	Fri	Sat
30	31	1	2	3	4	5
6	7	8	9	10	11	12
13	14	15	16	17	18	19
20	21	22	23	24	25	26
27	28	29	30	31	1	2
3	4	5	6	7	8	9
📅	📅 1	📅 7	📅 31	📅	+	

---

1 Flick up or down to view earlier or later days.

---

2 Touch a day to view the events of that day.

---

## Creating an Event

1. On any calendar view, touch . Then touch **New event** to open the **Event details** screen.
2. Enter the event name on the keyboard.
  - If there is a time frame for the event, touch **From** and **To**, so you can set the duration of the event.
  - If it is a special occasion such as a birthday or a day-long event, set the **From** and **To** dates, and then select the **All day** check box.
3. Enter the location of the event and the description.
4. If you have more than one calendar, select the calendar where you want to save the event.
5. Enter email addresses to invite guests to the event.
6. Set the time of your event reminder in **Reminders**, and then specify in **Repetition** whether the event recurs and its frequency of recurrence.

7. Touch **Done**.

---

**Tip:**

To quickly create an event in the **Day**, **Week**, or **Month** view, touch and hold an empty time slot, and then touch **New event**. A new event details screen will appear with the selected time slot and date in the **From** and **To** fields.

---

## Setting an Event Reminder

1. On any calendar view, touch an event to view its details or event summary.
2. Touch the **Add reminder** button to add a reminder. Or touch the reminder's "-" button to delete it.
3. Touch the reminder time, and then touch the length of time before the event when you want to be reminded. When the time comes, you will receive a notification about the event.

## Customizing the Calendar Settings

On any calendar view, touch . Then touch **More > Settings**.

- **Hide declined events:** Select to hide events for which you have declined invitations.

- **Set alerts & notifications:** Touch to set event reminders to alert you, send you a notification, or turn off event notifications on your mobile phone.
- **Select ringtone:** Touch to select the ringtone to sound when you receive an event reminder.
- **Vibrate:** Select to vibrate the mobile phone when you receive an event notification.
- **Default reminder time:** Touch to select the default time before an event for event reminders to occur.

## Using the Alarm

You can set a new alarm or modify an existing alarm.

### Opening the Alarm

Touch  > **Alarm** to use your mobile phone alarm.

## Alarm List Screen



- |   |  |
|---|--|
| 1 | Shows the current time.<br>Touch to change the time displayed on the clock.                                  |
| 2 | Touch to access the alarm settings screen. You can set the alarm time, ringtone, vibration, and repeat mode. |
| 3 | Touch to enable or disable an alarm.   |

## Adding an Alarm

1. On the alarm list screen, touch **MENU**, and then touch **Add alarm**.
2. Set the alarm, and then touch **Done**.

## Setting an Alarm

1. On the alarm list screen, touch one of the alarms on the screen.
2. Touch **Time** to set the time of the alarm.
3. Touch **Ringtone** to select a ringtone for the alarm.
4. Select the **Vibrate** check box to have the phone vibrate, in addition to playing the ringtone.
5. Touch **Repeat** to set the days when you want the alarm to sound.
6. Touch **Label** to enter a name for the alarm.
7. Touch **Done**.

## Customizing Alarm Settings

On the alarm list screen, touch **MENU**, and then touch **Settings**.

- **Alarm in silent mode:** Select to sound alarms even when the phone is in silent mode.

- **Alarm volume:** Touch to open a dialog where you can set the volume of all alarms.
- **Snooze duration:** Touch to open a dialog where you can set how long the alarm waits before it sounds again.
- **Side button behavior:** Touch to open a dialog where you can set what happens if you press the Volume keys when an alarm sounds.

## Using Sound Recorder

**Sound Recorder** is useful for quickly recording thoughts. You can also record your voice and set it as a ringtone.

## Sound Recorder Screen



- |   |  |
|---|--|
| 1 | Shows the recording duration.              |
| 2 | Shows the volume of your audio files.      |
| 3 | Touch to pause or play back the recording. |
| 4 | Touch to start recording.                  |
| 5 | Touch to stop recording.                   |

## Starting a Recording

1. Touch  > **Sound Recorder** to open the application.
2. Touch the start button to start recording.
3. Record your desired message.
4. Touch the stop button to stop recording.
5. Touch , and then touch **Recordings** to view the voice clip.

## Setting a Voice Clip as a Ringtone


1. On the sound recorder screen, touch  and then touch **Recordings**.
2. Select the location where you have saved the recordings.
3. Select a voice clip, and then touch .
4. Touch **Set as ringtone**.

## Using the File Manager

**File manager** is like having a pocket-sized personal assistant (PA), letting you organize, edit, and delete files and folders.

## Opening the File Manager

Touch  > **File Manager** to open the application.

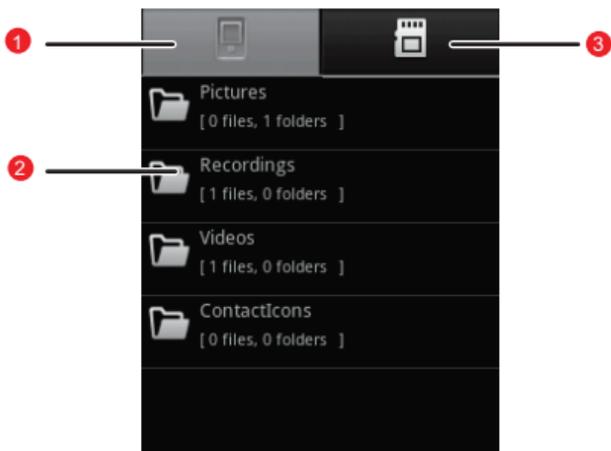

1 Touch to show the files and folders in your mobile phone memory.

2 Touch to show your list of files and folders.

3 Touch to show the files and folders on the microSD card.

---

**Tip:**

The options menu of the file manager may not be completely shown on one

page. You may need to flick the menu upward or downward, or press the Navigation key to browse all options.

---

## Creating a Folder

1. On the **File Manager** screen, access the directory of the folder you want to create.
2. Touch  to open the options panel, and then touch **New folder**.
3. Enter the name of the new folder in the text box.
4. Touch **Save**.

## Moving or Copying a File

1. On the **File Manager** screen, touch  to show the options panel, and then touch **Cut** or **Copy**.
2. Touch the file or folder you want to move or copy.  
When selected, a check mark will appear.

---

**Tip:** To select all files, touch  to open the options panel. Then touch **Select All** to select all files in a folder (touch **Unselect All** to cancel the selection).

---

3. Touch **MENU** to open the options panel, and then touch **Done** to cut or copy the file.
4. Now select the path to where you want the file to be copied or moved. Touch **MENU** to open the options panel, and then touch **Paste** to move or copy the file to the selected path.

## Doing a Quick Search for a File

1. On the **File Manager** screen, touch a folder to access the directory where the file you want is located.
2. Touch **MENU** to open the options panel, and then touch **Search**.
3. Write a key word of the name of your file or folder in the search box.
4. Touch **Search**. Your mobile phone will start the search.
5. A list of search results will be displayed. Touch a file in the list to open it.
6. Touch **New search** for a new search or press the Back key to return to the file manager screen.

## Viewing Your Memory Status

On the **File Manager** screen, touch  to open the options panel, and then touch **Memory Status**. The memory management screen will be displayed. This screen allows you to view the memory status and available memory on your mobile phone and microSD card.

## Using the Calculator

Use the calculator to solve simple arithmetic problems or use its advanced operators to solve more complex equations.

### Opening the Calculator

Touch  > **Calculator** to open the application.

### Switching to the Advanced Panel

On the **Calculator** screen, flick the screen to the right or left to switch between **Advanced panel** and **Basic panel**.

## Using the Notepad

**Notepad** features a simple text processor and lists all notes in a linear structure. You can add, edit, and delete notes.

1. Touch  > **Notepad** to open the application.

2. Press **MENU** and then touch **Add note** to create a note.
3. After editing, press **MENU**, and then touch **Save**.

# Managing Your Mobile Phone

To configure your mobile phone, touch  > **Settings**.

## Setting the Date and Time

By default, your mobile phone automatically uses the date, time zone, and time provided by the network.

---

### Note:

When the time provided by the network is automatically used, you cannot set the date, time, and time zone.

---

1. On the **Settings** screen, touch **Date & time**.
2. Clear the **Automatic** check box.
3. Touch **Set date**. On the set date screen, touch the up button or the down button to adjust the date, month, and year, and then touch **Set** when the configuration is complete.
4. Touch **Select time zone**, and then select the desired time zone from the list. Scroll down the list to view more time zones.
5. Touch **Set time**. On the set time screen, touch the up button or down button to adjust the hour and minute. Touch **Set** when the configuration is complete.

---

**Tip:** If a 12-hour format is used, you can touch **AM** to change to **PM** or vice versa.

---

6. Select or clear the **Use 24-hour format** check box to toggle between using a 24-hour or 12-hour format.
7. Touch **Select date format** to select how you want the date to display on your mobile phone.

## Setting the Display

### Adjusting the Screen Brightness

1. On the **Settings** screen, touch **Sound & display > Brightness**.
2. Drag the slider left to make the screen darker, or right to make it brighter.
3. Touch **OK** to save the adjustment.

### Adjusting the Time Before the Screen Turns Off

If your mobile phone is idle for several minutes, it will turn off the screen to save battery power. To set a longer or shorter idle time do the following:

1. On the **Settings** screen, touch **Sound & display > Screen timeout**.

2. Select the time you want the screen to be illuminated.

## Calibrating the screen


Calibrate the screen if it does not respond accurately to touch.

1. On the **Settings** screen, touch **Sound & display** > **Calibration**.
2. Touch the target on the screen.
3. After the calibration process, press the **Send** key to quit.

## Adjusting the Trackpad

The sensitivity level of the **Optical Finger Navigation** can be adjusted.

1. On the Home screen, press **MENU**, and then touch **Settings** > **General info & option** > **Trackpad**.

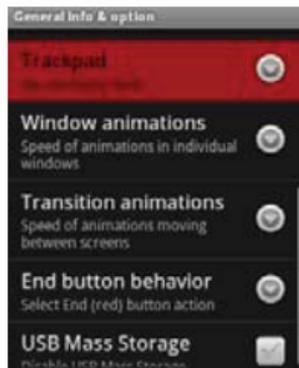

2. Select the sensitivity level from the option menu.



## Setting Ringers

### Turning On Silent Mode

1. On the **Settings** screen, touch **Sound & display**.
2. Select the **Silent mode** check box. Then all sounds except media and alarms are silenced.

### Adjusting the Ringer Volume

You can adjust the ringer volume when you are on the Home screen or any application screens (except during a call or when playing music or videos). Press the Volume keys to adjust the ringer volume to the desired level.

You can also adjust the ringer volume on the settings screen.

1. On the **Settings** screen, touch **Sound & display > Ringer volume**.
2. Drag the slider left to make the volume softer, or right to make it louder.
3. Touch **OK** to save the adjustment.

---

**Tip:**

On the **Ringer volume** screen, if you do not select **Use incoming call volume for notifications**, you can set **Incoming call volume** and **Notification volume** separately.

---

## Adjusting the Media Volume

When playing music or watching videos, press the Volume keys to adjust the sound.

You can also adjust the sound on the settings screen.

1. On the **Settings** screen, touch **Sound & display > Media volume**.
2. Drag the slider left to make the volume softer, or right to make it louder.
3. Touch **OK** to save the adjustment.

## Changing the Phone Ringtone

1. On the **Settings** screen, touch **Sound & display > Phone ringtone**.
2. Touch the ringtone you want to use, and then touch **OK**. The ringtone plays when selected.

---

**Tip:**

You can set a song as the ringtone. Open the Music application, and then press and hold the song name, and select **Use as phone ringtone**.

---

## Setting Your Phone to Vibrate for Incoming Calls

1. On the **Settings** screen, touch **Sound & display**.
2. Select the **Phone vibrate** check box. Then mobile phone will vibrate when there is an incoming call.

# Setting Phone Services

## Customizing Call Settings

Your mobile phone service provider offers different services such as call forwarding, waiting, fixed dialing numbers and voicemail. You can customize many of these services if they are part of your calling plan.

On the **Settings** screen, touch **Call settings** to customize your call functions.

## Turning on Data Roaming

1. On the **Settings** screen, touch **Wireless & networks > Mobile networks**.
2. Select the **Data roaming** check box.

---

### Note:

Accessing data services while roaming may incur additional charges. Ask your wireless service provider about data roaming fees.

---

## Switching off the Data Service

Things like synchronizing updates and receiving multimedia messages rely on a transfer of data, which is what the data service does.

1. On the **Settings** screen, touch **Wireless & networks > Mobile networks**.
2. Clear the **Data service** check box.

---

### Note:

When Data service is set to off, you cannot receive or send multimedia messages.

---

## Switching on Always-on Mobile Data

If you have not selected **Enable always-on mobile**, after your screen is locked for 30 minutes, your mobile phone will automatically stop all data services (except MMS). For example, your mobile phone will not check new emails or synchronize data in the background. The mobile phone will automatically enable data services only after you have waken up your screen.

On the **Settings** screen, touch **Wireless & networks > Mobile network**. Select **Enable always-on mobile** to enable this function. By default, this function is disabled.

## Setting Text-to-Speech

Use the Text-to-Speech settings to configure the Android text-to-speech synthesizer, for applications that can take advantage of it.

## Installing Voice Data

1. On the **Settings** screen, touch **Text-to-speech > Install voice data**.
2. If your mobile phone does not have speech synthesizer data installed, connect to Android Market and let it guide you through the process of downloading and installing the data.

3. Follow the instructions to install the voice data.

## Adjusting the Speech Rate

1. On the **Settings** screen, touch **Text-to-speech > Speech rate**.
2. Select a speed at which the text is to be spoken.

# Protecting Your Mobile Phone

## Turning on Your SIM Card PIN

1. On the **Settings** screen, touch **Location & security > Set up SIM card lock**.
2. Select the **Lock SIM card** check box.
3. Use the keyboard to enter the SIM card PIN, and then touch **OK**.
4. To change the SIM card PIN at any time, touch **Change SIM PIN**.

---

### Note:

You can dial emergency numbers any time from your mobile phone.

---

## Protecting Your Mobile Phone with a Screen Lock

To keep your data more secure, lock the screen and/or require a screen unlock pattern every time your mobile phone is turned on or wakes up from sleep mode.

1. On the **Settings** screen, touch **Location & security > Set unlock pattern**.
2. Connect at least four dots in a vertical, horizontal and/or diagonal direction, and then lift your finger from the screen when complete.

---

**Tip:** You must flick your finger on the screen to create the pattern and not touch individual dots.

---

3. Your mobile phone will record the pattern. Touch **Continue**.
4. When prompted, draw the screen unlock pattern again, and then touch **Confirm**.

---

**Note:** Clear the **Use visible pattern** check box if you do not want the unlock pattern to be displayed on the screen when you unlock it.

---

---

**Tip:**

To change your unlock screen pattern, touch **Location & security > Change unlock pattern** on the **Settings** screen.

---

## Managing Applications

### Viewing an Installed Application

1. On the **Settings** screen, touch **Applications > Manage applications**.

2. In the applications list, do any of the following:
  - Touch **MENU**, and then touch **Sort by size**. Then touch an application to view its details.
  - Touch **MENU**, and then touch **Filter**. Select **All**, **Running**, or **Downloaded** from the options menu. Then touch an application to view its details.
  - Touch an application to view its details directly.

## Removing an Installed Application

1. On the **Settings** screen, touch **Applications > Manage applications**.
2. Touch an application, and then touch **Uninstall** to remove the application from your mobile phone.

## Ways to Free Up Your Mobile Phone Memory

- Move files and email attachments to the microSD card.
- In **Browser**, clear all temporary Internet files and Browser history information.
- Uninstall the downloaded programs that you no longer use.
- Reset your mobile phone.

# Resetting Your Mobile Phone

## Backing Up My Settings

You can back up your mobile phone's settings to Google servers, with your Google account. If you replace your mobile phone, the settings you have backed up are stored on the new mobile phone the first time you sign in with your Google account.

1. On the **Settings** screen, touch **Privacy**.
2. Select the **Back up my settings** check box. A wide variety of settings are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you have installed, the words you have in the dictionary that the onscreen keyboard uses, and most of the settings that you configured with the **Settings** application.

## Restoring Factory Data

If you reset your phone to the settings that were configured at the factory, all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications will be erased. Resetting the phone does

not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos.

1. On the **Settings** screen, touch **Privacy > Factory data reset**.
2. When prompted, touch **Reset phone**, and then touch **Erase everything**. The mobile phone resets the settings to the original factory settings, and then restarts.

## Upgrading the Software Version

Before upgrading the software on your mobile phone, ensure that your mobile phone is fully charged and the upgrade version is correct. Back up important information such as the contacts, email messages, files, and other messages saved to your mobile phone.

### Preparing for the Upgrade

1. Download the upgrade file from the appropriate websites.
2. The file you download will be compressed. Use the unzip software on your PC to decompress the upgrade package. The upgrade package has a folder structure — be careful you do not change it. This folder is called **dload** — do not rename it, either.
3. Use the USB cable to connect your mobile phone to your PC.

4. Copy the folder structure to the main directory (root directory) of your microSD card.
5. After you have copied the file to the microSD card, disable the USB mass storage feature.

## Upgrading the Software through the microSD Card

After copying the update files to the microSD card, do the following:

1. On the **Settings** screen, touch **SD card & phone storage > Software Upgrade > SD card Upgrade**.
2. Before the upgrade, the system of your mobile phone automatically checks the battery level and the upgrade version. If the version you have downloaded does not meet the upgrade requirements, the upgrade will not work.
3. During the upgrade, your system may prompt you to back up your data in advance.
4. When the next message appears, touch **Confirm**.
5. Touch **Upgrade**.
6. Your mobile phone restarts and the upgrade screen is displayed.
7. After the upgrade is complete, your mobile phone automatically restarts and will switch on again.

8. Touch **About phone > Build number** on the **Settings** screen to view the version information.

# Appendix

## Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use the device safely. Read this information carefully before using your device.

### **Electronic Device**

Power off your device if using the device is prohibited. Do not use the device when using the device causes danger or interference with electronic devices.

### **Medical Device**

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using the device is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, use the device on the opposite side of the pacemaker and do not carry the device in your front pocket.

- Please consult your doctor and the device manufacturer to determine if operation of your phone may interfere with the operation of your medical device.

### **Potentially Explosive Atmosphere**

Power off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle engine. Triggering of sparks in such areas could cause an explosion or a fire, resulting in bodily injuries or even deaths. Do not power on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage, and distribution areas, and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress. Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations include areas below the deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust, or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

## Traffic Security

Observe local laws and regulations while using the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on the device while driving. Use hands-free accessories.
- When you have to make or answer a call, park the vehicle at the road side before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in the air bag deployment area. Otherwise, the device may hurt you owing to the strong force when the air bag inflates.
- Do not use your device while flying in an aircraft. Power off your device before boarding an aircraft. Using wireless devices in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

## Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.

- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not composed of metal components. Keep your device 1.5 cm away from your body to meet the requirement earlier mentioned.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and results in increase in power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C while the device is being charged. Keep the ambient temperature between -10°C to 55°C for using the device powered by a battery.

## **Prevention of Hearing Damage**

Using a headset at high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

## **Safety of Children**

Comply with all precautions with regard to children's safety. Letting the child play with your device or its accessories, which may include

parts that can be detached from the device, may be dangerous, as it may present a choking hazard. Ensure that small children are kept away from the device and accessories.

## **Accessories**

Use the accessories delivered only by the manufacturer. Using accessories of other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

## **Battery and Charger**

- Unplug the charger from the electrical plug and the device when not in use.
- The battery can be charged and discharged hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than the normal time, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or a malfunction of the charger.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery may be short-circuited and may cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.

- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.
- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

## **Cleaning and Maintenance**

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with a wet hand. Otherwise, it may lead to a short circuit, a malfunction of the device, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.

- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. Radiation from the device may erase the information stored on them.
- Do not leave your device, battery, and charger in a place with an extreme high or low temperature. Otherwise, they may not function properly and may lead to a fire or an explosion. When the temperature is lower than 0°C, performance of the battery is affected.
- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, power off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories is invalid and the manufacturer is not liable to pay for the damage.

## **Emergency Call**

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

## **Certification Information (SAR)**

This mobile device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit also adopted by Europe is 2.0 W/kg averaged over 10 grams of tissue. The highest SAR value for this device type when tested at the ear is 0.679 W/kg, and when properly worn on the body is 0.807 W/kg.

## Disposal and Recycling Information



This symbol on the device (and any included batteries) indicates that they should not be disposed of as normal household garbage. Do not dispose of your device or batteries as unsorted municipal waste. The device (and any batteries) should be handed over to a certified collection point for recycling or proper disposal at the end of their life.

For more detailed information about the recycling of the device or batteries, contact your local city office, the household waste disposal service, or the retail store where you purchased this device.

The disposal of this device is subject to the Waste from Electrical and Electronic Equipment (WEEE) directive of the European Union. The reason for separating WEEE and batteries from other waste is to minimize the potential environmental impacts on human health of any hazardous substances that may be present.

## Reduction of Hazardous Substances

This device is compliant with the EU Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation (Regulation No 1907/2006/EC of the European Parliament and of the Council) and the EU Restriction of Hazardous Substances (RoHS) Directive (Directive 2002/95/EC of the European Parliament and of

the Council). For more information about the REACH compliance of the device, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification). You are recommended to visit the Web site regularly for up-to-date information.

## **EU Regulatory Conformance**

Hereby, Huawei Technologies Co., Ltd. declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

For the declaration of conformity, visit the Web site [www.huaweidevice.com/certification](http://www.huaweidevice.com/certification).

**CE01970!**

---

### **Note:**

Observe the national local regulations in the location where the device is to be used. This device may be restricted for use in some or all member states of the European Union (EU).

---

### **Note:**

This device may be operated in all member states of the EU.

---

**France:** Outdoor use limited to 10 mW e.i.r.p. within the band 2454-2483.5 MHz.

**Italy:** For private use, a general authorisation is required if WAS/ RLAN's are used outside own premises. For public use, a general authorisation is required.

**Luxembourg:** General authorisation required for network and service supply.

**Norway:** This subsection does not apply for the geographical area within a radius of 20 km from the centre of Ny-Ålesund.

## Numerics

12-key PhonePad .....	49
-----------------------	----

## A

accept an invitation .....	101
add a favorite contact .....	40
add a new contact .....	39
add a new friend .....	100
add a new screen item .....	16
add an alarm .....	125
add an email account .....	62
add an entry's number to your contacts .....	30
add music to a playlist .....	91
add other email accounts .....	63
add slideshows .....	60
adjust the media volume .....	138
adjust the ringer volume .....	138
adjust the screen brightness .....	135
adjust the speech rate .....	142
adjust the time before the screen turns off .....	135
adjusting the trackpad .....	136
advanced panel .....	132
agenda view .....	118
airplane mode .....	33
alarm list screen .....	124
Android keyboard .....	50

Android keyboard settings .....	53
answer a call .....	28
application button .....	15

## **B**

back key .....	6
back key functions .....	8
back up my settings .....	145
Bluetooth .....	74
bookmark a web page .....	73
browser settings .....	74

## **C**

calculator .....	132
Calendar .....	115
calendar panel .....	116
call log .....	30
call settings .....	139
Capture screen .....	81
change a wallpaper .....	17
change an account's synchronization settings .....	113
change email account settings .....	64
change the calendar view .....	117
change the phone ringtone .....	139
charge your mobile phone .....	9
charging/data interface .....	7
check the network connection .....	68

close the notification panel .....	21
communicate with a contact .....	45
conference call .....	31
configure general sync settings .....	110, 111, 112
connect a Bluetooth device .....	75
connect to a wireless network .....	69
connector on the top .....	7
contacts details .....	38
CooTek T+ .....	49
copy a file .....	130
copy music to the microSD card .....	87
copyright .....	4
create a folder .....	130
create a Google account .....	95
create a multimedia message .....	58
create a new folder .....	17
create a text message .....	56
create an email .....	97
create an email message .....	66
create an event .....	121
crop a picture .....	87
customize the alarm settings .....	125
customize the calendar settings .....	122
customize your account synchronization .....	112
customize your Gmail/Google Mail settings .....	98
cut a file .....	130

## D

date settings .....	134
day view .....	119
delete a contact .....	40
delete an email accounts .....	63
dialer .....	26
dialpad .....	25
disconnect a Bluetooth device .....	76
display area .....	15

## E

earpiece .....	6
edit a contact .....	41
Email message screen .....	66
end a call .....	29
end key .....	6
end key functions .....	8
entertainment .....	80

## F

file manager .....	128
fingertip actions .....	13
FM Radio screen .....	93
forward an email .....	98
free up your phone memory .....	144
Full QWERTY .....	49

## G

get directions ..... 104

## H

headset jack ..... 7

home key ..... 6

home key functions ..... 8

## J

import contacts from the SIM card ..... 43

input settings ..... 51

install an application ..... 107

install the microSD card ..... 21

install the voice data ..... 141

## K

keep your battery in top shape ..... 10

## L

landscape keyboard ..... 51

library panel ..... 89

library screen ..... 88

location source ..... 103

lock the screen ..... 14

## M

main camera ..... 7

make a call from the call log .....	27
make a call from the contacts .....	27
make a call with the dialer .....	24
manage your accounts .....	109
manage your memory .....	132
Maps .....	102
Market .....	105
menu key .....	6
menu key functions .....	7
message settings .....	61
Microphone .....	7
MMS .....	55
modem behaviour .....	78
month view .....	121
move a screen item .....	16
music player panel .....	93
music player screen .....	90

## **N**

notepad .....	132
notice .....	4
notification bar .....	15
notification icons .....	18

## **O**

onscreen keyboard .....	46
open a bookmark .....	73

open a multimedia message .....	61
Open a web page .....	72
open Gmail/Google Mail .....	96
open Maps .....	103
open Market .....	106
open Talk .....	100
open the alarm .....	123
open the browser .....	70
open the calculator .....	132
open the calendar .....	115
open the file manager .....	129
open the gallery .....	85
open the Messaging application .....	55
open the music .....	88
open the notification panel .....	20
open your contacts .....	34
open your favorites .....	37
open YouTube .....	104
Optical Finger Navigation .....	6, 7

## **P**

packing list .....	5
pair a Bluetooth device .....	75
PC suite synchronization .....	114
phone service .....	139
play a playlist .....	91
play music .....	89

pop in your battery .....	9
power key .....	6
power key functions .....	7
prepare for the upgrade .....	146
protect your phone with a screen lock .....	142

## Q

Quick Contact for Android .....	35
---------------------------------	----

## R

reject a call .....	29
remove a favorite contact .....	41
remove a screen item .....	17
remove installed applications .....	144
remove the microSD card .....	22, 78
rename a folder .....	18
reply an email .....	98
reply to a message .....	61
reply to an email message .....	67
reset factory data from menus .....	146
rotate a picture .....	86
rotate your mobile phone .....	13

## S

safety precautions .....	1
search for a contact .....	44
search for a file quickly .....	131

search for a video .....	105
search for an email .....	98
search for applications .....	106
search for places of interest .....	103
send a multimedia message .....	58
send a text messages .....	56
send an email .....	97
send an email message .....	66
send files via Bluetooth .....	76
send key .....	6
send key functions .....	7
set a home page .....	72
set a voice clip as a ringtone .....	128
set an alarm .....	125
set an event reminder .....	122
set notifications for new instant messages .....	101
set up your mobile phone .....	11
share a video .....	105
shoot a video .....	83
sign out Talk .....	102
slot in your SIM card .....	8
SMS .....	55
sound recorder .....	128
Sound recorder screen .....	127
speaker .....	7
start a chat .....	101

status icons .....	18
switch between accounts .....	97
switch between current calls .....	32
switch off the data service .....	140
switch the input method .....	46
switch the key board layout .....	48
Synchronization .....	109

## **T**

take a photo .....	82
text message editing screen .....	58
time settings .....	134
TouchPal keyboard .....	47
TouchPal settings .....	51
trademarks .....	4
turn off your mobile phone .....	12
turn on Bluetooth .....	74
turn on data roaming .....	140
turn on silent mode .....	137
turn on the data service .....	68
turn on Wi-Fi .....	69
turn on your mobile phone .....	11
turn on your SIM card PIN .....	142

## **W**

week view .....	120
vibrate your phone .....	139

view a multimedia message .....	61
view a picture .....	86
view an email message .....	65
view details about a contact .....	37
view pages you have most visited .....	73
view pages you have visited .....	73
view the installed applications .....	143
view your photos .....	83
view your videos .....	84
uninstall an application .....	107
unlock the screen .....	14
unpair a Bluetooth device .....	76
volume control keys .....	6
update the software through the microSD card .....	147
USB mass storage .....	21, 77
use your camera .....	80

## Y

YouTube .....	104
---------------	-----

© Vodafone Group 2010. Vodafone and the Vodafone logos are trade marks of the Vodafone Group.

Any product or company names mentioned herein may be the trade marks of their respective owners.

31010DEE V100R001\_02

