



MANUAL

EM4483 - MPEG4 Network IP Camera

WWW.EMINENT-ONLINE.COM

EM4483 - MPEG4 Network IP Camera



Warnings and points of attention

Due to laws, directives and regulations set out by the European Parliament, this device could be subject to limitations concerning its use in certain European member states. In certain European member states the use of this product could be prohibited. More information regarding this warning can be found in the Declaration of Conformity on the last page of this document!

Table of contents

1.0 Warranty conditions.....	2
2.0 Introduction	3
2.1 Functions and features	3
2.2 Package contents	3
2.3 Explanation of the camera	4
3.0 Preparing the camera	4
3.1 Connecting the camera.....	5
3.2 Installing the camera software	5
3.3 Configuring the camera for your network	5
3.4 Logging in to the camera	6
3.5 Setting up the camera for your wireless network	7
3.6 Using the camera in combination with a EM4050 wLINK Wireless Router	8
4.0 Other camera settings	9
4.1 Adjusting the image quality.....	9
4.2 Adjusting the sound quality.....	10
4.3 Setting and managing users	10
5.0 Using motion detection	11
5.1 Enabling motion detection.....	11
5.2 Sending an image to an FTP server	11
5.3 Sending an image to an e-mail address.....	12
6.0 Saving images.....	13
6.1 Making, saving and viewing a screenshot.....	13
6.2 Recording, saving and viewing videos	14
7.0 Network Video Recorder software	15
7.1 Installing the NVR software.....	15
7.2 Schedule recordings.....	15
8.0 Frequently asked questions	17
9.0 Service and Support	18

1.0 Warranty conditions

The warranty period of five years applies to all Eminent products, unless stated

otherwise at the time of purchasing. When purchasing a second-hand Eminent product this period remains measured from the moment of purchase by the original owner.

The Eminent warranty conditions are applied to all Eminent products and parts inextricable connected to said product. Power supplies, batteries, antennas and all other products not integrated in or directly connected to the main product or products of which reasonably can be expected that these have a different wear pattern compared to the main product, will therefore not be included in the warranty conditions. The warranty also expires after improper use, external influences and/or opening of the housing of said product by parties other than Eminent.

2.0 Introduction

Congratulations with the purchase of this high-quality Eminent product! This product has been thoroughly tested by the technical experts at Eminent. Should this product, in spite of all care, show any problems then you can appeal to the five years of Eminent warranty. Therefore keep this manual safe, together with the receipt.

Register your purchase now on www.eminent-online.com and receive product updates!

2.1 Functions and features


The EM4483 is an IP camera, which is able to produce an outstanding image and is also equipped with a microphone and MPEG4 compression technology. These features allow you to view and listen to high quality images and sounds made by the camera through the Internet or your own network.

2.2 Package contents

Make sure the following items are present in the package:

- EM4483 IP camera
- Camera mounting stand
- Power adapter
- Network cable
- Mounting screws
- CD-ROM with manual and software
- User manual

2.3 Explanation of the camera

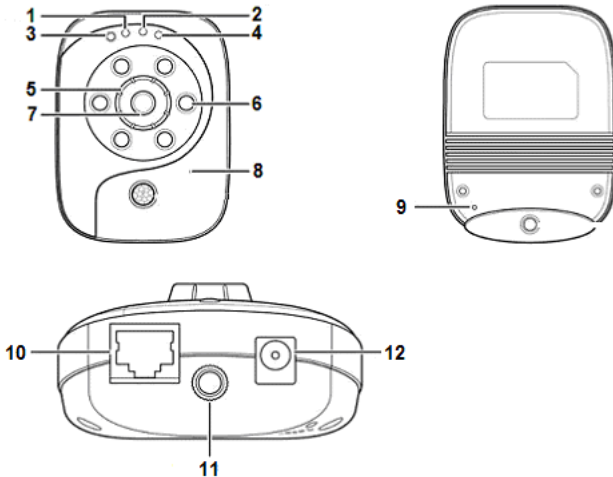

- | | |
|-------------------|--|
| (1) Power LED | This LED will be on when the camera is powered. |
| (2) LAN LED | This LED will be on when the camera is connected to a switch, router or modem using a network cable. |
| (3) Light Sensor | This sensor measures the light intensity around the camera. |
| (4) WLAN LED | This LED will be on when the wireless connection is active. |
| (5) Adjust Focus | By turning the lens you can adjust the focus of the camera image. |
| (6) Infrared LED | These 6 LED lights make sure you can also view the camera image when it is dark. |
| (7) Lens | This is the lens of the camera. |
| (8) Microphone | This is the microphone of the camera. |
| (9) Reset button | By pushing this button the camera will be reset to factory defaults. |
| (10) Network port | This port allows you to connect the camera to your modem or router using a network cable. |
| (11) Screw hole | Use this screw hole to connect the mounting stand to the camera. |
| (12) Power | Here you can connect the power adapter to the camera. |

3.0 Preparing the camera

Before you can start using the EM4483 IP camera, you will need to set it up for your

network. Make sure you have all the information about your network at hand. Consult the manual of your modem or router to obtain this information.

3.1 Connecting the camera

1. Connect the power adapter to the camera and plug it into a power socket.
2. Connect the camera to your network using the provided network cable. This can be a switch, router or modem.

3.2 Installing the camera software

To be able to connect the camera to your network the IP address of the camera has to be changed. On the CD-ROM you will find software that can detect the camera. After detection you can adjust the settings of the camera to your network. You will first need to install the software. Follow the steps below:

1. Insert the supplied CD-ROM into the CD-ROM or DVD drive of your computer.
2. Select the preferred language.
3. Click 'Next'.
4. Select 'Install Camera Software'.
5. Click 'Next'.
6. Click 'Next'.
7. Click 'Next'.
8. Click 'Close' to finish the installation.

Hint: If the CD-ROM does not start automatically, you can also start the installation program manually. Follow the instructions below:

1. Click 'Start'.
2. Click 'Run'.
3. Type `x:\wizard\wizard.exe` (*x* is the drive letter of your CD-ROM or DVD station).
4. Click 'OK'.

3.3 Configuring the camera for your network

After the installation is finished you can open the software to detect the camera:

1. Click 'Start'.
2. Click 'All Programs'.
3. Click 'EM4483 Network IP Camera'.
4. Click 'EM4483 MPEG 4 Master'. The program MPEG4 Master will open.
5. Click the 'Search' button. An IP address will appear in the left field.
6. Enter a name for the camera in the 'Name' field.
7. If you want the camera to receive an IP address from your router, then select 'DHCP' in the 'IP Address' field. Continue to step 8.

8. If you want to assign an IP address to the camera yourself, select 'Fixed' in the 'IP Address' field.
9. Enter the preferred IP address in the 'IP' field.

Example: If your router uses the IP address 192.168.0.1, then change the IP address of the camera to 192.168.0.100.

10. Enter the correct subnet mask in the 'Netmask' field.
11. Enter the IP address of your router in the 'Gateway' field.
12. If you wish to change the password of the camera, then enter the new password in the 'New Password' field.
13. Enter the new password once more in the 'Confirm Password' field.
14. Click 'Save' to save the settings.

Write down the addresses and the password that you set up:

IP Address _____

Netmask _____

Gateway _____

Password _____

3.4 Logging in to the camera

The camera can now be accessed using the IP address that you assigned to the camera or that the camera has received from your router. Follow the instructions below to log in to the camera.

1. Open Internet Explorer.
2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter key or click 'Go to'.
4. The home page is shown.
5. The message 'Click here to install the following ActiveX Control...' will appear.
6. Click this message with the left mouse button and choose the option 'Install ActiveX Control...'.
7. A security warning will appear. Click 'Install'.
8. If needed, click the center of the screen with the left mouse button to activate the ActiveX Control.

In the center of the screen you will now see the image of the camera. Left of the image there are 4 buttons, underneath which you will find a speaker-symbol and 3 indication-lights. Follow the steps below to finish the configuration of the camera for your network:

9. Click the third button from above, depicting a wrench (Settings).
10. Enter 'admin' in the 'Username' field.
11. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
12. Click 'Ok'.

Note! The default password of the camera is 'admin'. Enter this password if you did not set a password as described in paragraph 3.3, step 12.

In the screen that now appears you can further configure the camera for your network. If you want to wirelessly connect the camera to your network, then continue with paragraph 3.5. If you want keep the camera connected to the network using a network cable, then continue with chapter 4.

3.5 Setting up the camera for your wireless network

If you wish you can wirelessly connect the camera to your network. This allows you to put the camera in locations where you can not lay network cables. To correctly set up your camera you will need specifications of your wireless network. You can obtain this information from your wireless modem or router. Follow the instructions below to set up your camera for your wireless network:

1. Click 'Network' in the left part of the screen.
2. Click 'Wireless' in the top of the screen.
3. Choose 'Infra' for 'Connection Type'.
4. Choose 'ETSI Europe' for 'Country Region'.
5. Select the channel that your wireless router or modem is using in the 'Channel' field.
6. Enter the name (SSID) of your wireless router or modem in the 'SSID' field.

You will now need to configure the security settings. We assume your wireless network is secured using a WPA-PSK key. Make sure you have the security settings of your wireless network at hand.

7. Choose 'WPA-PSK' for 'Authentication Type'.
8. Choose 'TKIP (WPA-PSK)' for 'Encryption Type'.
9. Enter the security key of your wireless network in the 'WPA-PSK Key' field.
10. Click 'Save' to save the settings.

If the camera is in range of your wireless router or modem, a connection between the camera and your wireless network will be automatically realized.

Write down the security type of your wireless router, the name (SSID), the password and the channel:

[] WPA [] WEP

Network name: _____

Password: _____

Channel: _____

You can now view the image of the camera on any computer that is connected to your home network, as explained in paragraph 3.4, step 1 through 4.

3.6 Using the camera in combination with a EM4050 wLINK Wireless Router

As an example we will explain how to use the EM4483 in combination with an Eminent EM4050 wLINK Wireless Router.

Now that the camera is set up for your network, the image of the camera can also be viewed using an internet connection. The default settings of the camera are such that anyone can view these images without the need to log in. In chapter 4.3 of this manual we will explain how you can make sure that only certain users can view the images.

To be able to view the images of the camera from outside your network, you will need to open a port in your router for the camera. In the example below we will configure an EM4050 wireless router to pass the images of the camera. If you are using another router, consult the documentation of your router to find out how to open ports. Use the IP address as set in chapter 3.3. The default port the camera uses is 80. If you wish to use a different port, consult chapter 6.

Follow the instructions below to open port 80 in the EM4050:

1. *Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).*
2. *Enter the IP address of your EM4050 in the address bar (the default IP address is 192.168.0.1).*
3. *Press the enter key or click 'Go to'.*
4. *The opening screen is shown.*
5. *Click 'Advanced' in the left menu.*
6. *Click 'Virtual Servers'.*
7. *Check 'Enable' under 'Properties'. Enter a random name in the next field, for instance 'Camera'.*
8. *Choose the IP address of your EM4483 from the list near 'PC (Server)' or enter the IP address manually.*
9. *Choose 'TCP/UDP' for 'Protocol'.*
10. *Enter the number 80 in both 'Internal (LAN) Ports' fields. The 'External (WAN) Ports' fields will be automatically filled.*
11. *Click 'Add as new server'.*

Now that the port for the camera has been opened, anyone can view the images of your camera using the Internet by following the instructions below:

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).
2. Enter the WAN IP address (which you received from your provider) in the address bar.
3. Press the enter key or click 'Go to'.
4. The opening screen of the camera is shown. In the center of the screen the image of the camera is shown.

4.0 Other camera settings

Now that the camera has been properly connected and you can view the images, it is possible to further configure the camera to your wishes. Before you can start configuring, you will first need to go to the correct page of the camera menu. Follow the instructions below:

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).
2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter key or click 'Go to'.
4. The opening screen is shown.
5. Click the third button from above, depicting a wrench (Settings).
6. Enter 'admin' in the 'Username' field.
7. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
8. Click 'Ok'.

4.1 Adjusting the image quality

The quality of the camera image can be adjusted to what you want to use the camera for. If you only want to use the camera within your own network for example, you can use the highest image quality, as opposed to a situation where you want to send images over the Internet. To access the settings for the image quality, click 'Video' in the left menu.

In the upper right part of the screen you will find 3 options. Choose 'High' if you only wish to use the camera within your own network and if no other cameras are present in your network. If there are multiple cameras in your network, choose 'Medium'. If you wish to use the camera to send images over the Internet, choose 'Low'.

If you want to share images of the camera over the Internet, it is important that the image quality is set in such way that the amount of data traffic the camera generates does not surpass the speed of your ADSL connection. That is why you can fine-tune the quality settings. Apart from the settings we explained above you will also find the

following options:

Resolution:	This allows you to set the resolution of the image. You can choose between VGA 640x480 (high quality) or QVGA 320x240 (lower quality).
Compression:	Here you can set the amount of image-compression. The higher the compression is set, the less data traffic the images will generate.
Maximum Frame Rate:	This allows you to set the maximum number of images per second. The higher the number, the more data traffic the camera will generate.
P-Frame / I-Frame Ratio:	The higher you set this option, the less data traffic the images will generate.

Save these settings by clicking 'Save'. If you then click 'Home' in the left menu, you will see the image of the camera. On the bottom of this screen you will find the 'FrameRate' and the 'BitRate'. The FrameRate stands for the number of images per second, the BitRate stands for the amount of data traffic the images generate. If the BitRate closely approaches the speed of your Internet connection, adjust the settings above to lower the amount of data traffic.

4.2 Adjusting the sound quality

Because the EM4483 is equipped with a built-in microphone, it is also possible to accompany the sent videos with sounds. This option is enabled by default. To set the quality of the audio signal you can click the tab 'Audio' in the right menu.

Enable:	This option is checked by default. Uncheck this option if you do not wish to send sound with the camera images.
Bit Rate:	This option allows you to set the quality of the audio signal. Set the lowest possible quality by selecting 16 Kbps, the highest possible quality 40 Kbps.
Audio volume:	This option allows you to set the volume of the audio signal. Selecting 'Small' results in low volume, 'Middle' results in medium volume and 'Large' results in high volume.

Click 'Save' to save the settings.

4.3 Setting and managing users

Because you do not want anyone who can view the images of the camera to also be able to adjust the settings, you can set different types of users. Follow the instructions below:

1. Click 'User' in the left menu.
2. Click 'Add' under the header 'User List'. A number of new options will appear.
3. Enter a made-up username in the 'User Name' field.
4. Enter a made-up password in the 'Password' field.
5. Re-enter the same password in the 'Confirm Password' field.
6. Choose the type of user in the 'User Group' field. If you choose 'User', the user can only view the images of the camera after logging in to the page. If you choose 'Administrator', the user can also adjust the settings of the camera after logging in.
7. Click 'Save'. The new user will now appear in the field under 'User List'.

The new user can now access the camera from within the network as described in chapter 3.4, steps 1 through 4 and through the Internet as described in chapter 3.6.

5.0 Using motion detection

The EM4483 is equipped with built-in motion detection which allows the device to be used as a security camera. It is possible to let the camera send an image to an FTP server or e-mail address the moment a movement is detected. Follow the steps below:

5.1 Enabling motion detection

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).
2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter button or click 'Go to'.
4. The opening screen is shown.
5. Click the third button from above, depicting a wrench (Settings).
6. Enter 'admin' in the 'Username' field.
7. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
8. Click 'Ok'.
9. Click 'Advanced' in the left menu.
10. Click 'Alarm'.
11. Check 'Enable Motion Detection'.
12. Click 'Save' to save the settings.

The motion detection is now enabled. That means the camera can now detect motion within its point of view and therefore can act as a security camera. It is possible to let the camera send an image to an FTP server or e-mail address the moment the camera detects movement. Follow the instructions below to use this option:

5.2 Sending an image to an FTP server

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).

2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter button or click 'Go to'.
4. The opening screen is shown.
5. Click the third button from above, depicting a wrench (Settings).
6. Enter 'admin' in the 'Username' field.
7. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
8. Click 'Ok'.
9. Click 'Advanced' in the left menu.
10. Click 'Alarm'.
11. Check 'Send images to FTP server'.
12. Click 'Save' to save the settings.
13. Click 'FTP' in the left menu.
14. Enter the address of the FTP server to which you want to send the image in the 'FTP Server' field (for example ftp://example.nl).
15. The default setting of 'FTP Server Port' is 21. You do not need to change this setting.
16. Enter the username of your FTP account in the 'User ID' field.
17. Enter the password of your FTP account in the 'Password' field.
18. Click 'Save' to save the settings.

The moment the camera detects motion, an image will be send to the specified FTP server.

5.3 Sending an image to an e-mail address

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).
2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter button or click 'Go to'.
4. The opening screen is shown.
5. Click the third button from above, depicting a wrench (Settings).
6. Enter 'admin' in the 'Username' field.
7. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
8. Click 'Ok'.
9. Click 'Advanced' in the left menu.
10. Click 'Alarm'.
11. Check 'Send e-mail'.
12. Click 'Save' to save the settings.
13. Click 'Mail' in the left menu.
14. Enter the address of the concerning mail server in the 'Mail Server' field.
15. Enter the e-mail address from which the mail will be sent in the 'Mail Sender' field.
16. Enter the e-mail address to which the mail will be sent in the 'Mail Receiver' field.
17. You can skip the other fields.

18. Click 'Save' to save the settings.

The moment the camera detects motion, an image will be send to the specified e-mail address.

6.0 Saving images

The EM4483 allows you to make screenshots of the view of the camera. You can also record images and sound to a video file. This makes it possible to see what happened at the location where the camera is mounted, after the events took place. Be warned that recording video takes up a lot of hard disk space and that the actual recording will continue until you yourself interrupt the recording or until hard disk of the computer is full.

Hint: If you want the camera to make recordings at specific times, follow the instructions as described in chapter 7.1.

Follow the instructions below to make screenshots or to record videos.

6.1 Making, saving and viewing a screenshot

First you will need to make clear where you wish to save the screenshots to. Follow the instructions below:

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).
2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter button or click 'Go to'.
4. The opening screen is shown.
5. Click the third button from above, depicting a wrench (Settings).
6. Enter 'admin' in the 'Username' field.
7. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
8. Click 'Ok'
9. Click 'Video' in the left menu.
10. In the lower right part of the screen you will see the 'Snapshot Path' field. Enter the location where you wish to save the snapshots to. For example 'C:\Camera'.
11. Click 'Save' to save the settings.

Now that you specified a location, you can start making screenshots:

1. Click 'Home' in the left menu. You will now return to the opening screen of the camera.
2. Click the photo camera icon in the left menu (Snapshot). The edges of the image temporarily change color to indicate that a screenshot has been made.

To view the new screenshot, use Windows Explorer to browse to the location you specified in step 10 (for example C:\Camera). Here you will find the new file. Double click the file to view the contents.

6.2 Recording, saving and viewing videos

First you will need to specify the location where you wish to save the recorded videos to. Follow the instructions below:

1. Open your Internet browser (for instance Internet Explorer, Netscape or Firefox).
2. Enter the IP address you set in chapter 3.3 in the address bar of the browser (for instance 192.168.0.100).
3. Press the enter button or click 'Go to'.
4. The opening screen is shown.
5. Click the third button from above, depicting a wrench (Settings).
6. Enter 'admin' in the 'Username' field.
7. Enter the password you set in chapter 3.3, step 12 in the 'Password' field.
8. Click 'Ok'
9. Click 'Video' in the left menu.
10. In the lower right part of the screen you will see the 'Record Path' field. Enter the location where you wish to save the video to. For example 'C:\Camera'.
11. Click 'Save' to save these settings.

Now that you specified a location, you can start recording a video:

1. Click 'Home' in the left menu. You will now return to the opening screen of the camera.
2. Click the video camera icon in the left menu (Record). The icon will turn red to indicate the recording is in progress.
3. To stop recording, click the same icon again. The icon will turn back to green to indicate that the recording has stopped.

To view the video file you will need to follow the instructions below:

1. Click the third button from above, depicting a wrench (Settings).
2. Click 'Monitor' in the menu.
3. Click 'Browse' in the lower right part of the screen. Windows Explorer will appear. Browse to the location you specified in step 11.
4. Double click the video file you wish to view. You will then return to the previous screen.
5. Click 'Play' to play the video file.
6. Click 'Stop' to stop playing the video.

7.0 Network Video Recorder software

The EM4483 camera is supplied with the so-called 'Network Video Recorder' (NVR) software. This allows you to save the video images of the camera to the hard disk of a computer, or to make permanent recordings to a hard disk.

7.1 Installing the NVR software

To be able to use the supplied NVR software you will first need to install this software from the CD-ROM to your computer. Follow the instructions below:

1. Insert the supplied CD-ROM into the CD-ROM or DVD drive of your computer.
2. Select the preferred language.
3. Click 'Next'.
4. Select 'Install Network Video Recorder'.
5. Click 'Next'.
6. Click 'Next'.
7. Click 'Next'.
8. Click 'Close' to finish the installation.
9. Click 'Start'.
10. Click 'All Programs'.
11. Click 'NVR'.
12. Click 'NVR' again.

The NVR software opens. You will first need to couple the camera to the software. Follow the instructions below:

1. Click the mid button in the upper right part of the NVR software (camera with magnifying glass).
2. The screen that now appears exists of two fields. The left field displays all the cameras found in your network. If no cameras are displayed then click the 'Search Camera(s)' button.
3. Click the displayed camera.
4. Now click the arrow pointing to the right. The camera will now also be displayed in the other field.
5. Click 'Save' to couple the camera to the software.

The main screen of the NVR will re-appear. You will now see the image of the camera in the centre of the screen.

7.2 Schedule recordings

The NVR software allows you to let the camera make recordings at specific times. Follow the instructions below to schedule recordings:

1. Click 'Start'.
2. Click 'All Programs'.
3. Click 'NVR'.
4. Click 'NVR' again. The NVR software will be started.
5. Click the fifth button from above (Schedule Settings). A new screen will appear.

This screen displays a calendar, divided in weekends (pink color) and week days (yellow color). You can schedule recordings at different times for each type of day. As an example we will schedule recordings in a random week. We will schedule a recording on a Saturday from 9 o'clock in the morning until 2 o'clock in the afternoon and a recording on a random weekday from 10 o'clock in the morning until 3 o'clock in the afternoon.

Before you start to schedule recordings you need to make sure the correct year is selected under 'Setting a Network Camera' in the upper left menu. After selecting the correct year, you need to click 'Save Settings', after which you can follow the instructions below:

1. Click the tab 'Recording Templates'. In the left part of the screen you will see a yellow column 'Regular Settings' and a pink column 'Holiday Settings'.
2. Click the fields behind '10-11', '11-12', '12-13', '13-14' and '14-15' in the yellow column. A 'V' will appear in each field.
3. Click the fields behind '9-10', '10-11', '11-12', '12-13' and '13-14' in the pink column. A 'V' will appear in each field.
4. Click 'Save Settings'.
5. Click the tab 'Camera's Recording'.
6. Click the 'Trigger All' in the upper part of the screen. All yellow and pink boxes will turn white.

Hint: 'Trigger All' means no date has been set on which the camera will need to record according to your specific time schedule. The camera will only start recording when motion detection is enabled and motion is detected. If you want the camera to start recording each day according to your time schedule, do not click 'Trigger All' or click 'Default Value'.

7. Right click a random Saturday and choose 'Holiday Settings'. The box will turn pink. The camera will start recording on that specific Saturday, according to the time schedule you specified in step 3.
8. Right click a random weekday and choose 'Regular Settings'. The box will turn yellow. The camera will start recording on that specific day, according to the time schedule you specified in step 2.

Hint: If you right click any date of the calendar, you will get 4 choices: Regular Settings, Holiday Settings, Trigger Settings and Undo Change. If you choose 'Trigger

Settings', recording for this date will be triggered by motion detection instead of the time schedule.

9. In the left menu, in the field below 'Apply Settings To', you will need to choose the camera to which this schedule will be applied. Then click the 'Apply Settings To' button.
10. If you want all cameras in your network to use this schedule then click the 'Settings to ALL' button.

After setting the schedule you will need to activate the recording settings and specify where the NVR software should save the images to.

1. Click the 'Recording Storage' tab.
2. In the field on the left you need to choose the location where you want to save the images to.
3. Check 'Enable Recording'.
4. Enter the amount of disk space the camera may use when saving images in the 'Largest Storage SPaceiG' field.
5. If motion detection is enabled, the 'Alarm's Recording SpaceiG' field lets you specify how long the camera needs to continue recording after motion has been detected.
6. Click 'Save Settings' to save the settings.

8.0 Frequently asked questions

Q. The CD-ROM does not start automatically.

A. You can start the installation wizard by clicking "Start", then "Run". Type "X:\wizard\wizard.exe" in the field 'Open' (X is the drive letter of your CD-ROM or DVD station) and click "OK".

Q. The image is unclear. How do I improve the image?

A. You can adjust the focus by carefully turning the lens of the camera.

Q. I unchecked 'Allow Anonymous Users' in the web page of the camera and now almost nobody can view the image of the camera over the Internet. Why is that?

A. When this function is enabled anybody can access the main page which contains the image of the camera. All other options will be available only when logged in with a username and password. When unchecked, you will be asked for a username and password as soon as you try to access the page of the camera, meaning that only the users you specified can view the image of the camera.

Q. The lights on the camera are not lit, is this correct?

A. These are infrared LED's. Infrared light is virtually invisible. When the infrared

light is activated images can still be viewed, but within a limited range (ca. 3 meters)

Q. How do I reset the camera to its defaults settings?

A. Turn the camera on. Push the button under the connection of the power adaptor using a pen or paperclip. Keep it pushed for about 15 seconds. The camera has now been reset.

Q. Can the camera function behind a firewall or router?

A. The camera can be made externally reachable by forwarding port 80 in the router or firewall. Consult the manual of your router for more details.

Q. What are the screw holes underneath the camera for?

A. You can use these to mount the camera to (for instance) the wall or the ceiling.

9.0 Service and Support

This users manual has been carefully written by Eminent's technical experts. If you have problems installing or using the product, please contact support@eminent-online.com

Declaration of Conformity

To ensure your safety and compliance of the product with the directives and laws created by the European Commission you can obtain a copy of the Declaration of Conformity concerning your product by sending an e-mail message to: info@eminent-online.com. You can also send a letter to:

Eminent Computer Supplies
P.O. Box 276
6160 AG Geleen
The Netherlands

Clearly state 'Declaration of Conformity' and the article code of the product of which you would like to obtain a copy of the Declaration of Conformity.



Trademarks: all brand names are trademarks and/or registered trademarks of their respective holders.

The information contained in this document has been created with the utmost care. No legal rights can be derived from these contents. Eminent cannot be held responsible, nor liable for the information contained in this document.



Eminent is a member of the Intronic Group