

DSS5800 Quick Start Instructions
For Software Version 2, starting with Release 20d

Z TECHNOLOGY



Windows DRIVE TEST 2 Software

A large, bright yellow oval with a thin black border, centered on the page. It contains the text "Quick Start" in a blue, bold, italicized font with a drop shadow.

Quick Start

INSTRUCTIONS

Z TECHNOLOGY - DRIVE TEST 2

OPEN the UNIT



Figure 1: DSS5800 case with Meter Decoder and PC

Open the DSS5800 case, and open the laptop PC. The system will be as shown in figure 1. The laptop PC is mounted on a hinged tray. The tray can be un-locked rotated up to expose power cords and the instrumentation below. The instrumentation consists of an RMT507 Opt S, Field Strength Meter, an 8VSB Decoder Module, and a GPS receiver. Access the power connection rotate the tray up, you must first un-lock the 1/4 turn transit fastener located at the front of the tray. Close the laptop if open, use a screwdriver or a coin to rotate the fastener counter clockwise 1/4 turn. Lift the hinged computer platform to expose the meter and power cords.

Connect to Power, remove the 12 volt power plug and insert into the vehicle 12 volt power receptacle. If the 12 volt power cord is not long enough to reach the vehicle power receptacle, remove the power inverter from the case and place it closer to the vehicle power receptacle. Use the included AC extension cord between the inverter and the AC power cord inside the case. An alternate solution is to procure a 12 volt extension cord from a local electronics or department store. If operating where AC is available, unplug the AC cord from the Inverter and use the supplied AC extension cord to plug into an AC outlet. See figure 2 to locate the power inverter and other instrumentation components.

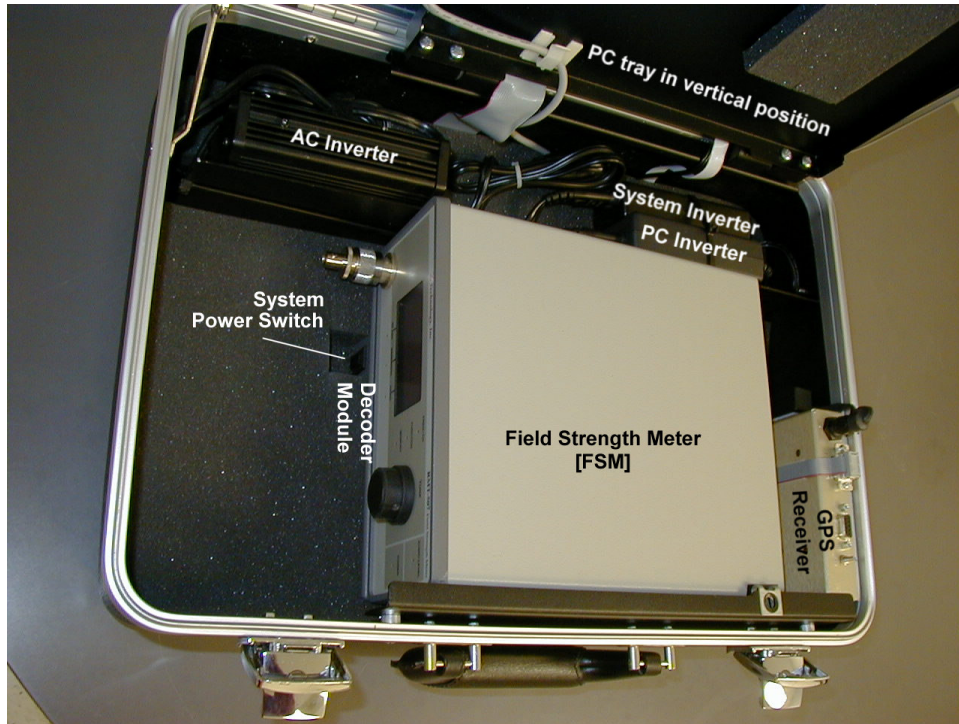


Figure 2: Instrumentation Locations

Connect a properly located RF antenna to the meter and connect a properly located GPS antenna to the GPS unit located on right side of the case.

POWER UP THE COMPUTER


Turn on the Laptop by pressing and releasing the Power button. The COMPAQ logo appears followed by the Window 98 Desktop.

POWER UP THE INSTRUMENTATION

The Power switch on the 8VSB Decoder Module controls power to the decoder as well as the meter. Turn the Decoder Module power switch on. The switch will and the meter front panel will illuminate. "1 Port" will appear on the meter display. If the meter display does not show "1 Port" then the Drive Test 2 software will not initialize. See the DSS5800 User Manual Appendix A. The GPS receiver will remain on as long as AC power is supplied from the inverter or an AC source.

START and USE DRIVE TEST 2

This section provides information on how to use Drive Test 2.

Start the Drive Test 2 Program by double clicking on the Drive Test 2 shortcut  on the Desktop. The program will start up immediately. It first initializes the meter and communicates with the GPS receiver. The Following screen appears.

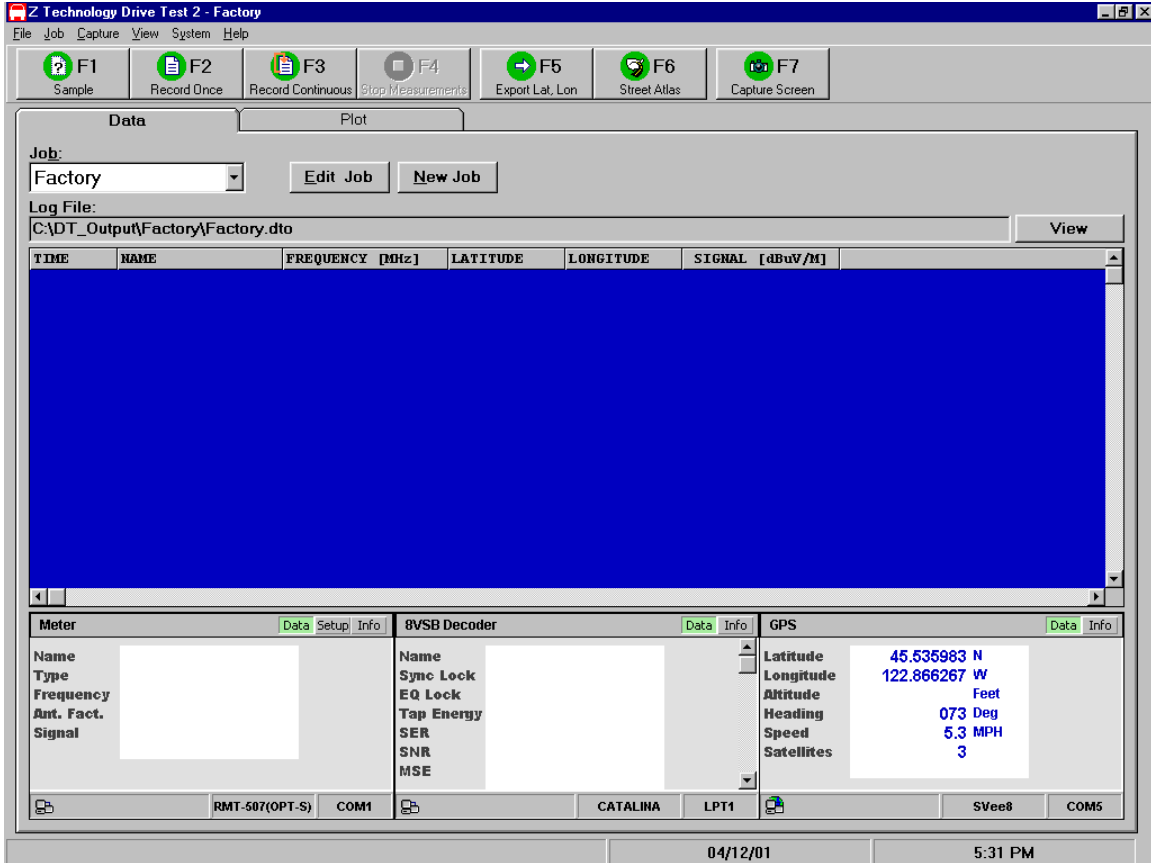


Figure 3: Drive Test 2 program started

The initial screen shows the **Data** Tab. The top of the screen shows the job that is selected, in this case **Factory**. The center of the screen shows a blue background area where measured data is displayed. The bottom of the screen shows a Meter, and GPS status window. A communication icon located at the bottom left of each status window indicates communication with that device. The GPS communication icon flashes green indicating there is communication traffic to the PC from the GPS. Additional information can be obtained by parking the cursor over the icon, a tool tip message appears indicating the communication status. To begin collecting measurement data click the **Record Continuous** Button. The Factory Job file will automatically be loaded. The Factory job file is configured such that each time a recording is made it will be preceded with a user entered comment. Enter a comment in the comment screen then click **OK** to continue.

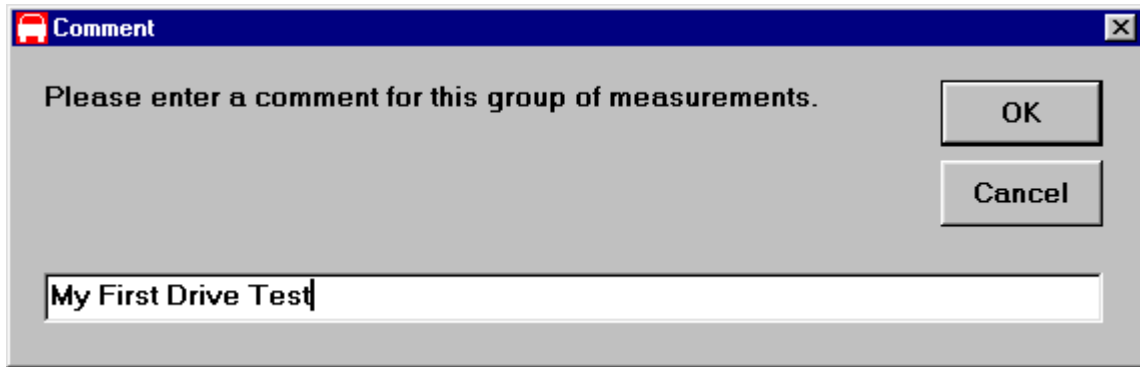


Figure 4: Comment Screen

A green light and a message **RECORDING** comes on in the bottom Status Bar indicating that measurement data is being recorded to the JOB file being displayed. This measurement data (signal level measurements plus GPS latitude and longitude information) is stored in a "comma delimited text" File. See the user manual appendix for complete description of the output file format.

- Note: The center status window for the 8VSB Decoder Module is blank in this example because the Factory Job has only Analog signal types included. The 8VSB decoder contributes measurement information only to 8VSB signal types. See the "Figures of Merit" section later in this Quick Start for further information about Signal Types, see the DSS5800 User Manual for information about how to use the Job Editor to specify Signal Types.

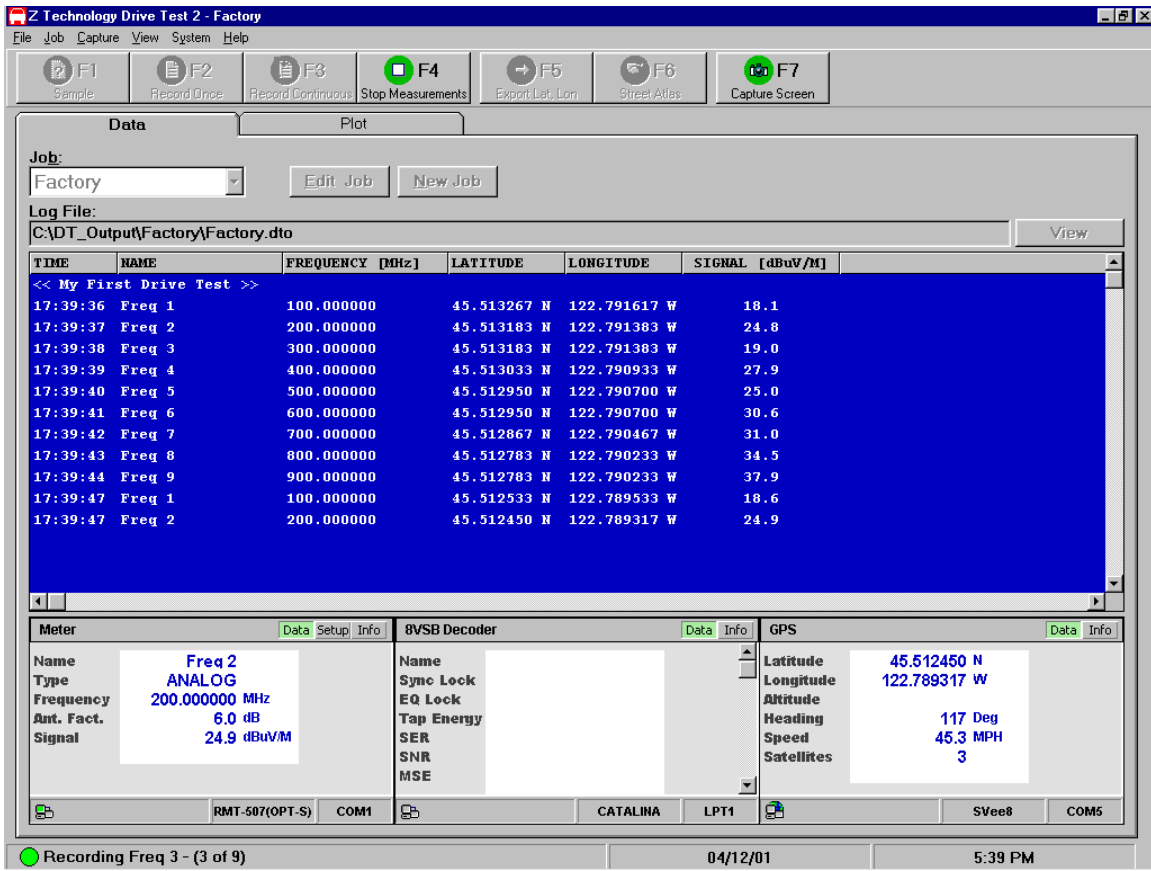


Figure 5: First Recording Screen

Click the **Stop Measurements** button to stop.

PLOTTING DRIVE TEST 2 DATA

- Besides collecting and recording of RF measurement data, Drive Test 2 features a **Plot** screen that allows the viewing of recorded data on simple street maps. The map may be viewed both while measurements are being recorded and after recording has stopped. Plotting while recording is useful to monitor vehicle movement and visually verify that the GPS is correctly tracking the vehicle location. Plotting while recording is stopped allows the program to assign colors to the dots at measurement locations. The color of the dot represents the magnitude of the measured parameter at that location.
- Click on the **Record Continuous** button then drive a short distance while recording, then pull off the road in a safe location. Click the **Stop Measurements** button, and then click on the **Plot** tab. A plot screen similar to the screen below in Figure 6 appears. It shows a colored dot trail over the road or region that was driven.

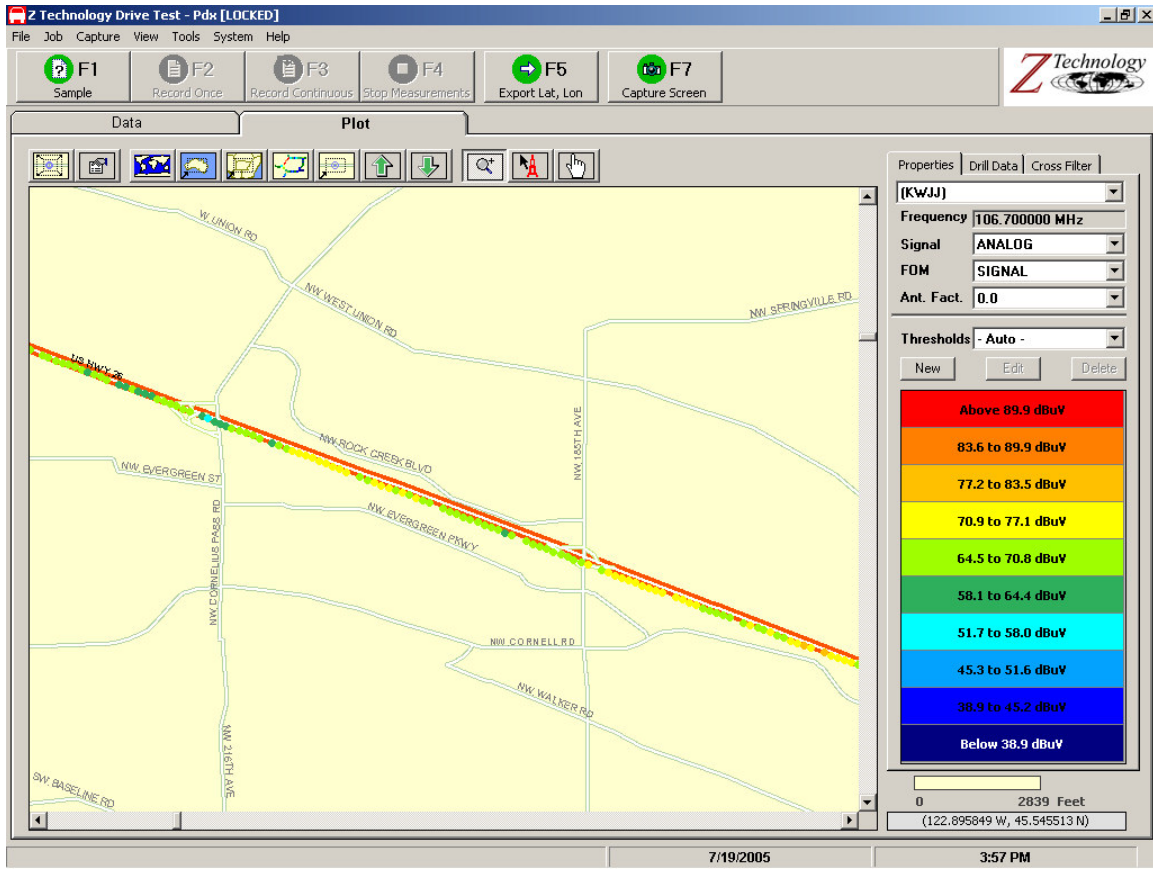



Figure 6: Plot Screen

- A colored dot trail has been created. The colors of the dots indicate the magnitude of the measured parameter according to the palette shown in the bottom right in the **Properties** Tab.






- A bullseye  indicates the current GPS location.
- Right click on a dot or hold the right mouse button down and drag a box around a group of dots, and the **Drill Data** tab automatically appears at the right. The **Drill Data** tab displays specific measurement information about the selected dot(s).
- Tool bar buttons at the top allows user control of plot features. Park the cursor over each of the tool bar buttons at the top of the Plot Tab. A tool tip (a text message) appears describing the function of the button.



- Each button, left to right is described next.




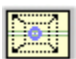

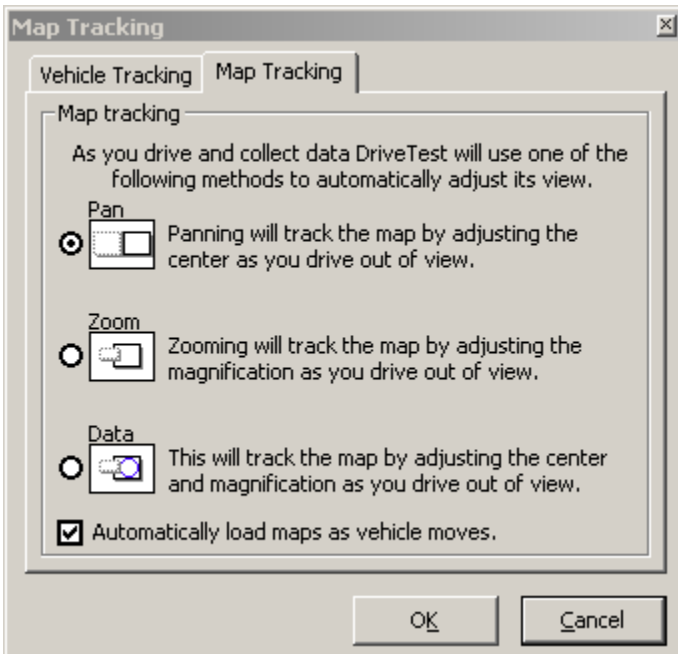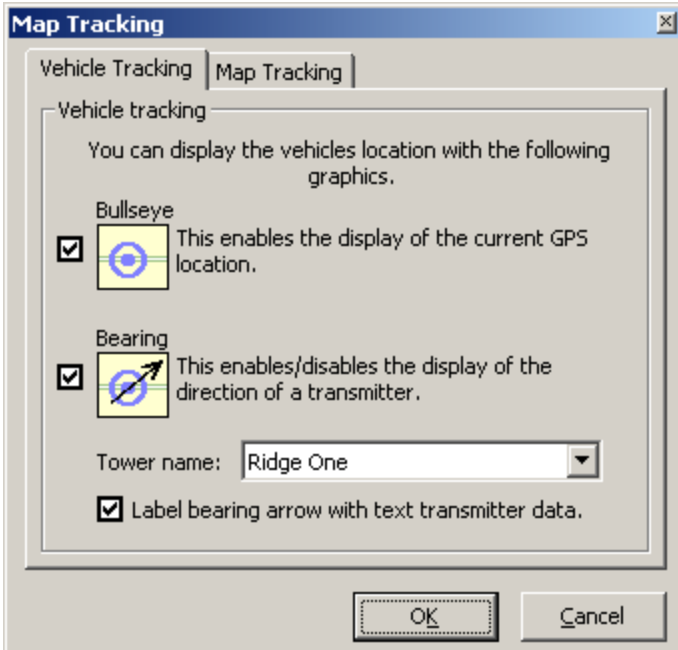




-  Map tracking settings.

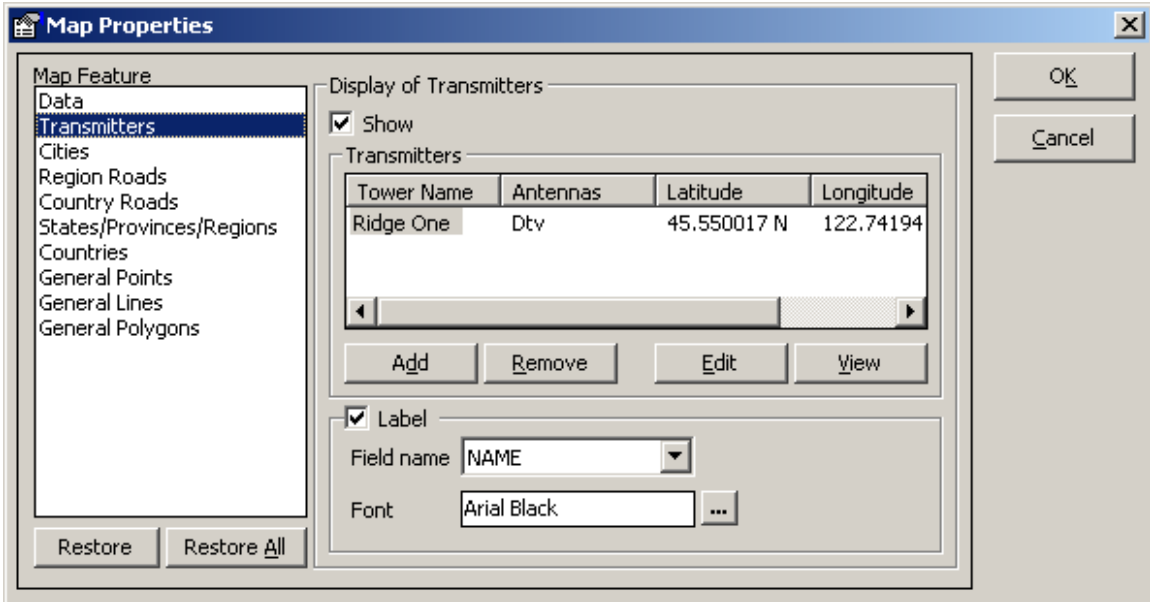




The checkbox for automatically loading maps as vehicle moves pertains only to changing from one region (or state) to the next. When a job is started region (or State) maps will be loaded based on the current GPS location regardless of this function being enabled or disabled.

 Map properties.



-  The map zooms out to show the entire earth.
-  The map zooms to current country.
-  The map zooms to current region.
-  The map zooms to include the entire extent of the drive.
-  The map zooms to current GPS location.
-  Zooms the map out (Alt-Arrow Up).
-  Zooms the map in (Alt-Arrow Down).

The next three buttons defines the meaning of a left mouse click.

-  Drag a box to Zoom in.
-  Add a transmitter icon to map.
-  Manually load region map.

Plots are invaluable for visual representation of the data, easy presentation of data, and for a fast check of the integrity of data during drive test sessions.

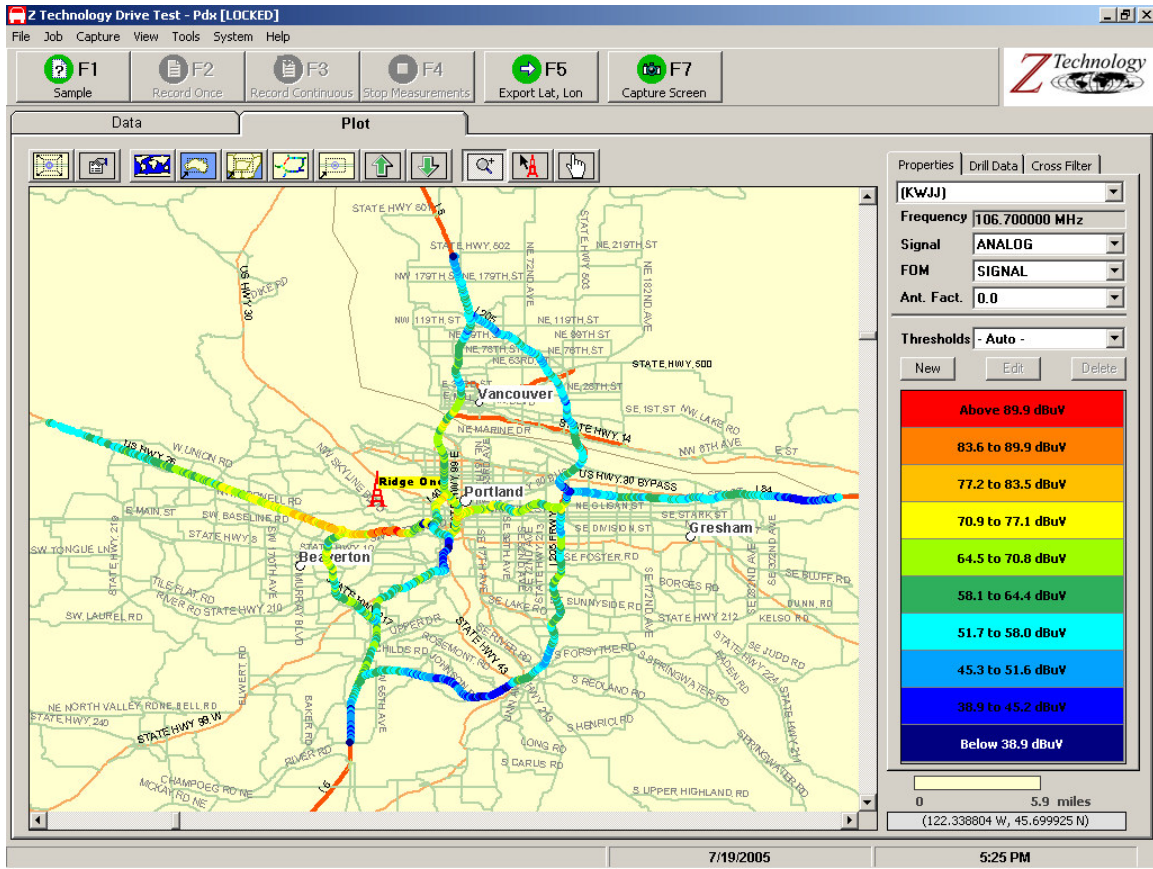


Figure 7: Plot of completed Drive Test 2 Example

PRINT OR SAVE COLORED DOT PLOTS

To save colored plots to a file, click on the **Capture Screen** button in the main tool bar. This uses a third party screen capture program called SnagIt. A numbered .jpg file will be written into the jobs DT_Output folder. Example C:\DT_Output\Factory\SnagIt0001.jpg. The .jpg file can be viewed, manipulated or printed by graphic image program. By default Microsoft Internet Explorer will display .jpg images.

- Note: A second alternative is to use the Windows Clipboard. Save the window image to the windows clipboard by pressing **ALT PRTSCRN** then paste the image into a program such as **Paint**. Use the **Paint** features to print or save to a file.
- To paste into Microsoft Windows applications such as **Paint**, **Word** or **PowerPoint** first display the screen to be pasted, then press **ALT PRTSCRN**, next open the target application, then select **Edit:Paste** from the applications menu or use the keyboard shortcut **Ctrl V**.

FIGURES OF MERIT

RF signals come in a variety of formats. Simple CW signals are relatively stable and constant and can be measured by a simple process of setting a frequency and making a measurement. However even simple signals may have complex properties. Signals that are pulsed, or broadcast over a spread spectrum introduce other measurement complexities. In order to make automated measurements of both simple and complex RF signal properties from a moving vehicle Z Technology has categorized many signal properties and grouped them in entities called **Signal Types**. Each signal type has important characteristics that can be measured however it may require a huge number of measurements. The RMT507 Field Strength Meter is capable of generating the necessarily large amounts measurement data. To make the data easy to visualize and evaluate, Z Technology has introduced the **Figures of Merit (FOM)** concept. Figures of Merit summarize large amounts of measurement data into a few numbers that can easily be plotted on a map, and viewed to determine signal usability or quality. See the DSS5800 user manuals for Signal Type and Figure of Merit definitions.

The RMT507 Field Strength Meter is an integral part of DSS5800 Drive Test system. The meter has three basic measurement modes. These modes are useful in measuring and characterizing different signal types. The modes are:

1. Set Frequency, Read Meter

- Used by S5005GPS, S5006GPS, S5007GPS, S5010STR, DVS5100, and DSS5800 systems.
- One piece of measurement information (Signal) is recorded to the .dto file per record, therefore only one item to plot per record in .dto file.

2. Set Frequency, Stream

- Used by S5010STR system.
- ~230 measurements per second stream from meter to PC.
- One record written to .dto file per GPS location or user specified time or distance.
- Several statistical Figures of Merit (FOM) items to plot per record in .dto file. Min, Max, Average, Standard Deviation, and High Low Difference.
- See the S5010STR user manual for specific information about using streaming signal types.

3. Set Frequency, Sweep

- Used by DVS5100 and DSS5800 system
- 500 measurements per half second while sweeping a 5, 10, or 20 MHz band about that frequency.
- One record written to .dto file per sweep.
- Several statistical Figure of Merit (FOM) items to plot per record in .dto file. Integrated Power, Peak Power, High Low Difference, Tilt, and Standard Deviation.

- See the DSS5800 User Manual for specific information about using Swept Signal types.
 - Note: the S5007GPS system allows viewing of 5, 10 and 20 MHz band, but does not allow Figure of Merit recording. S5005GPS and S5006GPS system hardware does not have sweeping or streaming capabilities.

In addition to the Figures of Merit generated by the RMT507 the 8VSB Decoder module generates the following Figures of Merit which are also recorded in the .dto output file. Tap Energy(dB), Main Tap, Signal to Noise Ratio SNR, Mean Square Error MSE, Segment Error Rate SER, Sync Lock, and Equalizer Lock.

Each of the Figures of Merit from either the RMT507 or the 8VSB Decoder may be plotted individually.

SPECTRUM MONITOR

Select **Spectrum Monitor** from the **View** menu to view a spectrum of the measured frequency.

In Figure 8 below, the top half of the Spectrum Monitor Display shows the swept spectrum from the RMT507, the bottom half shows the Tap Display from the 8VSB decoder module. Note that the Tap display and its figures of merit are blank because the first frequency in the factory job file is an analog signal type. Analog signal types do not activate the 8VSB decoder.

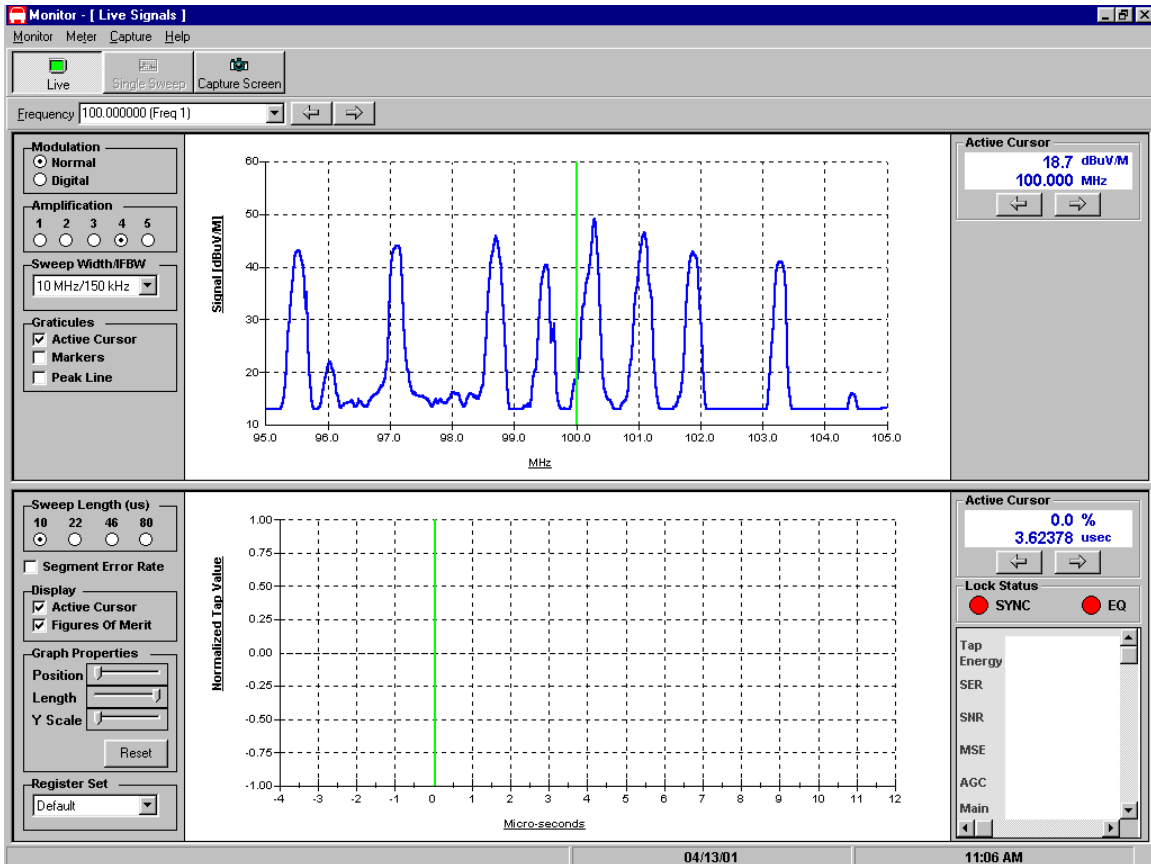


Figure 8: Spectrum Monitor Display of an Analog Signal

To view an 8VSB signal we need to create a job that uses an 8VSB signal type. Close the spectrum monitor by clicking on the **X** box in the upper right corner, then select the **Data** Tab on the main Drive Test 2 page. Click on the **New Job** button to start a new job you will see the following screens.

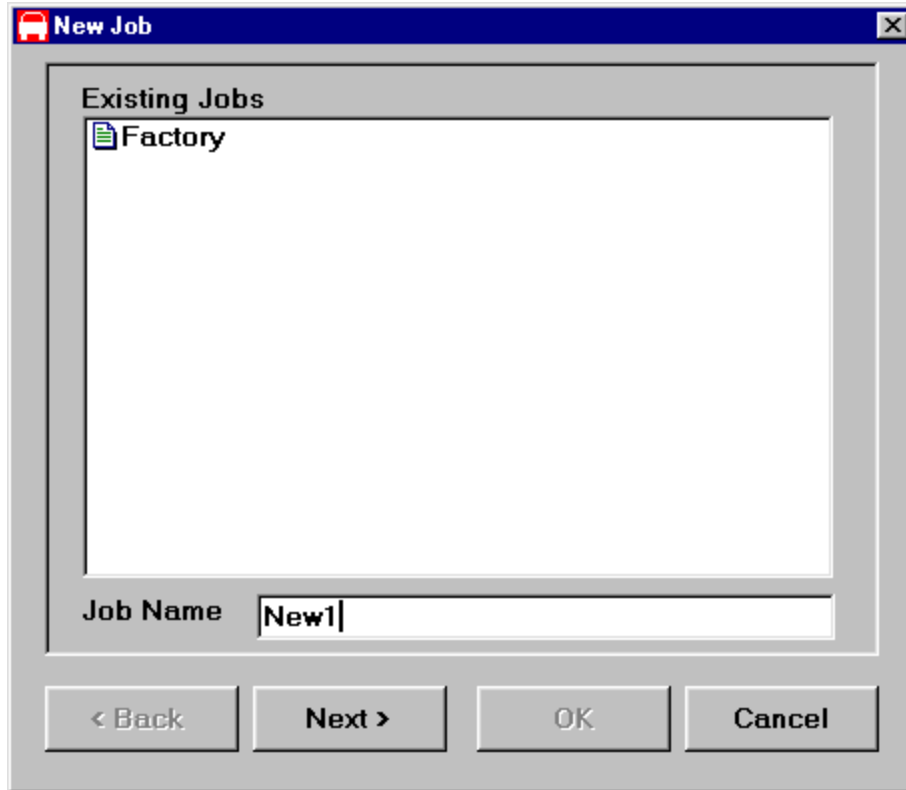


Figure 9: New Job Naming Screen

Enter a new name (here "New1" has been entered) then click **Next**

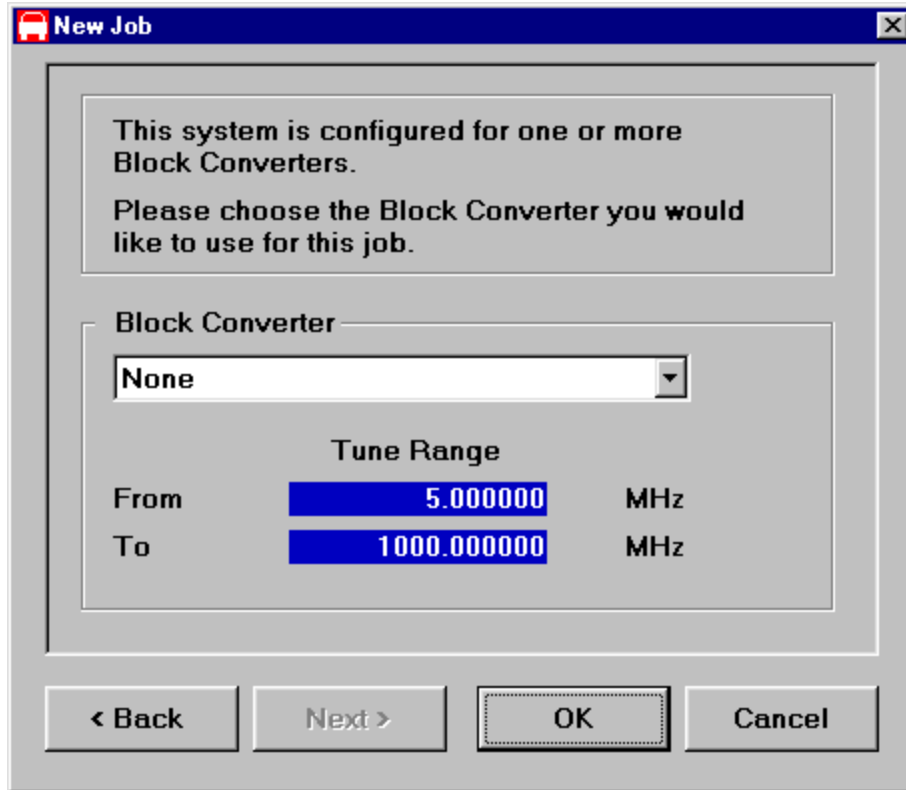


Figure 10: Block Converter Selection screen

If your system has been configured with a Block Converter this Block Converter Selection screen appears. Click the **OK** button to continue.

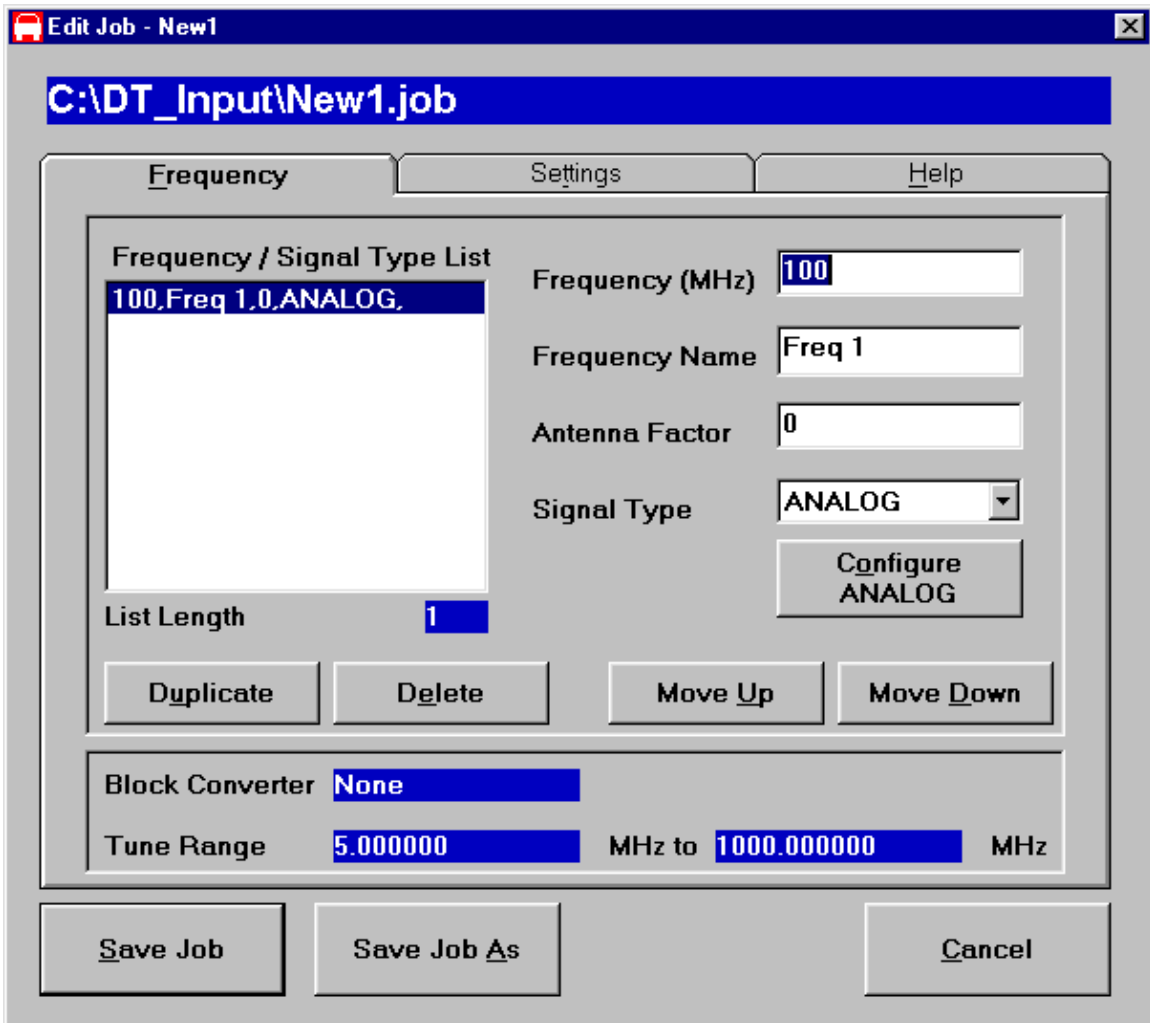


Figure 11: Job Editor screen

The new job contains one frequency in the frequency list shown on the left side of the window. The parameters listed Frequency, Frequency Name, Antenna Factor, and Signal Type can be edited in the text boxes on the right side of the window. Lets edit these text boxes and put in a frequency for a local Digital Television Channel.

- Note: To see a listing of television channel frequencies Cancel out of the Job Editor, go back to the Spectrum Monitor, and click the **LIVE** button to take out of “Live mode”, then click **Help** from the Spectrum Monitor menu, then click on **Television Channels**.

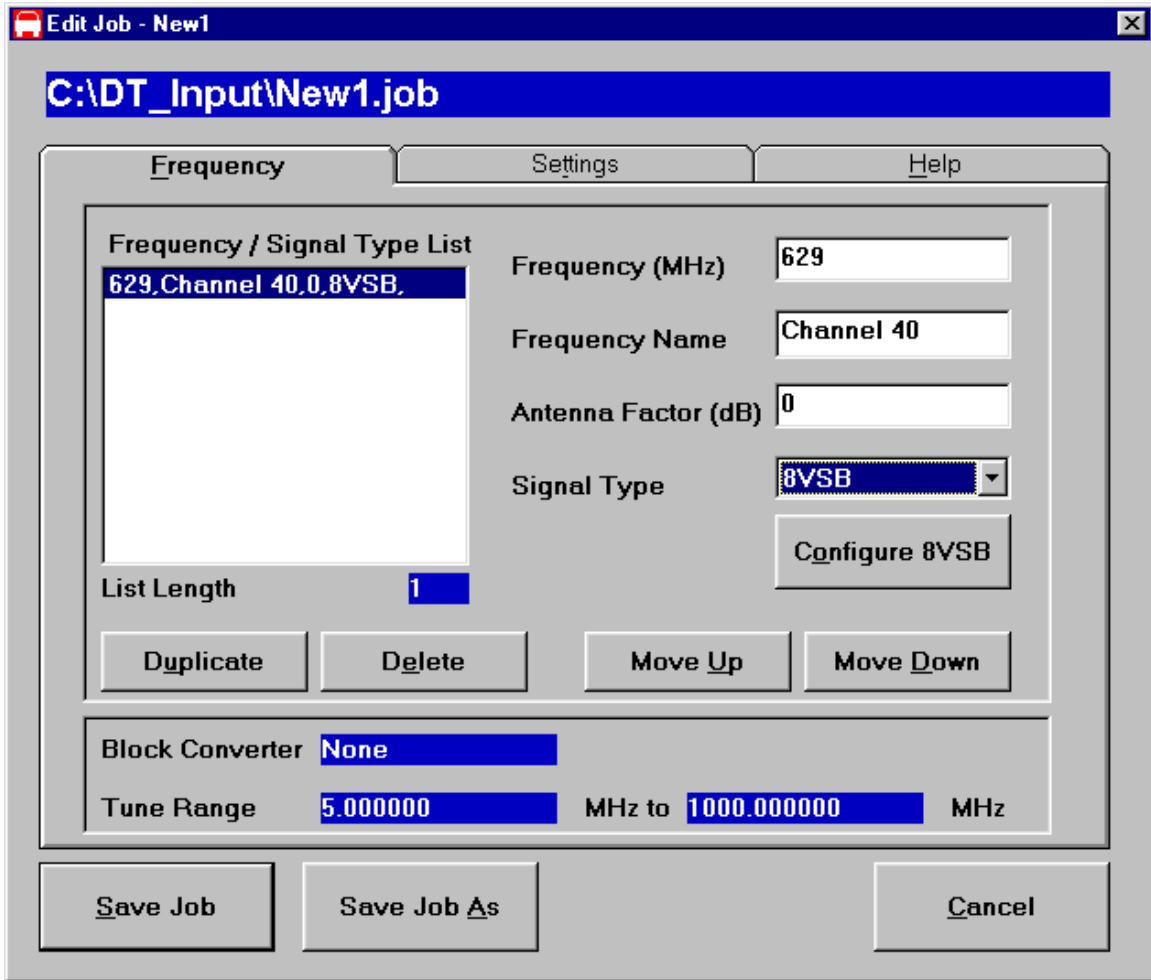


Figure 12: New Job Configured to include an 8VSB Signal Type

The job now has an 8VSB signal type included shown in Figure 12. Click the **Save Job** button, then select **Spectrum Monitor** from the **View** Menu.

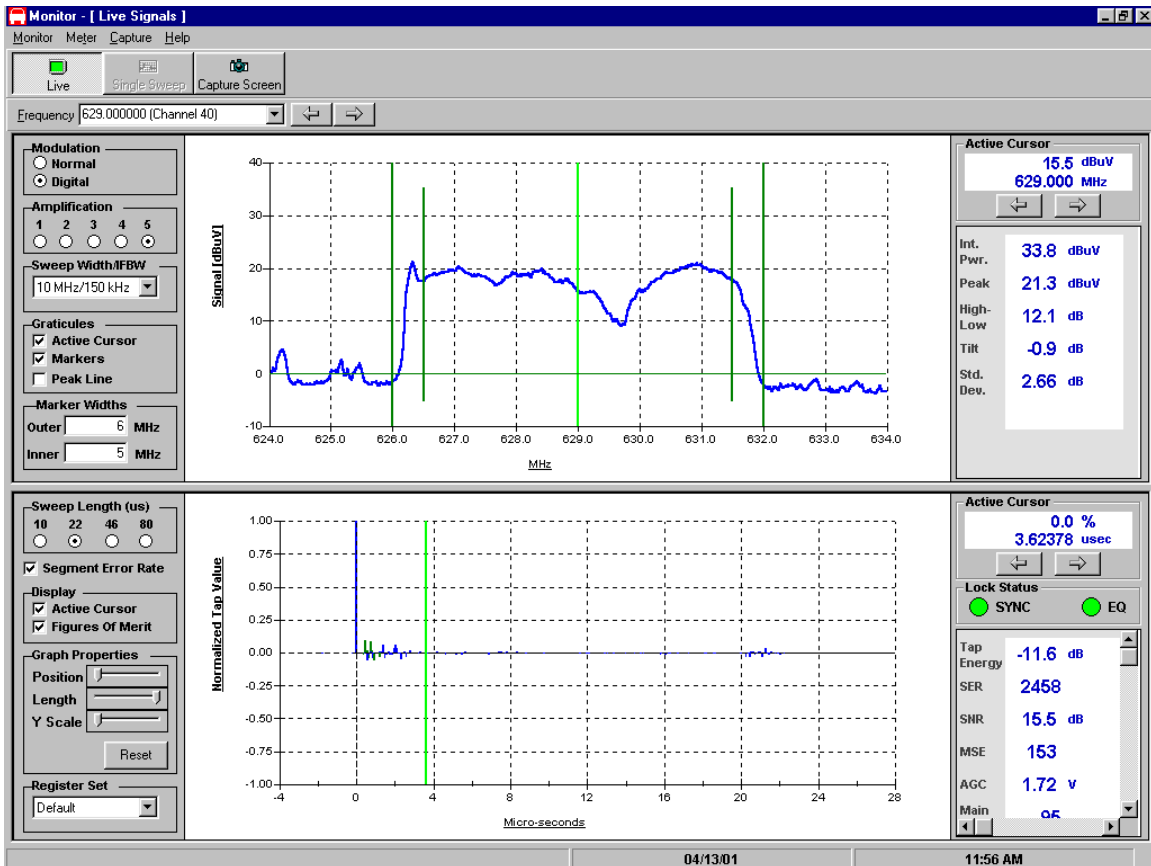


Figure 13: Spectrum Monitor of an 8VSB Signal Type

Figure 13 shows the Spectrum Monitor with an 8VSB Signal Type. The Tap display generated by the 8VSB decoder is now active, and the 8VSB decoder figures of merit are displayed on the bottom right side of the window.

- Note: Both the Sync and EQ Lock lights are green. This indicates that a DTV receiver would get a picture.

Close the Spectrum Monitor, and re-select the Factory Job from the **Job** drop down box on the main **Data** tab to continue.

EXITING DRIVE TEST 2

When the drive test is complete, exit the DRIVE TEST 2 Program by selecting EXIT from the FILE menu or clicking on the **X** box in the upper right corner. Exiting will return to the Windows Desktop.

DRIVE TEST 2 – FILE MANAGEMENT CONCEPTS

- DriveTest 2 keeps track of data by creating a directory structure on the hard disk. The concept of jobs is used. Each job has a unique name, and represents a group of user selectable meter settings and a frequency list. If Drive Test 2 doesn't find any


job files in the C:\DT_Input directory, it creates FACTORY.JOB. This file sets factory defaults, and may be used as a template to create other job files by clicking on the **Edit Job** button changing the frequency list and other settings, then clicking the **SAVE AS** button and entering an new job name.

- Each job has an input file in C:\DT_Input. With a .job extension and an output folder in C:\DT_Output. Each output folder contains one Drive Test 2 Output file (.dto extension), a datalayer (consisting of three files .dbf, .shp, and .shx extensions), a usage and error log file (.pgm extension) and a map properties file containing a list of states or countries encountered in the job (.ini extension).
- The .dto file is the master data output file. The datalayer is the information that makes up the colored dots showing measurements on the map. If datalayer files are removed from the output folder, they will automatically be recreated from the .dto file next time Drive Test 2 selects that job. Using this feature it is possible to deselect a job, remove the map layer data files, edit the .dto file to remove unwanted data records, then select that job and automatically re-create the datalayer files which updates the plots.

HELPFUL SUGGESTION

- Until familiar with the drive testing process, an operator may want to divide large area drives into several smaller driving segments. As a first step, start with a 10 minute drive segment, and work up to more extended sessions. The only limit on how long a drive session can be is determined by the amount of available disk space. 2.5 Megabytes per hour is a conservative estimate of disk space usage.
- A complete drive test can be done in as many segments as needed. Each segment is appended to the .dto output file. The factory job output file is **C:\DT_Output\Factory\Factory.dto**.
- For jobs that create datalayer files larger than 10 Megabytes, you may find that response to button clicks are sluggish, or the system starts to get behind in refreshing the map. If this occurs you may want to consider one the following options to improve responsiveness.
 1. View the Data Tab while recording measurements.
 2. Turn off the datalayer. Do this by clicking on the **Map Properties** button in the **PLOT** tab, then click the **Data** selection then uncheck the **Show** box.
 3. Start a new identical job to record data into. To do this, Click on the **Edit Job** button. Then click on the **Save As** button, Click **OK** to the message that appears. Enter an appropriate job name then click **OK**. Record data into the new job. When your job is complete you can copy the new recorded data from it's .dto file into the original job's .dto file delete the original jobs datalayer files, then select that job, DriveTest will re-create the datalayer files with all your recorded data, then your entire drive will be visible on the PLOT tab for analysis.

If you start a job and the GPS bullseye shows that you are on a bridge, an island, or on water (due to course or low resolution region/state/country boundries or outline map layers) The GPS bulleeyes may not be located within a defined region and local region (or

State) maps will not load. To manually load these maps click on the  **Load Maps**

Manually button in the Plot Tab toolbar, then click on an area of the map that is clearly within the region of maps you want to load.

START A NEW JOB

Click the **New Job** button to start a new job, enter a name for the job.

Example: Enter a new job name **New1**. A new .job input file in the DT_Input folder is automatically created. When the **Record Once** or **Record Continuous** button is clicked a new output folder and .dto output file is automatically created in the DT_Output folder. The new output path and file is **C:\DT_Output\New1\New1.dto**

TURN OFF THE SYSTEM

The computer will automatically turn off when it is shutdown. Use the normal Windows shutdown procedure. Click the **START** button, then select **Shut down**. Click the **Shut down** radio button, then Click **OK**.

The meter can be turned off by depressing the red **POWER** button on the face of the meter.

The GPS receiver will remain on until power is removed from the power inverter or the AC plug.

Drive Test 2 Export Wizard (DTEExport) and Optional Microsoft MapPoint

This product includes an Export Wizard called DTEExport (Drive Test Export) that allows Drive Test 2 data to be exported into simple columnar comma delimited text files (.txt extension) with field headings.

The user may select the fields at the time of export from a list of available fields. The fields may be exported in any user selected order. The available fields depend on the Signal Type. "Signal", all GPS parameters, and all Figure of Merit parameters are available for Export.

DTEExport was specifically designed to create data files that can be imported into spread sheets, data bases, and CAD or GIS programs.

DTEExport includes a special MapPoint format that creates data files compatible for import into Microsoft MapPoint. When the Microsoft MapPoint option is installed, a MapPoint button appears on the Drive Test 2 main tool bar and DTEExport automatically defaults to MapPoint export format.

To display measurement data on the Microsoft MapPoint map, data must first be exported from Drive Test 2 using the MapPoint format, then Imported to MapPoint.

To export data for MapPoint, click the **Export Lat, Lon** button in the Drive Test main toolbar. The first DTEExport screen shows a list of frequencies that may be exported.

Each frequency may be exported separately to a different file, all export files are automatically named and written to the jobs DT_Output folder. The name of the exported file is based on the original job name, the frequency, the frequency name, the signal type, and the export format. The export format codes are “MP” for MapPoint, “Gen” for Generic format. Example: C:\DT_Output\Factory\Factory, 100.000000,FREQ 1,ANALOG,MP.txt.

See the User manual for a more in depth explanation of the DTExport Wizard capabilities.

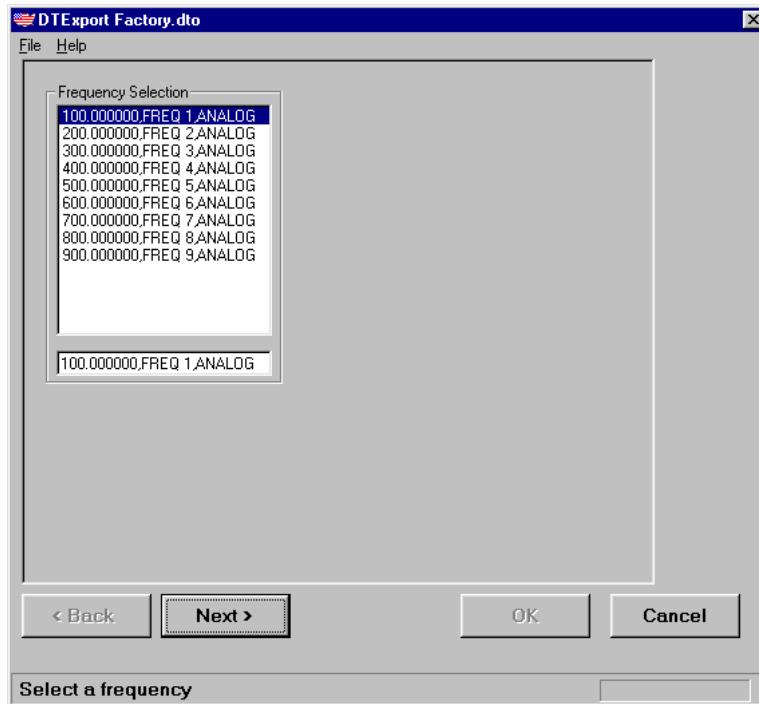


Figure 14: DTExport – Frequency selection screen

Select a frequency then click the **Next** button a new screen appears with **Latitude**, **Longitude**, and **Signal** parameters automatically loaded into the right hand **Parameters to Export** box.

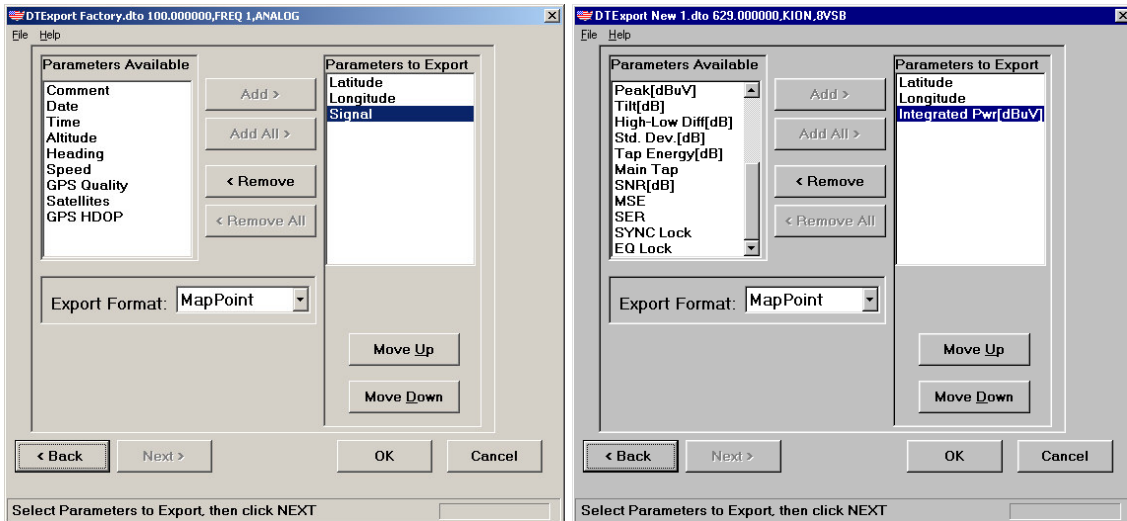


Figure 15: DTExport – Left Screen- Analog Signal Type, Right Screen 8VSB Signal Type parameters to export

- Click **OK** to advance to Complete the Export. If MapPoint is not installed, the Export format defaults to Generic. The Generic format allows the user to export in any number of fields in any order from right hand **Parameters Available** box to a columnar comma delimited text file with field headings.
- Use the Generic export format to create import files for other applications and databases.
- A completion bar follows the progress of the export. When complete the user may exit or select another frequency to export.

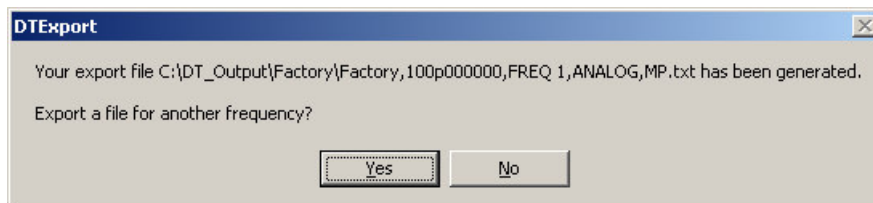


Figure 16: DTExport – Completion, Exit or select another Frequency

- Exit by clicking **N** .
- The Drive Test 2 screen re-appears.
- Click on the **MapPoint** Button.
- MapPoint starts up.
- Select **Data: Import Data Wizard** from the MapPoint main menu.

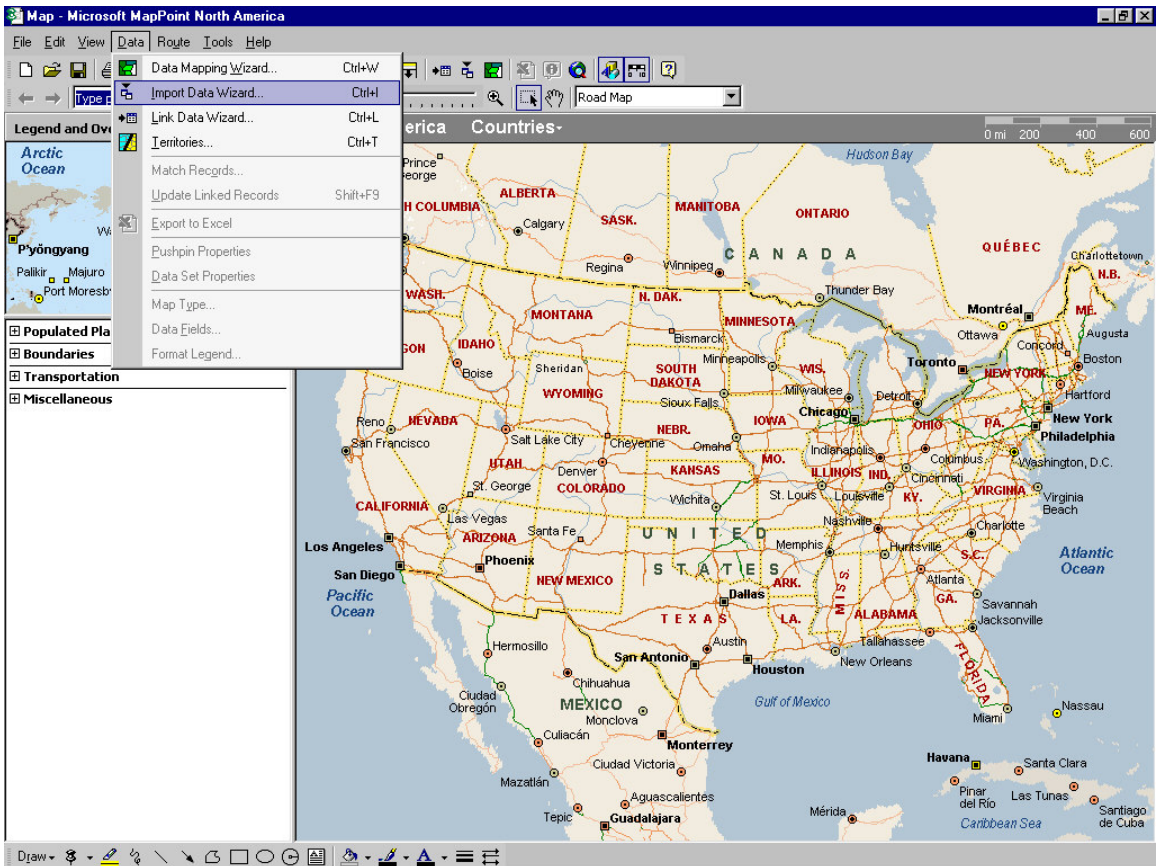


Figure 17: MapPoint – Data: Import Data Wizard Menu item

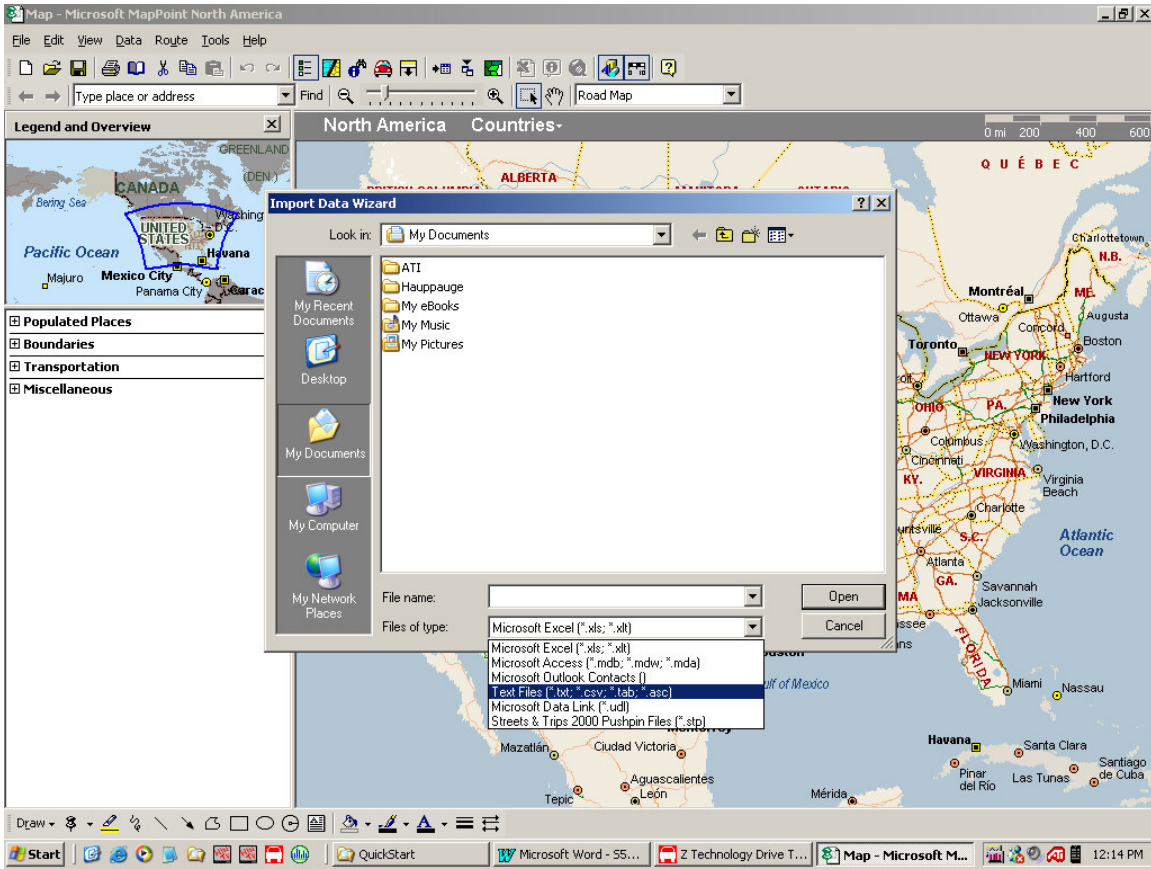


Figure 18: Import Data Wizard - .txt data file type

The MapPoint Data Import Wizard automatically displays a browse window to locate the file to be imported. Set the import file type to (.txt)

Browse to the current Job DT_output folder.

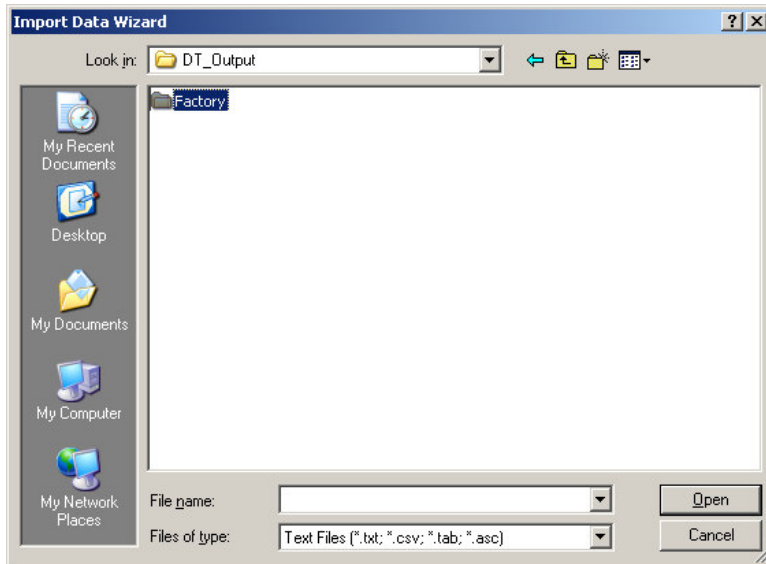


Figure 19: Import Data Wizard – Browsing to the current Job DTOutput folder

Double click on the current DTOuput Folder, in this case **Factory**. An separator character screen appears.

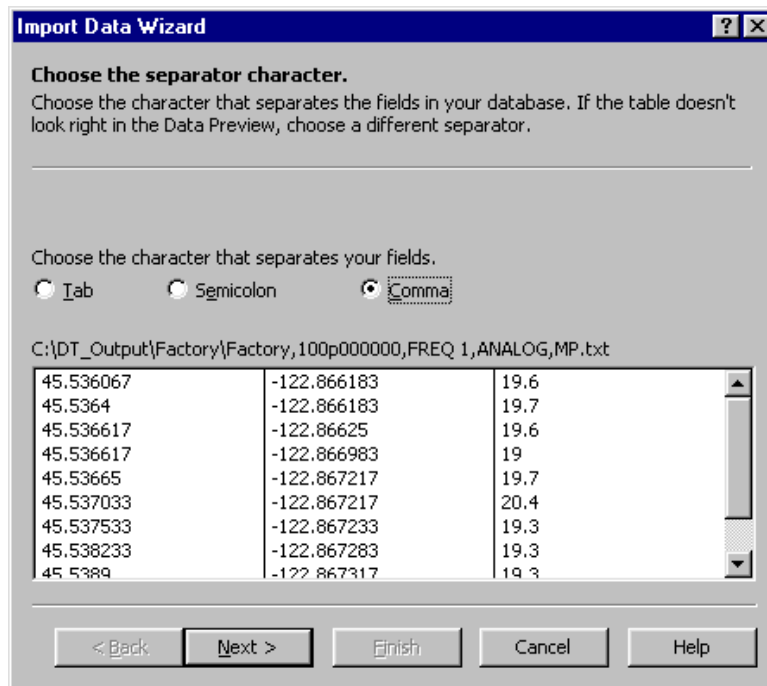


Figure 20: Import Data Wizard - choose separator character

Click **Next** to continue. Another import screen appears

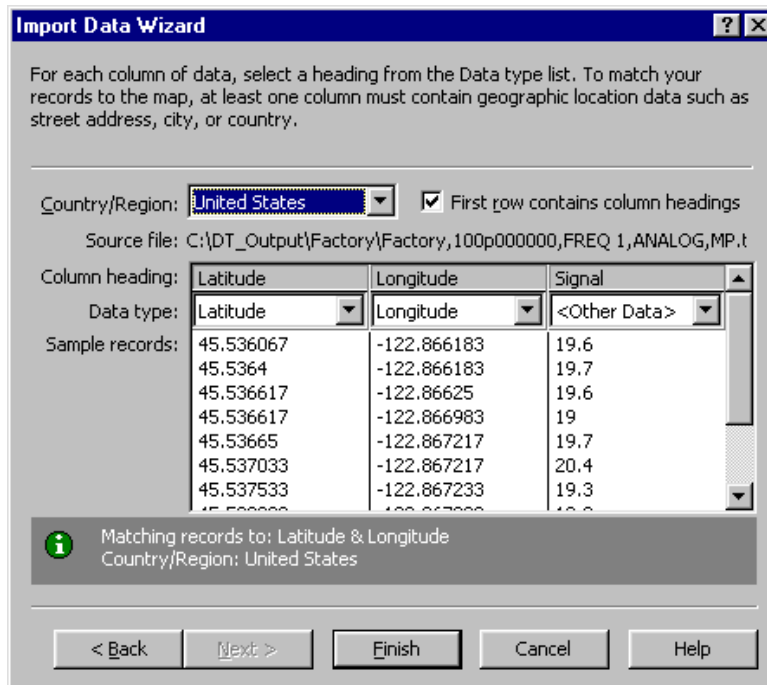


Figure 21: Import Data Wizard - Column Headings

Click **Finish** to complete importing the data. A completion bar indicates the data being imported into MapPoint. After the data has been Imported, a screen appears to query how you would like MapPoint to display the data.

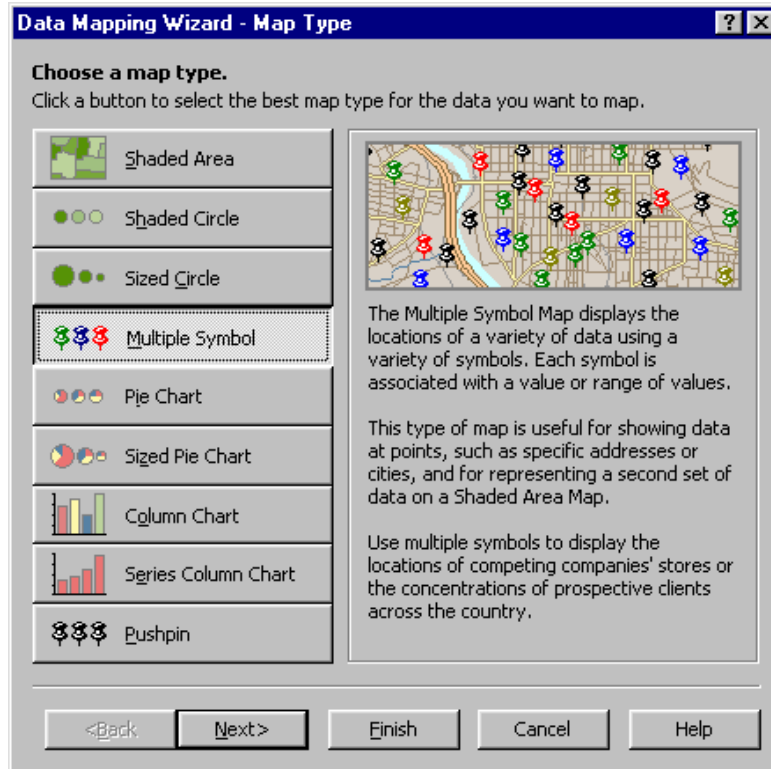


Figure 22: Data Mapping Wizard - Choosing Map Type

Select the **Multiple Symbols** button, then Click **Next**. A **Data Fields** screen appears next to display the fields to be imported.

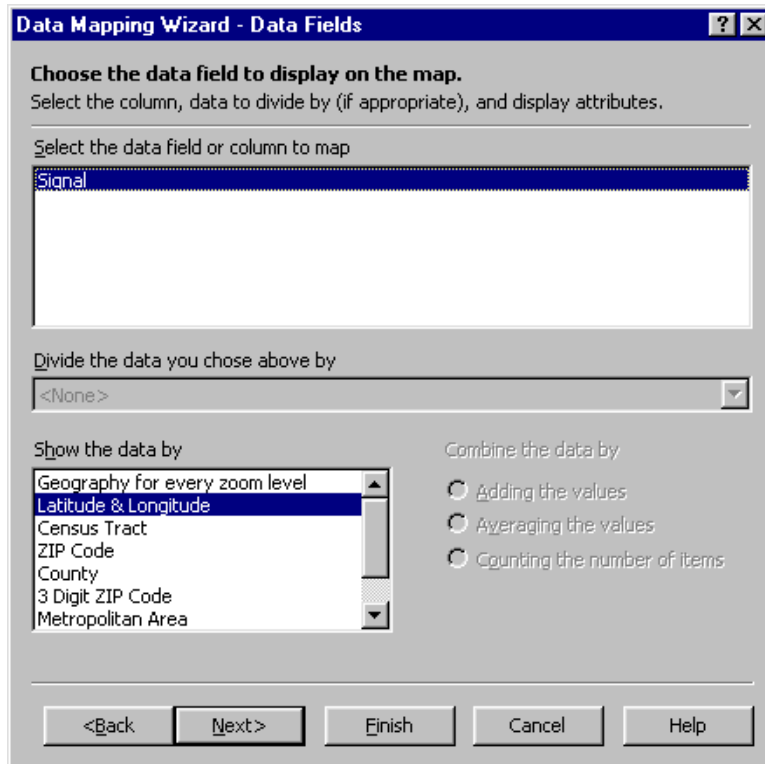


Figure 23: Data Mapping Wizard - Data Fields

Clicks **Next** to continue. A Legend screen appears.

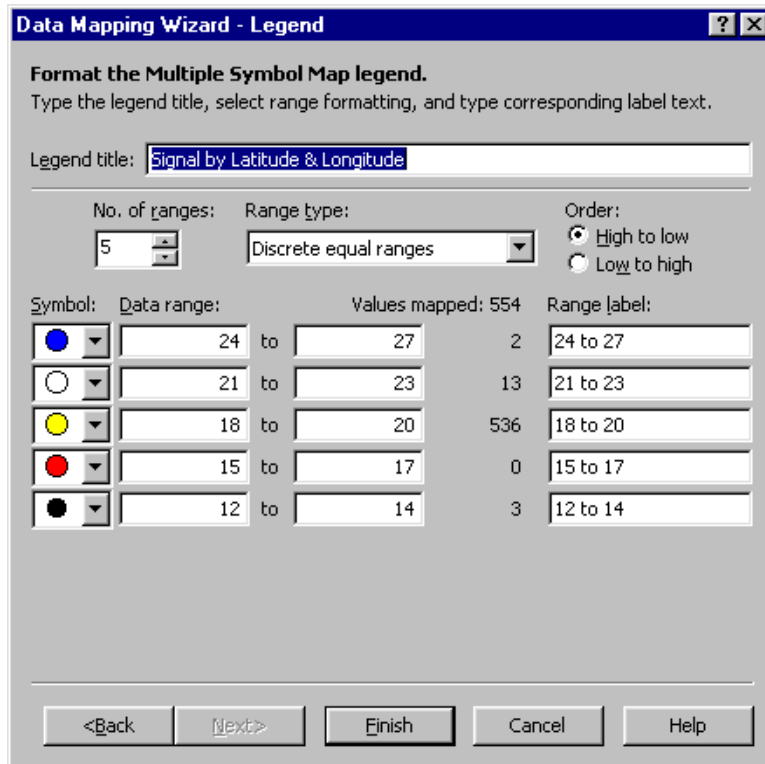


Figure 24: Data Mapping Wizard - Legend

The Legend screen allows you to change the number of ranges, the colors and how the data is plotted.

Click **Finish** to use the defaults.

Completion bars display as the data is drawn on the map.

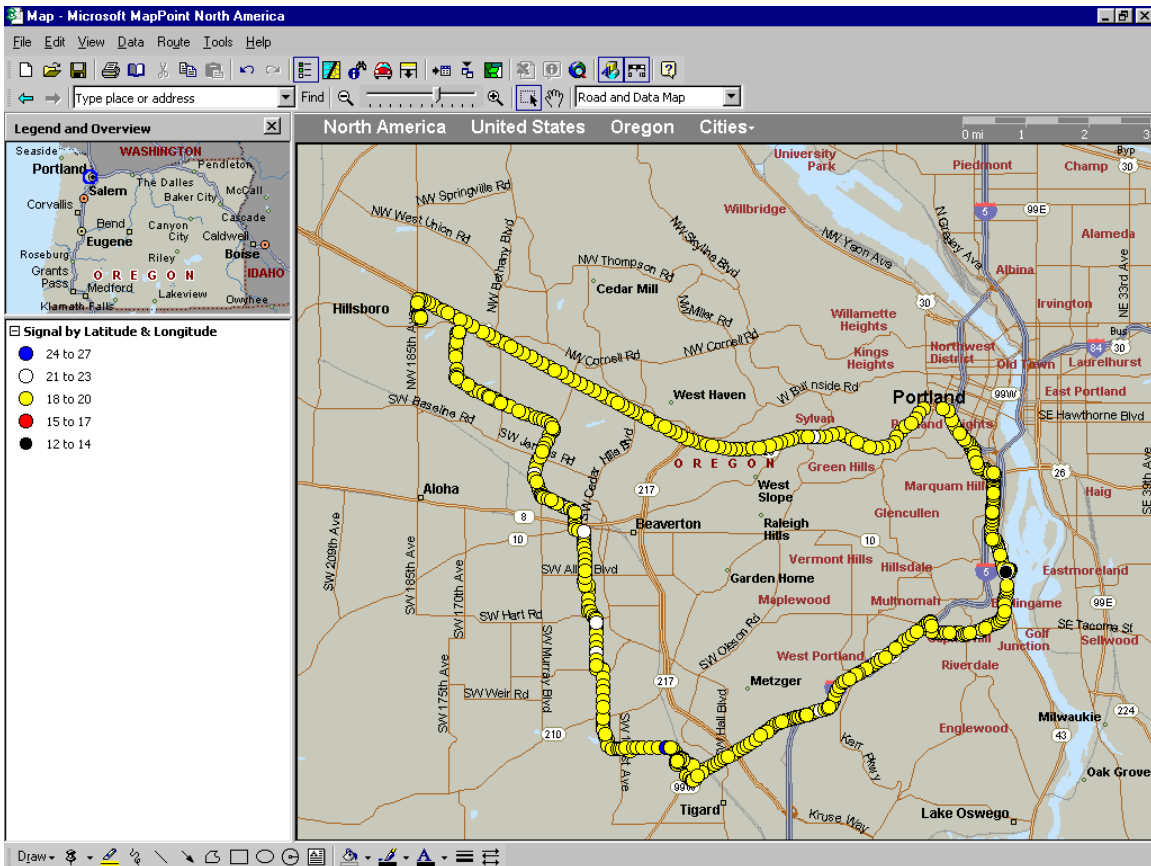


Figure 25: MapPoint displaying Imported Data

The map automatically zooms into the area of the data.

Zoom and Pan on the data, analyze as you wish using the MapPoint user interface.

When done exit the program by selecting **File: Exit** from the main menu. A Save Changes screen appears.

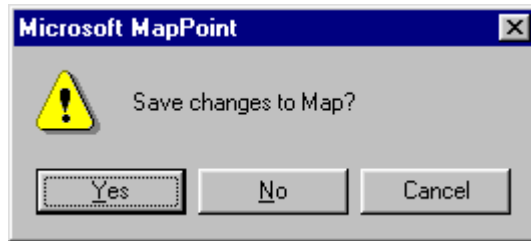


Figure 26: MapPoint – Save Changes?

If you choose **Yes**, the next time MapPoint is started it will zoom to the current position and zoom setting, and display the imported data.

If you choose **No** it will start up its previous position and zoom setting.