

LPRDS-BMS-2010

Lafayette Photovoltaic Research and Development System
Battery Management System
ECE492 – Spring 2010



Lafayette College
Electrical and Computer Engineering Department

User Manual
Preliminary Draft

Contents

- 1 System Overview 3
- 2 System Components..... 4
 - 2.1 DC Transfer Switch 4
 - 2.2 Raw Power Interface (RPI) 4
 - 2.2.1 Indicator LEDs..... 4
 - 2.2.2 Isolation Contactor/Ground Fault Detector..... 4
 - 2.3 Switch Controller (SC)..... 4
 - 2.4 Filter & Inverter Box (FIB)..... 5
 - 2.5 Energy Storage System (ESS)..... 5
 - 2.5.1 Batteries 5
 - 2.6 SCADA Interface Box (SIB) 5
 - 2.7 Transformer..... 5
- 3 Getting Started 6
 - 3.1 Normal Operation 6
 - 3.1.1 Starting Up..... 6
 - 3.1.2 Powering a Load 6
 - 3.1.3 Shutting Down 6
 - 3.2 Emergency Shutdown 6
 - 3.3 Clearing Faults 6
- 4 FAQ..... 7
 - 4.1 Calibration..... 8
- 5 Maintenance 9
 - 5.1 Battery Maintenance 9
- 6 Schematics/Drawings..... 10

1 System Overview

The Lafayette Photovoltaic Research and Development System - Battery Management System (LPRDS-BMS) is an experimental system that builds off of the work completed in 2009. It uses a photovoltaic array mounted on the roof of the Acopian Engineering Center to provide DC power for storage in a battery array and conversion to AC power by an inverter, all housed in AEC 410. A row of outlets in room AEC 400 provides power from the inverter using battery storage or a combination of PV power and batteries depending on the amount of energy required by the load. The system is monitored and controlled by the SCADA Interface Box (SIB). A safety system opens relays in the Raw Power Interface (RPI) and Switch Controller (SC) in the event of a system fault. A system shutdown can be scheduled through the SCADA system. DC power is converted into 120V 60Hz AC power through the Filter & Inverter Box (FIB).

2 System Components

This section describes all of the main components of the LPRDS-BMS.

2.1 DC Transfer Switch

The DC Transfer Switch can supply power from the PV array to the Sunny Boy inverter, the LPRDS-ETS system, or disconnect it completely. When the switch is all the way up, it provides power to the Sunny Boy, when it is all the way down it provides power to the LPRDS-ETS, and when it is in the middle both are disconnected. The switch should remain locked in position at all times, and should follow standard Lock-Out Tag-Out (LOTO) procedures.

2.2 Raw Power Interface (RPI)

The RPI provides power from the PV array to Switch Controller. It provides an isolation relay to disconnect the system from the array in the event of a fault or scheduled shutdown. LEDs on the box inform the user of the power and fault status of the RPI.

2.2.1 Indicator LEDs

The RPI system has five LEDs visible from the outside. A yellow high voltage indicator light (RPI11) signifies that there are 30V or more present within the RPI. The green system voltage indicator (RPI10) is lit whenever the RPI is providing power to the rest of the system. The red light (RPI12) is a fault indicator and is lit whenever a fault has occurred and the system is in a fault state. The small yellow light (L1) is lit when 5V power is supplied to the PCB and the small blinking yellow light (L2) blinks when the PIC is programmed and running.

2.2.2 Isolation Contactor/Ground Fault Detector

The ground fault detector (RPI04) monitors the system for the presence of a fault. It has two alarms. Alarm 2 opens the isolation contactor (RPI02) and trips the safety circuit whenever a ground fault occurs. Alarm 1 is a warning that comes on whenever the fault current reaches a percentage of the fault current level (default 50%).

2.3 Switch Controller (SC)

The SC controls the flow of power to or from the RPI, the ESS, and the FIB. A basic block diagram of the SC is shown in Figure 1:

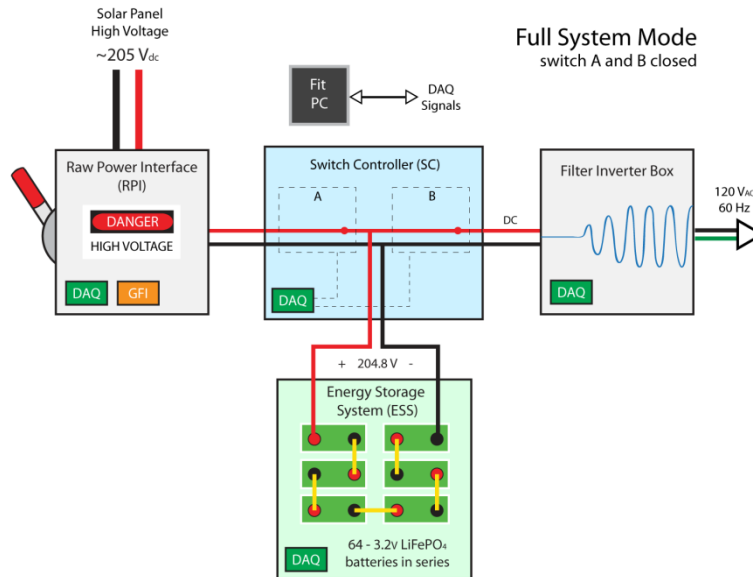


Figure 1: SC Block Diagram

2.4 Filter & Inverter Box (FIB)

The FIB converts DC power from the SC into 60Hz 120VAC using an H-Bridge and a filter.

2.5 Energy Storage System (ESS)

The ESS stores power in batteries to use in powering the system and/or the load. It can supply a total of 2KW of power to the system and load, with a maximum of 75W available for system power.

2.5.1 Batteries

The ESS uses 64 lithium iron phosphate (LiFePO₄) battery cells to store power. The batteries have a nominal voltage of 205V. They are 235V when fully charged and can be safely discharged as low as 160V.

2.6 SCADA Interface Box (SIB)

The SIB system monitors voltages, currents, and temperatures at various locations in the system. This information is monitored for any potential faults and shuts the system down if necessary. Information is stored for later viewing to monitor the performance of the system.

2.7 Transformer

The one-to-one transformer (T1) provides 120VAC to the load and isolates it from the rest of the system. It is connected to the outlet strip on the HV cabinet.

3 Getting Started

3.1 Normal Operation

3.1.1 Starting Up

Before powering the LPRDS-BMS, the system must be cleared of all faults and inspected. As stated in the safety manual (sections 2.7.4 and 3.1), if any high voltage seals are broken, the ground fault system in the RPI must be retested before resuming operation. If any seals are broken, have a qualified person retest the ground fault monitor as outlined in the maintenance manual.

The DC transfer switch should be open or providing power to the Sunny Boy and no power should be provided to the system. Make sure the emergency stop button is pulled into the out position and press the reset (R) button on the ground fault monitor to ensure it is reset.

Close the DC transfer switch by moving the switch to the lowest position to connect power to the RPI. Only the person who has locked/tagged out the system may power the system. The 30V indicator (RPI11) will light if there is 30V or more provided by the PV array, no other LEDs will change. With no load attached, there may be enough residual voltage across the relay to turn on RPI10.

-Starting up SIB/SCADA

3.1.2 Powering a Load

Designated outlets in AEC400 and the outlet in the atrium of AEC attached to a steel I beam are powered by the LPRDS-BMS. If there is not enough energy in the system to power a load, the system will disconnect itself from the load in order to recharge the batteries to a higher level. The system will automatically reconnect to power a load when there is enough power in the batteries.

3.1.3 Shutting Down

-Service shutdown

-Extended shutdown

3.2 Emergency Shutdown

The emergency shutdown button, located on the side of the high voltage cabinet, immediately trips the safety circuit and shuts down the system into a safe state when pressed.

-Resetting after an emergency shutdown

3.3 Clearing Faults

-Safety loop

-SCADA

4 FAQ

What solar panels are used and how are they installed?

The PV Array consists of 10 GEPVp-200-MS modules installed on the roof of Acopian Engineering Center. These modules are connected in a series configuration and placed at a 5 degree angle facing south. The IV curve for these panels is provided in Figure 1:

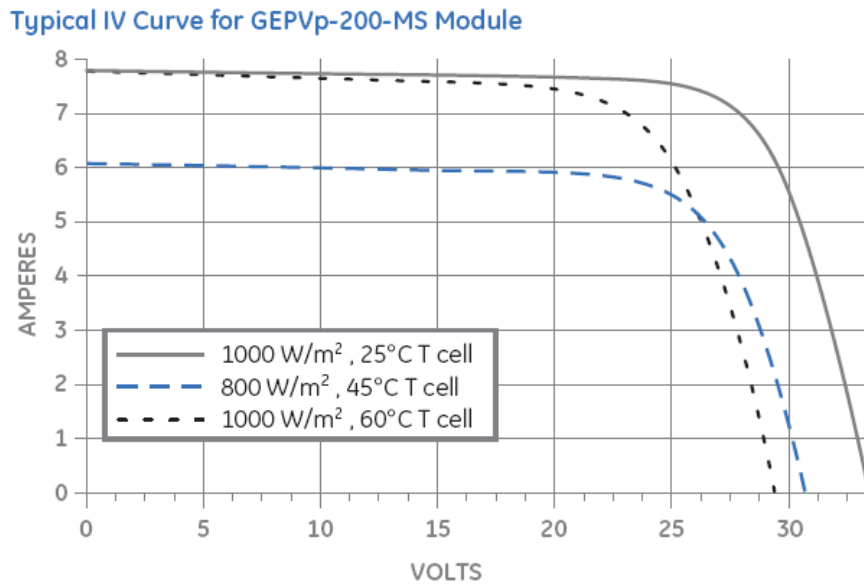


Figure 1: IV Curves for GEPVp-200-MS Solar Panels

What are the voltages of the various components of the system, such as the PV Array and the batteries?

Each PV module is capable of providing over 30V in optimal conditions; however, in nominal conditions, each panel will provide approximately 25V for a total series voltage of 250V.

64 LiFePO₄ are connected in series, each having a charged voltage of 3.2V. The batteries are connected in series in the ESS rack such that when maintenance is performed on them, only four are connected for a maximum voltage of 12.8V per cell. When operational and fully charged, the entire ESS rack provides about 205V @ 10Ah, or 2kW of power.

What is the power budget available to both the system and the load?

The LPRDS-BMS provides approximately 75W for system power (SC, SIB, etc.), and about 2kW for a load.

4.1 Calibration

The various voltage and current sensors used in the LPRDS-BMS have been characterized and compensated for offsets and non-linearities. No additional calibration is required for the system.

5 Maintenance

Refer to the Maintenance Manual for proper maintenance procedures not discussed in the User Manual.

5.1 Battery Maintenance

The batteries used in the LPRDS-BMS are Lithium Iron Phosphate Batteries (LiFePO₄). These batteries do not need periodic maintenance like Nickel Metal Hydride or Lead acid. Their chemistry is not explosive and stable even under under/over charge situations. A typical service time for LiFePO₄ is about 6-7 years or 3000 cycles, depending which comes first. If a battery is cycled once per day, it would last for over 8 years not accounting for capacity loss due to just aging (>3000 cycles).

Even if there are no specific maintenance instructions for LiFePO₄ batteries, there are a few good rules of thumb when it comes to battery conditioning and maintenance:

- Cycle the battery a few times before using for the first time
- Store in a cool dry place
- If the memory effect is a problem, cycle the battery a few times every few weeks to undo the effect
- If the batteries need to be stored for a long time unused, then store them in a cool dry place and charge the batteries before their next use to account for their self discharge.

6 Schematics/Drawings

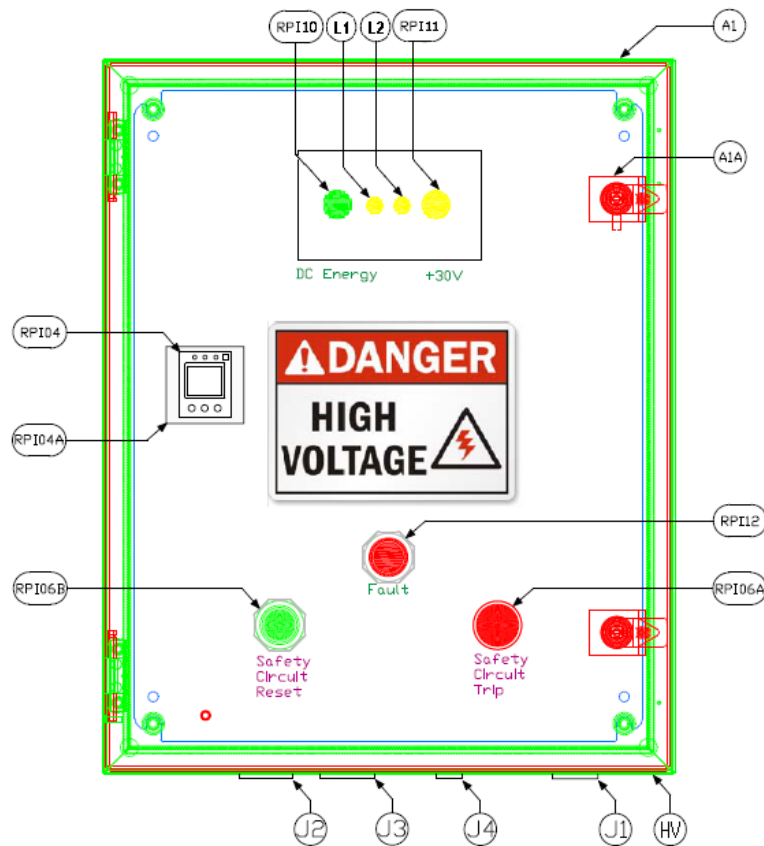


Figure 1: RPI Module

Key to designators in Figure 1:

- | | |
|--------|---|
| A1 | Enclosure |
| A1A | Thumb turn handle with key lock |
| RPI04 | Ground fault monitor - Trips the safety relay in the event of a ground fault. Alarm 2 (A12) goes off when the ground current exceeds the tripping point, Alarm 1 (A11) goes off at half this level. |
| RPI04A | Mounting frame for the ground fault monitor. |
| RPI06A | Safety circuit trip button - Trips the safety circuit. |
| RPI06B | Safety circuit reset button - Resets the safety circuit. |
| RPI10 | System power indicator - Lights when the RPI relay is closed and power is being provided to the system. |

RPI11	30V indicator - Lights when 30V or more is being supplied by the PV array.
RPI12	Fault indicator light - Lights when there is a fault and the safety relay is tripped.
L1	PCB Power light - Lit when the PCB has 5V power supplied.
L2	PIC light - Blinks to show PIC is programmed and running.
J1	High voltage output receptacle
J2	Supply voltage receptacle
J3	Safety receptacle
J4	RJ45 receptacle
HV	High voltage input