



## User and Installation Instructions

### Lynx 400 Electric Infra-Red Grill LSC and LPC

Please make a note of your product details for future use:

Date Purchased: \_\_\_\_\_

Model Number: \_\_\_\_\_

Serial Number: \_\_\_\_\_

Dealer: \_\_\_\_\_

\_\_\_\_\_

**LYNX 400**

Dear Customer,

Thank you for purchasing this **Lincat** Product.

This is just one of over 450 different items of catering equipment available from our range which is constantly being extended and improved. Details are available from your local distributor or direct from us.

Used for the purposes for which it is intended, and with careful maintenance as outlined in this user Guide, your **Lincat** product will give years of trouble free use.

## ***IMPORTANT INFORMATION***



Please read all of the safety and operating instructions carefully before using this product. Please pay particular attention to all sections of this User Guide that carry warning symbols and notices.

---



### **WARNING!**

This is a Warning symbol. This symbol is used throughout the user guide whenever there is a risk of personal injury. Ensure that these warnings are read and understood at all times.

---



### **CAUTION!**

This is a Caution symbol. This symbol is used throughout the User Guide whenever there is a risk damaging your Lincat product. Ensure that these warnings are read and understood at all times.

---

# SAFETY INSTRUCTIONS



## WARNING!

Basic safety precautions, including the following, should be followed to reduce the risk of personal injury. Make sure you have read all of these instructions before switching on the unit. Keep this User Guide in a safe place for future reference for you and your staff.



## GENERAL

Do not clean the unit with a water jet.

Do not try to modify this product.

In the interest of hygiene, you should clean the product after unpacking and ensure all plastic coatings are removed before use.

Ensure that the electrical supply cable is not damaged. If the supply cable is damaged it should be replaced by Lincat Ltd or other suitably qualified persons, in order to avoid a hazard.

Disconnect the unit from the electric supply before servicing or undertaking any electrical maintenance.

This appliance must be earthed.

# TECHNICAL SPECIFICATION

Model	LSC /LPC	
Width	mm	551
Depth	mm	302
Height	mm	328
Power Rating	watts	3000
Weight (net)	kg	13.5

# PACK CONTENTS

LSC electric infra red grill  
Grill pan  
Toast rack  
Removable reflector  
4 rubber feet  
User instructions  
Guarantee card.

LPC electric infra red grill  
Toast rack  
Removable reflector  
4 rubber feet  
User instructions  
Guarantee card.

# INSTALLATION



Push rubber feet into base holes provided and ensure that the unit is installed on a sound, level work surface, which is heat resistant e.g. stainless steel or formica. Inform your personnel that external surfaces and base will become hot.

Do not place anything on top of this unit.

For safety regulations, the plug must always be accessible.

## CONNECTING TO THE ELECTRICITY SUPPLY



Ensure that the voltage of your electricity supply corresponds to the serial plate details. The product is supplied with a 13 amp plug. To replace the plug, follow these instructions:

- green and yellow wire to 'E' or (Earth)
- blue wire to 'N' (Neutral)
- brown wire to 'L' (Live)

# OPERATING INSTRUCTIONS

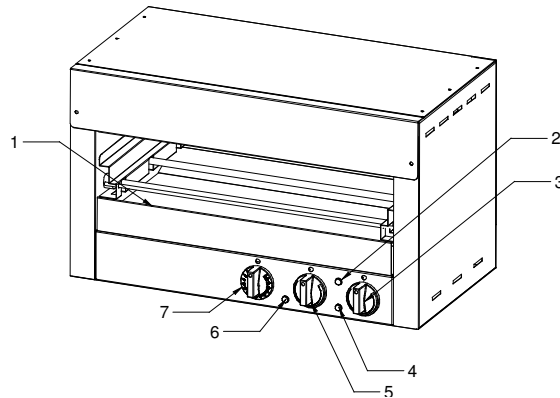


Fig 1 – Model LSC

- |                                 |                                 |
|---------------------------------|---------------------------------|
| 1 Reflector (removable)         | 5 Control knob (lower elements) |
| 2 Amber neon (upper elements)   | 6 Amber neon (lower elements)   |
| 3 Control knob (upper elements) | 7 Timer                         |
| 4 Green neon                    |                                 |

## Model LPC

- |                                 |              |
|---------------------------------|--------------|
| 1 Reflector (removable)         | 4 Green neon |
| 3 Control knob (lower elements) | 5 Timer      |

Connect the unit to the electricity supply. The green neon will light up. The timer must be turned on first for the unit to heat up.

LSC – Control to the upper and lower elements is independent using 3 and 5.

LPC – The upper elements are always on; the lower elements are controlled by 3. The control panel will look different from Fig 1.

Turn the timer to the required setting. At the end of the cooking time the heat will switch off. For constant heat, turn the timer knob to setting 'H'.

# CLEANING AND MAINTENANCE

## CLEANING



Disconnect the unit from the electricity supply and allow to cool before starting to clean. Use a mild detergent in hot water and a soft cloth. Do not use abrasive creams or scourers.

## MAINTENANCE

Regular cleaning of the unit is recommended.

Regular maintenance is not required.

## REPLACING ELEMENTS

Always disconnect unit from electric supply and ensure elements are cool.

Remove toast rack (LPC model only), grill pan and reflector (1).

To remove the element, push it sideways (left or right) against the spring.

When the opposite end of the element is clear of the ferrule (2) lower it carefully 10mm beneath the shelf support (3).



Remove the other end of the element from its ferrule (2). Remove the element from the unit with care because the element is made of glass (fragile)

To replace the element reverse the above procedure.

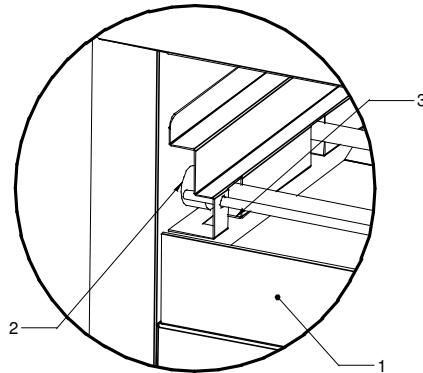


Fig 2

## SERVICE INFORMATION

For help regarding the installation, maintenance and use of your **Lincat** equipment, please contact our service department:

 01522 875520

All service work, other than routine cleaning should be carried out by one of our authorised service agents. We cannot accept responsibility for work carried out by other persons.

To ensure your service enquiry is handled as efficiently as possible, you need to have the following details available :

- **Brief details of problem**
- **Product code, type number and serial number of unit (both on serial plate)**

Lincat reserve the right to carry out any work under warranty during normal working hours, ie Monday to Friday, 08:30 a.m. – 17:00 p.m.

## GUARANTEE

**This unit carries a comprehensive UK twelve-month warranty. The guarantee is in addition to, and does not diminish your statutory or legal rights.**

**The guarantee does not cover:**

- Accidental damage, misuse (or use not in accordance with the instructions in this User Guide), or consumable items.
- Damage due to incorrect installation, modification or unauthorised service work.
- The manufacturer disclaims any liability for incidental, or consequential damages.