



# PHST80IP

Sound Tower

## OWNER'S MANUAL

Please Read the Manual First before Operation

## Table of Contents

Table of Contents .....	1
Package Contents .....	1
Safety Information .....	2
Specifications .....	2
System Connection .....	2
1. iPod Compatible	
2. Back Panel Connection	
Front Panel Function .....	3
Remote Control System .....	4
Battery Installation	
Note	
Basic Operation .....	4
Power Up the System	
Select Sleep Mode	
Master Volume Control	
How to Adjust Treble	
How to Adjust Bass	
How to Adjust SW	
How to Play AUX	
How to Play iPod/iPhone/iPad	
How to Play Tuner	
How to Adjust the Clock	
How to Adjust the Alarm	
How to Mute	
Trouble Shooting .....	6

## Package Contents

1. Owner's manual
2. Remote control
3. AC adapter
4. Main unit



# Operating Instruction

## Dear Customer:

Thank you for purchasing 2.1 channel sound tower system. We strongly recommend that you carefully study the operating instructions before attempting to operate the unit and that you note the listed safety information.

## Safety Information

1. This unit can be used only where the power supply is in accordance with the notes on the rear panel of the speaker system. It can't be used elsewhere.
2. To reduce the risk of fire or electric shock, do not expose this unit to rain or moisture.
3. When the unit is not being used, turn the unit off.
4. Do not open covers and repair by yourself. Refer all servicing to qualified personnel.
5. After turning off the unit, if you don't start the unit again in 24 hours, the time would return to the factory reset. When the unit is on, you can adjust the time, please take the operation instruction in the owner's manual for reference.

### 6. Remote Control Battery:

The button battery has been installed in the remote control. When using it for the first time, just pull out the insulation layer and the remote control will be ready to use.

 
## Specifications

1. Output Power: L/R (12W x 1), Subwoofer (26W x 1)
2. Frequency: L/R 150Hz-20KHz, Subwoofer 50Hz-280Hz
3. Drive Unit: L/R channel 3.0 inch x 2  
Subwoofer 5.0 inch
4. S/N: 85dB
5. THD: 0.1%
6. Size(DxWxH): 240mmx 290mmx 1000mm

## System Connection

 
### 1. iPod Compatible

This system can compatible with all iPods/iPhone/iPad.

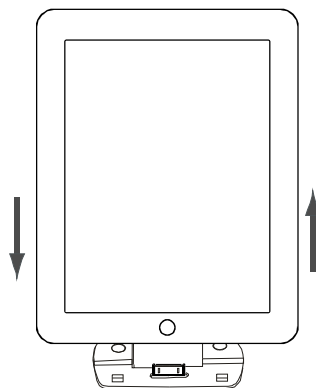

iPod		Supported iPod Features			
Model	Generation	Charging	Audio Playback	Menu Control	Video Playback
iPod	3rd,4th,4th(photo) 5th,6th(Classic)	Yes	Yes	Yes	Yes
Mini	1st, 2nd	Yes	Yes	Yes	Yes
Nano	1st, 2nd, 3rd 4th, 5th, 6th	Yes	Yes	Yes	Yes
Touch	1st, 2nd, 3rd, 4th	Yes	Yes	Yes	Yes
iPhone	1st, 2nd, 3rd, 4th	Yes	Yes	Yes	Yes
iPad	1st, 2nd	Yes	Yes	Yes	Yes

## 2. Back Panel Connection

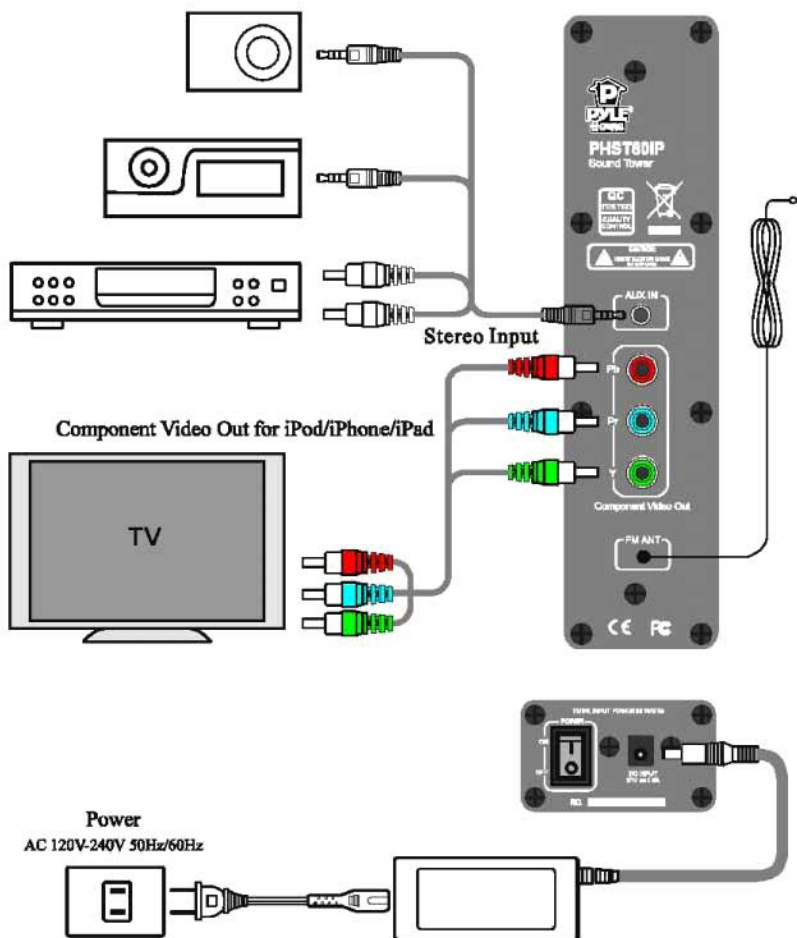 


## Front Panel Function



1. Master volume adjust selector.
2. LED display.
3. Input mode selector.
4. Sleep mode selector.

## Remote Control System

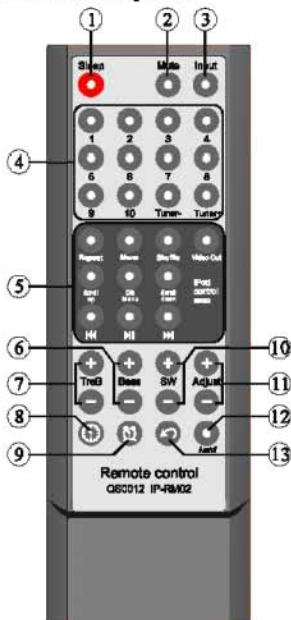

1. Sleep mode control selector
2. Mute mode control selector
3. Input mode selector(iPod, FM, AUX)
4. Tuner control area
5. iPod/iPhone/iPad control area
6. Bass volume adjust selector
7. Treble volume adjust selector
8. Clock selector
9. Alarm selector
10. SW volume adjust selector
11. Adjust settings
12. Alarm on/off selector
13. Return to the previous menu when select the clock/alarm.

### Battery Installation

Since the remote control will be used for many units to control operations, you should begin by installing the supplied battery:

1. Turn the remote control over and pull out the battery compartment cover.
2. Insert the battery according to the battery compartment.
3. Close the battery compartment cover.
4. Test the unit by pressing Mute or any mode key. If the battery is inserted correctly, the system will response to the instruction.

#### Note

- Do not leave the remote control in an extremely hot or humid place.
- Do not expose the remote sensor to direct sunlight or lighting apparatuses. Doing so may cause a malfunction.
- If you do not intend to use the remote control for an extended period of time, remove the batteries to avoid possible damage from battery leakage and corrosion.
- If you find that the remote control can be used at a normal distance to the main unit, then the battery could be weak, so you need to replace the battery with a new one.
- If battery leak, remove it immediately, and properly dispose it. Avoid touching the leaked material and splashing it to clothing, etc. Clean the battery compartment thoroughly before installing new battery.

## Basic Operation

### Power Up the System



Connect the AC adaptor and turn on the "power" in the back panel, the system will open automatically.

### Select Sleep Mode


Sleep mode allows you to make the system sleep at a selected time.

1. Press "Sleep" key or press the sleep button on the front panel to select an amount of time before the system shuts off: 5, 15, 30 minutes or off.
2. Wake up the system by pressing the same key when the system in the sleep mode.


## Master Volume Control

Press the "  " or the "  "Key on the front panel to adjust the main channel volume.


## How to Adjust Treble

Press the "  " to adjust the treble volume.



## How to Adjust Bass

Press the "  " to adjust the bass volume.

## How to Adjust SW

Press the "  " to adjust the SW volume.

## How to Play AUX

Make sure AUX lines are well-connected, Press the "  " or "  " key to choose the AUX input mode.


## How to Play iPod/iPhone/iPad


### 1. iPod/iPhone/iPad connection


Insert iPod/iPhone/iPad into the docking socket. The system will turn to "iPod" input mode automatically. When you move out of the iPod/iPhone/iPad, it will return to the previous input mode.


### 2. iPod/iPhone/iPad Control


At the middle of the remote control there is an area designed especially for iPods/iPhone/iPad player.


"  " : Controls the play and pause function of the iPod/iPhone/iPad player.

"  " : Press and hold for 2 seconds to Fast Forward or Fast Reverse.


"  " : Controls the iPod/iPhone/iPad player to play the previous or the next song.

 
"  " : Selects the previous file of the iPod/iPhone/iPad player.

 
"  " : Selects the next file of the iPod/iPhone/iPad Player.

"  " : Selects the iPod/iPhone/iPad player to return to the previous submenu.

"  " : Controls the iPod/iPhone/iPad player to enter next submenu.



"  " : Selects the repeat mode on the iPod/iPhone/iPad.

"  " : Selects the random mode on the iPod/iPhone/iPad.


"  " : Selects the iPod/iPhone/iPad "video out" on or off.

## How to Play Tuner


 




### 1. Select FM Input Mode

Press the "  " or "  " key to choose the FM input mode. The LED will display the last tuner frequency, for example: 87.5.


### 2. Listen to the Preset Program

Press the number keys "  " to select the radio program that you already saved. Once selected, screen will display the radio program's frequency in the memory area.






### 3. Select Program

Press the "  /  " key to adjust the band of tuner. Press the "  /  " key for 2 seconds, the FM will search automatically. Then you can press the "  /  " key once to stop the function.

### 4. Memory Program

When you receive a clear radio program and want to save the channel, press one of the "  " 10 number key for 2 seconds to assign that number key to that channel.

### How to Adjust the Clock



Press "  " key to enter the clock adjustment menu. Then you can adjust the hours by press "  " key. After hours setting, press "  " key to adjust the minutes, after minutes setting, you can press "  "key to confirm the setting, or Press "  " key to return the hours adjustment menu.

### How to Adjust the Alarm


#### 1. Alarm Setting

The alarm setting has the same operation as the clock setting.

#### 2. Turn on/off Alarm

After setting the alarm time, you can press "  " key to turn on or off the alarm. When the alarm is on, you also can press "  " key to turn off the alarm. Then the system will turn to last input mode.

### How to Mute

Press "  " key to turn sound off/on. Press again to restore the audio to the original level.

## Trouble Shooting

Problem	Possible Reasons/solutions
The system has no power.	<ul style="list-style-type: none"><li>• The AC adapter is connected incorrectly.</li><li>• The socket has no power.</li></ul>
No sound at all.	<ul style="list-style-type: none"><li>• Incorrect selection of input signal.</li><li>• If mute state is turned on.</li><li>• Sound source machine is not powered.</li></ul>
Either of the main channels has no sound.	<ul style="list-style-type: none"><li>• The signal plug is connected incorrectly or lines are short-circuited.</li></ul>
LED screen displays abnormally.	<ul style="list-style-type: none"><li>• It may be effected by exterior strong disturbance, turn off first and then turn on again.</li><li>• Avoid direct sunlight/heat.</li></ul>



[WWW.PYLEAUDIO.COM](http://WWW.PYLEAUDIO.COM)