

SNTP Display User Manual

Including a Powershell module for controlling the SNTP Display and the #twatch



David Moisan, N1KGH
5/14/2012

CONTENTS

Introduction	1
Flashing the SNTP Display Firmware	2
Connecting and Using the SNTP Display	3
Building the SNTP Display Firmware from Source	4
Installing and Using the PowerShell LCDDisplay Module	5
Prerequisites	5
Enable Script Execution	5
Installing the Module	5
Using The Module	6
“Hello, World” Example	6
PowerShell LCDDisplay Module Reference.....	7
Start-LCDDemo	7
SYNTAX.....	7
DESCRIPTION.....	7
Find-MCHPIPDevice	8
SYNTAX.....	8
LCD Command Code	8
DESCRIPTION.....	8
INPUTS	8
OUTPUTS.....	8
Enter-LCDmode.....	9
SYNTAX.....	9
DESCRIPTION.....	9
PARAMETERS	9
Connect-Lcd	9
SYNTAX.....	9
DESCRIPTION.....	9
PARAMETERS	9
OUTPUTS.....	9
Clear-LCD.....	10

SYNTAX.....	10
DESCRIPTION.....	10
PARAMETERS	10
Write-LCD.....	10
DESCRIPTION.....	10
SYNTAX.....	10
PARAMETERS	10
Set-LCDbacklight.....	11
SYNTAX.....	11
DESCRIPTION.....	11
PARAMETERS	11
Set-LCDbrightness.....	11
SYNTAX.....	11
DESCRIPTION.....	11
PARAMETERS	11
Set-LCDCursorstype.....	12
SYNTAX.....	12
DESCRIPTION.....	12
PARAMETERS	12
Set-LCDcustomchar.....	13
SYNTAX.....	13
DESCRIPTION.....	13
PARAMETERS	13
NOTES	13
Set-LCDhome	13
SYNTAX.....	13
DESCRIPTION.....	13
PARAMETERS	13
Set-LCDposition.....	14
SYNTAX.....	14
DESCRIPTION.....	14
PARAMETERS	14

NOTES	14
Show-NetworkonLCD	14
SYNTAX.....	14
DESCRIPTION.....	14
PARAMETERS	14
Exit-LCDMode	15
SYNTAX.....	15
DESCRIPTION.....	15
PARAMETERS	15
Close-LCD	15
SYNTAX.....	15
DESCRIPTION.....	15
PARAMETERS	15
Troubleshooting.....	16
More Information and Contacts	16
Legal Information.....	16
APPENDIX – Matrix Orbital Command Code Reference	17

INTRODUCTION

The SNTP Display Clock is a firmware replacement for the Dangerous Prototypes #Twatch project that implements a simple UTC clock based on NTP and can emulate a Matrix Orbital display that can be accessed over the network.



The SNTP Display is based on the #Twatch project by Ian Lesnet, Dangerous Prototypes and is based on the Microchip 18F67J60 microcontroller with full Ethernet support. It's connected to an HD44780-based LCD display with 4 lines of 20 characters. The original #Twatch connects to the Internet to retrieve the top-trending Twitter topics at any moment, and it also has a Matrix Orbital emulation mode to enable applications to use the LCD for display.

The SNTP Display also connects to the Internet, but instead of Twitter, it gets the time from the world-wide NTP server pool using SNTP (Simple Network Time Protocol) once every 20 minutes, and displays the time, in UTC, on the display.

The SNTP Display also supports the Matrix Orbital emulation mode, and the software distribution includes a PowerShell module that can be used in Windows to interface to the LCD.

Otherwise, no special configuration or setup is required to use the clock. You just need a #Twatch that you can burn new firmware on, and a home Internet router to connect it to.

FLASHING THE Sntp DISPLAY FIRMWARE

You need a TFTP (Trivial File Transfer Protocol) program to transfer the file. Windows, from Vista and later, has TFTP available as an optional Windows component. It's available in the Add/Remove Programs dialog; click on "Add/Remove Windows Components" and check off "Trivial File Transfer Protocol".

The network bootloader has the address 192.168.1.123. If your network doesn't use this range, you'll need to change the IP address on your NIC to match the range in the bootloader.

Power off the #Twatch and find the PGD and PGC contacts on the header on the opposite side from the Ethernet connector, and place a jumper over the contacts as shown in the picture.




Plug in the #Twatch. The LCD may show garbage or be blank and the backlight will be off.

Open a command or PowerShell prompt and navigate to the directory where you unpacked the firmware.

Enter the following command:

```
tftp 192.168.1.123 put sntpdisplayv1.hex  
Transfer successful: 163385 bytes in 6 second(s), 27230 bytes/s
```

Remove power from the #Twatch. Move the jumper so that it's between GND and PGC, as shown:

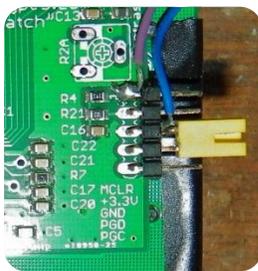


Plug the #Twatch back in. The display should light up and display the IP address and time.

CONNECTING AND USING THE SNTP DISPLAY

If you've just flashed the #Twatch, it's already connected to the Internet. Otherwise, just plug it into your network and turn it on. You'll see these displays as it starts up.




The display will show its default IP address, before it acquires a new one from DHCP.

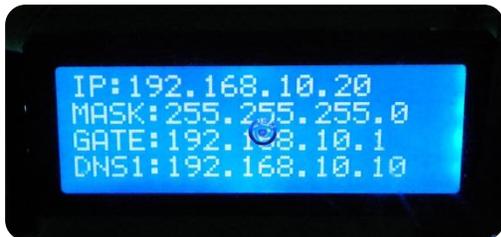

The display has gotten its address.



The clock has started but has not gotten sync from the NTP pool. The clock will always start at the Unix epoch time of January 1st, 1970, until it connects with an NTP server.

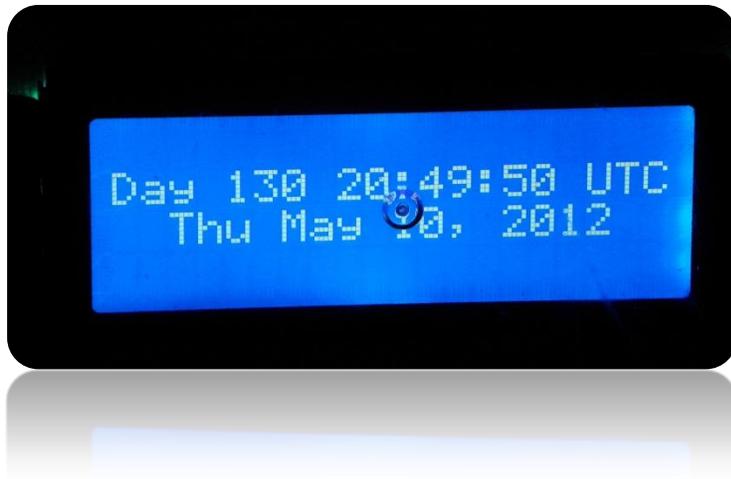

The display has now gotten the time from the NTP pool, and will keep doing so, polling for an update every 20 minutes until the device is turned off.

The time is always maintained, even during Matrix Orbital emulation mode.

BUILDING THE SNTP DISPLAY FIRMWARE FROM SOURCE

These are the prerequisites for building the firmware:

1. The MPLab IDE from Microchip.com. Click on “Development Tools” on their main page, and then click on “MPLAB IDE 8.85” on the right hand side.
2. The Microchip TCP/IP library, available via a link from Dangerous Prototypes, http://dangerousprototypes.com/docs/Twatch_networked_LCD Click on “TCP/IP 5.20b”.
3. Install the IDE and the library.
4. Copy the Source folder from the zip file and place it in a directory.
5. Find the SNTPDisplayv1.mcp file and double-click to open the IDE.
6. Select Project/Make to build it.
7. Select File/Export to open the export dialog.
8. Make sure that Program Memory and Configuration Bits boxes are checked.
9. IMPORTANT: Change the Export End address to 0x1DBBF. The network bootloader is beyond this address, and if the end address is not changed, you will overwrite the bootloader! Be very sure of this step before proceeding!
10. Follow the instructions for flashing the firmware from the SNTPDisplayV1.hex file that was just generated.

INSTALLING AND USING THE POWERSHELL LCDDISPLAY MODULE

PREREQUISITES

To use the LCDDisplay PowerShell module, you need PowerShell 2.0 on your PC. This is included by default on Windows Vista and later, and Windows Server 2008 and later. For Windows XP SP3 and Windows Server 2003, download and install the Windows Management Framework Core from Microsoft at <http://support.microsoft.com/kb/968929>.

ENABLE SCRIPT EXECUTION

If you have never used PowerShell on the particular PC you want to run the module from, you may need to enable script execution. Start PowerShell by clicking Start, Run and then enter Powershell in the dialog box. Click OK. You will see a command prompt window.

Enter this command to enable script execution:

```
PS C:\Windows\system32> set-executionpolicy unrestricted
```

Execution Policy Change

The execution policy helps protect you from scripts that you do not trust. Changing the execution policy might expose you to the security risks described in the about_Execution_Policies help topic at <http://go.microsoft.com/fwlink/?LinkID=135170>. Do you want to change the execution policy?

[Y] Yes [N] No [S] Suspend [?] Help (default is "Y"):

Enter Y to proceed. If you are on Windows Vista or Windows 7, you may get an access-denied error; in this case, hit Start, enter "PowerShell" in the search box, and right-click on the first icon that appears. Select "Run As Administrator", and Windows UAC should ask to confirm it. Click OK, or enter your admin credentials, and repeat this step.

INSTALLING THE MODULE

If you haven't already done so, unzip the source file into a temporary directory of your choice. In the ZIP file there is a folder under "PowerShell" called "LCDDisplay". Copy this folder. In your home directory, there should be a folder called "WindowsPowerShell", as in "C:\users\dauidmoisan\windowpowershell\", for example. If there isn't a folder called modules, create one. Move to the modules folder and copy the LCDDisplay folder to there.

USING THE MODULE

The module comes with a demo routine that exercises all of the functions of the #twatch. In PowerShell, enter:

```
Import-module LCDDisplay
```

This command should run without any output, meaning that the module has been loaded successfully.

Then type,

```
Start-LCDDemo
```

The demo program will run and perform all of the LCD functions.

You'll perform these basic functions to send text and formatting to the LCD:

1. Get the address of the device using `find-mchpipdevice`
2. Connect to the device and get a connection object by using `Connect-LCD`.
3. Stop the clock (or #twatch) display using `enter-lcdmode`.
4. Send text to the LCD with `write-lcd`.
5. Position the cursor with `set-lcdposition`.
6. Resume the clock (or #twatch) display using `Exit-LCDmode`.
7. Finally, close the LCD connection with `Close-LCD`.

"HELLO, WORLD" EXAMPLE

This is a simple example of the canonical "Hello, World" program implemented with the module.

```
# Hello, World Example
#
Import-module LCDDisplay -erroraction silentlycontinue

# Discover the #twatch's address.

$display = Find-MCHPIPDevice

# If not found (no #twatch), exit

If ($display -eq $null) {
    Write-error "No #twatch found!"
    Exit
}
# Otherwise, continue
Else {
    $lcd = Connect-LCD -ipaddress $display.IPAddress

    Enter-LCDMode -connection $lcd

    Clear-LCD -connection $lcd
```

```
Set-LCDPosition -connection $lcd -row 2 -column 8

Write-LCD -connection $lcd -textstring "Hello, World!"

# Pause for one minute

Sleep 60
# Exit LCD mode and reenter clock (or #twatch) mode.

Exit-LCDMode -connection $lcd

Close-LCD -connection $lcd
}
# Done!
exit
```

Details on the PowerShell functions are in the next section. To display a list of commands in the module, type:

```
Get-Command -module LCDDisplay.
```

POWERSHELL LCDDISPLAY MODULE REFERENCE

START-LCDDEMO

SYNTAX

```
Start-LCDDemo
```

DESCRIPTION

Runs a two-minute demo that shows all the functions of the LCD.

FIND-MCHPIPDEVICE

SYNTAX

Find-MCHPIPDevice

LCD COMMAND CODE

None

DESCRIPTION

Sends a broadcast packet to UDP 30303 and waits for a response from a Microchip device that uses the TCP/IP stack.

INPUTS

None

OUTPUTS

Returns one object corresponding to the first device that responds to a discovery broadcast.

Fields are as follows. All are strings.

IPAddr	IP Address of device responding
Hostname	Name of device responding
MACAddr	MAC address of device responding, in string format.
ResetReason	Reason for last reset

ENTER-LCDMODE

SYNTAX

Enter-LCDmode -connection <TcpClient>

DESCRIPTION

Sends command to enter LCD mode.

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

CONNECT-LCD

SYNTAX

Connect-Lcd -ipaddress <String> [-port <Int32>]

DESCRIPTION

Connect to an IP LCD display implementing the Matrix Orbital protocol

PARAMETERS

-ipaddress <String>

The IP address of the display. Required

-port <Int32>

The port on the display to connect with. The default port is 1337.

OUTPUTS

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

CLEAR-LCD

SYNTAX

Clear-LCD -connection <TcpClient>

DESCRIPTION

Clear LCD screen

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

WRITE-LCD

DESCRIPTION

Write a text string to LCD.

SYNTAX

Write-LCD -connection <TcpClient> -textstring <String>

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

-textstring <String>

SET-LCDBACKLIGHT

SYNTAX

```
Set-LCDbacklight -connection <TcpClient> [-light <Boolean>]
```

DESCRIPTION

Turn LCD backlight on or off

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

-light <Boolean>

\$true Backlight on

\$false Backlight off

SET-LCDBRIGHTNESS

SYNTAX

```
Set-LCDbrightness -connection <TcpClient> [-brightness] <Byte>
```

DESCRIPTION

Set brightness of the LCD.

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

-brightness <Byte>

Desired brightness

(0-255, default 255)

Note: Not implemented in #Twatch or SNTPDisplay.

SET-LCDCCURSORTYPE

SYNTAX

```
set-lcdcursortype -connection <TcpClient> [[-underline] | [-block]] [-enable <Boolean>]
```

DESCRIPTION

Enable or disable the cursor and set it to block or underline

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

-underline

Specifies underline cursor (default)

-block

Specifies block cursor.

-enable <Boolean>

Boolean value to enable or disable specified cursor.

\$true Enable cursor

\$false Disable cursor

SET-LCDCUSTOMCHAR

SYNTAX

Set-LCDcustomchar -connection <TcpClient> -charnum <Byte> -bitmap <Byte[]>

DESCRIPTION

Define LCD custom character by specifying an eight-byte bitmap and the character number to replace.

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

-charnum <Byte>

Character position to replace with custom bitmap;

Valid values are 0 through 7.

-bitmap <Byte[]>

Eight-byte bitmap array

NOTES

The character bitmap is encoded as follows:

Byte	Bitmap
0	***nnnnn
1	***nnnnn
2	***nnnnn
3	***nnnnn
4	***nnnnn
5	***nnnnn
6	***nnnnn
7	***nnnnn

* = Ignored.

Only the five least significant bits are used to compose the character--the three higher bits are ignored.

See the HD44780 data sheet for more details.

SET-LCDHOME

SYNTAX

set-lcdhome [-connection] <TcpClient> [<CommonParameters>]

DESCRIPTION

Set the LCD cursor to home position

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

SET-LCDPOSITION

SYNTAX

Set-LCDposition -connection <TcpClient> -column <Byte> -row <Byte>

DESCRIPTION

Set LCD Cursor position

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

-column <Byte>

LCD column position, 1 to 20.

-row <Byte>

LCD row position, 1 to 4

NOTES

Because displays based on the HD44780 can be, and often are, of many different sizes and dimensions, this function does not attempt to perform cursor position validation. All cursor values are passed through to the firmware without modification. The #twatch uses a 20x4 LCD.

SHOW-NETWORKONLCD

SYNTAX

Show-NetworkonLCD -connection <TcpClient>

DESCRIPTION

Display network IP, gateway and DNS information on the LCD

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

EXIT-LCDMODE

SYNTAX

```
exit-lcdmode -connection <TcpClient>
```

DESCRIPTION

Send command to exit LCD emulation mode and return to SNTP Display (or #twatch)

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

CLOSE-LCD

SYNTAX

```
close-lcd -connection <TcpClient>
```

DESCRIPTION

Close LCD connection.

PARAMETERS

-connection <TcpClient>

LCD Connection object of type System.Net.Sockets.TcpClient as returned by Connect-LCD.

TROUBLESHOOTING

The #Twatch—and the SNTP display—have almost no configurable options, so there isn't much that can go wrong. Most problems will be due to network connectivity.

If your display comes up on the UNIX January 1st epoch, and stays there for more than a few minutes, check your connectivity.

If you are using the Matrix Orbital emulation mode and the screen is blank, doesn't display text properly, or just displays junk, this is also probably a network problem.

IMPORTANT: If you are connecting your #Twatch to a managed switch, be sure to set the #Twatch port to 10 MBps half duplex, and disable Spanning Tree Protocol on the port, if you can. Otherwise, the #Twatch will miss your commands at random.

The SNTP Display should work for a long time, and will probably be obsolete long before it breaks. Enjoy the timekeeping.

MORE INFORMATION AND CONTACTS

The primary web site for the #Twatch is

http://dangerousprototypes.com/docs/Twatch_networked_LCD.

The forum is at <http://dangerousprototypes.com/forum/viewforum.php?f=17>.

Updates to the SNTP Display will be posted to my blog at <http://davidcmoisan.wordpress.com/>

Thanks to Ian Lesnet and Dangerous Prototypes for their original #Twatch design from which my project is based.

LEGAL INFORMATION

This project is based on the #twatch project (dangerousprototypes.com).

NOTE: The firmware source requires the Microchip TCP/IP stack, which is released under the Microchip license. Code written by the #twatch project is released into the public domain. The Microchip license still applies to the Microchip TCP/IP stack. Navigate this copyright and patent minefield at your own risk!

Originally written by Ian Lesnet <ian@dangerousprototypes.com>

Modified by David Moisan <dmoisan@davidmoisan.org>

To the extent possible under law, the author has waived all copyright and related or neighboring rights to this code. This work is published from the United States.

For details see: <http://creativecommons.org/publicdomain/zero/1.0/>.

This program is distributed in the hope that it will be useful, but WITHOUT ANY WARRANTY; without even the implied warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE.

APPENDIX – MATRIX ORBITAL COMMAND CODE REFERENCE

Command	Hex. Sequence	Dec. Sequence	Notes
Enter LCD Mode	0xFE 0x47 0x1 0x1	254 71 1 1	
Home Cursor	0xFE 0x48	254 72	
Cursor position	0xFE 0x47 c r	254 71 c r	c=col, r=row
Clear Screen	0xFE 0x58	254 88	
Underline cursor on	0xFE 0x4A	254 74	
Underline cursor off	0xFE 0x4B	254 75	
Block cursor on	0xFE 0x53	254 83	
Block cursor off	0xFE 0x54	254 84	
Backlight on	0xFE 0x42 dd	254 66 dd	dd=duration
Backlight off	0xFE 0x46	254 70	
Backlight brightness	0xFE 0x98 b	254 152 b	b=brightness
Custom character	0xFE 0x4E c 8b	254 78 c 8b	c=char, b8=8-byte bitmap
Network Information	0xFE 0xFD	254 251	