

Coway

Smart Extraction System
juicepresso
CJP-02
User's Manual



Enjoy the pure nature flavour with **juice**^{Smart Extraction System}presso

Make fresh juice with **juice**^{Smart Extraction System}presso in seconds.

Since **juice**^{Smart Extraction System}presso extracts juice keeping the original ingredient with its newly developed patent technology, you will enjoy the healthy and vigorous taste of juice.

For your safety and proper use of the **juice**^{Smart Extraction System}presso , please read this User's Manual before use.

Contents

2 *page*
Safety Precautions

4 *page*
Product Components

6 *page*
Assembly instruction

8 *page*
How to use **juicepresso** Smart Extraction System

9 *page*
Helpful Tips for your
juicepresso Smart Extraction System

10 *page*
How to disassemble
and clean

11 *page*
Cleaning Tips

12 *page*
Troubleshooting

13 *page*
Product specification

Safety Precautions

For safety and proper use, please read every caution tips thoroughly before using the product.

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Please do not force pull or push in the electrical plug, make sure the plug is distant from any heat source and is not bent or twisted in anyway.

a. Not doing so may cause fire damage and possible electricution.

When squeezing screw is stuck and does not spin, please turn off the machine and put in reverse for 2-3 seconds.

a. Not doing so may cause overheating which can lead to motor failure.

Please do not disassemble or move the machine while operating.

a. Not doing so may cause product damage.

Please do not plug or unplug electrical outlet with wet hands.

a. Can cause electricution.

Please do not put anything other than what is mentioned in the user's manual into product's openings.

a. Not doing so may cause physical damage, fire, or electricution.

Please do not use when electrical cord or plug is lose or damaged.

a. Not doing so may cause fire hazard or electricution.
b. Please consult to professional service technition.

Product is 17.2 lb, please use both hands when picking up the machine.

a. Not doing so may cause physical damage.

Please do not use anything other than 220 - 240 V.

a. Not doing so may cause fire damage and possible electricution.

Please do not clean product with running water, when the product is wet; stop operating and request service to your purchased store or to toll free customer service number.

a. Not doing so may cause product damage.

Please do not disassemble the machine while operating nor put anything into juice or pulp vent while operating.

a. Not doing so may lead to product damage.

Please keep the product away from children's reach.

a. Mishandling or dropping the machine may cause product failure.

| Carry the product with both hands.

- Otherwise, physical damage may occur due to product's weight.

| Please do not operate the machine when Hopper is disassembled.

- Otherwise, the product damage may occur.

| Use the pusher, not fingers or utensils, to propel the food into the juicer.

| Do not use the product longer than 20 minutes, excessive use can cause overheating which can lead to motor failure.

| Please open all windows and doors for air ventilation when the product is exposed to gas.

| Operate the product on a flat and steady surface.

- Otherwise, the product malfunction or damage may occur.

| In case of any unusual odor, heat, or smoke, stop operating immediately and contact the nearest purchased store, retail centre or the service centre.

| Do not drop or give impact to product.

- Otherwise, the product damage or fire may occur.

| Please contact the customer service centre for technical difficulties. Do not customize or upgrade machine without professional supervision.

| Please plug in electrical plug properly.

a. Not doing so may cause fire damage.

| Do not use the appliance if the rotating sieve is damaged.

| If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

 
| Do not attempt to repair or modify a defective power cord by yourself. Contact a service centre to replace the power cord by qualified electrician.

| Children should be supervised to ensure that they do not play with the appliance.

| Do not run the product run without fruit or vegetables inside drum. Otherwise, main parts may get damaged.

Product Components



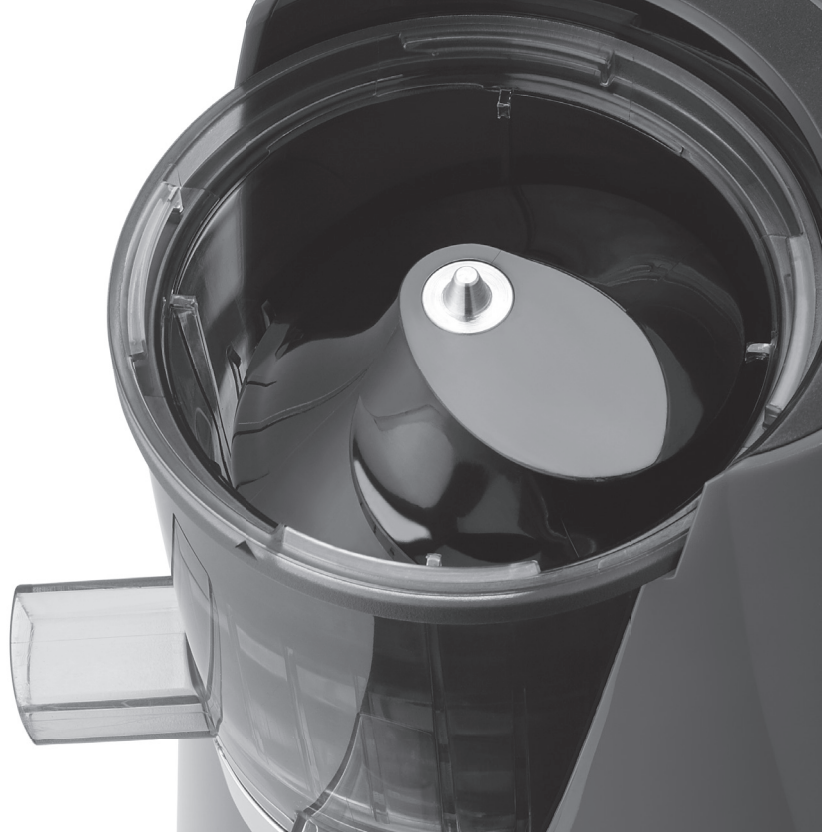

Assembly instruction



1. Assemble the drum on the Main Body.

- ① Make sure the drum all the way into the shaft of the main body.
- ② Twist the drum to close.

2. Place and push the squeezing screw into the centre of the drum.


3. Assemble the hopper onto the Drum.

- ① Make sure the arrow on the hopper points to close arrow on the main body.
- ② Turn the hopper clockwise until it clicks into the drum.



Reverse the steps carefully when disassembling.

IMPORTANT

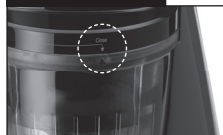

For proper operation, 'close arrow' sign on the hopper should be aligned with triangle dot on the drum.

Assembly instruction(cont.)



Place and use the appliance on a dry, stable, level, and horizontal surface.

Connect the power cord.

Place container under each ejections (Juice/Pulp ejections).

How to use **juice**presso

Smart Extraction System



3 Operational buttons

- ▶ “ON” activates the motor and starts making juice.
- ▶ “REV” means reverse operation. Use this button when something is stuck. It will remove the clogged material.
- ▶ “OFF” stops the operation. Place the button at the centre to turn off the product.



Rinse every fruit or vegetables thoroughly before putting them into the machine.

After rinsing, put material into the machine using the pusher. Remove any hard seeds before making juice.

When juicing fruit or vegetable over 2.2 lb at once, the pulp may be blended in the juice. We recommend not to juice the ingredients over 2.2 lb at once.

Insert juicy ingredients slowly into the drum (ex. pear, apple, etc.).



**Turn off the machine after juicing.
Touch the power button with dry hands.**



Warning

Refrigerate the unused leftover juice.
Do not operate the product with wet hands.
Do not operate the product with empty drum.

Helpful Tips for your **juicepresso** Smart Extraction System



Do not use the product longer than 20 minutes.

Otherwise, the serious product damage may occur.



Remove any hard seeds from fruit or vegetables.

Otherwise, the serious product damage especially on the screw may occur.



Do not use any utensils other than the pusher.


Otherwise, the serious product damage may occur.



Do not operate the product with wet hands.

Otherwise, the serious injuries or electrocution may occur.

When the machine is inoperable, follow the next steps.

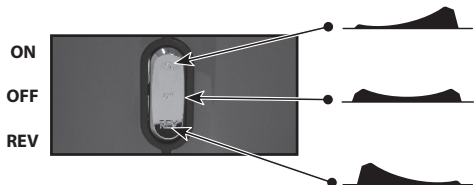

1. Turn off the machine.
2. Run the product in “REV” mode for a few seconds.
3. Operate the product again.
4. If “REV” mode is inoperable, turn off and disassemble the product. Then, reassemble the product by instructions.
5. Activate the product again.



The power button should be completely dried before the product operation.

How to disassemble and clean

- 1** Turn machine "OFF".



Grab and twist the hopper holding two ejections to unlock. Make sure the arrow is aligned with the open sign before pulling off the drum.



Disassembly order

- ① Hopper
- ② Squeezing Screw
- ③ Drum



Use the brush to clean the squeezing screw thoroughly after operating.



Use smooth and wet towel for cleaning.

Do not use dishwasher or high-temperature cleaner for cleaning.



- 5** Do not rinse the main body under running water. Clean the main body with dry or wet towel.

- 6** Dry all the product parts after cleaning.



Do not dry the product parts with heating appliance.

Cleaning Tips

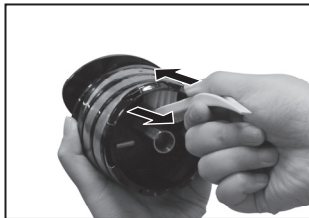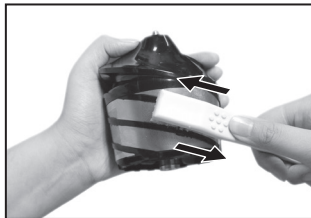

Clean the inside and outside of squeezing screw with enclosed brush.



Rinse the squeezing screw under running water after cleaning with brush. To do so, the remaining pulp may be washed out.



Pull out the rubber pad gently.



Push in the rubber pad gently in its place.

You can also clean the inside of the squeezing screw after detaching the rubber pad. To do so, more hygiene is guaranteed.



- 1) Do not use detergents that contain organic solvents (solvent, thinner, etc), bleach, chlorine, benzene or abrasives.
- 2) Do not keep the product without cleaning after use. Clean the product before storage.
- 3) Remove pulp immediately in 5 minutes when you are done juicing.

Troubleshooting

Users might improperly operate the product due to their unfamiliarity with how to use the product. Check the following items to resolve such issues. If issues cannot be resolved using these procedures, please contact the service centre.

Problem	Check	Possible Solutions	Problem	Check	Possible Solutions
The product is not working.	• Is the power cord connected?	Check whether the power cord is plugged into a 220 to 240 V - AC, 50/60 Hz wall outlet.	The Drum cover is too hard to open.	• How did you open the Drum cover?	Press the REV button and open the Drum toward "OPEN". * Check directions when opening the drum.
	• Is the Juicepresso assembled correctly?	Assemble the product as described in this user's manual (refer to p. 7~8).	The product stops while in operation.	• Did you force food into the juicer?	Do not insert too much ingredients.
	• Has the power gone off?	Assemble the product as described in this user's manual (refer to p. 7~8).		• Did you put the ingredients with hard seeds?	Press the REV button for 2 to 3 seconds and then press the ON button again. * After following the step above, if the Squeezing Screw does not rotate, stop using the product. Turn off the product, disassemble and clean it. Then reassemble and use your Juicepresso again.
	• Have you operated the Juicepresso for over 20 minutes?	Turn off the product. Wait for a while and reactivate the product. If you want to use the product continuously, pause the operation for 1 hour.			
The juice is too thick or thin.	• Did you assemble the rubber pad correctly?	Assemble the rubber pad as described in this user's manual (refer to p. 9 'Assemble the rubber pad after cleaning').	The motor is running with loud noise and shaking.	• Did you check that all parts are assembled properly and in correct position?	If the product is assembled properly, it is normal to make noise in juicing from overripe fruit and vegetables. Turn the product off and clean the receptacle.
	• Did you use fresh ingredients?	Overripe fruits or vegetables may clog in the motor. If you want to use the overripe ingredients, use them after soaking in mineral water for 10 minutes or more.	The receptacle is vibrating in use.	• This is normal to make juice. If the product overheats, contact the local service centre.	
	• Did you put too many ingredients or anything else into the machine?	Do not put too many ingredients or any liquids into the machine. We recommend you to clean the machine after 1 kg of juicing. Disassemble the Drum and wash it.			

Product specification



Specification

Product Name		Juicepresso
Model Name		CJP-02
Voltage		220 V - 240 V~
Frequency		50 Hz
Power Consumption		150 W
RPM		40 Rpm (at 20N.M)
Electrical cord length		3.93 ft
Motor		DC Motor
Weight		17.2 lbs
Dimensions	Width	9.84 in
	Length	8.54 in
	Height	16.57 in
Standard usage time		Less than 20 minutes continuously

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- To protect against risk of electrical shock, do not put the motor base in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use, before putting on or taking off parts and before cleaning.
- Avoid contact with moving parts.
- DO NOT operate any appliances with a damaged cord or plug, or after the appliance malfunctions or is dropped or damaged in any manner.
- Return appliance to the nearest authorized service facility for examination, repair or electrical adjustment.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- DO NOT use outdoors.
- DO NOT let cord hang over edge of table counter, or touch hot surfaces.
- DO NOT place on or near a hot gas or electric burner or in a heated oven.
- DO NOT use appliance for other than intended use.
- Be sure to switch to off position after each use of your juicer.
- DO NOT put your fingers or other objects into the juicer opening while it is in operation. If food becomes lodged in the opening, use the plunger or another piece of fruit to push it down. When this method is not possible, turn the motor off and disassemble juicer to remove the remaining food.
- DO NOT plug in until familiar with all the instructions and operating procedures.
- DO NOT unplug from electrical outlet by pulling on the cord. To unplug, grasp the plug, not the cord, and pull.
- Turn off all controls before unplugging from or plugging into an electrical outlet.

WARNING: This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

SAVE THESE INSTRUCTIONS.

Coway

juicepresso
Smart Extraction System
CJP-02

Customer Service: <http://www.juicepresso.com>