

GOLDAIR



Operating Instructions

Platinum Series Ceramic Wall Heater



Models: GPCW100

General Care and Safety Guide

Thank you for choosing a Goldair Platinum Ceramic Fan Heater. This Goldair Heater has been designed and manufactured to high standards of engineering and with proper use and care, as described in this leaflet, will give you years of useful service. Please read these instructions carefully.

1. Use only the voltage specified on the rating label of the appliance.
2. Keep all objects at least 1 metre from the front, sides and rear of the appliance. Do not place appliance close to radiant heat source.
3. Do not operate in areas where petrol, paint or other flammable liquids are used or stored.
4. Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance. Do not sit on the appliance.
5. Do not operate this appliance with a damaged cord, plug or after the appliance malfunctions or has been dropped or damaged in any manner. Return to a qualified electrical person for examination, electrical service or repair.
6. This appliance is intended for household use only and not for commercial or industrial use.
7. Use this appliance only as described in this manual. Any other use is not recommended by the manufacturer and may cause fire, electrical shock or injury.
8. The common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by unplugging the appliance and vacuum cleaning the air vents and grills.
9. Do not use abrasive cleaning products on this appliance. Clean with a damp cloth (not wet) rinsed in hot soapy water only. Always remove plug from the mains supply before cleaning.
10. Do not connect the appliance to mains supply until completely assembled and adjusted.
11. Switch off and use handle provided when moving.
12. Do not operate with cord set coiled up as a heat build up is likely, which could be sufficient to become a hazard.
13. It is recommended that this heater is plugged directly into the wall socket. Power boards are not rated to supply power to high wattage appliances.
14. A correctly specified, undamaged extension cord may be used with this heater provided it is used in a safe manner.
15. Do not remove plug from power socket until the appliance has been switched off.
16. Do not remove plug from power socket by pulling cord; always grip plug.
17. Always unplug appliance when not in use.
18. Do not locate the heater directly below any power socket during operation.
19. Do not twist, kink or wrap the cord around the appliance, as this may cause the insulation to weaken and split. Always ensure that all cord has been removed from any cord storage area and is unrolled before use.
20. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the appliance by a person responsible for their safety.
21. Do not use this appliance in the immediate surrounds of a bath, a shower, or a swimming pool or other liquids. The appliance must not be immersed in any liquids.
22. When the appliance has been unpacked, check if for transport damage and ensure all parts have been delivered. If parts are missing or the appliance has been damaged, contact the Goldair Customer Services Team.
23. If your appliance does not work, or is not working properly, contact the place of purchase or the Goldair Customer Services Team. Repair work on the appliance by unqualified persons can cause serious risk to the user.
24. There are no user serviceable parts installed in the unit.
25. Do not place the unit in wardrobes or other enclosed spaces as this may cause fire hazards.
26. This unit is not supposed to be used in or around locations where foodstuffs, works of art or delicate articles of science, etc are stored.
27. Indoor use only.
28. Children should be supervised to ensure that they do not play with the appliance.
29. Ensure heater is on a flat, stable, heat-resistant surface.
30. It is important that you do not cover this heater.

 
TECHNICAL SPECIFICATION

Model No: GPCW100
Supply: 220-240VAC 50Hz
Wattage: 2000W

Components


COMPONENTS

1. Main Body
2. LED Display
3. Remote Control Compartment
4. Temperature Display Panel
5. Louver
6. Power Switch

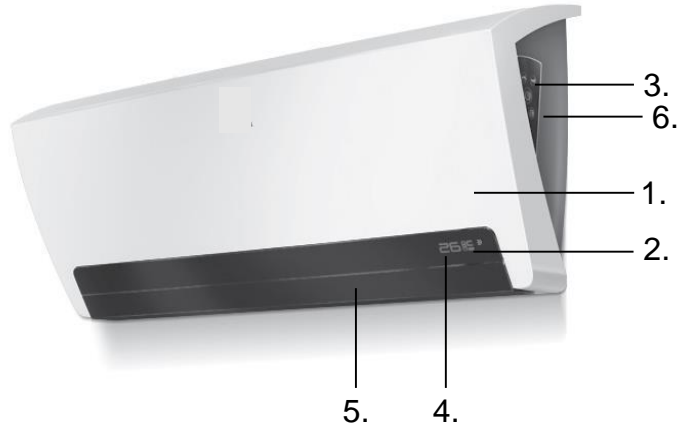

REMOTE CONTROL

 1. Power Button (ON/OFF)
2. Timer Button
3. Mode Selection Button
4. Increase Time/Temperature
5. Decrease Time/Temperature

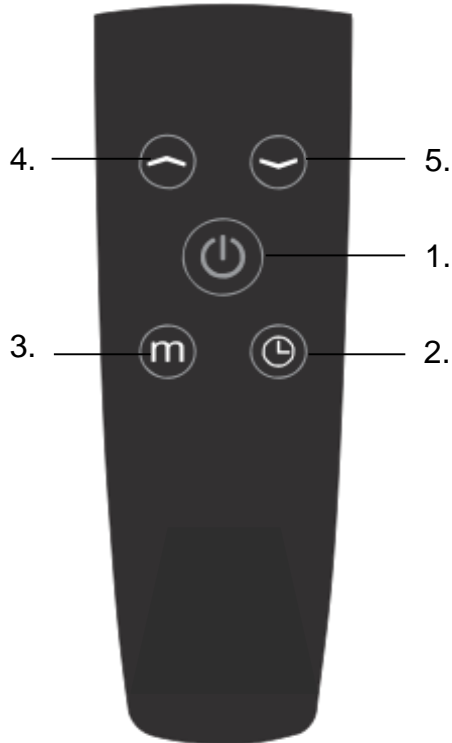

TOUCH CONTROL PANEL

1. Timer Indicator
2. High/Low Heat Mode
3. Temperature/Time Indicator
4. Fan Only Mode



Installing your Ceramic Wall Heater

Always choose a safe location for the heater, keeping in mind the safety precautions outlined. Ensure all packaging has been removed from the unit before use.

COMPONENTS

- 1x Main Unit
- 1x Remote Control
- 1x Screw Pack for wall mounting

TOOLS REQUIRED

- ✓ Drill
- ✓ Hammer
- ✓ Phillips head screwdriver
- ✓ Spirit Level

LOCATION

The heater should be placed with a minimum distance of 1 metre between the unit and flammable objects such as curtains, paintings or other materials that may pose fire risk.

Installation of the heater on the wall **MUST BE** 1.8m above the floor.

Installation of the heater on the wall **MUST BE** 20cm away from closest side wall.

Installation of the heater on the wall **MUST BE** 30cm from the ceiling.

Do not mount directly under or over an electrical power socket; it is recommended to install the heater to the side of the power socket.

INSTALLATION

Drill two holes on the wall allowing 1.8metres between floor and bottom of heater and 20cm from side wall to side of heater.

Measure the distance between the mounting holes on the back of the heater and then mark the wall at the measured distance. Ensure that the marks you make are level.

 
 
Be sure to make the hole diameter the same as the expanding screw pipe.

Place the expanding screw pipe into the hole in the wall and then fix two screws on the expanding pipe.

Keep the tips of the screws out approximately 10mm, and hang the heater.

Ensure that the screws are held in firmly enough to hold the weight of the heater.

Slide the heater across to the right and then down, locking the heater mounting bracket to the screws in the wall.

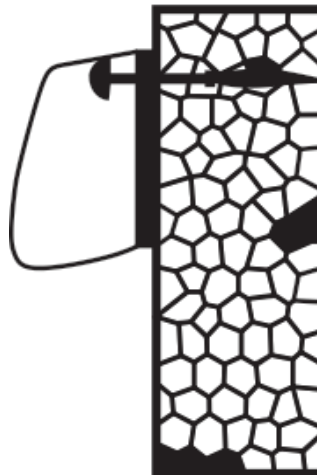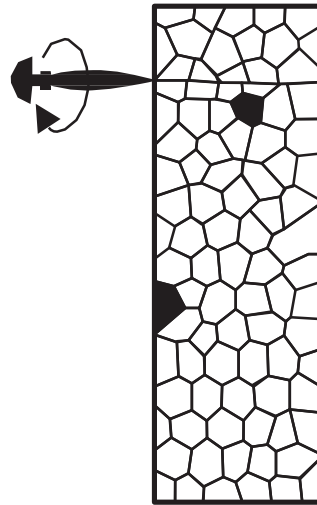

Operating your Ceramic Wall Heater

WARNING Keep all objects at least 1 metre from the front and sides of the appliance.

HEAT CONTROLS

Check that the Power Switch at the side of the heater is set to the Off position before plugging the heater in and turning on the mains supply.

For best results, aim the remote directly at the remote sensor on the front panel of the heater. The remote has a 3 metre range of operation.

Turn the Power Switch at the side of the heater to the "I" position.

Press the Power Button (ON/OFF) on the remote control to turn the heater on, You will hear a beep. The unit will start in Fan only mode and begin to blow out room temperature air. The LED will display the current room temperature.

Press the power button again to switch from Fan only mode to Low heat mode.

You will hear a beep, and 1 High/Low Heat Mode bars will illuminate on the control panel.

Press the power button again to switch from Low Heat mode to High heat mode.

You will hear a beep, and 2 High/Low Heat Mode bars will illuminate on the control panel.

If you press the power button a fourth time, you will hear a beep, and the louver will operate automatically.

Pressing the power button again will turn the heater OFF.

NOTE: The heater will continue to operate for an additional 30 seconds in the fan mode after the unit has been switched off. This is normal. This will help cool the internal components down and prolong the life of the unit.

The remote control requires 1x CR2025 battery.

To switch between the operating modes press the MODE button.

Press the "∧" button to increase the temperature.

Press the "∨" button to decrease the temperature.

Temperature range: 5 to 35 degrees.

TIMER

Press the TIMER button to use timer function.

Press the "∧" button to increase the length of time before the unit switches off.

Press the "∨" button to decrease the length of time before the unit switches off.

Timer range: 1 to 24 hours in 1 hour increments.

After the desired set time has displayed on the control panel, the set time will flash before the control panel goes back to display the current room temperature. The Timer icon will remain displayed on the control panel.

To switch the Timer off, press the TIMER button again.

Press the POWER button to turn the device OFF.

NOTE: If the device is operating, pressing the POWER button for the first time activates the louvres' vertical movement mode, pressing it for the second time turns this mode off, and pressing the button for the third time turns the heater off.

Operating your Ceramic Wall Heater

SAFETY DEVICE

This fan heater has a safety overheat protection. It automatically turns the device off to prevent overheating, for example, if the louvres become covered by an obstacle such as a curtain. If this occurs, disconnect the fan heater from the mains, wait for about 30 minutes to let it cool down and remove the obstacle.

After 30 minutes, turn on the fan heater to the desired mode. It should start normally. If the fan heater does not work correctly, please contact your nearest service center.

IMPORTANT! NEVER COVER THIS HEATER!

CARE AND CLEANING

The heater requires regular cleaning to ensure trouble free operation:

Unplug the heater from the mains supply before cleaning.

Ensure that the heater has been allowed to cool down completely before cleaning.

Use a damp cloth (not wet) to wipe the exterior of the heater to remove dust and dirt.

Use a vacuum cleaner to remove dust and fluff from around the grills.

Never use solutions such as benzene, thinners or polishing agents.

Ensure the heater is dry before plugging back into the mains supply.

Do not attempt to dismantle the Ceramic Heater. There are no user serviceable parts. For service or repair, contact an authorised electrical service technician.

CAUTION

The Ceramic Heater generates heat during use. Proper precautions must be taken to prevent the risk of burns, scalds, fires or other damage to persons.

Do not use this heater with a programmer, timer, separate remote-control system or any other device that switches the heater on automatically.

PROOF OF PURCHASE

To receive warranty retain receipt as proof of purchase.

GOLDAIR

SUPPORT AND TECHNICAL ADVICE

Goldair – New Zealand

Monday – Friday 8am-5pm

Phone +64 (0)9 917 4000

Phone 0800 232 633

info@cdb.co.nz

Goldair – Australia

Monday – Friday 8am-5pm

Phone +61 (0)3 9336 4423

Phone 1300 465 324

info@cdbgoldair.com.au

Three Year Warranty

Thank you for purchasing this Goldair Platinum product. Your product is warranted against faults and manufacture when used in normal domestic use for a period of **three years**. In non-domestic use Goldair limits the voluntary warranty to **three months**.

Goldair undertake to repair or replace this product at no charge if found to be defective due to a manufacturing fault during the warranty period.

This warranty excludes damage caused by misuse, neglect, shipping accident, incorrect installation, or work carried out by anyone other than a qualified electrical service technician.

PLEASE KEEP YOUR RECEIPT AS THIS WILL HELP VERIFY YOUR WARRANTY.

The benefits given to you by this warranty are in addition to other rights and remedies available to you under law in relation to the goods or services to which this warranty relates.

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand this warranty is additional to the conditions and guarantees of the Consumers Guarantee Act (1993).

Goldair – New Zealand

CDB Goldair
PO Box 100-707
N.S.M.C
Auckland

Phone +64 (0)9 917 4000

Phone 0800 232 633

www.goldair.co.nz

Goldair – Australia

CDB Goldair Australia Pty
PO Box 574
South Morang
Victoria, 3752

Phone +61 (0)3 9336 4423

Phone 1300 Goldair (1300 465 324)

www.goldair.com.au

Goldair Three Year Warranty (IMPORTANT: Please complete and retain this warranty card)

Name

Address

Place Of Purchase _____ Date Of Purchase _____

Name Of Product _____ Model Number _____

Attach a copy of the purchase receipt to this warranty card