

## WOODSON CONTACT TOASTER – SPLIT LID

### Model WGPC62ASC

#### FEATURES

- ✓ Gas struts assist in lifting the top platen and hold open when operating
- ✓ Stainless steel platens bonded to aluminium plates combine hygiene, durability and even temperature performance
- ✓ 2 top plates (187 x 300mm) and one large bottom plate (393 x 295mm)
- ✓ One piece Stainless Steel cooking surface with a turn up on 3 sides
- ✓ Assisted upper platens that utilise gas struts to enable an easy and safe lifting operation. Ensures gentle and even pressure for optimal toasting
- ✓ Eight programmable timer settings with one touch operation to achieve consistent results
- ✓ Easy-clean PVC coated smooth metal conduit to route cables to upper cooking plate
- ✓ 4 position rotary switch allowing selection of 4 modes - Off, Top and Bottom platen, Standby and Bottom platen only
- ✓ No hidden crevices for food accumulation – extremely easy to clean
- ✓ Easily removable heat shield that clips on and off, no tools required to remove
- ✓ All stainless steel body construction

#### Manufactured by:

Tom Stoddart Pty Ltd  
 39 Forest Way, Karawatha, QLD, 4117  
 Ph: 07 3440 7600 (int +61 7 3440 7600)  
 Fax: 07 3344 1000 (int +61 7 3344 1000)

Due to continuous product research and development, the information contained herein is subject to change without notice

**Table of Contents**

General Recommendations ..... 3

    General Safety ..... 3

        Service ..... 3

        Sharp Edges ..... 3

        Power Cables ..... 3

    Introduction ..... 4

        Product Overview ..... 4

    Specifications ..... 4

    Specifications ..... 5

        Technical Specifications ..... 5

        Technical/Connection Diagram ..... 6

        Rating Plate ..... 6

        Rating Plate ..... 7

Installation ..... 7

Installation ..... 8

    General Precautions ..... 8

    Setting Up ..... 9

        Handling ..... 9

        Site Preparation ..... 9

        Unpacking ..... 9

        First Time Operation ..... 9

    Electrical Connection ..... 10

Operation ..... 11

    General Recommendations ..... 11

    Operating Instructions ..... 11

    Operating Instructions ..... 12

    Setting the Timers ..... 13

        Timer Adjustment ..... 13

    Temperature Adjustment ..... 14

    After Hours ..... 14

        Information ..... 14

    Cleaning Procedure ..... 14

        Materials Required ..... 14

        External Surfaces ..... 15

        Internal Surfaces ..... 15

Maintenance ..... 15

    Routines ..... 15

        Schedules ..... 15

        Log Books ..... 15

        Inspection ..... 15

        Faults ..... 15

    Stainless Steel Protection ..... 16

        Cleaning ..... 16

        Corrosion Protection ..... 16

        Surface Finish ..... 16

    Water Damage ..... 17

        Information ..... 17

        Access to Electrical Wiring and Mechanical Parts ..... 17

    Replacements ..... 18

        Electronic Controller, Temperature Probe ..... 18

        Electrical Parts ..... 18

        Mechanical Parts ..... 18

    For Servicing and Parts ..... 18

Electrical Diagrams ..... 19

Spare Parts/ Assembly Diagram ..... 20

Warranty ..... 20

Warranty ..... 21

    Appendix 1 – Australian Warranty and Importer/Distributor Contact Details ..... 21

    Australian Warranty Policy & Procedure ..... 21

    WARRANTY REQUEST FORM ..... 24

Due to continuous product research and development, the information contained herein is subject to change without notice

## General Recommendations

### ATTENTION

Carefully read this instruction booklet, as it contains important advice for safe installation, operation and maintenance. Keep this booklet on hand in a safe place for future reference by other operators or service technicians.

Do not store or use gasoline or other flammable vapours or liquids in the vicinity of this or any other appliance.

Qualified personnel, specifically trained in the following instructions, can perform installation and service of the machine:

### ***Disclaimer:***

**The manufacturer cannot be held responsible or liable for any injuries or damages of any kind occurred to persons, appliances or others, due to lack of conformity with the instructions indicated in this documentation.**

**The manufacturer also cannot be held responsible or liable for abuse, misuse and lack of conformity with the instructions indicated in this documentation in regards to installation, un-installation, operation, servicing or maintenance.**

**All appliances made by the manufacturer are delivered assembled and ready to install. Any installation, un-installation, servicing, maintenance and access or removal of any parts, panels or safety barriers that is not permitted, does not comply in accordance to this documentation, or not performed by a TRAINED AND AUTHORISED SPECIALISTS will result in the IMMEDIATE LOSS OF THE WARRANTY.**

**The manufacturer cannot be held responsible or liable for any unauthorized modifications. All modifications must be approved by the manufacturer in writing before initiating. All modifications or works performed to this appliance must be performed at all times by a TRAINED AND AUTHORISED SPECIALISTS.**

## ***General Safety***

### *Service*

Stoddart, one of our agents (while under warranty), or a similarly qualified person (after warranty has expired) should carry out any and all repairs, maintenance and services. Any repair person(s) should be instructed to read the safety warnings within this manual before commencing work on these units.

Do not remove any cover panels that may be on the appliance.

### *Sharp Edges*

Steel cutting processes such as those used in the construction of this appliance result in sharp edges. Whilst any such edges are removed to the best of our ability it is always wise to take care when contacting any edge.

Particular care should be taken to avoid contact with any steel edge, and warnings should be given in regards to the danger of such contact to any repair or maintenance person(s) prior to commencement of any servicing.

### *Power Cables*

Ensure that any damaged power cord is replaced before further use.


#### **Introduction**

The Woodson Contact Toaster – Split Lid been specifically designed to meet the rigorous demands of a busy food service operation.

Each Woodson Contact Toaster – Split Lid has been assembled and tested according to Stoddart Manufacturing strict quality standards.

#### *Product Overview*

Configuration may vary according to model.

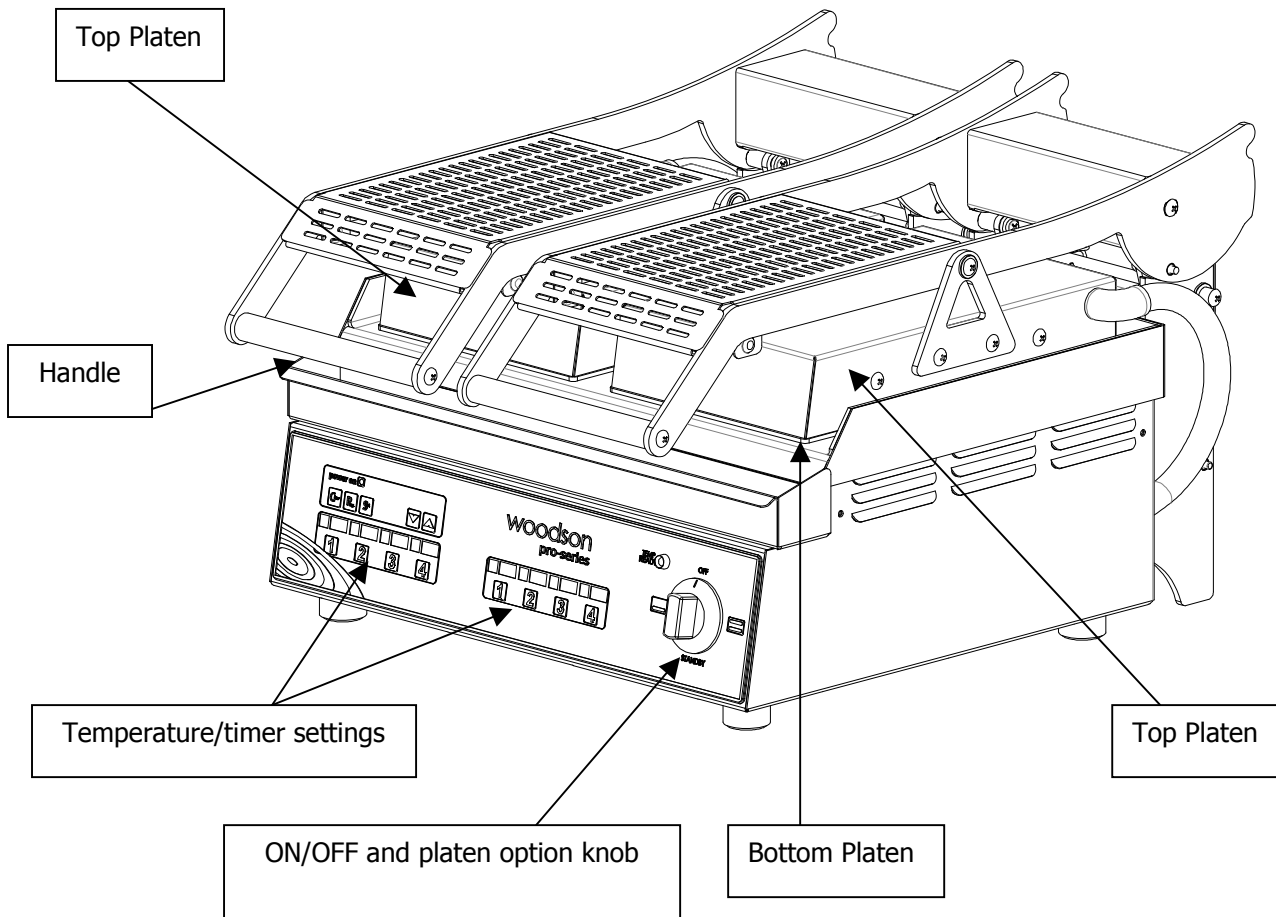


**Specifications**
*Technical Specifications*

<b>SPECIFICATIONS</b>	
<b>Model</b>	<b>W.GPC62SC</b>
Height	331mm (closed) 765mm (open)
Width	468mm
Depth	480mm
Voltage	240v
Power	2200W
Current	10 A
Connection	10A Lead and Plug (Supplied)
Plate Size	Top 188mm x 300mm Bottom 455mm x 310mm
Mass	35 kg
Capacity	4 Sandwiches
<b>SHIPPING</b>	
Height	500mm
Width	600mm
Depth	700mm


**Safety Clearance**

- A clearance of 100mm should be maintained around the toaster, more space is required if placed next to heat susceptible items or heat emitting items
- Height when fully open approximately 765mm


*Technical/Connection Diagram*

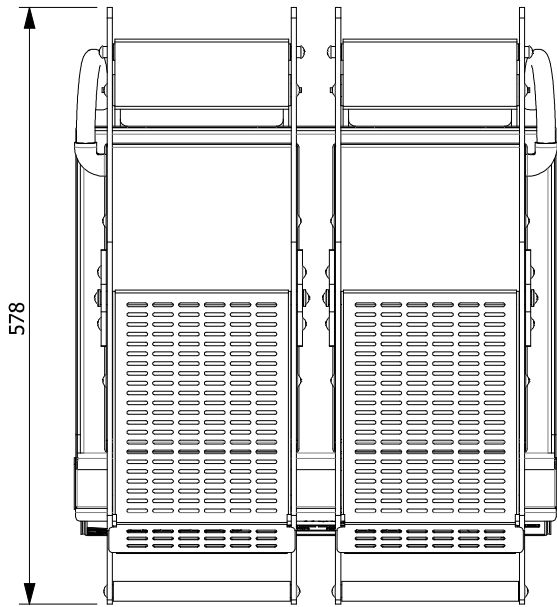

PLAN  
VIEW

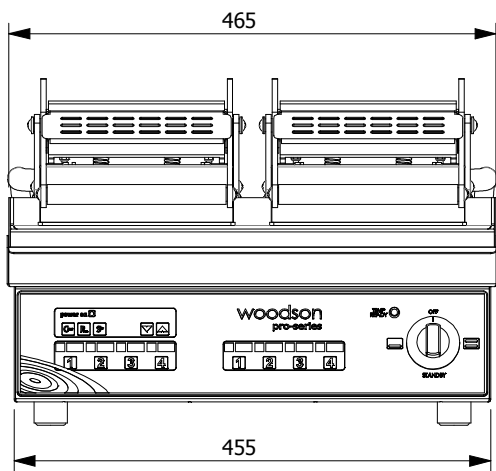

FRONT  
VIEW

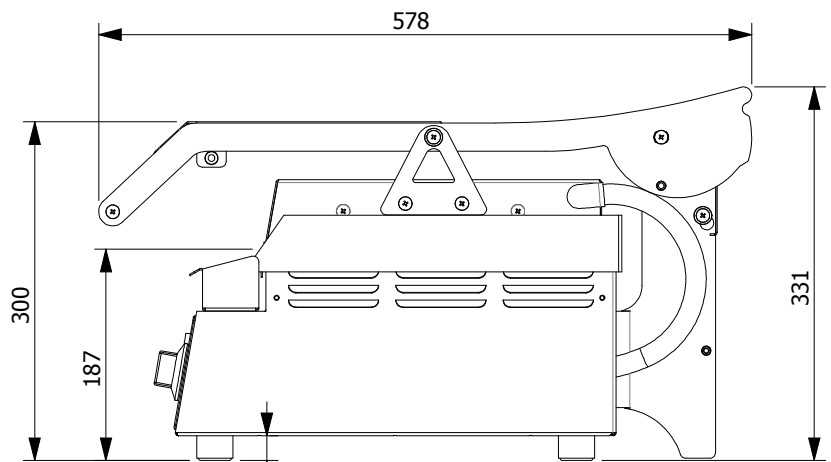


SIDE  
VIEW


Due to continuous product research and development, the information contained herein is subject to change without notice

#### Rating Plate

The rating plate of the appliance contains identification and technical data and is located on the unit as shown below.

	<p>Made in Australia by:  <b>Tom Stoddart Pty Ltd</b>          ABN: 16 009 690 251          Phone: +617 3345 5011          service@stoddart.com.au          www.stoddart.com.au</p>
<p>Serial No: 123456789          Model No: W.GPC62SC          Description: Woodson Contact Toaster – Split Lid          Date of Manufacture: 5/11/2010</p>	
<p>Voltage: 220v- 240v 50 Hz          Rated Current Phase 1: 10 Amps                            Phase 2:                            Phase 3:          Protection: IPX0</p>	

#### Sample Only

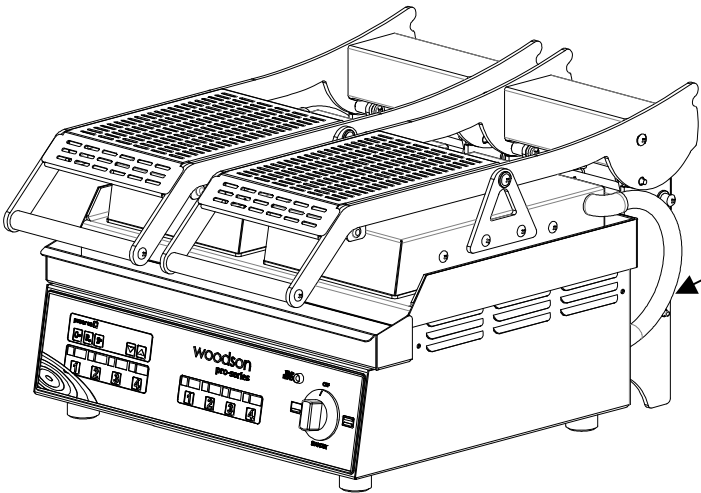

Due to continuous product research and development, the information contained herein is subject to change without notice

## Installation

### *General Precautions*

Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.

- Read the installation, operating and maintenance instructions thoroughly before installation, maintenance or servicing this equipment
- Do **NOT** use this appliance for other than its intended use.
- Do **NOT** store explosive substances such as aerosol cans with a flammable propellant in or near this appliance.
- Regulations require that all units be installed to the appropriate Australian standards.
- Regulations require that authorised persons carry out all electrical work.
- Only use this appliance with voltage specified on the rating label.
- Be careful not to touch moving parts.

### **WARNING!**

**Installation must comply with local electrical and health & safety requirements.  
Improper installation, adjustment, alteration, service or maintenance can cause  
property damage, injury or death.**

### **ATTENTION**

**Ensure that a trained person installs this machine.  
Ensure the customer is trained on how to use the machine.  
Ensure the customer is given the manual**



## ***Setting Up***

### *Handling*

- Use suitable means to move the appliance: e.g. a lift truck or fork pallet trucks (the forks should reach more than halfway beneath the appliance).

### *Site Preparation*

- Ensure the site is level and properly cleaned.
- The toaster is to be placed on a suitable bench or worktop, at a comfortable working height. (850mm – 900mm)
- Ensure the press toaster is placed on a level, stable work surface, away from other heat, water or grease emitting devices.

### *Unpacking*

- Check the machine for damage before and after unpacking. If machine is damaged, contact whoever you purchased the unit from
- Wear protective gloves to unpack the appliance from the box.
- The unit is supplied fully assembled.
- Unpack and visually inspect the unit for damage or missing parts. Report any problems to the distributor or manufacturer.
- Remove all protective plastic film, tapes, ties and packers before installing and operating. Clean off any glue residue left over from the protective plastic film.
- Wipe all surfaces with a clean, sanitised cloth.

### *First Time Operation*

- **Read the complete instruction manual before proceeding.**
- The toaster is preset in the factory with the following settings:
  - Cooking temperature 205- 210 degrees C.
  - Standby 150degC
  - The timers have been factory set to 12 seconds each.
  - Refer to "Section 6 Setting the timers"
- Ensure the electrical cable is not damaged and does not hang over the counter, and ensure the **"ON/OFF"** button is set to the **"OFF"** position.
- Plug the unit into the correct size power outlet.
- Your toaster is now ready to use.

**Electrical Connection****WARNING!**

**This machine must be installed in accordance with AS/NZS 60335.1**

**Information**

- The electrical supply shall comply with the rating plate data.
- The machine is supplied with a plug and lead (10A).
- Ensure that machine is connected to a power point with compatible power rating of 240 volts 10 amps.
- The machine must be plugged directly into the power outlet. The use of extension leads or power boards are not to be used.
- The equipment should be earthed according to local electrical codes to prevent the possibility of electrical shock. It requires an earthed receptacle with separate electrical lines, protected by fuses or circuit breaker of the proper rating.
- If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard. Power cable cannot be stretched, kinked, pressed, during normal operation, service or anytime

**WARNING!**

**Some procedures in this manual require the power to the equipment to be turned off and isolated. Turn the power OFF at the power point and unplug the power supply lead by the plug body. If the power point is not readily accessible turn the equipment off at the isolation switch or the circuit breaker in the switchboard. Attach a yellow "CAUTION-DO NOT OPERATE" tag. This must be performed where relevant unless the procedures specify otherwise.**

**FAILURE TO DO SO MAY RESULT IN ELECTRIC SHOCK.**

## Operation

### *General Recommendations*

When using any electrical appliance, safety precautions should always be observed.


Our appliances have been designed to give high performance. Hence, the appliance must be used exclusively for the purpose for which it has been designed.

Read these instructions carefully and retain for future reference

- All units **MUST** be installed according to the procedures stated in the installation section of this manual.
- This appliance should not be operated by person/s (including children) with reduced physical, sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning the safe use of the appliance by person/s responsible for their safety.
- In the case of new personnel, training is to be provided in advance.
- Do **NOT** use this appliance for any other purpose than its intended use.
- Do **NOT** store explosive substances such as aerosol cans with a flammable propellant in or near this appliance.
- The surfaces of this unit are **HOT** when in operation. Signage should be displayed for personnel and customers to warn of this.
- Keep fingers out of "**pinch point**" areas.
- This unit is **NOT** waterproof. Do **NOT** use jet sprays or hoses to the exterior of the appliance.
- If the power supply cord becomes damaged, it must be replaced by the manufacturer, an authorised service agent or similarly qualified persons to avoid a hazard.
- Be careful not to touch moving parts.
- Do **NOT** use sharp objects to activate controls.
- If any fault is detected, disconnect the Split Lid – Contact Toaster from the mains and call the service agent.
- Do **NOT** use the Split Lid – Contact Toaster in an explosive atmosphere.
- Avoid exposure to direct heat and/or humidity sources.
- The manufacturer declines any liability for damages to persons and/or things due and to an improper/wrong and/or unreasonable use of the machine.

**CAUTION! THE SURFACES ON THIS UNIT ARE HOT !!!!!**

#### Operating Instructions

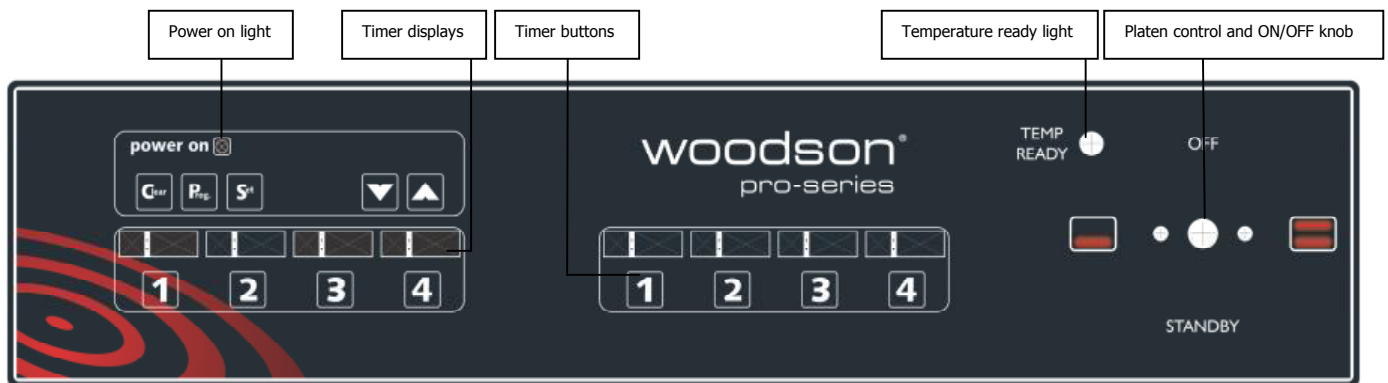

1. Visually check the toaster is clean, in good repair and safe.
2. Ensure that the top platen is in a closed position.
3. Turn the power switch to the desired mode i.e. Top and bottom platen for normal press toasting, Bottom platen for Griddle style operation or Standby. The power "ON" indication light located on the L/H side control panel and Power ready light will be illuminated. If the indicator light does not illuminate refer to the trouble shooting section of the manual.
4. Allow the press toaster to preheat for approximately 30 minutes. The temperature ready indicator light will turn itself OFF once the press toaster has reached its optimum operating temperature. The press toaster is preset to operate between 205°C - 210°C surface cooking temperature.

#### NOTE!

**Do not use the press toaster until the temperature ready light is off, as you will not achieve optimum product quality results.**

5. Ensure that the 8 display timers are set to the desired cook time on the control panel (*refer to programming the toaster instructions in this manual*).
6. Lift the top platen up to a fully open position by the handle provided.
7. The top platen will remain in the open position, as it is spring-loaded.
8. Take extreme care when lifting, do not touch the cover or cooking surface to avoid skin burns.
9. Place the food product onto the cooking surface and close the top platen.
10. Ensure that the product is placed in the middle of the cooking surface, to prevent the top platen from tilting and producing uneven product.
11. Press the appropriate display timer button (i.e. 1,2,3,4,-1,2,3,4,) to start the cooking procedure. The time shown in the window above the corresponding button will begin to count down.
12. Once the count down timer reaches "000", the timer will emit a beeping sound. Press the appropriate display timer button again, to de-activate the timer. Lift the top platen fully to the open position and remove the toasted product.

#### NOTE!

**The timer can be stopped if necessary, by pressing the timer button and holding it for 3 seconds.**

13. Replace the top platens back in to the down position when the product has been removed.
14. Periodically check the crumb tray mounted at the front of the press toaster, to ensure it does not overflow. Take extreme care when removing the crumb tray, ensure you grab the crumb tray handle using heat resistant gloves and do not touch the cooking surface to avoid skin burns.

#### NOTE!

**To ensure optimum product quality, the top plate must be closed after every run, to maintain constant temperature.**

Due to continuous product research and development, the information contained herein is subject to change without notice


### Setting the Timers





- The Control panel has 8 timers located along the front of the control panel. The displays indicate the pre-programmed times in minutes and seconds.
- The unit is configured so that **1 20** is equal to **1 minute 20 seconds**.

**NOTE!**

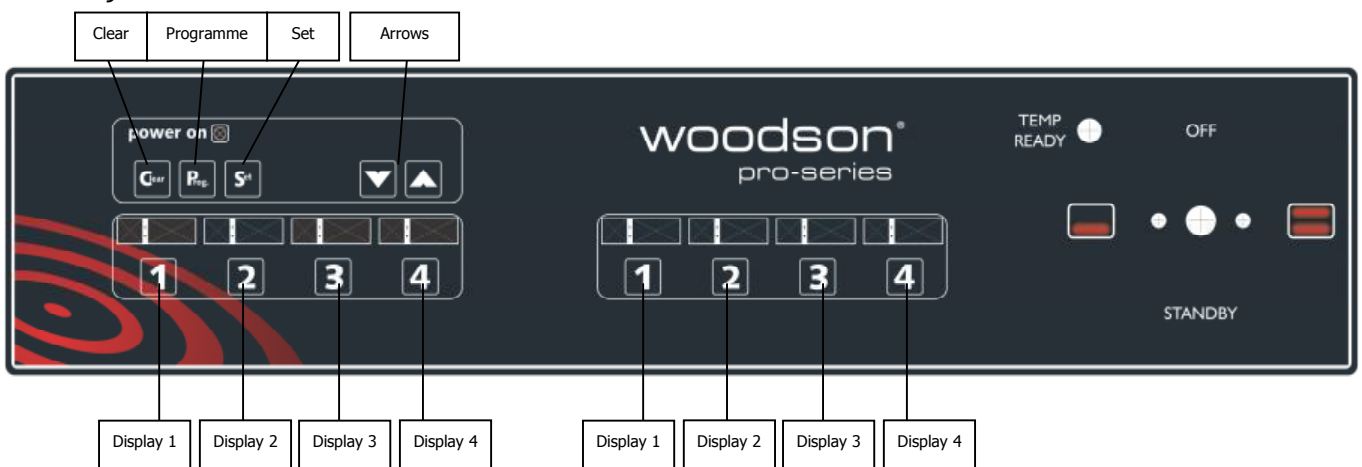**To change the times follow the steps below.**

### Timer Adjustment



- Press and hold  Programme Button for 3-4 seconds.
- Display 1 will flash.
- Use the  &  arrow buttons to adjust time if necessary.
- Press the  Set button.
- Repeat the above steps for the other display timer buttons if necessary (i.e. 1,2,3,4 -1,2,3,4,)

**NOTE!**

**By pressing the programme button again, it will automatically go to the next timer display in order of sequence, i.e. 1,2,3,4-1,2,3,4).**

### **Temperature Adjustment**

#### **IMPORTANT!**

**The temperature can only be adjusted after the toaster has been turned on and allowed to operate through 2-3 cycles.**

1. Locate the 2 temperature calibrating screws on the rear of the toaster one marked Cook and one marked Standby.
2. Open the top platen.
3. Measure the temperature of the bottom platen in a number of different areas.
4. Note the average temperature recorded.
5. Adjust the platen temperature to the desired temperature by adjusting the screw marked Cook a small amount. Clockwise to increase temperature and anticlockwise to decrease temperature.
6. Repeat procedure for the standby thermostat, Note the unit will need some time to cool down to the standby set point before this setting can be calibrated.

### **After Hours**

#### *Information*

- The unit **MUST** be **switched OFF**.

### **Cleaning Procedure**

- Clean Platens Daily (10 mins)

#### **NOTE!**

**After each cook wipe plates with moist cloth.**

#### *Materials Required*

- Cleaning Pad
  - Cleaning Pad Holder
  - Clean Sanitised Towel
  - Paper Towel
  - Small Container of hot water.
  - Grill Cleaning Gloves
  - Grill Cleaning Apron
1. Turn toaster off, remove electric cord from power point and allow to cool.
  2. Wipe soil from the toaster using a clean sanitised towel and small amount of water to rinse the platens using a damp cloth. Continually rinse the towel in hot water and thoroughly rinse all platens. Wipe over unit with a clean dry cloth.
  3. Remove crumb tray. Dry wipe crumb tray and then wash, rinse and sanitise. Air-dry and replace.

#### **WARNING!**

**DO NOT pour water directly onto the platen surface.**

Due to continuous product research and development, the information contained herein is subject to change without notice

### *External Surfaces*

- Clean the stainless steel and metal parts with warm (not hot) soapy water and a sponge.
- Rinsed the stainless steel and metal parts with clean, fresh water.
- After cleaning, thoroughly wipe the stainless steel and metal parts dry with a soft cloth. Do NOT let water pool on the unit. Check crevices and folds.

#### **WARNING!**

**The external surfaces of this unit are NOT waterproof, do NOT hose.**

### *Internal Surfaces*

- Clean the internal surfaces with warm (not hot) soapy water and a sponge.
- After cleaning, thoroughly wipe the stainless steel and elements with a soft cloth.

## **Maintenance**

### ***Routines***

#### *Schedules*

- To maintain optimal performance, maintenance and cleaning schedules must be regular and thorough.
- The unit should be cleaned at the end of **every workday**.

#### *Log Books*

- Log books should be kept for all cleaning and maintenance of this unit.

#### *Inspection*

- Surfaces should be checked at least **once a week** for damage or deterioration.
- As part of the maintenance, a **qualified technician MUST** check the controls, mechanical parts and electrical wiring for damage, deterioration or need of adjustment.

#### *Faults*

- Not repairing small faults immediately can cause a complete breakdown. If any small faults occur, have them attended to promptly by a **qualified technician**.
- All faults should be reported to the distributor and manufacturer.

#### **WARNING!**

**If any electrical wires are damaged, the unit must NOT be switched ON until the parts have been fixed as injury or death can occur.**

### ***Stainless Steel Protection***

#### *Cleaning*

- For cleaning a stain on the surface of the stainless steel, check the cleaning section of the operation manual.
- All metal surfaces should be checked while cleaning for damage, scuffs or scapes as these can lead to rust and further damage to the product.

#### *Corrosion Protection*

- Stainless steel exhibits good resistance to corrosion however, if not properly maintained stainless steel can rust.
- Any sign of mild rust or corrosion should be thoroughly cleaned with warm soapy water and dried as soon as possible.
- **NEVER** use abrasive pads or cleaners for cleaning.
- Medium rust or corrosion can be treated by a commercial cleaning agent that contains citric/oxalic/nitric/phosphoric. Do **NOT** use cleaning agents with chlorides or other harsh chemicals as this can cause corrosion. A lemon slice or a few drops of lemon juice added to the water can be used as a substitute. After treatment, wash with warm (not hot) soapy water and dry thoroughly.
- Thoroughly wipe the surfaces dry after cleaning and do NOT let water pool on the unit. Check crevices and folds for pooling.
- If an abrasive product is used while cleaning, thoroughly dry the unit and leave in an open or oxidised area for the stainless steel protective layer to replenish.
- When using, ensure all liquids and moisture is cleaned up straight away. Food liquids such as juices from vegetables and fruits should NOT be left on preparation surfaces.
- Do NOT leave items on the stainless steel such as cutting boards, rubber mats and bottles.

#### *Surface Finish*

- To protect the polish, stainless steel should be dried by wiping a dry soft cloth in the same direction as grained polish.
- For **NON**-food contact surfaces, a light oil can be wiped on the surfaces with a cloth to enhance the stainless steel surface. Wipe in the direction of the grain.
- Some commercial stainless stain cleaners can leave residue or film on the metal; this may trap fine particles of food on the surface, thus deeming the surfaces not **food safe**.



## **Water Damage**

### *Information*

- Water damage to the electrical and mechanical parts of unit can occur through incorrect cleaning of this unit with a hose or high pressure cleaner, check the cleaning section of the operation manual for correct cleaning procedures
- If accidental water damage occurs allow the unit to dry and ensure the unit is checked by a **qualified technician** before switching the unit ON.
- All water damage that is not due to construction or mechanical faults is not covered by warranty.

### **WARNING!**

**If any water damage occurs, the unit must NOT be switched ON.**

### *Access to Electrical Wiring and Mechanical Parts*

### **WARNING!**

**Maintenance of electrical or mechanical parts MUST be performed by a qualified technician only**

### **WARNING!**

**Switch the unit OFF at the main power supply before any maintenance or servicing.**

### **CAUTION!**

**All due care has been taken in manufacturing, but there may be SHARP EDGES around the internal sections.**

**Replacements**
*Electronic Controller, Temperature Probe*

- The electronic controller and temperature probe can be replaced by the manufacturer.
- Both **MUST** be replaced by a **qualified technician**.

*Electrical Parts*

- All electrical parts can be replaced by the manufacturer or others.
- All electrical parts **MUST** be replaced by a **qualified technician**.

*Mechanical Parts*

- All mechanical parts can be replaced by the manufacturer or others.
- All mechanical parts **MUST** be replaced by a **qualified technician**.

**For Servicing and Parts**
**Stoddart Manufacturing:**

Sales: 1300 791 954

Service/Spares: 1300 307 289

Fax: (07) 3344 1000

 Sales: [fse@stoddart.com.au](mailto:fse@stoddart.com.au)

 Customer Service: [service@stoddart.com.au](mailto:service@stoddart.com.au)

 Spare Parts: [spares@stoddart.com.au](mailto:spares@stoddart.com.au) Troubleshooting

**WARNING!**

**Technician tasks only to be completed by qualified service people.  
Check faults before calling service technician.**


**Task Type - (O) = Operator (T) = Technician Task**

Problem	Possible Causes	Task	Possible Corrective Action
Not Heating	Unit not turned "on" at the power socket.	O	Turn power to "on" at the power socket on the wall.
Not Heating	"On/Off" switch on control panel not turned on to correct Mode.	O	Turn Rotary Power switch to desired mode on the control panel.
Not Heating	Thermal Safety fuse blown	T	Call service technician.
Plates too Cold	Allow ready light to turn off before cooking.	O	
Plates too Cold	Temperature requires adjusting.	T	Refer to temperature adjustment in the manual
Plates too Hot	Temperature requires adjusting.	T	Refer to temperature adjustment in the manual
Plates not hot	Element failure.	T	Test & replace the element if necessary.

Due to continuous product research and development, the information contained herein is subject to change without notice


#### Electrical Diagrams

MODEL: WGPC62ASC

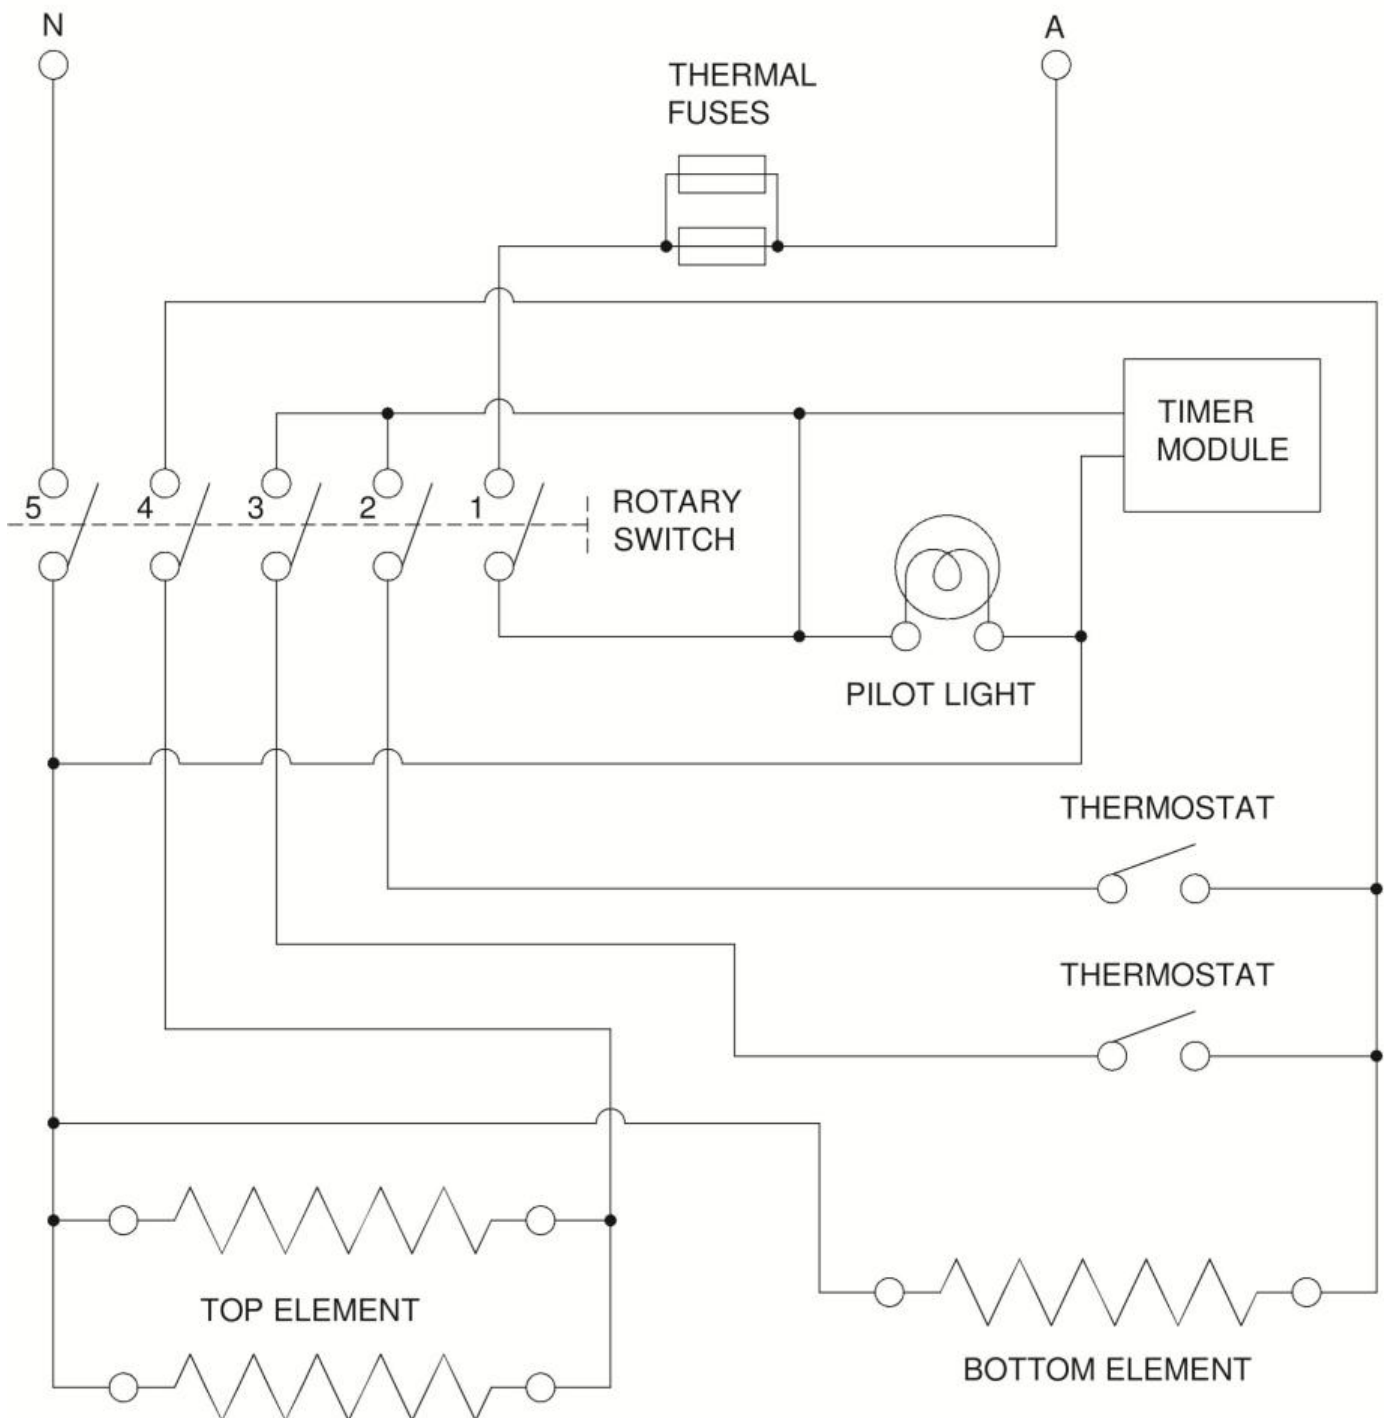

Due to continuous product research and development, the information contained herein is subject to change without notice

#### Spare Parts/ Assembly Diagram

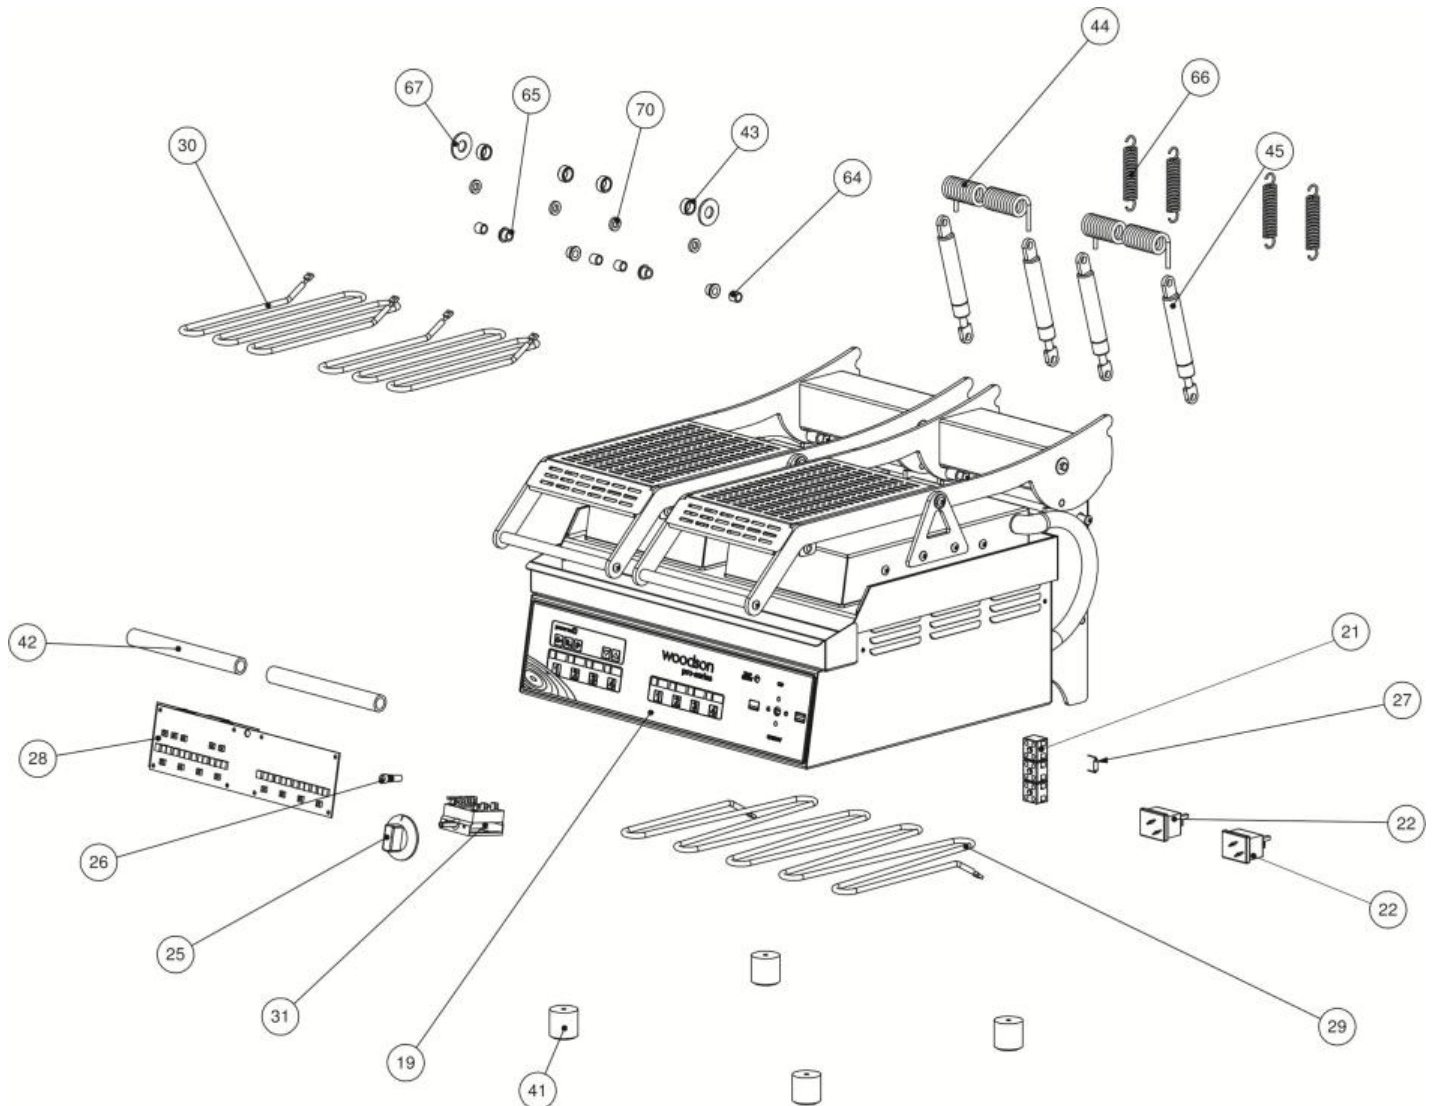

ITEM-NO.	PART NUMBER	Spare Parts Description	Spare Parts/QTY.
19	CMDE-0008	Decal	1
21	CMEL-0308	Terminal Block	3
22	CMEL-0336	285deg Thermostat	2
25	CMEL-0698	Knob	1
26	CMEL-0701	Indicator Light	1
27	CMEL-0865	Thermal Fuse	1
28	CMEL-0899	Circuit Board	1
29	CMEL-0900	Bottom Element	1
30	CMEL-0901	Top Element	2
31	CMEL-1486	Rotary Switch	1
41	CMGE-0276	Rubber Foot	4
42	CMGE-0402	Handle	2
43	CMGE-0726	Needle Bearing	4
44	CMGE-1007	Double Torsion Spring	2
45	CMGE-1008	150N Gas Strut	4
64	SVMA-0092 A	Acetyl Bush	4
65	SVMA-0093 B	Cam Spring Shaft Bush	4
66	SVMA-0128 C	Cam Spring	4
67	SVMA-0163 B	Spacer Washer	4
70	SVMA-0173 A	Spacer Bush	4

Due to continuous product research and development, the information contained herein is subject to change without notice

## Warranty

### **Appendix 1 – Australian Warranty and Importer/Distributor Contact Details**

As the exclusive manufacturer and distributor of Woodson products in Australia, Stoddart Manufacturing (Stoddart) would like to congratulate you on your purchase of a Woodson product.

It should be noted by users of the product that it is not designed for household or domestic use and should not be used for this purpose.

This product is intended for commercial use, and in line with Australian electrical safety standards the following warnings are provided:

- This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.
- Users should also note that if the supply electricity cord is damaged in any way it should be replaced. Please contact Stoddart for parts and we will advise how to do this in order to avoid any electrical hazard.

### **Australian Warranty Policy & Procedure**

**Stoddart is committed to providing a comprehensive and fair warranty for all of its equipment. The warranty incorporates a commercial manufacturers' warranty, together with the consumer warranty provisions of the National Consumer Protection Act (2009).**

#### *1. Commercial Warranty*

- 1.1 Stoddart warrants to the original purchaser ("**Customer**") of equipment manufactured or distributed by Stoddart that for **12 months** from the date of installation of the equipment by Customer (the "**Warranty Period**"), any defect in workmanship or material will, subject to clauses 1.2 and 3, be:
- a) Repaired without charge; or
  - b) In respect of any **Major Failure** which cannot be repaired, replaced or the purchase money refunded.
- 1.2 Stoddart will not be liable for any associated loss, damage or compensation claim resulting from any defect in workmanship or material, and such liability is expressly excluded from the operation of clause 1.1.

#### *2. Consumer Warranty*

- 2.1 Subject to clause 3, equipment supplied by Stoddart to Customer for personal, domestic or household use or consumption comes with guarantees that cannot be excluded under the Australian Consumer Law. Customer is entitled to a replacement or refund for a **Major Failure** and compensation for any other reasonably foreseeable loss or damage. Customer is entitled to have the equipment repaired, or replaced if the equipment fails to be of an **Acceptable Quality** and that failure does not amount to a Major Failure.

#### *3. Warranty Clarification*

- 3.1 Customer acknowledges and agrees:
- (i) A **Major Failure** occurs when the equipment suffers repeated and/or unexpected failure that cannot be repaired to Stoddart's satisfaction (acting reasonably) or which Stoddart considers (acting reasonably) renders the equipment unsafe or inoperable;
  - (ii) Stoddart can only warrant the equipment will be of an **Acceptable Quality** when Customer uses the equipment in accordance with Stoddart manufacturer's instructions or user manual ("**Instructions**"). Acceptable Quality does not imply a lifetime guarantee for the equipment;
  - (iii) Certain components have a finite expected life, especially in a commercial or high-use environment. For example components such as refrigeration compressors, elements, thermostats/simmerstats, switches, fans, and temperature controllers can be expected to last up to **12 months** when used in accordance with the instructions;
  - (iv) In a commercial environment, components such as lamps, fluorescent tubes, light bulbs, glass, silicone seals, gaskets and plastic components will require regular replacement. This is not covered by warranty and is at Customer's cost;
  - (v) The life of equipment may be adversely affected by misuse, neglect, unauthorised alteration, incorrect installation, power surges, accident, use of inappropriate chemicals, flooding, and acts of God;
  - (vi) Proper maintenance and cleaning of equipment in accordance with the Instructions is essential to the equipment's effective operation;
  - (vii) On site warranty services are limited to sites within 50km from the nearest Stoddart authorized service agent and service agent's reasonable travel costs must be paid by Customer prior to the commencement of the repairs;

Due to continuous product research and development, the information contained herein is subject to change without notice

- (viii) Additional labour costs will apply for service outside standard business hours of 8.00am to 4:30pm, Monday to Friday and on public holidays;
- (ix) Stoddart cannot guarantee the performance of equipment made specifically to Customer's design or specifications. Stoddart will, where reasonably possible, draw any issues arising from Customer's design or specifications to Customer's attention during the commissioning and/or manufacturing process; and
- (x) Customer must pay additional costs incurred by Stoddart as a result of Customer failing to provide suitable access to the equipment for inspection and service.

3.2 Stoddart's warranty liability under clauses 1 and 2 of these Terms exclude or do not cover:

- a) The matters acknowledged by Customer in clause 3.1;
- b) Situations where Stoddart is not satisfied (acting reasonably) the equipment or any part of the equipment has been used in accordance with the Instructions including misuse, neglect, unauthorised alteration, incorrect installation, power surges, accident, use of inappropriate chemicals, flooding, fire or act of God;
- c) Any consequential loss, damage or expense arising directly or indirectly from use of the equipment otherwise than in accordance with the Instructions;
- d) Any damage or malfunction arising from, or relating to, Customer's failure to properly maintain or clean the equipment in accordance with the Instructions;
- e) Damage caused to equipment during transportation, which is outside Stoddart's standard delivery conditions.
- f) Breakage or replacement of lamps, fluorescent tubes, light bulbs, glass, silicone seals, gaskets and plastic components.;
- g) Maintenance, repair or other works not undertaken by a Stoddart authorised service agent
- h) Where remote refrigeration is connected by a person other than Stoddart to equipment produced by Stoddart, Stoddart cannot accept claims for repair of TX valves and control components, as the fault may arise from the installation of the remote refrigeration lines, equipment, and gas, by a party over which Stoddart has no control.
- i) Transportation costs associated with transporting the equipment to a Stoddart authorized service agent where Stoddart considers (acting reasonably) that repairs cannot be undertaken on-site; and
- j) Unless agreed to by Stoddart in writing to the contrary, warranty is not included in the sale price for goods sold to or installed in an overseas location.

#### 4. Warranty Claim Procedure

The following procedure must be followed to claim under Stoddart's warranties:

- a) Refer to the trouble-shooting section of the Instructions to establish the nature of the fault. Check the equipment is plugged-in, turned-on or has no other valid reason for not operating.
- b) If step (a) does not overcome the issue, you should report the fault with the equipment to our service department (phone 1300 307 289 or fax 07 3344 1000). Our service department will assist you with further trouble-shooting. If our service department is unable to resolve the fault with the equipment they will request you complete a Stoddart Warranty Request Form and fax (fax 07 3344 1000) or email ([service@stoddart.com.au](mailto:service@stoddart.com.au)) it to us.
- c) To complete a Stoddart Warranty Request Form you will require the following information:
  - i. Proof of purchase stating model number and date of purchase;
  - ii. The serial number of the equipment (this is located on the ratings plate sticker);
  - iii. A description of the fault/problem;
  - iv. Your company details including the exact location of the equipment; and
  - v. Any restrictions on times or methods of access to the equipment.

Stoddart will not arrange a warranty call out until it receives the above information from you in writing.

- d) Upon receipt of a properly completed Stoddart Warranty Request Form, Stoddart will check its records to confirm whether the equipment is eligible for warranty repair. If warranty repair is required, Stoddart will issue an OFFICIAL AUTHORISATION NUMBER and details of work to be carried out by a Stoddart authorised service agent. This authorisation number MUST be obtained before any work is carried out. Stoddart will not accept invoices for work carried out without an official authorisation number or by an unauthorised service agent.
- e) Customer must quote the official authorisation number on all correspondence and invoices relating to a warranty claim to ensure prompt processing by Stoddart.
- f) Customer must pay all costs associated with a call-out for work that is not related to warranty repairs or outside Stoddart's Terms immediately.

#### 5. Timing of Warranty Services

**5.1 Stoddart will comply with its warranty liabilities contained in these Terms in a timely manner.**

#### 6. General Maintenance and Repairs

**6.1 The equipment must be repaired and maintained by a qualified technician. Stoddart's authorised service agents are experienced technicians who understand the equipment and carry commonly used spare parts. Contact Stoddart's national service number listed below for details of your nearest Stoddart authorised service agent.**

For Warranty, maintenance, spare parts and repairs, contact:  
 Tel: 1300 307 289 Fax: 07 3344 1000 email: [service@stoddart.com.au](mailto:service@stoddart.com.au)

Due to continuous product research and development, the information contained herein is subject to change without notice

# WARRANTY REQUEST FORM



Phone: (07) 3440 7600 Int: +617 3440 7600  
Phone: 1300 307 289  
Fax: (07) 3344 1000 Int: +617 3344 1000  
Email: service@stoddart.com.au

To ensure we can provide the best possible service we require you to complete this form. Make, model and serial number, along with other essential information. To secure a call, you must also have an account with Stoddart or complete the credit card details below.

**THIS FORM MUST BE COMPLETED OR WARRANTY CANNOT BE PROCESSED**

Name of contact person on site: \_\_\_\_\_ Date: \_\_\_\_ / \_\_\_\_ / \_\_\_\_

Business/Organisation name: \_\_\_\_\_

Street Address: \_\_\_\_\_

Suburb: \_\_\_\_\_ State: \_\_\_\_\_ Post Code: \_\_\_\_\_

Phone (Site): \_\_\_\_\_ Mob: \_\_\_\_\_

Equipment Type: \_\_\_\_\_ Brand: \_\_\_\_\_

Model/PNC no.: \_\_\_\_\_ Serial no.: \_\_\_\_\_

Location (large sites only): \_\_\_\_\_ Open: \_\_\_\_\_ Close: \_\_\_\_\_

Date of purchase: \_\_\_\_\_

Company purchased from: \_\_\_\_\_

(please provide a copy of your tax invoice or delivery docket as proof of purchase)

Description of fault: \_\_\_\_\_

Has the following been checked (tick box if appropriate and checked)?

Electrical power supply

Gas

Water Supply

Name of person requesting warranty (please print): \_\_\_\_\_

**CREDIT CARD DETAILS** – Required as security against chargeable work (see note below)

Card type: Visa  Mastercard

Cardholder name: \_\_\_\_\_ Card no.: \_\_\_\_\_

Signature: \_\_\_\_\_ Expiry Date: \_\_\_\_\_

**PLEASE NOTE:** Warranty call-outs take place Mondays to Fridays between 8.00 and 16.30 (except public holidays). Any calls outside these times will be subject to penalty rates. Certain items such as glass components and light fittings are not covered under warranty. Claims for non-covered parts, no faults found, travel over 50km or other items outside our standard terms and conditions will be chargeable. Any chargeable items will be COD terms – payable onsite.

**CREDIT CARD INFORMATION MUST BE PROVIDED AS SECURITY AGAINST FALSE WARRANTY CALL-OUTS. FAILURE TO DO SO WILL RESULT IN REQUEST BEING UNATTENDED. NORMAL BUSINESS HOURS ARE 8AM – 4.30PM MONDAY TO FRIDAY**