

ACTi CMS 2.0

Quick User Guide

BEFORE YOU START

Thank you for using ACTi CMS 2.0 server system. This guide will demonstrate the fundamentals of how to:

- Monitor live view and operate relevant live view functions
- Search recordings
- Export video


You may download ACTi CMS 2.0 User's Manual for detailed operation instructions from product page:

<http://www.acti.com/CMS2>


For technical support, please contact your system supplier or contact our technical support team via <http://www.acti.com/chd>.

1 LOGIN & LOGOUT


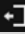
Log in via Internet Explorer

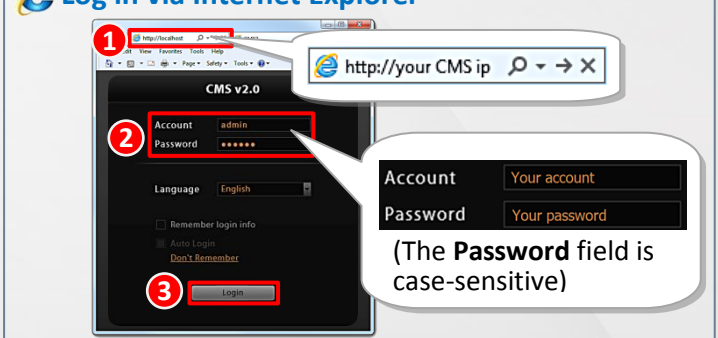

Log in via CMS2 Workstation

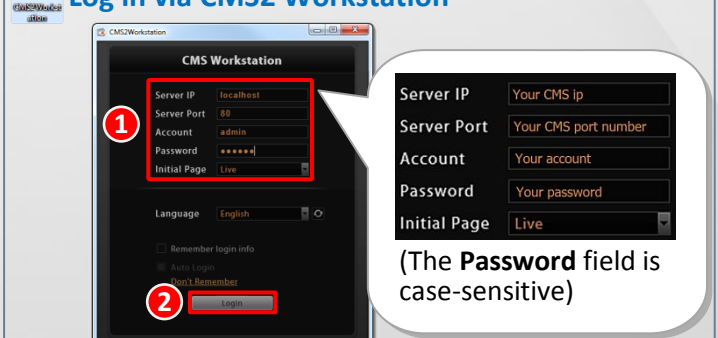

Log out from CMS

On top of the screen, click **Options**  →  Logout

2 OVERVIEW

Click the buttons on the right to switch between two main screens:

Live View

- See live view
- Control a PTZ camera
- Receive event alerts
- Record manually or take a snapshot



Playback

- Search / Play back recordings
- Export snapshots or video



3 LIVE VIEW

You will enter the default live view layout after logging in.

- **Apply a preset view:**
Left-click on a view
- **Watch all cameras of an NVR site:**
Click on the NVR
- **Watch a camera:**
Drag it into layout
- **Watch an instant event playback:**
Select the desired NVR source, and double-click on the event.



4 SINGLE CHANNEL OPTIONS

On **Live View** screen, select a single channel on layout.
Take a snapshot to client PC Start/Stop manual recording

● **Open channel menu:** Right-click

● **Enlarge to full display:** Double-click

● **Stretch view:** Press F6

Instant Playback
Manual Record
Digital Zoom
Snapshot
DO 1
DO 2
Audio Out
Remove
Default Hotspot

Trigger output device Send audio to camera

Show live view windows on a map

● **Link to another map:** Click

● **Show all camera live view:** Right-click to open channel menu → "Show All Live View"

● **Show single camera live view:** Double-click on the camera icon

5 PTZ OPERATION

Operate digital PTZ function

Use the mouse to do digital PTZ operation on a selected channel.

1 **Draw a zoom area:** Hold left button and draw.

2 **Navigate:** Hold left-button and move the red frame.

3 **Cancel digital PTZ:** Right-click in PiP window.

Operate optical PTZ function

Operate a PTZ camera with on-screen controls/joystick.

Pan/Tilt direction keys

Digital/Optical zoom switch

Zoom in / Zoom out

Near/Far focus

Pan/Tilt/Zoom speed

Preset/Tour/Command menu

6 SEARCH PLAYBACK

1. Enter **Playback** screen, select a View or drag a camera to **Display** area.
2. Drag the **Time Bar** to find specific scene, and use the controls on **Control** panel to play and search.

● **Apply a preset view:** Left-click on a view

● **Watch a camera:** Drag it into layout

● **Watch all cameras of an NVR site:** Click on the NVR

View

Device

Control

Display Area

Time Bar

Go to specific time

Go to current time

Previous Display event

Next

Search

Export video

Play speed

Time bar scale

Control

2012-05-20 23:52:22 095

10 Minutes

7 EXPORT VIDEO

1. Enter **Playback** screen, drag the **Time Bar** to video start point, right-click and select "**Mark Export Start**" on quick menu.
2. Drag to video end point, right-click and select "**Mark Export End**" on quick menu.
3. Right-click and select "**Export Video**".

1

2

3

4

5

Export Video

Export Settings

Time Duration: 2013/02/04 17:32:05 - 2013/02/04 17:38:59

Video Settings: Video Type AVI RAW

Device: MobileGo

111F_Entrance

211F_Lab

37F_Office Area A

47F_Office PTZ

57F_Office Area B

67F_Office Area All

77F_Entrance

87F_Entrance_Counter

911F_Entrance_Outer

10 ACTI

Office Site

Save Path: C:\Users\Wen.Cheng\Desktop

Apply

4. Set the export settings, and then click "**Apply**".

NOTE: The exported video and snapshots are saved to your designated file location, the default location is Windows desktop.