





Bluetooth BTS700



Portable Bluetooth Speaker

Package Contents

- BTS700 Portable Bluetooth Speaker
- Micro USB to USB and
- 3.5 mm splitter cable
- User Manual

Overview Micro USB Slide switch Power Input / Line-in AUX IN mode: RT model Front View Back View

 
LED Indicators

	Indicator	Status
4	RED	Charging
'	GREEN	Fully Charged
AUX/	Flashing	Pairing Mode
BT	BLUE	_
	BLUE	Connected /
		AUX IN Mode

How to Charge BTS700

- 1. Plug micro USB Tip from the included cable to the micro USB slot from BTS700.
- 2. Plug USB Tip from the included cable to USB compatible wall charger with 0.5A current output(DC 5V, 500mA).
- 3. When the BTS700 is fully charged, disconnect the USB Cable.

Note: Approximately 1-2 hours required for full charge. Battery will last up to 6 hours when connected wirelessly and up to 10 hours when connected



Play Audio from Bluetooth Device

1. Switch the Bluetooth Speaker to the BT mode. The speaker is discoverable and ready for pairing. The status indicator blinds blue.



- 2. On your Bluetooth device, turn on Bluetooth and scan for devices in its Bluetooth menu.
- 3. When the "Ye!!-BTS" appears on the device list of your Bluetooth device, select "Ye!!-BTS". (If a pass code is requested, enter 1234.) The status indicator turns solid blue after pairing is established. The speaker is ready to play music.

Example: iPad / iPhone / iPod Touch Press Settings > General > Bluetooth > Bluetooth ON > Ye!!-BTS > Enter PIN: 1234 > Pair





Example: Android 4.03 Ice Cream Sandwich Smartphone Press Settings > Bluetooth ON > Scan > Ye!!-BTS > Enter PIN: 1234 > Settings > Check the Media audio box



S ≥ S ≤ S ≤ S ± 17:20 Bluetooth pairing request					♦ MI (5 5 2/1	-	◆ № 55 % after	- 416
To	To pair with: BTS700				GT-19300 Rename Only visible to paired devices Vet - BTS			
Enter that device's PIN:					Paired devices Unpair			
(Try 0000 or 1234) PN containing letters or symbols				7	Yett - BTS Connected to media audio	*	Profiles	
				_			Media audio Connected to media audio	
		on other devi						
Ĺ	Cancel		OK					
				ų,				
	Canoel		ОК					
	Canoel	English	OK	OŽ0				
37	Cancel ED	English 2	0K	Π •3				

Reconnecting Bluetooth Device

 
Keep in mind that the Bluetooth Speaker has a 33 feet range in open field. If you move out of range or turn off the Bluetooth feature on your Bluetooth device, the Bluetooth Speaker will disconnect from your device. To reconnect, simply follow the instruction in the "Play Audio from Bluetooth Device" section.

Changing Connected Bluetooth Device

- 1. Disable the Bluetooth function of your Bluetooth device.
- 2. The Bluetooth Speaker can now be connected to the different Bluetooth device.
- 3. Following the instructions in the "Play Audio from Bluetooth Device" section

Play Audio from Non-Bluetooth Device

- 1. Switch the Bluetooth Speaker to the AUX IN mode. The status indicator turns solid blue.
- 2. Connect the Bluetooth Speaker and your non-Bluetooth audio device with the included Micro USB to USB and 3.5 mm splitter cable. The speaker is ready to play music.



Specifications			
Model No.	BTS700 Ye!!-BTS		
Output Power	3W		
Power Capacity	1,000 mAh		
Input Voltage	DC 5V / 1A		
Charge Time	1 – 2 hours		
Playback Time	Up to 6 hours		
	on Bluetooth		
	Up to 10 hours		
	on Line-in		
Operating Distance	up to 33 feet		
	(10 metres)		
Bluetooth Version	Bluetooth 3.0		
	with EDR		
Dimensions	61 x 61 x 54 mm		
Net Weight	133 a		

Troubleshooting

No connection between Bluetooth Speaker and your Bluetooth device.

- Make sure the Bluetooth Speaker is fully
- Make sure the BT mode is switched on.
- · Make sure your Bluetooth device is

available and supports Bluetooth Advance Audio Distribution profile.

• Make sure the Bluetooth Speaker is within range of your Bluetooth device.

Audio is not coming out from the Bluetooth Speaker after Bluetooth device successfully paired.

· Make sure the Bluetooth device volume is set to a comfortable listening level.

Audio is not coming out from the Bluetooth Speaker after the non-Bluetooth device connected with the Micro USB to USB and 3.5 mm splitter cable.

- · Make sure the Micro USB to USB and 3.5 mm is correctly and firmly connected to the Bluetooth Speaker and
- non-Bluetooth device.
- · Make sure the non-Bluetooth device is set to a comfortable listening level.
- Audio is coming out with abnormal noise and sound quality. Try to change up the battery of Bluetooth speaker.

Precautions

- 1. The radio waves emitted by the Bluetooth Speaker and Bluetooth device can affect operation of nearby electronics including medical devices.
- 2. Keep the unit in a cool, dry place.

For more information, please visit www.yelltowin.com

Designed by Ye!! in Hong Kong Assembled in China







