

# AIRFLO<sup>®</sup>

## Instruction Manual Vacuum Cleaner




**MODEL AFV 804S**

### Safety directions:

1. Please read Instruction manual before commencing operations
2. Before use, make sure the dust cup is properly installed.
3. Make sure the power supply is 220-240V,50/60Hz
4. Do not vacuum water and inflammable material.
5. Do not vacuum burning material and ashes.
6. Do not use the machine without filter.
7. Do not use the dust cup if it is damaged.
8. Do not store or use the machine in high temperature places.
9. Do not let children or infirmed persons operate the cleaner without supervisory instructions.
10. If abnormal noise, or burning smell, smoke or any other failure is found during operations, you should turn off the switch and unplug it. Then contact your service center for repair. Do not repair it yourself.
11. If the supply cord is damaged, it must be replaced by the manufacturer of its service agent or a similarly qualified person in order to avoid a hazard.

### Introduction of Product:

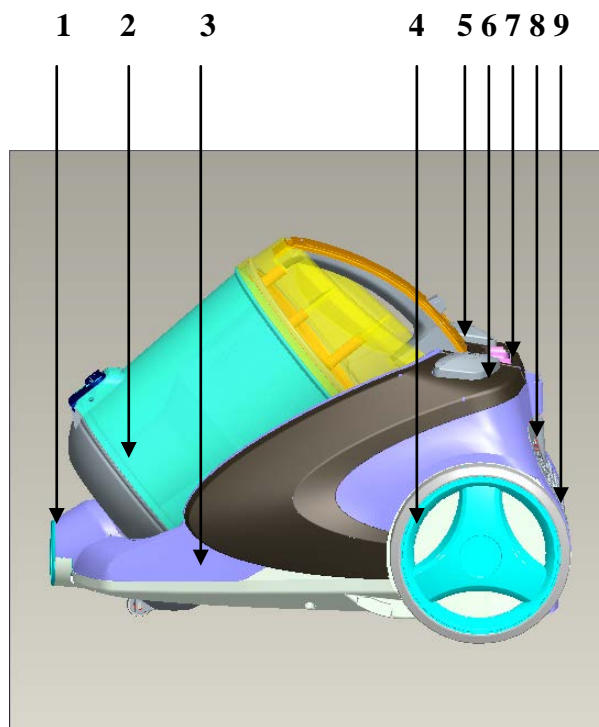

- |                            |                            |                       |
|----------------------------|----------------------------|-----------------------|
| 1. hose connection         | 2. dust cup                | 3. dust cup cradle    |
| 4. rubber floor protectors | 5. on/off button           | 6. cord rewind button |
| 7. Speed control           | 8. external filter housing | 9. power cord         |

### Operation methods:

1. Connect the hose by inserting it into the suction inlet.. (Fig 1)
2. Connect the telescopic rod to the hose elbow.. (Fig 2)
3. Connect the floor nozzle tool or any other accessories to the telescopic rod for different cleaning purpose: Floor brush for carpet or floor (Fig3); combined brush & nozzle for sofa, walls, curtains, corner or space between furniture and etc.(Fig4)
4. To start the machine: insert the power plug into the wall socket and depress the on/off button .(Fig 5)
5. To rewind the cord press the cord rewind button marked with cord symbol. (Fig 6)



1



2



3



4



5



6

### Maintenance:

1. Empty the dust cup after every use, be sure not to over fill it during cleaning。
  - To remove dust cup from cradle press the cup locket (图 1) and pull in upward direction.
  - Twist the cup to separate from the top handle cover (图 2)
  - To remove the internal filter cover, twist and separate, and then twist HEPA filter to remove and cleaner (图 3、 4)
2. To remove the rear filter, depress lock on the filter cover and the filter will be assessable. Be sure to clean and replace the filter for maximum efficiency. (Fig 5,6)



1



2



3



4



5



6

**WARNING:**

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.

Warranty Information

**The warranty:**

The manufacturer provides warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year , starting from the date on which the appliance is sold to the end user.

The warranty only covers defects in material or workmanship.

The repairs under warranty may only be carried out by an authorized service centre. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.

The warranty will not apply in cases of:

- Normal wear and tear
- Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
- Use of force, damage caused by external influences
- Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
- Partially or completely dismantled appliances

Correct Disposal of this product



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.