



LED TV

MIIAVISION

32"

HD Ready



MIIA MTV-X32DLEHD

ENG Instruction manual

mia®



 
Before operating this product, please read user manual completely.






Mounting the Stand

1. Place the TV with display side down on the table or desk (flat surface), and attach the Part B of stand to the Part A of the TV.

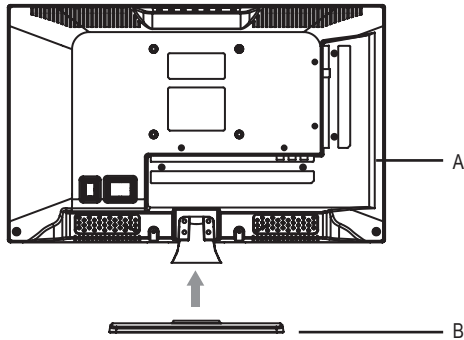

 2. Insert the stand and secure the stand to the TV by using included 4 screws.

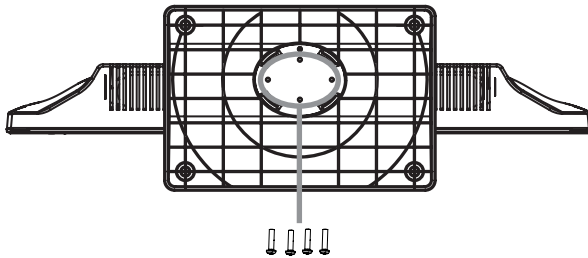

Note: Be sure to store the screws in a safe place. Keep the screws away from small children.





Table of Contents

Table of Contents.....	1
Safety Informations.....	2
Supplied Accessories.....	4
Getting Started.....	5
TV Operation and System Setup.....	10
Media Operation.....	34
Recorder Operation.....	36
USB Multimedia Playback Format.....	37
PC Setting.....	38
Troubleshooting.....	39



Safety Instructions

CAUTION MARKING WAS LOCATED AT THE REAR OF THE APPARATUS.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral Triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION

DANGER OF EXPLOSION IF BATTERY IS INCORRECTLY REPLACED.
REPLACE ONLY WITH THE SAME OR EQUIVALENT TYPE.

USE OF CONTROLS OR ADJUSTMENTS OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.



WARNING

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS UNIT TO RAIN OR MOISTURE. DO NOT PLACE OBJECTS FILLED WITH LIQUIDS ON OR NEAR THIS UNIT.

SHOULD ANY TROUBLE OCCUR, DISCONNECT THE AC POWER CORD AND REFER SERVICING TO A QUALIFIED TECHNICIAN.

GB-2





Safety Instructions

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use this apparatus near water.
- 6) Clean only with a dry cloth.
- 7) Do not block any ventilation openings.
Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (Including amplifiers) that produce heat.
- 9) Do not defect the safety purpose of the polarized or grounding-type plug.
A polarized plug has two blades with one wider than the other.
A groundingtype plug has two blades and a third grounding prong.
The wide blade or the third prong is provided for your safety.
If the provided plug does not fit into your wall outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments / accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus.
When a cart is used, use caution when moving the cart / apparatus combination to avoid injury from tip-over.
- 13) Unplug this apparatus during lightning Storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatushas been damaged in any way, such as the power cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) To prevent electric shock, ensure the grounding pin on the AC cord power plug is securely connected.

 
GB-3






Supplied Accessories

Check the supplied accessories before installation.
In case of missing or damaged, please contact the dealer immediately.

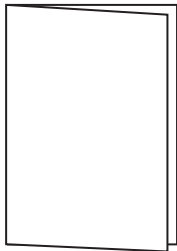

User Manual

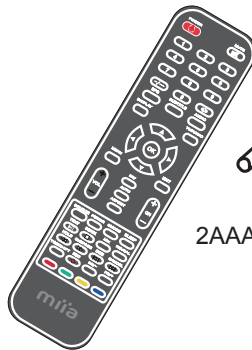 

Remote Control



2AAA Batteries



4 Screws

 
 
GB-4





Getting Started

Front View

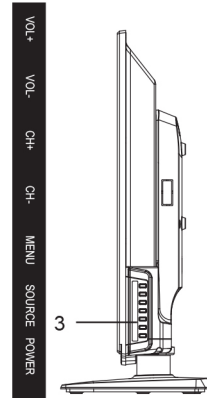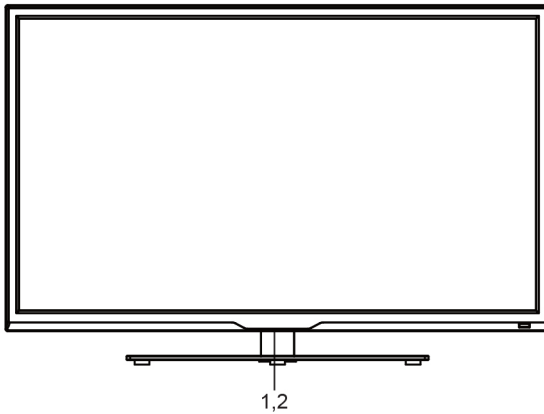

1. Remote Sensor

Do not block this sensor or the remote control will not work.

2. Standby Indicator

Indicates whether the unit is ON or in STANDBY (OFF) mode.

3. The functions of the buttons are described as follows:

POWER: Press to turn the unit on or off.

SOURCE: Press to select the input source of the TV.

MENU: Press to display the OSD menu, Press again to exit the menu.

CH+/-: Press to scan through channels.

VOL+/-: Press to adjust the volume.

Note: When select the input source, press **VOL+** button on the panel to confirm.

 
GB-5





Getting Started

Back View

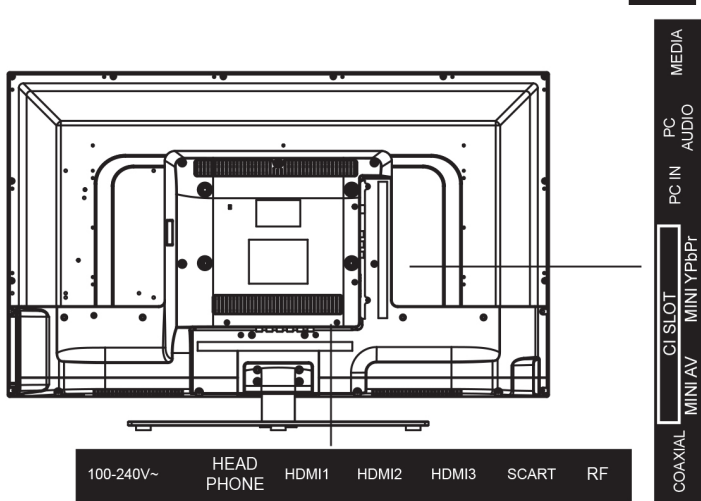

1. Power cord
2. Headphone Jack
3. HDMI Input Jack
Connecting of HDMI signal
4. SCART Jack
5. Antenna Input Jack
Connecting to extern antenna to receive the TV.
6. Coaxial Output Jack
7. CI SLOT
Insert CI card.
8. Mini AV Input Jack
Connecting for composite signal input in AV mode.
9. Mini YPbPr Input Jack
Connecting for component signal input in YPbPr mode.
10. PC Input Jack
Connecting to the PC output jack a personal computer.
11. PC Audio Input Jack
Connected to the audio output jack on a personal computer.
12. MEDIA
Connecting for USB device.

 
GB-6





Getting Started

The Remote Control

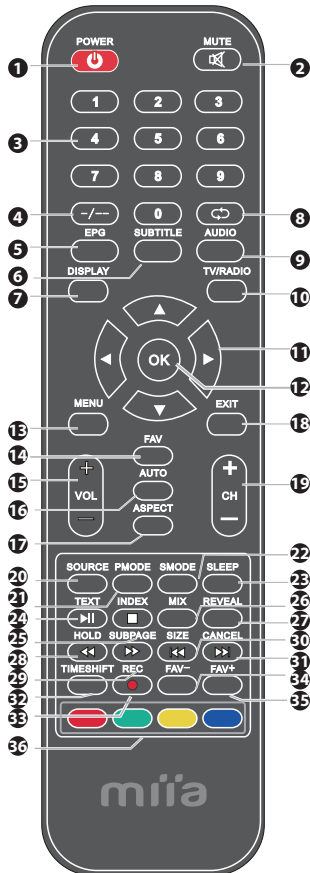

1. **POWER** button: Press to enter or exit the standby mode.

2. **MUTE** button: Press to turn on or off the audio output.

3. **Number buttons(0~9)**: Press to change the channel of the TV.

4. **-/--**: To select digital channel.

5. **EPG** button: Press to review scheduled programming for the current channel viewed.

6. **SUBTITLE** button: In DTV mode, press to select alternate subtitle languages during view/playback of a DTV program.

Note: Subtitle and teletext is only available if the service is provided by broadcast.

7. **DISPLAY** button: press this button to display information about the current mode on the screen.

8. **↺** button: In the DTV mode, press to return to the channel last viewed.

9. **AUDIO** button: Press to select the different audio.

10. **TV/RADIO** button: Switch between DTV and RADIO mode.

11. **Direction buttons**: Press the direction buttons to select menu options or settings.

12. **OK** button: Press to confirm selection in the setup menu.

13. **MENU** button: Press to enter or exit the setup menu.

14. **FAV** button: Displays the selected favorite programmers.

 
GB-7





Getting Started

The Remote Control

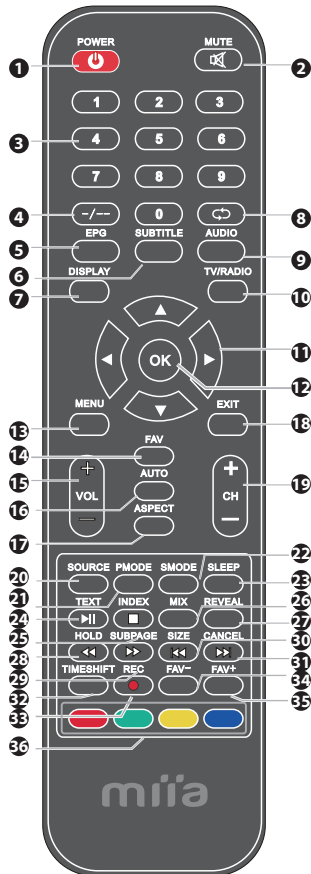

15. **VOL+/-** button: Press to increase or decrease the volume.

16. **AUTO** button: Press to do auto configuration directly(PC-RGB MODE).

17. **ASPECT** button: Select from the following modes settings: Auto / 16:9 /4:3 / Full Screen / Zoom.

18. **EXIT** button: Press to exit all the OSD on the screen.

19. **CH+/-** button: Press to skip the next/previous channel.

20. **SOURCE** button: Press to select enter the source selecting menu.

21. **P.MODE** button: Press to select the picture mode.

22. **S.MODE** button: Press this button to change the audio mode.

23. **SLEEP** button: This feature allows you to set up sleep time.

24. **TEXT** button: Switch on or off the teletext mode.

▶II: Press to start playback or pause (In MEDIA mode).

25. **INDEX** button: Request the index page (Teletext mode).

■ button: Press to stop playing (In MEDIA mode).

26. **MIX** button: Mix function in teletext mode.

 
GB-8





Getting Started

The Remote Control

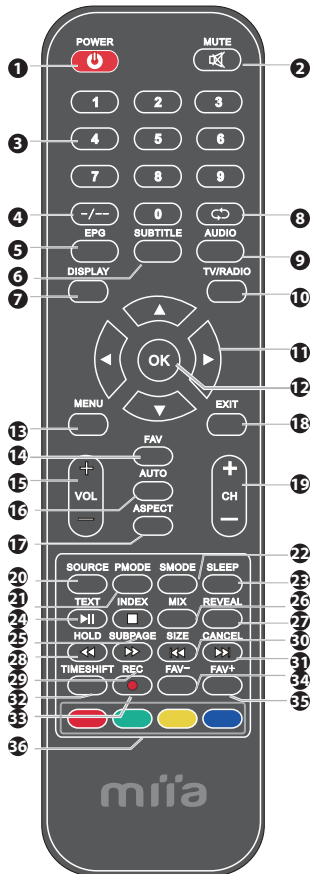

27. **REVEAL** button: Reveal hidden information.

28. **HOLD** button: Freeze a multi-page passage in Teletext.

◀◀ : Playing backward fast.(In MEDIA Mode)

29. **SUBPAGE** button: Display the subpage on the teletext screen.

▶▶ : Playing backward fast.(In MEDIA Mode)

30. **SIZE** button: Change display size in teletext mode.

◀◀◀ : Skip backward button.(In MEDIA mode)

31. **CANCEL** button: Cancel function in teletext mode.

▶▶▶ : Skip forward button.(In MEDIA mode)

32. **TIMESHIFT** button: Press it to enter timeshift function.

33. **REC** button: Press to select enter the recorded file.

34. **FAV-** button: Press to scan to a lower channel from your list of favorites.

35. **FAV+** button: Press to scan to a higher channel from your list of favorites.

36. **Color buttons**: Access the Teletext items or program edit when using Digital/Freeview TV channels.





TV Operation and System Setup

Auto Installation


If this is the first time you are turning on the TV and there are no programs in the TV memory, the "Auto Installation" menu will appear on the screen.

These are 5 setups as follow:

Setup1

Press ▼/▲ button to select TV Location.

 Press **OK** button or **GREEN** button to enter setup2 menu.

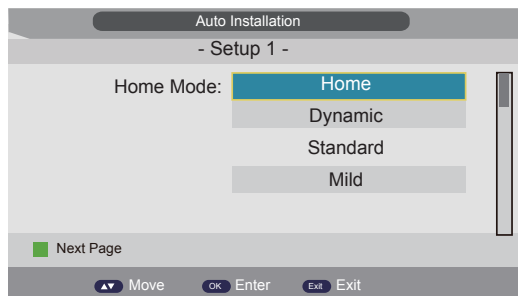


Setup2

Press ▼/▲ button to select country.

Press **RED** button to enter setup1 menu.

 Press **OK** button or **GREEN** button to enter setup3 menu.

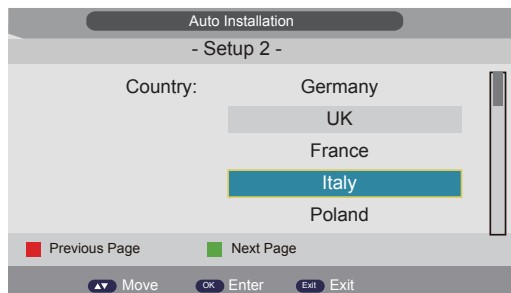

Setup3

Press ▼/▲ button to select Language.

Press **RED** button to enter setup2 menu.

 
Press **OK** button or **GREEN** button to enter setup4 menu.

GB-10





TV Operation and System Setup

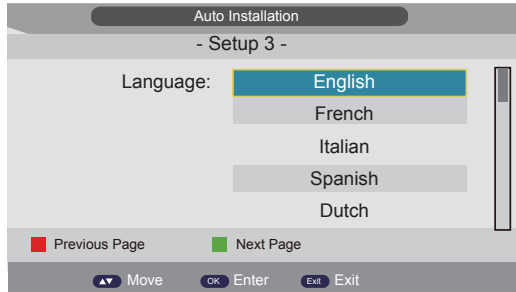


Setup4

Press ▼/▲ button to select Auto Power Off.

Press **RED** button to enter setup3 menu.

 
Press **OK** button or **GREEN** button to enter setup5 menu.

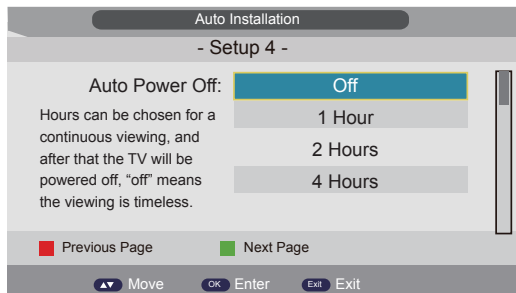

Setup5

Press **RED** button to enter setup4 menu.

 Press **OK** button to enter Auto Search, the menu will appear as follow:

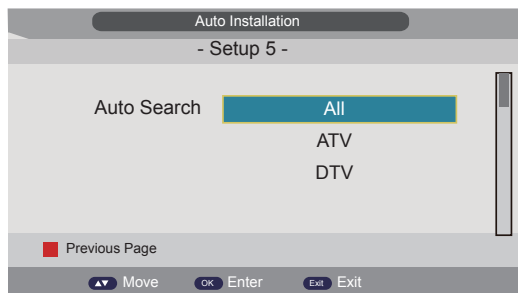

GB-11



 


TV Operation and System Setup

VIDEO MENU OPTIONS (PICTURE)

Press **MENU** button on the front panel or on the remote control to display the main menu.

1. Press **▲/▼** button to select **PICTURE** in the main menu.
2. Press **▶** button and **▲/▼** button to select the option that you want to adjust in the **PICTURE** menu.
3. Press **▲/▼** button to adjust.
4. When you are satisfied with your adjustment, press the **MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.

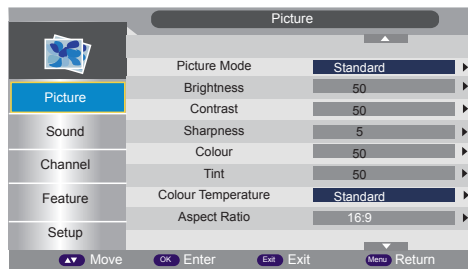

Picture Mode

Select Picture Mode in PICTURE menu.

EASY WAY: You may select the picture mode directly by pressing **PMODE** button repeatedly.

Brightness

Press **▲/▼** button and then use **◀/▶** to adjust the brightness of the picture.

Contrast

Press **▲/▼** button and then use to **◀/▶** adjust the contrast of the picture.





TV Operation and System Setup

Colour

Press ▲/▼ button and then use ◀/▶ to adjust the colour saturation.
NOTE: This option is invalid in PC mode, and it will be shown in gray.

Sharpness

Press ▲/▼ button and then use ◀/▶ to adjust the sharpness of your TV.
The suitable sharpness can make the picture look more clearer.

Tint

Press ▲/▼ button and then use ◀/▶ to adjust the tone of colour when your system is in NTSC.

Colour temperature

Press ▲/▼ button and then use ◀/▶ to adjust the optimum colour temperature mode to suit your eyes for viewing.
The picture looks more brighter when the COLOUR TEMPERATURE is higher.

Aspect Ratio

Press ▼/▲ button to select Aspect Ratio, then press OK button or ▶ button to enter.

Noise Reduction

Press ▼/▲ button to select Noise Reduction, then press OK button or ▶ button to enter and press ▼/▲ button to select Off, Low, Middle, High.

 
AUDIO MENU OPTIONS (SOUND)

Press **MENU** button on the front panel or on the remote control to display the main menu.

1. Press ▲/▼ button to select **SOUND** in the main menu.
2. Press ▶ button and ▲/▼ button to select the option that you want to adjust in the **SOUND** menu.
3. Press ▲/▼ button to adjust.
4. When you are satisfied with your adjustment, press the **MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.



TV Operation and System Setup

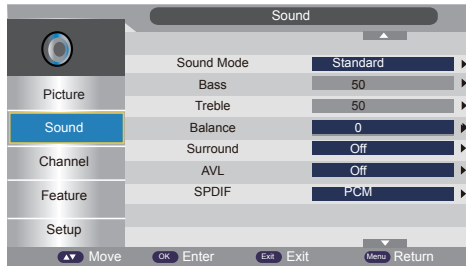

Sound mode

Select Sound Mode in **SOUND** menu. (Available sound mode: User, Standard, Movie, Music, Speech)

EASY WAY: You can press **SMODE** button repeatedly on the remote control to select the Sound Mode directly.

BASS

Press **▲/▼** button and then use **◀/▶** to increase or decrease the level of the lower-pitched sounds.

TREBLE

Press **▲/▼** button and then use **◀/▶** to increase or decrease the level of the higher-pitched sounds.

BALANCE

Press **▲/▼** button and then use **◀/▶** to adjust the audio output between left and right speakers.

Surround

Press **▲/▼** button to select Surround, then press OK button or **▶** button to enter and press **▲/▼** button to select On or Off.

AVL

Press **▲/▼** button to select AVL, then press OK button or **▶** button to enter and press **▲/▼** button to select On or Off.

SPDIF

Press **▲/▼** button to select SPDIF, then press OK button or **▶** button to enter and press **▲/▼** button to select.



 


TV Operation and System Setup

CHANNEL MENU OPTIONS


Press **MENU** button on the front panel or on the remote control to display the main menu.

1. Press **▲/▼** button to select **CHANNEL** in the main menu.
2. Press **▶** button and **▲/▼** button to select the option that you want to adjust in the **CHANNEL** menu.
3. Press **▲/▼** button to adjust.
4. When you are satisfied with your adjustment, press the **MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.

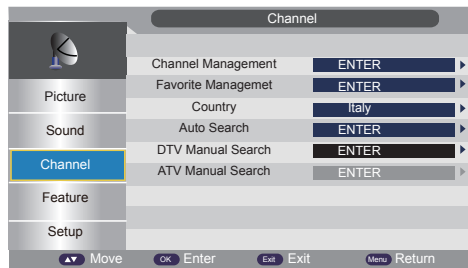

Channel Management

 Press **▲/▼** button to select Channel Management, then press **OK** button or **▶** button to enter.

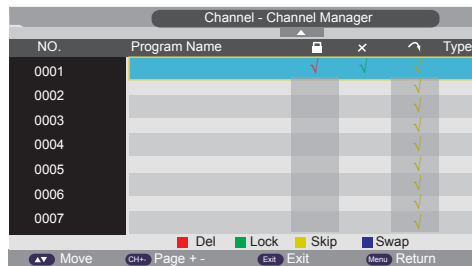

Press **RED** button to set the current channel to delete, if the current channel already delete, Press **RED** button again will cancel delete.

Press **GREEN** button to set the current channel to lock, if the current channel already lock, press **GREEN** button again cancel lock.

Press **YELLOW** button to skip the current channel. If the current channel already skip, press **YELLOW** button again wil cancel skip.

 
Press **BLUE** button to swap the channel posttion.






TV Operation and System Setup

If there is delete channel logo, press MENU button button, the menu will appear as follows:

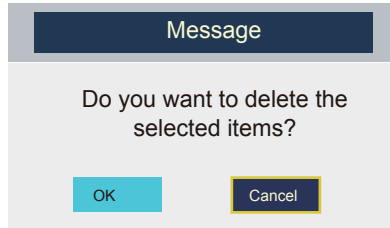


 Press ◀ button to choose OK, press ▶ button choose cancel, press OK button to confirm.

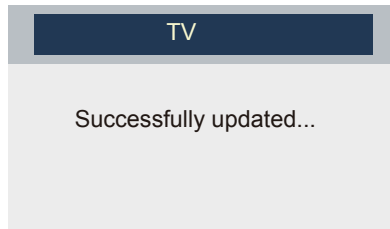

Favorite Manager

 Press ▲/▼ button to select Favorite Manager, then press OK button or ▶ button to enter.

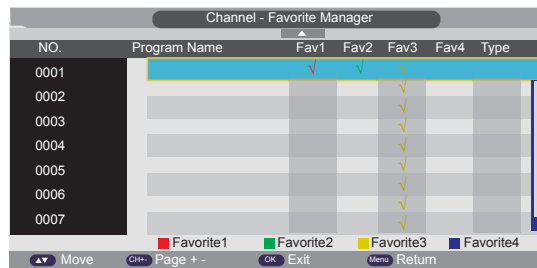



TV Operation and System Setup

Press ▲/▼ button to select Channel, press RED button to set to Fav1.
Press ▲/▼ button to select Channel, press GREEN button to set to Fav2.
Press ▲/▼ button to select Channel, press YELLOW button to set to Fav3.
Press ▲/▼ button to select Channel, press BLUE button to set Fav4.
if the current channel already be one of your favorite channel, press the RED/
GREEN /YELLOW/BLUE button again will set it to a normal channel.
Press MENU button or EXIT button, the successfully updated menu will appear.

Country

 
Press OK button or ► button to enter, then press ▲/▼ button to select appropriate country, and press OK or ► button to confirm.

TV Connection

Press OK button or ► button to enter, then press ▲/▼ button to select appropriate TV connection, and press OK or ► button to confirm.

Auto Search

Press ▲/▼ button to select Auto Search, then press OK button or ► button to enter (When the System Lock is on, please input the default password "0000").

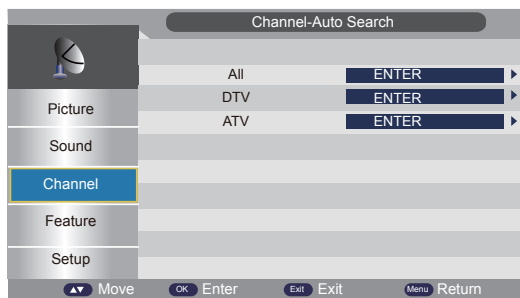


Press ▲/▼ button to select All, DTV, ATV, then press OK button or ► button to enter.





 TV Operation and System Setup

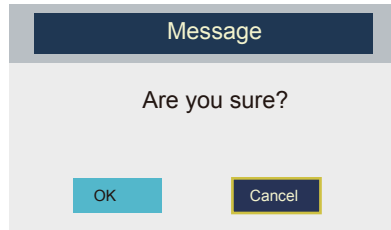


Auto Search selected items if select "OK" and press OK button, otherwise select CANCEL to return back to previous page. After a few second, the menu will appears follows:



When auto search finish, the save successful menu will appear a few second.

ATV Manual Search

 Press ▲/▼ button to select Analog Manual Search, then press OK button or ► button to enter (When the System Lock is on, please input the default password"0000").

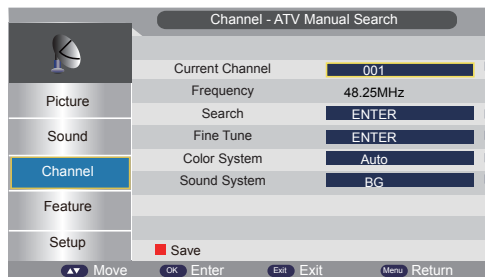

Current Channel

Press OK or ► to enter. Then press ▲/▼ button to select Current Channel. Press ▲/▼ button to select Current Channel, then press OK button or ► button to select.

 




TV Operation and System Setup


Search

Press ▲/▼ button to select Search, then press OK button or ► button to enter, the menu will appear as follows, and then press ◀/▶ to scan the channel.

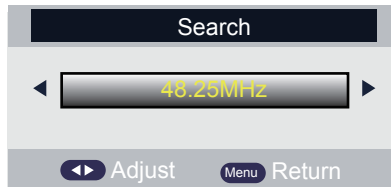

Fine Tune

 Press ▲/▼ button to select Fine Tune, then press OK button or ► button to enter, the menu will appear as follows:

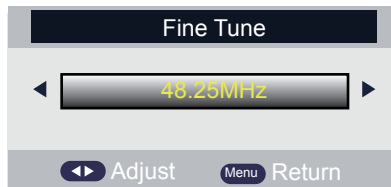

Press ◀/▶ button shortly to adjust program frequency, press MENU button to return back to the previous menu.

Note: Press **RED** button to save the result of the adjustment.

Color System

Press ▲/▼ button to select Color System, press **OK** button or ► button to enter the sub menu.

Press ▲/▼ button to select Auto/PAL/SECAM, then press **OK** button or ► button to confirm.

Sound System

Press ▲/▼ button to select Sound System, and press **OK** button or ► button to enter the sub menu.

Press ▲/▼ button to select BG, DK, L, L'. then press OK or ► button to confirm.





TV Operation and System Setup

FEATURE MENU OPTIONS

Press MENU button on the front panel or on the remote control to display the main menu.

1. Press ◀/▶ button to select **FEATURE** in the main menu.
2. Press ▲/▼ button to select the option that you want to adjust in the **FEATURE** menu.
3. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **MENU** button to return to the previous menu or press the **EXIT** button to exit the main menu.

 


Lock

Press ▲/▼ button to select Lock, press **OK** button or ▶ button to enter the sub menu.

Then press ▲/▼ button to select On or Off (please input the default password "0000").

And press **OK** button or ▶ button to confirm.

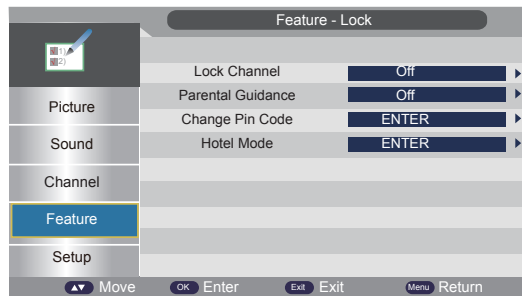



TV Operation and System Setup

 
Parental Guidance

Press ▲/▼ button to select Parental Rating, press OK button or ► button to enter the sub menu.

Then press ▲/▼ button to select Rate (From 4-18, or OFF). Then press OK button or ► button to confirm.

Change Pin Code

Press ▲/▼ button to select Change Pin Code, then press OK button or ► button to enter, and Change Pin Code menu will appear as follows:

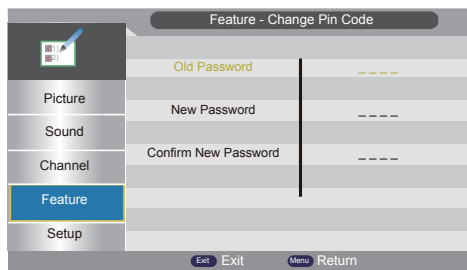

Input old password at "Old Password", (if the old password is incorrect, the password will not be allowed to modify).

 
Input new password at "New Password".

Input new password again at "Confirm New Password", if new password and confirm new password consistent.

The successfully updated menu will appear a few second, otherwise, the menu will display the password mismatch.

Language

Press ▲/▼ button to select Language, then press OK button or ► button to enter the sub menu.

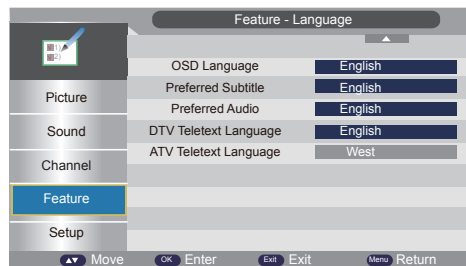

GB-21





TV Operation and System Setup

OSD Language

Press ▲/▼ button to select OSD Language, press OK button or ► button to enter the sub menu.

then press ▲/▼ button to select, then press OK button or ► button to confirm.

Preferred Subtitle

Press ▲/▼ button to select Preferred Subtitle, press OK button or ► button to enter the sub menu.

Then press ▲/▼ button to select, then press OK button or ► button to confirm.

Preferred Audio

Press ▲/▼ button to select Preferred Audio, press OK button or ► button to enter the sub menu.

then press ▲/▼ button to select, then press OK button or ► button to confirm.

DTV Teletext Language

Press ▲/▼ button to select DTV Teletext language, press OK button or ► button to enter the sub menu.

Then press ▲/▼ button to select, then press OK button or ► button to confirm.

ATV Teletext Language

Press ▲/▼ button to select ATV Teletext language, press OK button or ► button to enter the sub menu.

Then press ▲/▼ button to select, then press OK button or ► button to confirm.

 


TV Operation and System Setup

Setup Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select Setup in the main menu, then press **OK** button or **▶** button to enter.

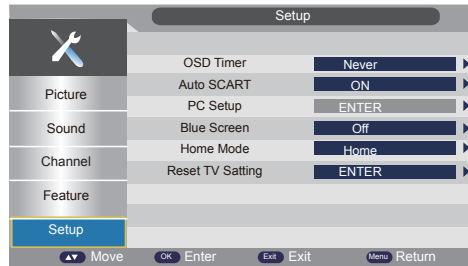

1. Press **▲/▼** button to select the option that you want to adjust in the Setup menu, then press **OK** button or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

OSD Timer

Press **▲/▼** button to select OSD Timer, press **OK** button or **▶** button to enter the sub menu.

Then press **▲/▼** button to select, then press **OK** button or **▶** button to confirm.

Auto SCART

Press **▲/▼** button to select Auto SCART, press **OK** button or **▶** button to enter the sub menu.

Then press **▶** button to select ON or Off, then press **OK** button or **▶** button to confirm.

PC Setup

Press **▲/▼** button to select PC Setup, press **OK** button or **▶** button to enter the sub menu.

Then press **▶** button to enter, then press **OK** button or **▶** button to confirm (when the PC Signal is connected).





TV Operation and System Setup

Blue Screen

Press ▲/▼ button to select Blue, Press OK button or ► button to enter the sub menu.

Then press ▲/▼ button to select On or Off, then press OK button or ► button to confirm.

 
Home Mode

Press ▲/▼ button to select Home Mode, Press ► button to adjust.


Reset TV Setting

Press ▲/▼ button to select Reset TV Setting, then press OK button or ► button to enter.

the password menu will appear (when the Child Lock is on).

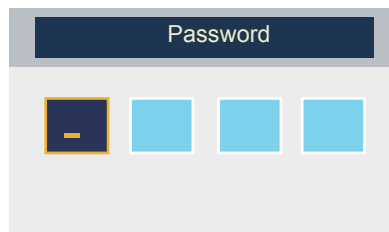

 At the cursor input password to enter default password is "0000".

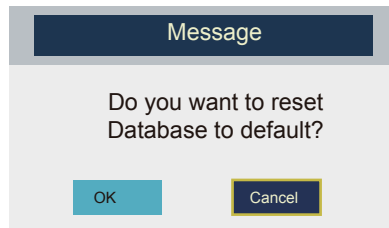

Return back to the previous menu if select "CANCEL" and press OK button.
If select "OK" and press OK button, the resetting menu will appear a few second.
Then the first time installation menu will appear.

 





TV Operation and System Setup

DTV

Press **DISPLAY** button on the remote control to display program information.



 Press **DISPLAY** button on the remote control again to display detailed information.

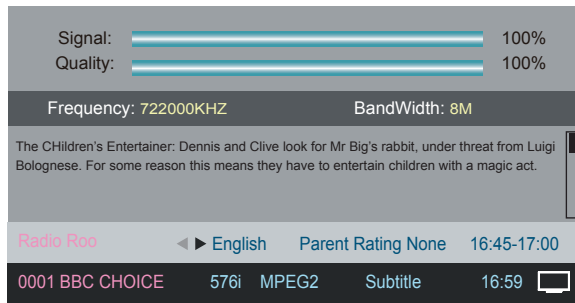


- Notes:
1. Picture menu and description are the same as that for TV source.
 2. Sound menu and description are the same as that for TV source
 3. Setup menu and description are the same as that for TV source.

CHANNEL MENU

Press **MENU** button to display the main menu.

 Press **▲/▼** button to select Channel in the main menu. Then press **OK** button or **▶** button to enter.

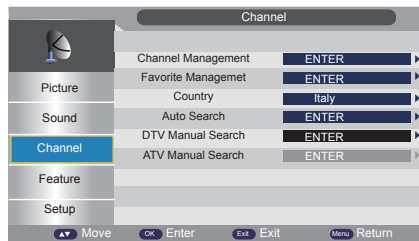

GB-25



 


TV Operation and System Setup

1. Press ▲/▼ button to select the option that you want to adjust in the channel menu, then press **OK** button or ► button to enter.
2. Press ◀/▶ button to adjust or press ► button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.


Channel Management

Press ▲/▼ button to select Channel Management, then press **OK** button or ► button to enter.

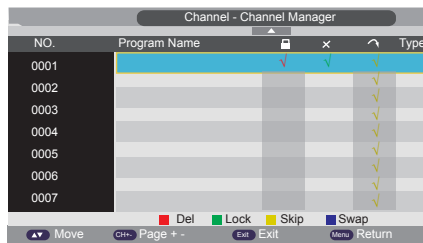

DTV Manual Search

 Press ▲/▼ button to select DTV Manual Search, then press **OK** button or ► button to enter. (when the System Lock is On, please input the default password "0000")

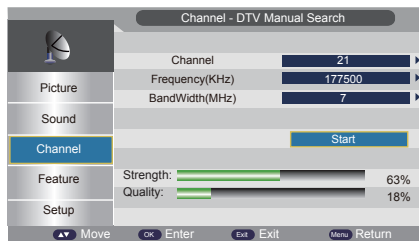

Channel

Press ▲/▼ button to select Channel, then press **OK** button or ► button to enter and press ▲/▼ to select channel, then press **OK** button or ► button to confirm.

Start

Press ▲/▼ button to select start, then press **OK** button or ► button to start scan, the channel tuning menu will appear a few second.



 


TV Operation and System Setup

Feature Menu

Press **MENU** button to display the main menu.

Press **▲/▼** button to select Feature in the main menu, then press **OK** button or **▶** button to enter.

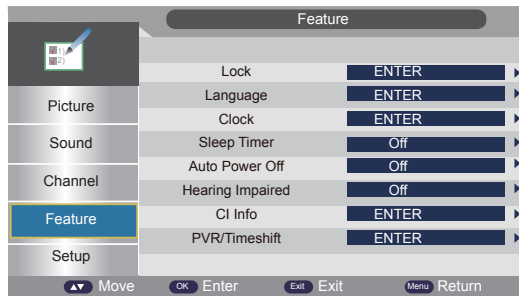

1. Press **▲/▼** button to select the option that you want to adjust in the Feature menu, then press **OK** button or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

 
Hearing Impaired

Press **▲/▼** button to select Hearing Impaired, press **OK** button or **▶** button to enter the sub menu.

then press **ENTER** button or **▲/▼** button to select On or Off, then press **OK** button or **▶** button to confirm.

CI Info

Press **▲/▼** button to select CI Info, then press **OK** button or **▶** button to enter, CI Info menu will appear as follows:

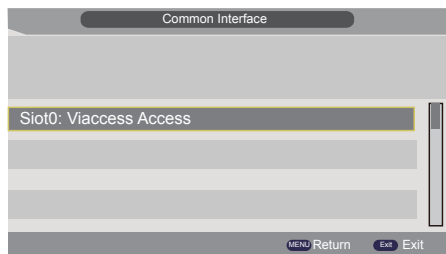


GB-27





TV Operation and System Setup

 Press **OK** button or ► button to enter.

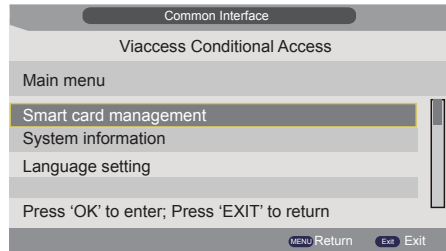


Notes:

1. This is just an example for reference, different CI module will have different CI menu.
2. Other menu and description are the same as that for TV source.

PVR/Timeshift

 Press ▲/▼ button to select PVR/Timeshit, then press **OK** button or ► button to enter.

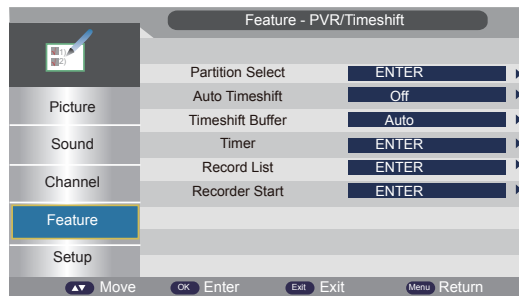

Partition Select

 
Press ▲/▼ button to select Partition Select, then press **OK** button or ► button to enter.

Then will appear as follows:





TV Operation and System Setup

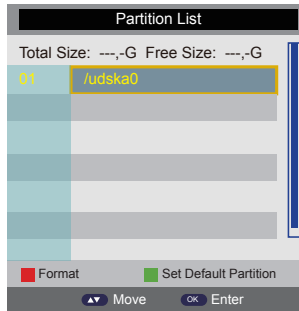

Auto Timeshift

Press ▲/▼ button to select Auto Timeshift, Press **OK** button or ► button to enter the sub menu.

then press ▲/▼ button to select the 'Off' or 'Auto', then press **OK** button or ► button to confirm.

Timeshift Buffer

 
Press ▲/▼ button to select Timeshift Buffer, press **OK** button or ► button to enter the sub menu.

then press ▲/▼ button to select (Auto, 30 Mins, 1hr, or 2hr), then press **OK** button or ► button to confirm.

Timer

Press ▲/▼ button to select Timer, then press **OK** button or ► button to enter.

Then will appear as follows:

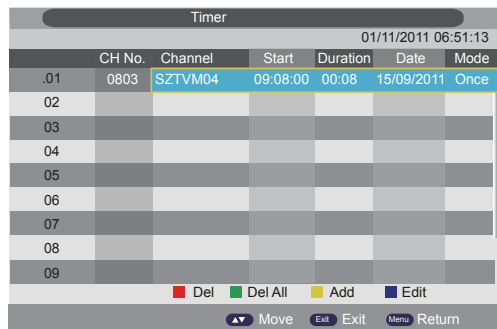




TV Operation and System Setup


Return back to the previous menu if select "CANCEL" and press **OK** button.
If select "OK" and press **OK** button to delete the selected program from the timer list.

 - Press **GREEN** button to delete all timers, the menu will appear as follows:

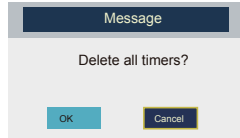

Return back to the previous menu if select "CANCEL" and press **OK** button.
If select "OK" and press **OK** button to delete all timers.

 - Press **YELLOW** button to add channel to the timer list, the menu will appear as follows:

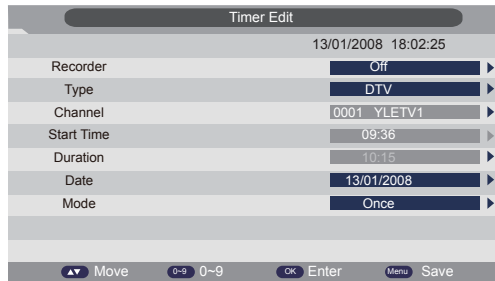

Recorder (When the PVR format support)

Press **▲/▼** button to select Recorder, then press **OK** button or **▶** button to enter and press **▲/▼** button to select Recorder or Reminder. Press **MENU** button to save the settings, press **EXIT** button to exit.

Press **▲/▼** button to select channel that you want to edit.

Press **BLUE** button to edit selected channel, the timer edit menu will appear.

Type

Press **▲/▼** button to select Type, then press **OK** button or **▶** button to enter and press **▲/▼** button to select DTV or Radio.

Program

Press **▲/▼** button to select Channel, then press **OK** button or **▶** button to enter and press **▲/▼** button to select channel which you want to add to the timer list.





TV Operation and System Setup

Start Time

Press ▲/▼ button to select Start Time, then press **OK** button or ► button to enter and press 0-9 button to input time.

Duration

Press ▲/▼ button to select Duration then press **OK** button to enter and press 0-9 button to input duration.

Date

 
Press ▲/▼ button to select Date, then press **OK** button to enter and press 0-9 button to input date.

Mode

Press ▲/▼ button to select Mode, then press **OK** button or ► button to enter and press ▲/▼ to select Once, Daily, Weekly, Monthly.

Record List

Press ▲/▼ button to select Record List, then press **OK** button or ► button to enter. Then will appear as follows:

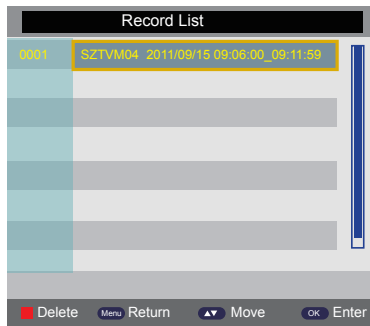




TV Operation and System Setup

PC

SETUP menu of VGA input (for setting the PC picture position).

 PICTURE:

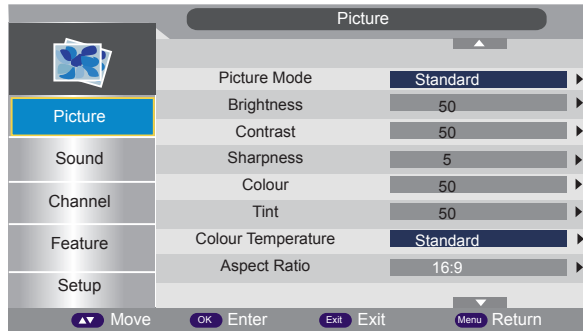


PICTURE menu is the same as that of TV mode expect the SHARPNESS, COLOR, and TINT are invalid (in gray), and COLOUR TEMPERATURE is valid (Available options: WARM, COLD and NORMAL).

The SOUND menu and FUNCTION menu are the same as those of TV mode. (video size, TT language are invalid in function and they are in gray).

PC MENU

Press **MENU** button on the front of panel or on the remote control to display the main menu.

 Press **▲/▼** button to select the **Setup** in the main menu, then press **▲/▼** button to select PC Setup.

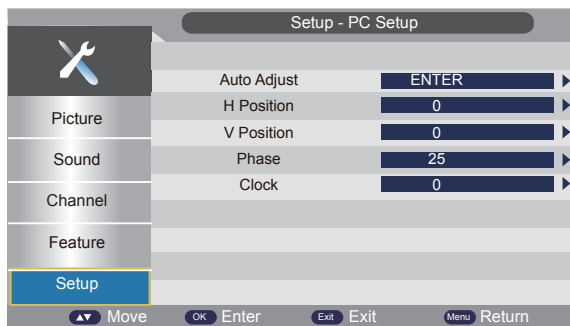

GB-32





TV Operation and System Setup

1. Press ▲/▼ button to select the option that you want to adjust in the **PC** menu.
2. Press ◀/▶ button to adjust.
4. When you are satisfied with your adjustment, press the **MENU** button.

AUTO Adjust

Press ▲/▼ button to select the **AUTO Adjust**, press **OK** button to adjust.
This option can set the above setting well automatically.

H Position

Press ▲/▼ button to select the **H Position**, you can adjust the horizon position of the picture by pressing ◀/▶ button.

V Position

Press ▲/▼ button to select the **V Position**, you can adjust the vertical position of the picture by pressing ◀/▶ button.

PHASE

Press ▲/▼ button to select the **PHASE**, press ◀/▶ button to adjust the picture.
(The picture will shake if the PHASE sets unsuitable).

 
CLOCK

Press ▲/▼ button to select the **CLOCK**, press ◀/▶ button to adjust the signal's transfer speed to make the picture looks well.



Media Operation


Press **SOURCE** button and **▲/▼** button to select the **MEDIA** in the Source menu.

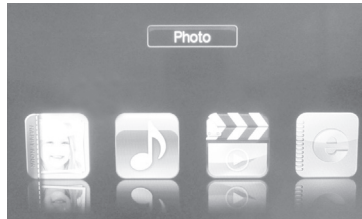

Press **◀/▶** buttons to select available device, then press **OK** to confirm your selected.


Compatible With: Photo, Music, Movie, e-Book.

 Photo player

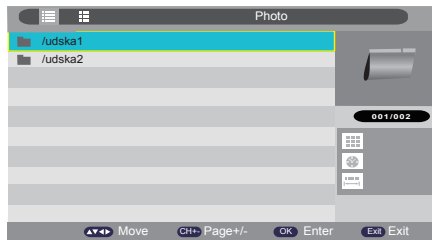

The user can play Photo files via the Photo Player. In left interface you can press **▲/▼** to select your desired photo and press **▶/▶** enter to play.

 Music player

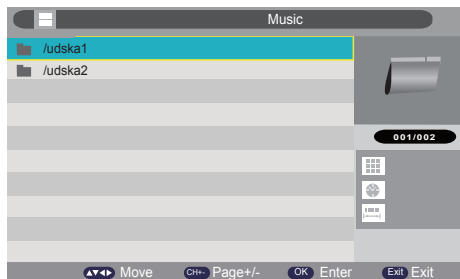

The user can play Moive files via the Music player In left interface you can press **▲/▼** to select your desired file and press **OK** to play.





Media Operation

While the Movie is playing, you can operate as below:

Press ▲/▼ to play Previous/Next file.

Press **Vol+/-** to control volume.

Press **⏮** to play/pause the movie.

Press **⏪** to return the upper menu.

Movie player



The user can play Movie files via the Movie Player. In left interface you can press ▲/▼ to select your desired file and press **OK** to play.

While the Movie is playing, you can operate as below:

 
Press ▲/▼ to play Previous/Next file.

Press **Vol+/-** to control volume.

Press **⏮** to play/pause the movie.

Press **⏪** to return the upper menu.

E-Book player

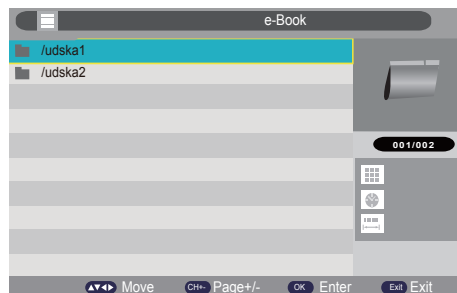

The user can play electronic book files via the E-BOOK. In left interface you can press ▲/▼ to select your desired file and press **OK** to play.





Recorder Operation

Note: You should insert the mobile hard disk or USB before you start to record.

Recorder

When watching DTV programme, you can press **REC** button on the remote control to record the current playing program.



If you want to stop RECORDING, press **■** button on you remote control. Then you'll see the picture below to decide whether to stop.



Timeshift Start

Press **TIMESHIFT** button to enter timeshift function. It's used when you out or want to watch the game again.

You can continue to watch the game from where you missed.

There will be a Prompt box on the left when you start to time shift. Press **■** button to stop timeshift.



USB Multimedia Playback Format

Type	Container	Video Decoder	Max Resolution
MOVIE	AVI	MPEG-4 ASP;H.264;DivX;Xvid WMV 9 / VC - 1	1366 x 768
		MPEG-4 SP	CIF (352 x 288) QCIF (176 x 144)
		MJPEG	1280 x 720
	MPEG 1/2	MPEG-1 Video MPEG-2 Video	1366 x 768
	MPEG4	MPEG-2 Video;MPEG-4 ASP; H.264;Xvid;MJPEG;H.264	1366 x 768
	WMV	WMV 9 / VC-1	1366 x 768
	Real Media	RV30 / RV40	1366 x 768
	Flash	Sorenson H.263; H.264	1366 x 768
	QuickTime	MPEG-4 ASP; H.264;MJPEG	1366 x 768
	ASF	WMV3 / WVC1; MP4S / M4S2	
	Matroska Video	MPEG-2 Video; MPEG-4 ASP; H.264;Xvid; DivX;DivX Plus HD; RV30 / RV40; WMV9 / VC-1;	1366 x 768
	DivX	MPEG-4 ASP; DivX; Xvid;	1366 x 768
TS Stream	MPEG-2 Video;H.264; WMV 9 / VC-1;	1366 x 768	

Type	Container	Max Resolution
PHOTO	JPEG	165370
	Progressive JPEG	61648
	BMP	101439
	PNG	101439
	GIF	
	TIFF	
MUSIC	WAVE	LPCM; ADPCM
	WMA	WMA STD; WMA Prof
	AAC	AAC-LC / HE-AAC
	AC3	AC3; E-AC3
	MPEG	MP1; MP2; MP3; AAC-LC; HE-AAC;
	Read Audio	AAC / HE AAC; Cook
	Ogg	Vorbis
	FLAC	FLAC
e-Book	TEXT	

 




PC Setting

Setting up Your PC Software (Based on Windows XP)

The Windows display-settings for a typical computer are shown below. But the actual screen on your PC will probably be different, depending upon your particular version of Windows and your particular video card. But even if your actual screen looks different, the same, basic set-up information will apply in almost all cases.

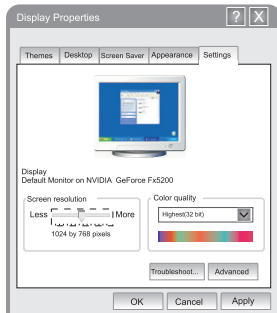

1. First, click on "Control Panel" on the Windows start menu.
2. When the control panel window appears, click on "Appearance and Themes" and a display dialog-box will appear.
3. When the control panel window appears, click on "Display" and a display dialog-box will appear.
4. Navigate to the "Settings" tab on the display dialog-box. The correct size setting (resolution) Optimum: 1360 x 768
If a vertical-frequency option exists on your display settings dialog box, the correct value is "60" or "60 Hz", Otherwise, just click "Enter" and exit the dialog box.

Display Mode

If the signal from the system equals the standard signal mode, the screen is adjusted automatically. If the signal from the system does not equal the standard signal mode, adjust the mode by referring to your Videocard user guide; otherwise there may be no video. For the display modes listed below, the screen image has been optimized by manufacturer.

Resolution Table

YPbPr	HDMI	PC
480i	480i	640*480 60Hz
480p	480p	640*480 72Hz
576i	576i	640*480 75Hz
576p	576p	800*600 60Hz
720p 50Hz	720p 50Hz	800*600 72Hz
720p 60Hz	720p 60Hz	800*600 75Hz
1080i 50Hz	1080i 50Hz	1024*768 60Hz
1080i 60Hz	1080i 60Hz	1024*768 70Hz
1080p 50Hz	1080p 50Hz	1024*768 75Hz
1080p 60Hz	1080p 60Hz	1360*768 60Hz





Troubleshooting

Carry out the problem-solving measures described in the following section before contacting Customer Support.

Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug.

Do not attempt to repair the device yourself.

SYMPTOM	CHECK ITEM
LED screen stays dark.	Make sure the unit is turned on and the connections are correct.
There is no sound.	Make sure the system connection is correct. Make sure the power of speakers is turned on.
There is no picture or picture move up and down unsteady.	Check if the connections with the external AV signal source are correct. Correctly set the items in the picture menu. Check if the video type input signal is not corresponding to the unit. Make sure the unit is turned on and in correct video type.
The remote control does not work.	Make sure there no obstructions between the remote control and the unit. Make sure the remote control is pointing at the unit. Make sure the batteries are inserted or the polarity is correct. Make sure the batteries are not weak. Replace the weak battery.

Other Notes:

Static or other external interfere may cause the player to behave abnormally. In this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player.

If the problems persist, then please disconnect the power and consult a qualified technician.





mia easylife

MODEL:MTV-X32DLEHD

Warranty Card Miia TV

Warranty

Dear Customer,

Congratulations on your purchase.

All products in the TV series are covered by Miia Warranty valid for two years from date of purchase. The original proof of purchase must always accompany requests for warranty service. In the first year of life of the product the procedure involves Pick Up, Repair & Return (pick up, repair and return) Fully paid by the manufacturer.

In the subsequent second year the customer must send at it's own cost the TV to the Technical Service Center indicated by the manufacturer. For the duration of the warranty the customer will still assemble the product in its original packaging to ensure a safely transportation to and from the Service Center.

The warranty does not cover consumables (such as batteries, bulbs, etc...) and will be deemed NOT VALID if the number of product series will be missing, altered, forged or unreadable.

This warranty does not apply to products damaged by negligence, carelessness, installation, improper use and transportation, products opened and tampered with. Neither are covered by warranty products damaged by the elements (fire, flood, etc...) overvoltage and overcurrent, lightning, and similar.

In the event that the product returned for service does not meet these conditions, or operates regularly, the Service Center reserves the right to charge you the cost of inspection and service together with the transportation cost.

The contents of this Warranty may vary without notice.

If the need should arise, please contact support on <http://www.miiastyle.com/>

MADE IN PRC
Produced, imported, distributed
by Futura Grafica spa
via Domenico Fontana n. 12
00185 Roma - Italy



Produced, imported and distributed by:
Futura Grafica spa
via Domenico Fontana 12
00185 Roma - Italy

MADE IN PRC

Modello	MTV-X32LEHD
Alimentazione TV	AC 100-240 ~ 50/60HZ
Consumo in funzione	35W
Consumo in standby	0,33W



Il prodotto funziona con batterie che rientrano nella direttiva europea 2006/66/CE e che non possono essere smaltite con i normali rifiuti domestici. Informarsi sulle normative locali relative alla raccolta differenziata delle batterie: un corretto smaltimento permette di evitare conseguenze negative per l'ambiente e la salute.



Corretto smaltimento del prodotto (rifiuti elettrici ed elettronici - Direttiva Europea WEEE-RAEE 2002/96/EC)
(Applicabile nell'Unione Europea e in altri Paesi europei con sistema di raccolta differenziata).

Il marchio riportato sul prodotto, sugli accessori o sulla documentazione indica che il prodotto ed i relativi accessori tecnici (quali il caricabatterie, cuffia e cavo USB) non devono essere smaltiti con altri rifiuti domestici al termine del ciclo di vita. Per evitare eventuali danni all'ambiente o alla salute causati dall'inopportuno smaltimento dei rifiuti, si invita l'utente a separare il prodotto ed i suddetti accessori da altri tipi di rifiuti e riciclarli in maniera responsabile per favorire il riutilizzo sostenibile delle risorse materiali. Per ulteriori informazioni sul trattamento, il recupero ed il riciclaggio di questo prodotto, contattare l'unità territoriale competente per il servizio di smaltimento o il negozio in cui è stato effettuato l'acquisto. Questo prodotto ed i relativi accessori elettronici non devono essere smaltiti unitamente ad altri rifiuti commerciali.