



Social

FB203 USER MANUAL

Table of Contents

Basic Information	3
<i>Brief Introduction.....</i>	<i>3</i>
<i>Safety Notice.....</i>	<i>3</i>
<i>Cleaning and Maintaining</i>	<i>3</i>
Before Using.....	4
<i>SIM.....</i>	<i>4</i>
<i>Phone Unlock.....</i>	<i>4</i>
<i>SIM Unlock.....</i>	<i>4</i>
Function menu Introduction	5
<i>File manager</i>	<i>6</i>
<i>Phonebook.....</i>	<i>6</i>
Internet service	7
<i>Call center.....</i>	<i>7</i>
Call history	8
Call settings	9
<i>Messaging</i>	<i>11</i>
Inbox.....	11
Drafts	12
Outbox	12
Sent messages	12
SMS settings	Error! Bookmark not defined.
<i>Multimedia</i>	<i>12</i>
Camera	12
Image viewer	13
Video recorder.....	13
Video player.....	13
Audio palyer	13
<i>Sound recorder</i>	<i>14</i>
FM radio	14

<i>Oganizer</i>	Error! Bookmark not defined.
Electric torch.....	14
Shortcuts	14
Calculator.....	15
Calendar	15
Alarm	15
<i>Settings</i>	15
Duad SIM settings.....	15
Phone settings	15
Network settings	17
Security settings	17
Restore factory settings.....	18
<i>Volume setting</i>	18

Basic Information

Introduction

Thank you for choosing the Social™ Micro world phone. Please read this manual to further familiarize you with the Social™ Micro world phone.

The Micro supports 2 SIM cards in addition to basic call functions. The Micro also provides the following features: phonebook, personalized ring tones, alarm, camera, image viewer, video recorder, video player, audio player, FM Radio, Micro SD card slot, calculator, calendar, torch (flashlight) and others.

Note: Our Company reserves without any prior notice the right to make changes on the contents of this manual.

Safety Notice

If your phone is lost or stolen, immediately notify your service provider to disable/disconnect your SIM card.

To further secure your phone please take precautionary measures, such as:

- Setting up a phone password.
- Setting up a SIM lock code.

Cleaning and Maintenance

Remember to keep the phone clean and avoid any dirty or dusty areas. To clean the screen please use approved cell phone screen cleaners.

Before Using

SIM

Before using your phone you must insert a valid SIM card.

NOTE: Make sure your SIM cards are installed properly; simply align the grooves of the SIM card to the SIM card slot.

Phone Unlock

In order to prevent illegal use of your phone, you can set a phone password. This function makes you enter the phone password in order to use the phone.

Enter the phone password; press the **OK key** to confirm. For example, if the phone lock password is set to 1122, then the following input: **1122 OK**.

SIM Unlock

In order to prevent illegal use of your SIM card you can set a PIN (Personal Identification Number) password. This function will block your SIM card from making any calls unless you input your password.

Enter the PIN password, and press the **OK key** to confirm. For example, if the PIN is set to 1234, then the following input: **1234 OK**

if you input the wrong password 3 times then your SIM will be locked by your network provider.

Note: If your SIM card is locked be sure to contact your network provider for solutions.

Inserting and Removing the SD memory Card

Use approved and compatible SD Memory cards.

1. Turn off the phone, remove the back cover and take out the battery.
2. Slide the SD card clip and unlock it.
3. Lift the clip, and insert the card into it with the side of golden contacts

facing down.

4. Put down the clip and slide it back to the locked in position.
5. Put in the battery and apply the back cover.

Powering On and off the phone

Startup and Shutdown: Press the power key (end call button) to start up or shut down the mobile phone. If you are prompted to input a PIN or UPIN, please enter the required password.

You're Phone:

109*44*13.1M



Main Menu Introduction

File manager

The File Manager allows you to play music or video files, view photo, copy/move/delete files, rename files and also send the files through the Bluetooth option

In the File manager, the screen will display two options; **Phone** and **Memory card**.

Select "**Phone**", and press the **OK key** to enter. The available options are as follows:

Open-This option will open/launch a specific file.

Format- This option will permanently delete all contents from the memory card.

Details- This option will display the specifics of a file such as: Name, size.

.

Phonebook

The phonebook allows you to store and edit contacts information.

The following is a list of options for the contacts in the phonebook:

View: View the details of a contact.

Send SMS message: Send SMS (Text message) to this contact.

Call: Call this contact.

Edit: Edit and save an existing contact.

Delete: Delete the contact.

Copy: Copy the current record to Phone/SIM.

Mark: Mark several or all contacts to send a text message to.

The following, is a list of options in the Phonebook settings:

Preferred storage: This option allows you to select where you would prefer to store your contacts.

Speed dial: This option allows you to set up speed dialing.

Extra numbers: This option allows you to set your voicemail number.

Memory status: View the usage and free Phonebook capacity information.

Copy contacts: This option allows you to copy your contacts in order to transfer them.

Move contacts: This option will allow you to move your contact list between SIM cards and the memory card.

Delete all contacts: This option allows you to delete all contacts from a SIM card or the phone.

Internet service

The Internet Service allows you to access the internet through mobile websites.

NOTE: When accessing websites you should enter an M. before the sites name in order to access a mobile version of that site. For example: m.yahoo.com, m.google.com, m.espn.com, etc.

The following, is a list of options in the Internet Settings:

Home page- This option will open your default.

Bookmarks- This option will display you bookmarked websites.

Input URL- This option allows you to enter the website address you want to visit.

Recent pages- This option will display the recent websites you have visited.

Settings- This option allows you to adjust the settings of the internet service, this includes: homepage, data account, browser options, preferences settings.

Call center

The call center will display all incoming, outgoing, and missed calls.

Call history: Missed calls

This menu will display all missed calls from both SIM 1 and SIM 2.

The following is a list options in the missed call list:

View- This option will allow you to view the details of a missed call.

Call- This option will allow you to call back the number of the missed call.

Send SMS message- This option will allow you to send a text message to the number of the missed call.

Save to Phonebook- This option allows you to add the number of the missed call to your phonebook.

Edit before call- This option will allow you to edit the number from the missed call before you call it back.

Delete- This option will allow you to delete the missed call from your call history.

Delete all- This option will allow you to delete your entire missed call history.

Advanced- This option will allow you to display the call time.

Call history: Dialed calls

This option will display all of your outgoing calls.

The following is a list options in the dialed call list:

View- This option will allow you to view the details of a dialed call.

Call- This option will allow you to call back the number of the dialed call.

Send SMS message- This option will allow you to send a text message to the number of the dialed call.

Save to Phonebook- This option allows you to add the number of the dialed call to your phonebook.

Edit before call- This option will allow you to edit the number from the dialed call before you call it back.

Delete- This option will allow you to delete the dialed call from your call history.

Delete all- This option will allow you to delete your entire dialed call history.

Advanced- This option will allow you to display the call time.

Call history: Received calls

This option will display all of your incoming calls.

The following is a list of options in the incoming call list:

View- This option will allow you to view the details of a received call.

Call- This option will allow you to call back the number of the received call.

Send SMS message- This option will allow you to send a text message to the number of the received call.

Save to Phonebook- This option allows you to add the number of the received call to your phonebook.

Edit before call- This option will allow you to edit the number from the received call before you call it back.

Delete- This option will allow you to delete the received call from your call history.

Delete all- This option will allow you to delete your entire received call history.

Advanced- This option will allow you to display the call time.

Call settings

The call settings option will allow you to adjust the following settings as you like:

Call waiting

This option allows you to adjust the status of your call waiting.

NOTE: For more information on call waiting, please contact your service provider for more information.

Activate- This allows you to turn on the call waiting feature.

Deactivate- This allows you to turn off the call waiting feature.

Query status- This allows you to see the current on/off status of the call waiting feature.

Call divert

This option allows you to enable a call forwarding feature.

Note: Not all service providers support a call forwarding function, so please contact your service provider for more information on this.

Activate- This option will allow you to set the number you would like your calls forwarded to, and also lets you turn this function on.

Deactivate- This option allows you to turn the call divert feature off.

Query status- This option allows you to see the status of the call divert feature.

Call barring

This option will allow you to add phone numbers to a block list, which will completely block all calls from that number.

NOTE: Some service providers may not provide this service, please contact your service provider for information on this feature.

Line switching

This option allows you to switch between calls on either SIM card.

Advanced settings

Auto redial: This option allows the phone to automatically redial a failed call. This feature will automatically redial that number 10 times

Call time reminder: This option allows you to have an audio call time reminder during a call. You can set the reminder to beep anywhere between every 1- 300seconds while on a call.

So for example if you set this to 60 seconds, and you are on a 3 minute call then you will hear a beep 3 times during the call to remind you how long you have been talking. The following I the option list for this feature:

Off- This allows you to turn this function off.

Single- This option will allow you to have a single reminder to up to 3 minutes.

Periodic- This is the option that you can set to have the call time reminder throughout your entire call, you can set the reminder hear to up to every 3 minutes.

Messaging

The messaging feature will display all of your outgoing and incoming text and picture messages.

The following is a list of options in the messaging feature:

Messaging-Write message

This option allows you to compose a new text message (SMS).

Send to- After composing the text message, this option will allow you to choose who you want to send it to.

Input method- This option allows you to choose the text when composing a text or picture message.

Messaging-Inbox

The inbox will display all of your received messages SMS and MMS.

The following is the list of options in this menu:

View- This option allows you to open a message and view it.

Reply- This option allows you to reply to the sender of that message.

Call sender- This option allows you to call the message sender.

Forward- This option allows you to forward the message.

Delete- This option allows you to delete the message from the list.

Delete all- This option allows you to permanently delete all of your messages

Save to Phonebook- This option allows you to save the senders number to your phonebook

Sort by- This option allows you to sort messages by sender, subject, unread/read, or message size.

Filter by- This option allows you to filter messages by SIM1, or SIM2.

Mark several- This option allows you to select more than one message to

be edited as you please.

MMS (Multi Media Messaging)

This feature allows you to send pictures, videos, or music in an MMS message. You may also send the MMS to any email address or any cell phone number. If the MMS size is oversized, the cell phone may fail to send or receive it.

Note: Consult with the local service provider for details about MMS sending and receiving restrictions.

Messaging-Drafts

This option allows you to see any of your messages that were composed but not sent.

Messaging-Outbox

This option allows you to see messages that are waiting to be sent.

Messaging-Sent messages

This option allows you to view all messages that you have sent.

Multimedia

Multimedia-Camera

This option allows you to use the built in camera to take photos and videos.

The following is a list of options in the camera feature:

Switch to video record: This option allows you to switch between still photos and videos.

Photos: This option allows you to view all of the photos you have taken

Camera settings: This option allows you to adjust the technical aspects of the camera.

It includes:

Anti-flicker- This option allows you to set the anti-flicker to the way you would like it.

Image settings: This option allows you to adjust the size and resolution of the photos you are going to take.

White balance: This option allows you to adjust the white balance on photos.

Scene mode: This option allows you to adjust the scene mode which includes Auto and Night modes.

Storage: This option allows you to choose where to save your photos; the options are on the Phone or the Memory card.

NOTE: This phone contains limited memory, so we recommend you purchase a memory card and use it.

Restore default: This option allows you to restore the default setting of the camera.

Multimedia-Image viewer

The Image Viewer allows you to view and edit all the photos you have taken and saved.

Multimedia-Video recorder

Camcorder settings: This option allows you to adjust the camcorder settings, please see the camera settings above for more information.

Video settings: This option allows you to adjust the video quality.

Storage: This option allows you to choose where to save your photos, the options are on the Phone or the Memory card.

Multimedia-Video player

The Image Viewer allows you to view and edit all the videos you have taken and saved.

Multimedia-Audio player

The Audio Player feature allows you to listen to your music files.

The following is a list of options in this feature:

Playlist: This option allows you to choose where your default playlist will be loaded from, your phone or memory card.

Repeat: This option allows you to set a music file on repeat.

Shuffle: This option allows you to automatically shuffle your songs in a

random order.

Background play: This option allows you to set music to play when not in the audio player feature.

Multimedia-Sound recorder

The Sound Recorder feature allows you to record audio clips and play them back.

The following is a list of options in this feature:

New record - This option allows you to start a new audio recording.

List- This option allows you to view a list of all the audio files you have recorded.

Settings- This option allows you to set your storage preference for audio recordings and also allows you to adjust the quality of these recordings.

Multimedia-FM radio

The FM radio feature allows you to listen to your favorite FM radio stations.

NOTE: you must connect headphones in order to use this feature.

The following is a list of options in the FM radio feature:

Channel list: This option allows you to view a channel list of available FM radio stations.

Manual input: This option allows you to manually input the radio station number you would like to listen to.

Auto search: This option allows you to automatically search for available FM radio stations near you, after they will be displayed in the channel list.

Settings: This option allows you to adjust the setting of the FM radio feature as you like.

Organizer

Organizer-Electric torch

The Torch feature is a built in flashlight. In this feature you can turn the flashlight on or off.

Organizer-Shortcuts

The shortcut feature allows you to set a shortcut to the directional pad. Up, down, left and right can be set to the feature of your choice.

Organizer-Calculator

This feature allows you to use the built in calculator.

Organizer-Calendar

This feature allows you to browse the built in calendar.

The list below shows the options in this feature:

Jump to date: This option allows you to jump to a specific date.

Go to today: This option allows you to return to today's date.

Organizer-Alarm

This feature allows you to set an Alarm clock, the Alarm Clock can hold up to 5 alarm times.

Settings

The settings menu allows you to adjust the following settings on the phone:

Dual SIM settings

This option allows you to enable or disable available SIM cards.

Phone settings

The following list details the settings you can change:

Phone Settings-Time and Date

In this menu, you can adjust the phone time and date settings. The menu consists of three sub-menus:

Time Zone: This option allows you to choose and select your current time zone.

Set time/date: This option allows you to set the current Time and date.

Set format: This option allows you to set the format of the Time and date on the main screen.






Phone Settings-Language

This option allows you to set the main language of the phone to one of the following options English, French, Spanish, and Portuguese

Phone Settings-Input method

This option allows you to set the default typing font and format.

Import Methods and Their Symbols

 ABC	Complete capital letter typing.
 abc	Complete lowercase typing.
 PT/pt	Portuguese typing.
 ES/es	Spanish typing Capital and lowercase respectfully.
 123	Number and symbol typing.

Changing the Input Method: In any typing function, press the “*” key to change the input method.

Phone Settings-Display

Wallpaper: This option allows you to set the wallpaper on the main screen, you can choose from a list or load your own.

Power on display: This option allows you to change the Power On animation.

Power off display: This option allows you to change the Power Off animation.

Show date and time: This option allows you to choose whether you would like the Time and Date shown on the main screen.

Phone Settings-Airplane mode

The Airplane feature allows you to power down all of the phones signals so do not interfere while on an airplane.

Phone Settings-Brightness

This feature allows you to set the brightness on the screen.

Network settings

Network settings-Network selection

This option allows you to see and choose which network you are currently connected to and which networks are available.

The following list shows the options in this menu:

New search: This option allows you to search for available networks.

Select Network: This option allows you to choose from a list of networks.

Selection mode: This option allows you to select from the options Manual or Automatic.

NOTE: We recommend you keep the selection mode on automatic.

Security settings

This option allows you to set the security on your phone by setting passwords.

Security Settings-SIM security settings

SIM lock- This option allows you to set a SIM lock Password.

Change PIN: This option allows you to change the password on SIM 1

Change PIN2: This option allows you to change the password on SIM 2

Security Settings-Phone security

Phone lock: This option allows you to set a phone password, which the phone will prompt you for before being able to use it.

Change password: This option allows you to change the password.

NOTE: Phone default password is 1122.

Security Settings-Auto keypad lock

This option allows you to set the time interval before the keypad automatically locks itself.

NOTE: TO UNLOCK THE KEYPAD PRESS AND HOLD THE “*” (Star) BUTTON

Security Settings-Restore factory settings

This option allows you to reset the phone to the manufacturer settings. In order to reset the phone you will need the phone password.

NOTE: The default password is 1122.

Volume settings

This option allows you adjust all of the volume settings on the phone. The phone lists 4 categories of volume settings that are preset and available for you to use, they are:

General: This profile is perfect for everyday phone use.

Silent: This profile will change the phone to silent mode.

Meeting: This profile will change the phone to a vibrate mode.

Outdoor: This profile is perfect for the outdoors because it will raise the volume on all audio notifications.

Press the left soft key "Options":

Activate: This option allows you to activate one of the preset Audio profiles.

NOTE: To adjust the actual settings of any these profiles simply choose the profile and select customize.

Customized settings

Alert type: Available options are Ring only, Vibrate. Only, Vibrate. And ring, Vibrate.

Ring type: Available options are Repeat or Beep once.

Incoming call-: This option allows you to choose a ringtone from the preset list and also allows you to choose your own custom ring tone.

Ringtone volume: This option allows you to increase and decrease the ringtones volume.

Message: This option allows you to choose a message notification tone from a preset list and also allows you to choose your own custom ring tone.

Message volume: This option allows you to increase and decrease the message notification tone volume.

Keypad: This option allows you to choose from three available keypad tones.

Keypad volume: This option allows you to increase and decrease the volume of the keypad volume.

PC Connection

Use your SD Memory card or the internal phone memory as a Mass Storage Device (U-Disk) by simply connecting it to your computer via a micro USB Cable. On the Phones Screen select “Mass Storage” and now you can transfer music, videos, games and other files from your phone to your computer and vice versa.

Original Parts

Contact Social™ for supply of original parts. Here are some precautions you can take to keep the phone in good condition:

1. Keep the phone out of children's reach.
2. Regularly check the mobile equipment in your car to see whether it is correctly installed and are working normally.

NOTE: Only use batteries, chargers and accessories approved by the Social™. Use of other types of batteries, chargers and accessories may cause damage to the phone and will result in a voided warranty.

Standard Limited Warranty

What is Covered and For How Long? SOCIALMOBILE TELECOMMUNICATIONS ("SMT") warrants to the original purchaser ("Purchaser") that SMT's Phones and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase and continuing for the following specified period of time after that date:

Phone: 60 days from purchase date

Batteries: 60 days from purchase date

Other Phone Accessories: 60 days from purchase date

What is Not Covered? This Limited Warranty is conditioned upon proper use of Product by Purchaser. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to moisture or dampness, neglect, unusual physical, electrical or electromechanical stress, or defects in appearance, cosmetic, decorative or structural items, including framing, and any non-operative parts unless caused by SMT; (b) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (c) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (d)

Note: Original proof of purchase is required for any warranty claims

Please send all warranty or information requests to
support@socialmobilecellular.com