

# **Minitar MVA11A**

**VoIP ATA (SIP)**

**Quick  
Installation  
Guide**

## Installation & Setup

- **LAN Connection**

Connect an Ethernet cable from your PC's Ethernet port to the LAN port of the VoIP ATA.

- **WAN Connection**

Connect an Ethernet cable from the router to the WAN port of the VoIP ATA.

- **VoIP Connection**

Connect the telephone to PHONE port and your PSTN line to LINE port.


## Hardware Installation

This section describes how to connect and configure the device.

### Step 1.

Connect to DSL/Cable Modem or Broadband Router.

Connect the ATA WAN port directly to the LAN port of these devices.

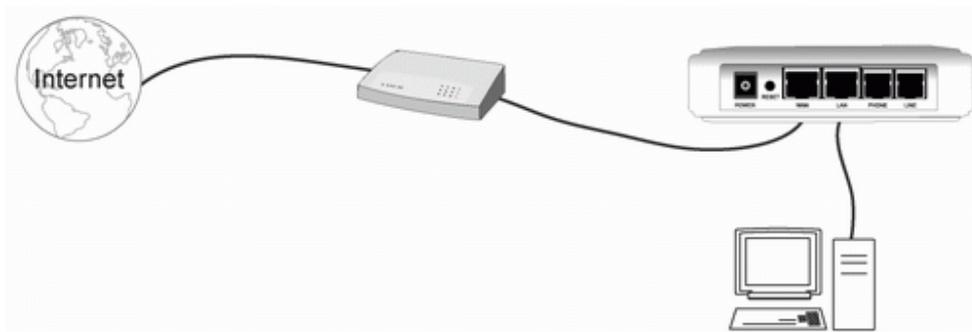

### Step 2.

Connect a Phone to the RJ-11 Phone Port.



**Step 3.**

Connect the PSTN line to the RJ-11 Line port.



**Step 4.**

Connect the power adapter to the Router.

Connect the power adapter to the port labeled POWER on the rear panel of router.



**Power Adapter Connection**

Connect the power adapter to the power inlet.

**Configuring VoIP ATA with Web Browser**

Open web browser and type `http://192.168.3.1` in the browser's address box. This number is the default IP address for this device.

A user name and password prompt will appear. The username is admin and password is admin.



- **Setup Wizard – WAN Settings**



The Setup Wizard is an easy way to set up the VoIP ATA quickly.

In the first step, you can set the LAN mode and WAN IP type. When you are finished changing the settings, click the **Next** button to move to the next page.

- **Setup Wizard – SNTP Settings**



In this page, you can set up the SNTP server for maintaining the time of day clock.

Click the **Next** button to move to the next page.

- **Setup Wizard – Service Domain Settings**

**Setup Wizard 3 - Service Domain Settings**

You can set information of service domains on this page.

**Realm 1 (Default)**

Active:  On  Off

Display Name:

User Name:

Register Name:

Register Password:

Domain Server:

Proxy Server:

Outbound Proxy:

Subscribe for MWI:  On  Off

Status: Not Registered

**Realm 2**

Active:  On  Off

Display Name:

User Name:

In this page, you set up the SIP server settings. You need to input the account details as provided by your VSP or SIP provider. You can register up to three VSP/SIP accounts (Realms).

Click the **Next** button to move to the next page.

- **Setup Wizard – Completion**

**Note Information**

This page inform user important information.

**Configure OK.**

You have to **save** and **reboot** the VoIP to effect those changes.

Save Changes:

After you finish the setup wizard, please ensure that you click the **Save** button to save the settings into the device memory. The device will reboot after saving the settings.

## Browse the User's Manual

1. Insert the CD into your CD-ROM, and the CD will Auto-Run.



## Package Contents

- VOIP ATA unit
- AC Power Adaptor
- RJ-11/RJ-45 cable
- User Guide on CD
- Quick Installation Guide