

Preface

Thank you for purchasing this cellular phone.

To guarantee your cellular phone works properly, please follow the instructions in this manual to prevent any possible incidents or malfunctions.

Follow all safety warnings to avoid injury or property damage.

Screen displays and illustrations in this user's manual are designed to help you to operate your phone.

We continuously strive to improve our products. Therefore, we reserve the right to revise this user manual or withdraw it at any time without notice.

Contents

PREFACE.....	I
CONTENTS.....	II
IMPORTANT SAFETY PRECAUTIONS	4
INTRODUCTION	6
GETTING STARTED	10
TOUCH SCREEN.....	13
HOME SCREEN	16
CALLING	22
BLUETOOTH.....	24
FUNCTION MENU	26
CLOCK.....	27
BROWSER	30
CAMERA.....	34
FM RADIO	34
CONTACTS.....	35
PHONE	41

GALLERY	42
MESSAGING.....	45
MUSIC	50
SETTINGS.....	52
SOUND RECORDER.....	56
TROUBLESHOOTING	58
SAFETY INFORMATION AND NOTICES	61

Important safety precautions

Failure to comply with the following precautions may be dangerous or illegal.

Please carefully read and observe the terms below:



Safe power on

Do not use your mobile phone where it is forbidden to use or you might cause a disturbance or danger.



Safe transportation first

Please observe all related local laws and regulations. Please drive with both hands. Transportation security should be considered when driving.



Turn off when in hospital

Please follow related limitations .Please turn Off your mobile phone when near a medical Instrument.



Turn off on an airplane

Please follow related limitations. Do not use your phone on an airplane.



Turn off when at a gasoline station

Do not use your mobile phone at a filling Station or around fuels or chemicals.



Turn off around exposure Area

Please observe related limitations and do not use your mobile phone around an area Where explosions can occur.



Proper use

As described in this manual, your mobile phone can be used only in right location. If possible, please do not touch the antenna area on your phone.



Use qualified after sale service

Only a qualified maintainer can install or repair your mobile phone.



Accessories and batteries

Only use the authorized accessories and batteries and do not connect to unmatched manufacturers or products.



Waterproof

Your mobile phone is not waterproof. Please keep it away from water.



Backup

Do remember to make a backup or keep a written record of all important information saved in your mobile phone.



Connect to other devices

Please read the user manual of the device to get more detailed security instructions before connecting to other devices and do not connect to unmatched product.



SOS emergency calls

Make sure your mobile phone is switched on and in a service area. In home screen, tap the dial key, input the SOS number, then press the Dial Key. Tell where you are and do not hang up without permission.

Introduction

 
Packaging

There are various accessories for your cellular phone. Your pack will include charger x 1, data cable x 1, and user manual x 1, Flip Cover x 1, Warranty Cardx1, Screen Guardx1.

Please note: Only use accessories and charging devices approved by the phone manufacturer, otherwise there is a risk of serious damage to health and property. Failure to do this may invalidate your warranty.

Accessories may vary by region.

Phone Display Key

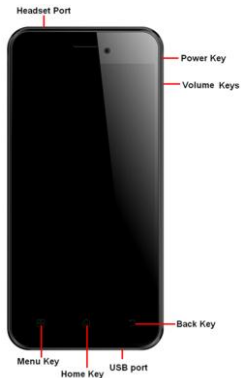

Key	Function
Home Key	<ul style="list-style-type: none">- Press to return to the Home screen from anywhere on your phone.- Press and hold to bring up the recent applications window.
Menu Key	<ul style="list-style-type: none">- Press to open a list of actions available in the current screen.







Volume Keys	Press to adjust the volume.
Power key	<ul style="list-style-type: none"> - Press (when the display is active): locks the display. - Press (when the display is in sleep mode): wakes up the display. - Press and hold: Access phone options.




















Note: "Press" in this manual, means to press and release the key; "press and hold" means to press and hold the key for at least 2 seconds.

Icons & Symbols

In idle mode, network and battery icons are displayed all the time. The rest of the icons appear if the feature is available. If the network symbol is not displayed, the network is currently unavailable. You may be in a bad reception area; moving to a different location may help.

	Roaming		Vibrate mode
	3G connected		Ringer is silenced
	3G in use		Phone microphone is mute

	Connected to a Wi-Fi network		Battery is very low
	Bluetooth is on		Battery is full.
	Airplane mode		Battery is charging
	Alarm is set		Receiving location data from GPS
	New text or multimedia message		Uploading data
	Problem with text or Multimedia message		Downloading data
	Missed call		An open Wi-Fi network is available
	Data is syncing		Phone is connected via USB cable
	Problem with sign-in or sync		

Notifications

When you see a notification in the status bar, touch the bar and slide your finger down the screen to open the list of notifications displayed in the sliding window.

To close the Notification panel, touch and hold the bottom bar of the Notifications panel, then slide your finger up the screen.

Getting Started

Please read the safety instructions in the "[Safety Information and Notices](#)" section before use.

In order to use your phone, you must insert a valid SIM card supplied by your operator or retailer. The SIM card contains your subscription information, your mobile telephone number, and a small amount of memory in which you can store phone numbers and messages.

Note: Some SIM cards may not function with your phone. You should consult your wireless service provider for a replacement SIM card. There may be fees for this service.

 
You can also insert a memory card. This provides you with expanded memory capability, which allows you to store additional music, photo, and video files separate from the phone's built-in memory.

Inserting the SIM Card

Remove the back cover


Make sure that the phone is turned off. You need to remove the back cover of your phone before you can insert the SIM card.

Lift the back cover up to remove it (1).

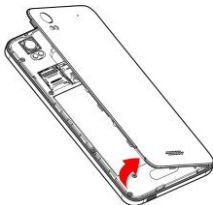


Insert the SIM card

 Make sure that the clipped corner of the SIM card is facing the correct direction and the metallic contacts are facing downwards. Slide the SIM card into the card slot until it stops (3).

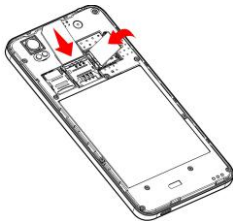

Install the back cover

 Align and hook the back cover to the top of the battery slot and then press the back cover down until it locks into place (5).

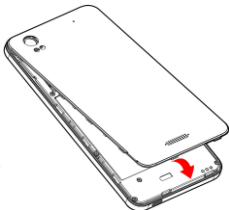

Power on/off

To power on the phone, press and hold the **Power** Key. Enter the PIN code if required (the 4 to 8 digit secret code of your SIM card). It is preconfigured and provided to you by your network operator or retailer. If you enter an incorrect PIN code 3 times in succession, your SIM card will be locked. To unlock it, you must obtain the PUK code from your network operator.


To power off your phone, press and hold the **Power** Key. On release, the phone options menu opens, select **Power off**.


Charging the Battery

Your phone is powered by a rechargeable battery. The new battery is partially charged. A sound alert will warn you when the battery level becomes low.

To charge the battery, plug in the connector at the bottom of your phone (USB interface), and then plug the other end into an AC power socket.

The battery symbol indicates the charging status.

 
During charging, the charge indicators  will scroll;

When all the scroll bars  are steady, the battery is fully charged. You can then disconnect the charger.

Inserting a micro SD Card

Your phone has a slot for a micro SD card.

1. With the metal contacts facing down, gently put the SD card into the slot. Note: The metal contacts are facing forward.
2. If you want to get the T-Flash card out, gently press the metal cover, then you can remove it from your phone.

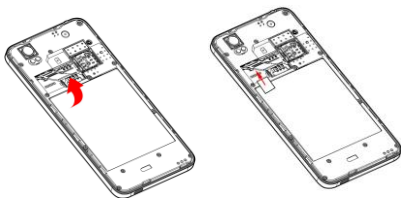

Note: if you are going to remove your SD card, first you must remove it from your phone by selecting **Home key**, then tap the application tab to select **Settings > Storage > Un mount SD card**.


Transfer files to the SD card

To transfer music, picture, and other files from your computer to your phone's SD card, you need to set the phone's SD card into a USB drive.

1. Connect the phone to the computer using a USB cable. A notification icon appears in the status bar.
2. Open the notifications panel by touching it and drag it down.
3. In the notifications panel, touch **USB connected** and then check box to turn on the USB storage.

4. To turn off the USB storage, you must select the other options check box to clear the **USB storage** check box.

Wireless off

To turn off all your phone radios, please go to **Home**, tap the application tab, select **Settings > More**. Select **Airplane mode** check box. Your phone will switch to “airplane” mode now. An airplane mode  icon will be displayed in the status bar and all wireless connections will be disabled.

To enable wireless connections again, return to the settings screen and clear the **Airplane mode** check box.

Touch screen

Your mobile phone features a touch screen which provides a faster and more intuitive way for you to navigate through lists and menus.

The controls on the touch screen change dynamically depending on the task you are performing.

Selection

To select an item or button on the screen, touch the item with your fingertip. The color will change on the screen when it is selected, usually to blue.

Context menus

To open the context menu for an item on the screen, you can:

Touch and hold the item on the screen with your fingertip. You must hold for one full second before the context menu appears.

Scroll

To scroll up or down in a list or page on the screen, you can slide your finger up/down on the screen. Dragging your finger to scroll will not choose or activate anything on the screen.

Zoom in or out

Zoom in / out on a picture when viewed in full screen, web page, or map:

1. You can zoom in and out by placing two fingers on the screen at once and pinching them together (to zoom out) or spreading them apart (to zoom in)

Pattern lock

You can increase the security of your phone by setting a screen unlock pattern. Once set, in order to unlock your screen, you'll have to draw the correct unlock pattern. You can set your screen unlock pattern as follows:

1. Press **Home key**, then tap the application tab to select **Settings**.

2. Select **Security**, then scroll down to the Screen lock section.
3. Set or change your unlock pattern by selecting **Screen lock > Pattern**, as applicable.
4. Follow the prompts to define your pattern. Note: you must slide your finger along the screen to create the pattern, not select individual dots. Connect at least four dots.



If you unlock your screen, and you want your pattern to be hidden as you draw it, clear the **Make pattern visible** check box.

Screen sleep

After a period of inactivity, your screen will go to sleep (display will turn black). In sleep, your phone uses less battery power. You can go to **Home**, then tap the application tab to select **Settings > Display > Sleep** to

select a time.

Pressing the **Power Key** can also make your phone sleep or awake immediately.

Home Screen

The Home screen is your starting point for using all the applications on your phone. You can customize your Home screen to display applications, shortcuts, and widgets as you like.

Press the **Home** button to return to the Home screen.

Extended Home screen

After pressing **Home key**, slide your fingertip left or right along the screen to reveal the full width of the Home screen. This additional space gives you more room to customize Home with applications, shortcuts, and widgets.

Find an application quickly

From the home screen, tap **the application tab**



Add a Home screen item

1. To create an application shortcut quickly, touch the application tab to reveal all the application icons, then touch & hold an application or widget icon and drag it to the home screen. Its shortcut is added to the Home screen.

Set wallpaper

1. Start from the **Home** screen; press **Menu key** to access the context menus. You can also touch & hold an empty area of the home screen and in the menu, touch Wallpapers.
2. Tap **Wallpapers** item. Select one of the pictures. It can be from the **Gallery**, **Live wallpapers**, **Photos**, **Video Wallpaper** or **Wallpapers**. Gallery contains the pictures you have stored on your SD card. Wallpaper is pre installed on your phone.
3. When you've decided on a picture, make sure it is highlighted, and then select **Set wallpaper**.
4. If you select **Gallery**, the picture album opens. Slide your fingers to find the picture you want to use, and then touch it. If this picture is too large ,you must crop it first .

Remove items from the Home screen

To remove a shortcut or widget from your Home screen, touch and hold the item to enter "**Remove mode**". The application tab turns into a X button. Drag the item to the X button. When the icon and application tab turn red, release it.

Move objects on the Home screen

1. To move an icon or other item on the Home screen, you should touch and hold it to enter the "**move mode**". The object will magnify when it is ready to be moved.

2. Without lifting your finger, drag the object to the new position. To move an item to a section of the Home screen not in view, move it to the edge of the screen and hold it there for a moment. The screen view will shift; position the object and release.

Options on home screen

In the home screen, press **Menu key** to access the following options:

- **Wallpaper**: Select wallpaper from the pictures album, Live wallpapers or wallpaper gallery.
- **Manage apps**: Select to manage Apps.
- **System settings**: Shortcut to the settings menu. Please refer to "Settings" section.

Keyboard

When you select or touch a field that requires text or numbers, the onscreen keyboard becomes available.

Adjusting keyboard settings

Before you start using the onscreen keyboard, we recommend you set the onscreen keyboard options such as vibrate and/or emit a sound when you touch a key, auto-capitalization, auto-complete, etc.

1. Press **Home key**, then touch the **application tab**, select **Settings > Language & input**.
2. Touch **Android keyboard**, you can choose the type

- method as your favorite, and then set the options you want to use for the onscreen keyboard.
3. If you select the **Show correction suggestions**, and **Auto-correction** options, the phone will offer you smart word suggestions as you type, so you can enter text quickly and accurately on the onscreen keyboard.

Android Onscreen Keyboard



Note: When you do not need the keyboard, you can close it by pressing **BACK** key. To show the keyboard again, touch a text box on the screen.

If you need to insert or delete a character, slide your fingertip to position the cursor next to the character you want to edit.

The available keys on the keyboard will be different depending on the type method you select.

[Settings > Language & input.](#)



Smart Onscreen Keyboard


Smart Onscreen keypad is an intelligent text editing mode for typing, which includes a comprehensive dictionary. It allows you to quickly enter text. When you enter the first or second letter, the word suggested may be displayed on the screen.

Calling

Making a Call

Note: You can make a call only when the network is available.


1. Tap the **Dialer** icon  on the **Home** screen.
2. Enter the phone number, select a contact, or a call log.
3. Press the **Call** icon  to dial the number

To end the call, press the **End Call** icon .


Adjusting speaker/earpiece volume

During a call, press the **Volume Keys up / down** to increase or decrease the volume.


Speaker

During a call, select  on.

Making an International Call

1. Touch and hold the 0 key on the Dialer tab to enter "+".
2. Enter the country code.
3. Enter the area code (normally without the 0 before it), followed by the phone number.
4. Press the **Call** icon  to call directly.



Making an Emergency Call

On the Dialer tab, enter the emergency number and then press the **Call** icon  on your phone.


When the screen is locked, you need to unlock it first before you can make an emergency call. If your phone is in sleep mode, press the power key to wake up the phone and then unlock the screen.

Making a Second Call

You can make a second call by putting the current call on hold:

1. During a call with the first caller, select  and then enter the second caller's number using the keypad.
2. Press the **Call** icon  to dial the second party's number. The first caller will be automatically placed on hold. This is a network-dependent feature. Please contact your service provider for more details.

Swapping calls

When you have one active call and one call on hold, you can touch  to switch between the 2 calls.

Merging calls

When you have one active call and one call on hold, you can select **Merge calls** to make a conference call between the two calls.

Making a Conference Call

When there is a call waiting while you are already on the phone, you can carry out the following operations to establish the multi-party call:

1. Drag the green phone icon to the right to answer the second call. The first call will be put on hold automatically.
2. Select **Merge calls**. The two calls will be combined and a conference call is established.


During the multi-party call, you can answer a new incoming

call or add a new member to the call by selecting **Add call** to dial the new member (the ongoing multi-party call should be put on hold first).

Once the call is established, select **Merge calls** from menu options.

This is a network-dependent feature. Please contact your service provider for more details.

Calling Hands-Free

During a call, select .

Answering a Call

Drag the green phone icon to the right.

If you were already on a call, the first call is placed on hold while you answer the new call.

To silence the ringer before answering the call, press the **Volume key** button.

Rejecting a Call

Drag the red phone button to the left.

Answering a Second Call

If you have activated Call Waiting, a new incoming call screen is shown to inform you when there is a second incoming call. You can:

1. Drag the green phone icon to the right. The current call will be put on hold automatically.
2. Drag the red phone button to the left to reject the second call and continue with your current call.

Ending a Call



Press the **End Call** icon  to end a call.

Bluetooth

Your phone supports Bluetooth function. Bluetooth is a short-range wireless communications technology that allows Bluetooth devices to exchange information over a short distance without requiring a physical connection.

Note: the phone can connect to a Bluetooth hands-free headset or a Bluetooth car kit and use those devices to send and/or receive calls. Before you can use a Bluetooth hands-free headset or car kit, follow the steps as below.

Turn on Bluetooth services

1. Press **Home key** and tap the application tab. Then select **Settings**.
2. Select **WIRELESS & NETWORKS**, and then directly change the icon  **ON** to turn on Bluetooth services.
3. When on, the Bluetooth  icon appears in the

status bar.

Discover ability

By default, your phone is not “discoverable”. This means other Bluetooth devices will not see your phone in their scans for Bluetooth devices.

To make your phone discoverable:

1. Make sure you have turned Bluetooth on. Refer to the above chapter for details.
2. Press **Home key** and tap the application tab. Then select **Settings > Wireless & Networks** open **Bluetooth** .
3. Touch your Bluetooth device name and then your phone will be visible to other Bluetooth devices.
4. Press the **Menu key** and select the **Visibility timeout** to set your phone visible time to other Bluetooth devices .

Name your Bluetooth device

1. Make sure you have turned Bluetooth on.
2. Press **Home key** and tap the application tab to select **Settings > Wireless & networks >** open **Bluetooth** .
3. Press **Menu Key** and select **Rename phone**
4. Type the name for your device in the dialog box, then select **Rename phone**.

Pair & connect with Bluetooth devices

Before your phone communicate with a Bluetooth headset, your phone should “pair” at first.

1. Make sure you have Bluetooth turned on.

2. Go to **Settings > Wireless & Networks > Bluetooth** .
3. This phone automatically start scanning for Bluetooth devices. As they are found, the devices will appear in the list of Bluetooth devices.
4. Touch a particular device in the list to pair with it.
5. Once paired, you can select the file to send via Bluetooth.


Rescan for Bluetooth devices

If you want to update the list of Bluetooth devices, press **SEARCH FOR DEVICES**.

Function Menu

How to Use

Select application

From the **Home** screen, tap the application tab .

Slide your finger to scroll through the menus and touch a particular destination to enter the selected menu.

You can exit a menu by pressing the **BACK** Key.

Main Menu




Please read the following sections for a detailed description of the main menu.

Clock

Your mobile phone has a built-in alarm clock. You can set up to more separate alarms and choose whether or not the alarm should repeat.

How to set an alarm

To set an alarm:

1. To open Alarm Clock, press **Home key** to return to the home screen, tap the application tab  to enter the main menu, select "Clock", and then touch the alarm icon .
2. Touch "+" to add an alarm and you can also edit the existing alarm.
3. You can edit the following details:
 - **Turn Alarm On:** you can directly change the icon  to turn alarm on.
 - **Time:** You can set the alarm time here. enter the time you want, and then touch **ok** to finished.
 - **Repeat:** Press to set the repeat day, from Monday to Sunday.
 - **Cesium:** Select one ring tone for your alarm. The ring tone plays when selected.
 - **Vibrate:** Press to set the vibration on or off.
 - **Label:** Touch it to set a name for the alarm.
5. Finally, press **Back Key** to save the settings. In the alarm, verify that you've activated either Saturday or Sunday on the **Repeat** area. If they are set off, your alarm

does not notify you on Saturday or Sunday.

Delete an alarm

To **turn alarm off**, you can directly change the icon



to turn alarm off.

To **delete an alarm**, long press the alarm until the trash icon appears and touches the trash icon to delete the alarm.

Chrome Browser

To open the browser, press **Home key**, touch the



application tab and then touch the **Chrome**.

The first time you enter the Browser after powering on, You are required to accept the terms of Google Chrome service before browse web pages . Touch **Accept and Continue** and then select **sign in** to sign in Chrome or select **No thanks** to open a Chrome screen.

Sign in Chrome with your Google account to bring your

open tabs, bookmarks, Omni box data, and more information from your computer to your phone or tablet.

Note: Browser automatically opens when you touch a web link in an email or text message.

It may involve the transmission of large amounts of data through your service provider's network. Contact your

service provider for information about data transmission charges.

Enter web address

1. Open the Browser screen and tap the Web address tab to open the web address screen.
2. Type within the URL field to enter the web address manually.
3. Possible matches will appear on a list of links as you enter the web address. Select a match or continue entering the web address.
4. Tap the Go icon to follow the link to the selected address.


Zoom and navigation in web pages

While viewing a Web page, if you set the web page to force enable zoom: press **Menu key** and select **Settings>Accessibility >Force enable zoom** .you can take advantage of the following zoom and navigation techniques:

1. You can place two fingers on the screen at once and pinch them together to zoom out or spread them to zoom in.
2. Slide your finger on the screen in any direction to navigate and view other areas of the web page.

Windows view

If you wish to open several web pages at the same time and want to view them on the screen, please use the **Windows** function.

1. while in the web page browsing , touch the icon  in the right corner of the window .
2. You will now see all web pages that you've opened.
3. To close the window, touch the "X" in the right corner of the window that you want to close.
4. To add new windows, press **menu key** to open the context menu and select **New tab**.
5. On the windows view, you can press **Menu key** to access Save to bookmarks, Settings and so on.


To find text within a web page

While viewing a web page, press **Menu** key and then touch **Find in page**.

Enter the search item. As you enter characters, matching characters will be highlighted.

To copy text on a web page


Copy text from web pages and then paste them on an email or your SMS/MMS messages.

1. Open the web page where you want to copy text.
2. Locate the text you want to copy and then long press it until the texts are highlighted in blue.
3. Position your finger at the start of the text you want to copy and then drag to the end of the text you want to copy.
4. Release your finger from the screen, touch  icon in the right corner of the window to copy the

text.

To paste text on an email or SMS/MMS message, touch and hold the text box on a message or email and then touch **PASTE** on the options menu.

Bookmark

1. On a browser screen, press **Menu key** to access
 the option, and then touch .
2. Type the name and URL of the bookmark and touch the **Save** button to continue.
3. press **Menu key** to access the option, and then

touch **Bookmarks**. Below the new bookmark it lists all the bookmarks that you have stored. Drag up and down to scroll through the bookmarks. Click one of them to go to browse the website.

4. To edit the bookmark, touch & hold the bookmark that you want to edit in the bookmark screen. The context menu will open. Now, select **Edit bookmark**. Type your change and select **Save**.
5. To delete a bookmark in the bookmark screen, touch & hold the bookmark that you want to edit. The context menu will open, and select **Delete Bookmark**.

Download web files and applications

Before you download any files or applications using the browser, note the following:

1. Before you can download Web applications, you must go to **Settings > Security> Unknown sources**, select the check box.
2. All items downloaded from the Web are stored on your SD card or your phone,
3. The browser will only allow you to download items that are supported by an application installed on the phone.


Warning: Applications downloaded from the web can be from unknown sources. To protect your phone and personal data, only download applications from sources you trust, such as the Android Market.

Camera

Your mobile phone features a digital camera that allows you to take and share pictures and videos.

Please ensure that the camera lens is clean before you take pictures, as small dust particles can strongly affect the picture and video quality.

To access this menu, press **Home Key**, touch the

application tab , and select **Camera**.




Do not take photos of people without their permission.

Do not take photos in a place where cameras are not allowed.

Do not take photos in a place where you may interfere with another person's privacy.

 
Taking a photo

You can take photos in various modes, the camera produces JPEG photos.

1. Access the **Camera** menu to turn on the camera. If
2. Your phone supports two camera lenses: primary camera and secondary camera. One is located at the back of the phone and the other in the front. When recording a photo or shooting a video, press  to switch camera lenses.
3. Frame your subject on the screen.
4. Touch  onscreen to take a picture.
5. Touch  to start recording the video.

View your photos and videos

To view the pictures and videos you have captured, as well as any you have stored on your SD card, please go to **Gallery** menu to view the details.

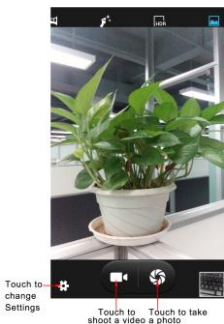

FM Radio


This feature allows you to listen to your favorite FM radio station anytime with frequencies ranging from **87.5 MHz** to **108.0 MHz**.

To open FM radio, press **Home key**, touch the application tab and touch **FM radio**.

Note: The FM radio will not work unless the headset is attached. Attach the headset to the headset port located at the top of the phone.

Turn On/Off FM radio




Touch **FM radio** icon to turn on FM radio ,When the icon

turns to , it indicates that the FM radio is switched on.


touch the  icon to turn off FM.

Auto search

Your phone supports to auto scan the radio stations and the stations searched will be memorized in the channel list.


1. In the FM radio playing interface, touch  > **Search** to auto scan the available channels.
2. Press  or  to access previous/next available channels.

Add to favorites

1. In the FM radio playing interface, press  to add to favorites.

Contacts

You can store phone numbers on your phone's memory. This menu gives you quick and easy access to the people you want to search. You can view and create contacts on your phone, and can also import contacts stored on your SIM card.

To access this menu, press **Home key**, and touch the application tab, and then select **People** icon  and select the **Contacts** tab.


Contact list

Use this menu to search for contact information stored in the phone book.

Browse through your contacts by sliding your fingertip up and down on the screen.


Creating a contact

Use this menu to add a new contact to the Phone book.

1. Press **Home key**, and touch the application tab, and then select **People**.
1. Press  and the context menu appear, select the location which you want to store to access the

- create contact screen .
2. Enter the information to the new contact, such as phone number, email address, first and last name etc. Slide your finger up or down to see more labels.

Note: To change a defaulted information label, ie; Home number to Work number, touch the information label button, then select another label on the menu.

3. Touch a category of contact information, such as phone numbers and email addresses, to enter that kind of information about your contact.
4. Touch the Picture Frame icon  to select a picture to display next to the name in your lists of contacts and in other applications.
5. When you're finished, touch **Done**.

Edit contact detail

1. From contacts, touch the contact whose information you want to edit. Press **Menu key** then the context menu opens.
2. Select **Edit** . The Edit contact screen appears.
3. Make your edits, then touch **Done**.

Communicate with a contact

From the contacts list, you can quickly call or send an SMS or MMS to a contact.

To open a contact's details screen, simply touch their name from contacts.

To dial a number of the contact, touch the contact's name, then touch it again to dial.



To call phone numbers, you switch automatically to the phone application as the number is called. For other kinds of communication, you switch automatically to the appropriate application, with the contact's address entered.

To import contacts from the SD card

In the contacts list, press **Menu key**, touch **Import /export**. If you have stored names and phone numbers on your SIM card, you can add these to the contacts stored on your phone by selecting this option. Once the list of names and numbers appears you can:

1. Open your contacts.
2. Press Menu and touch **Import/Export > SD Card**,
3. Press **Next** and select **Next** again when the context menu appears. (If there are multiple vCard files on the SD card, you have to choose VCard file first.)
4. Touch **Ok** to Import

Favorites

In the home screen, press the **people** icon . Tapping the Favorites icon  can access your Favorite Contacts.

How to set a favorite contact?

1. Open your contacts.


2. Touch a contact to view its details.

Beside the Name field  icon indicates contact favorites or not. Tap this icon until it changes color. Now the contact will be copied to **Favorites**.

Call log

Use this menu to view the calls you have dialed, received, or missed, and the length of the calls.

To access this menu, press **Home key**, touch the

application tab, and select **Call** icon , tap the **Call log** tab to access the call log menu.

Accessing a call log

1. Slide your finger to scroll through the call list.
2. Touch the selected log to view its detailed information, send an SMS message, or add the number to contacts.

Using call log options

In the call log list, you can press the call log to access the following options:

- **Call back:** Touch to call the selected number.
- **Send text message:** Touch to send an SMS message to the selected contact.
- **Add to contacts:** Touch to add the selected number to a new contact or view the exit contact.


Phone

Use this menu to call your friends.

To access this menu, press **Home key** , touch the application tab, and select **Phone**.

Or you can press the **Call** icon  in the home screen.

How to dial a number?

Enter the number you want to dial, and then press the **Call** icon  to dial.

To know the detail, see calling in page 17.

Dial by using Bluetooth devices

You can place and receive calls using a hands-free Bluetooth headset or hands-free car kit. Before you can use your Bluetooth device, follow the following steps:

1. Go to **Home** , touch the application tab, and select **Settings > Wireless & Networks** to turn Bluetooth on.
2. Get your headset or hands-free car device ready for pairing by following the manufacturer's instruction.
3. Pair and connect your phone to the Bluetooth headset or car kit.
4. Now you can use your headset or car kit to receive call.

Gallery

Use this menu to access photos and videos you have taken. For photos, you can also do basic editing tasks, set

them as wallpaper or contact picture, or share

them with your friends.

To open pictures and videos, press **Home Key** and touch the application tab. Then touch the **Gallery** icon.

Viewing an image

Gallery presents the pictures and videos on your microSD card or your phone storage, including those you've taken with the camera and those you've downloaded from the web or other locations.



Select an album to view the pictures.


Touch an album to open it and view its contents.

The pictures and videos in the album are displayed in

chronological order.

Touch a picture or video in an album to view it.

Return to the main Gallery screen at any time by

touching its icon  at the top left of the screen.

Place two fingers on the screen at once pinch them together to zoom-in and spreading them apart to zoom-out

Image options

You can do the following while in pictures.

Share

Touch Share icon at the top of the screen. In the menu that opens, touch the application to share the selected albums.

The application that you select opens with the pictures from the selected albums or links attached to a new message.

For information about addressing and sending the message, see the section on that application.

Delete

Select this option to delete the selected picture. The picture will be removed after you confirm.

Details

Select to show detailed information of the picture including its name, type, the date taken, album and location

Set picture as

Select to set the selected picture as wallpaper or contact icon. Before you do that, you can crop the picture. The operation is the same as the above descriptions.

Crop

Select to crop the selected picture. Touch and hold an edge of the cropper to reveal the sizing arrows and then drag the edge in or out to size. Touch and drag the center of the cropper to move it within the picture. When you want to save the cropped area, select **Save**. To cancel the crop, press Menu key to open the context menu and then select Undo.

The cropped picture is saved.

Rotate

Select from rotate left (anti-clockwise) or rotate right (clockwise). Your picture will rotate and is saved automatically.

Images Slide show

Slide shows include all the pictures in your albums. in pictures, touch menu key to open the context menu and then touch Slideshow.

Touch a picture to end the slideshow.

To watch videos

On the main Gallery screen, touch a video album and then touch the video you want to watch to start playing back the video.



Messaging

Use the Messages menu to send and receive text messages and multimedia messages.

To access this menu, press **Home Key**, touch the application tab and touch **Messages**.

Messages list

Touch the Messaging icon  on the Home screen

The Messaging window opens, where you can create a new message or open an ongoing message thread.

Reading text messages

Press **Home Key**, touch and hold the status bar, and then slide it down to open the notifications panel. Touch the new message to open and read it.

On the message list, touch the message you want to read.

Note: If a link is included in a message, touch the link to


open Browser and view the web page.

If a phone number is included in a message, touch the message to open the Dialer so you can call the number.

Reading multimedia messages

If you have selected to auto-retrieve your multimedia messages, both the message header and body will download. To view your message, select the **"Play"** button. If you are downloading only the headers, then you must first select the **Download** button to retrieve the message body. If you are concerned about the size of your data downloads, you can check the message size first. Once the message has downloaded, select the **"Play"** button to view the message.

Reply to a message

1. Simply start by typing your message in the text box at the bottom of the screen to reply to a message.
2. You can press **Menu Key** and select Add Subject or touch  to add An Attachment to convert it to a multimedia message.
3. Touch **Send** when ready.

View message details

Touch the message to to view details about a particular message.

Delete a message or a message thread

In the message list, touch the message thread that you want to delete.

To delete the entire thread, touch and hold a thread you want to delete until the trash icon appears. Touch the trash icon to delete the thread.

To delete a message in a thread, touch and hold the message that you want to delete and then touch **Delete** on the options menu. When prompted to confirm, touch **Delete icon**.

To delete all messages on the message list, press **Menu Key** on the message list and then touch **Delete all threads**.


Create new message


Use this menu to create and send messages.

Text message

With an SMS-compatible phone number, you can send and receive short message service (SMS) messages. An SMS-compatible number is a phone number that your service provider enables for SMS.



You can send SMS messages to contacts that have SMS-compatible phone numbers.


1. Press **Home**, touch the application tab and select **Messages**.
2. On the messaging screen, touch . The **Compose** screen opens.
3. In the **Type name or number** field, you can enter the receiver's number by using the onscreen keyboard.

4. In the **Type text message** field, you should enter the SMS content.
5. Finally, when you have finished writing, you should tap the  button to send the message.

Multimedia message

Multimedia Message Service (MMS) delivers messages containing a combination of text, image, video, and audio from phone to phone or from phone to email.

1. Press **Menu key**, touch the application tab and
2. touch **Messages**.
3. Touch  to compose a new message.
4. In the **Type name or number** field, you can enter the receiver's number or email address by using the onscreen keyboard.
5. In the **Type text message** field, you should enter the MMS content.
6. To add a subject, press **Menu Key** and touch **Add subject**.
7. To add an attachment such as picture, melody, video, and so on, you should press . In the following Attach menu:
 - **Pictures**: Opens the Gallery application where you can choose a picture to insert into MMS.
 - **Capture picture**: Opens the camera to take a new photo. You can insert the new photo to MMS.

- **Videos:** Opens the Gallery application. Touch a video on the screen to attach it to your message.
 - **Capture video:** Opens the camcorder application.
Take a video and then touch  to attach it to your message.
 - **Audio:** Opens the select audio menu. Touch an audio file to select.
 - **Record audio:** Open a voice recorder to record a new audio. It can also be inserted into MMS.
 - **Slide show:** List all the slides that the MMS has. Tap **Add Slide** to add a new slide.
Note: If you want add more attachments, you should add a Slide Show first.
 - **Contact :** List all the contacts stored in you contact,tap to add contacts.
 - **Calendar:**Open the event list. Tap to add schedule.
8. In a new slide show, you can also press the **Menu** Key to access the following options:
- **Preview:** Touch to preview the slide;
 - **Add picture:** Touch to go to gallery to add picture.
 - **Capture Picture:** Touch to open a camera to take a new photo. The photo can be inserted into a MMS.
 - **Add Music:** Touch to add music to MMS.
 - **Add Video:** Touch to go to the gallery to add the video into the MMS.
 - **Duration:** Tap to set the duration of the current

- slide. The default duration is 5 secs.
- **Layout:** Tap to set the layout of the current slide. The default layout can be found at the bottom.
- 9. Finally, when you have finished editing the slide, you should tap the **Done** button to save and return to main editing screen.
- 10. In the main editing screen, you can tap **Send** button to send the message.

Message Settings

Use this menu to set up various options for using the messaging services.

How to access message settings?

1. Press **Home Key**, touch the application tab and touch **Messages**;
2. Press **Menu key** to access the option menu and touch **Settings** to configure your message settings ,such as SMS, MMS, Notifications and general.

Music

This menu allows you to listens to your favorite music.

 
To open your music library, press **Home key** and touch the application tab, and then touch **Music**.

Your music is organized into four categories: Artists, Albums, Songs and Playlists . Select a category to view the lists within each. Once in a category, keep selecting until you reach the music you want to play. For example, if you select the Albums category, you will see a list of Albums in A-Z order. If you select an Albums, the list opens


to display . Select an album, and the album's song list is displayed.

Play music


At any level in your library, touch and hold a list (Artists, Albums, Songs, and Playlists) to open the context menu. Select to play and go to the playback screen.

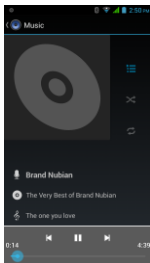

The following actions are available on the playback screen:

Shuffle songs: Shuffle songs in random order. Touch  to toggle shuffle on or off. When the icon is gray, shuffle is off.

Go to any point in song: Slide fingertip in progress

bar  to desired point in a song.

Pause/resume play: Touch  to pause ; touch  to resume play.

Repeat mode: Touch  to switch the repeat modes.

View current playlist: Touch 

Playlists

You can create as many playlists as you wish. The “**Recently added**” playlist is a system playlist and cannot be deleted or renamed.

Create a playlist on your phone

1. From the home screen, touch the application tab, and then touch **Music**.
2. Select a category. From the list that appears, navigate to the Albums, Songs, and Playlists that you want to add in the playlist.
3. Touch and hold the music name to open the context menu.
4. Touch **Add to playlist**.
5. In the **Add to playlist** menu that opens, select **New** to create a new playlist.
6. Enter the name for your new playlist and then touch **Save**.

Manage your playlists

Go to the Library screen and select **Playlists**.
All the playlists appear. Touch and hold the playlist opens a



menu asking you to play, delete or rename the playlist etc.

Settings

This menu allows you to control and customize phone settings on the Settings screen.

Press **Home Key**, tap the application tab and touch **Settings**. You can also press **Menu Key** in the home screen and touch **System Settings**.

Wireless & networks

- **SIM management:** Set preference on how you use SIMs inserted in your phone
 - Roaming: Uncheck to prevent your phone from transmitting data on other carriers' mobile networks when you leave an area where your phone can access your own carrier's mobile networks.
 - Data connection: touch to turn on or off the data connection
- **Airplane mode:** When airplane mode is selected, all wireless connectivity is off. This icon  will display in the status bar when airplane mode is selected.
- **Wi-Fi:** check the icon switch to  if you prefer to use Wi-Fi for your data connection. The phone will scan for available wireless networks.
- **Bluetooth:** Touch the check box to turn Bluetooth

service on or off.

➤ **Date usage:** this feature allows you to count data usage and set mobile data limit.

➤ **Tethering & portable hotspot**

You can browse the Internet on your PC using your mobile phone. This can be done in 2 ways:

To access both the options make sure your phone has an active data plan and mobile data is "ON".

USB Tethering:

- Connect your mobile phone to your PC via the USB cable.

- Go to Settings> Wireless & Networks>More >Tethering & portable hotspot> USB tethering.

- Your PC will then read the necessary y drivers of your phone and you can then access internet on your PC.

Note: In case you are unable to connect to internet Please get in touch with customer care executive.

Wi-Fi Hotspot:

- Go to Settings> Wireless & Networks>More >Tethering & portable hotspot>Turn ON Wi-Fi Hotspot.

Once the device Wi-Fi Hotspot is active you can see a icon denoting wireless network on the notification pane.

Note: You can select the desired security settings

for your hotspot network by following below steps:

- Go to Settings> Wireless & Networks>More >Tethering & portable hotspot> Set up Wi-Fi Hotspot> Security> Select desired security and Configure your password

- Now go to your PC and check for the Hotspot network created by your device.

- Select the network and input the password configured for the hotspot network on your device.

You can now browse internet on your PC with the help of data connection on your phone..

Note: In case you are unable to connect to internet please get in touch with customer care executive.



VPN

- Add VPN: Opens a screen that prompts you to select the type of VPN to add. You are then prompted for VPN configuration details.



Mobile networks:

- Data connection: check to enable data access over the mobile network.
- Access Point Names: Opens the APNs screen, where you can select mobile access point configurations.

- 3G service: Check to obtain slightly better battery life by preventing your phone from connecting to higher-speed networks.
- Network operators: Opens a screen that searches for and displays mobile networks that are compatible with your phone.

Audio profiles

our phone provides 4 different profiles, including General, Meeting, Outdoor ,and Silent profile.

You can configure how your phone rings, vibrates or alerts you in other ways when you receive communications and motion sound , etc.

Display

Let you set the screen brightness, select to switch orientation when you rotate your phone and configure other screen settings.

Storage

Let you view and manage the data storage on your phone, manage the use of your SD card from this screen.

Transfer data between Phone and PC:

Connect the phone to your PC with the help of USB cable. USB mass storage window with option to turn on USB storage will be shown. Touch "Turn on USB storage". You can now exchange/manage data between your phone and PC. Once finished, click again ("Turn off USB storage") to unmounts storage from computer and use it with phone

again.

Note: During USB connection, phone storage could not be accessed on phone.

Battery

Your phone supports Battery feature. You can use the this settings to turn on or off the displaying of Battery Percentage. In this menu, you can view how many applications are using the battery and used percentage.

APPs

This menu allows you to manage applications.

Location access

Use the Location settings to set your preferences for using and sharing your location when you search for information and use location-aware applications, such as Maps.

Security

You can configure settings that help secure your phone and its data.

Language & Input

Use the Language & Input settings to select the language for the text on your phone and for configuring the onscreen keyboard, including words that you've added to its dictionary.

Backup & reset

This feature let you backup app data,wifi passwords, and other settings to Google servers. And reset your phone .

Accounts

Use the Accounts & Sync settings to add, remove, and manage your Google and other supported accounts. You also use these settings to control how and whether all applications send, receive, and sync data on their own schedules, and whether all applications can synchronize user data automatically.

Date & time

Set time, time zone, and date: Use [Automatic time zone](#) unless you need to override the network values.

[Use 24-hour format](#): Select to set 24-hour formats on or off. [Choose Date format](#): Select from a variety of formats.

Scheduled power on & off

You can set your phone to automatically Power On or to Power Off up to scheduled times.

Accessibility

You use the Accessibility settings to configure any accessibility plug-ins you have installed on your phone.

Developer options

If you're an application developer, you may be more concerned about this part of the set.

About phone

View your phone [Status](#). This screen lists a variety of information, including your phone number, the network you are currently using, the type of network, signal strength, roaming status, any Wi-Fi addresses you're connected to, and more.





Select [Legal information](#) for copyright and licensing

information, as well as the Google Terms of Service for the Google applications on your phone.
You can view the model number and version information for your phone.

Sound recorder

The sound recorder is a simple recording tool that provides all of the required functionalities for you to manage voice files.

To start recording

1. In any mode, press **Home Key**, touch the application tab and then touch **Sound Recordings**.
2. Touch button  to start recording.
3. During the recording, you can pause the voice recording anytime by touching button . Then choose  to save the recording file to **File Manager** in the condition that your SD card is inserted. press  to play.
4. To exit sound recorder, you can press **Back Key**.

Troubleshooting

Common issue	Cause reason	Shooting way
Bad connection	Using mobile phone in an area where the network connection is not good, such as around a tower or basement, and radio wave cannot be sent effectively.	Try to avoid.
	Using mobile phone when network is busy, such as an on-off duty time, line busy.	Try to avoid.
	Related to the distance of the send basis of the network.	Ask your operator to provide a map of your service area.
After sound or cacophony	It is caused by network connection and it's a regional problem.	Hang up and redial the number.

	Network connection is not good in some areas.	
Idle time becomes short	Idle time is related to network settings.	If the mobile phone is in the area where the network connection is not good, please temporarily shut off your phone.
	When you cannot receive signals, your mobile phone will continue to send to find a basis. A lot of battery power is used, so as to limit idle time.	Please move to an area where signal is strong or temporarily turn off your phone.
Cannot switch on	Battery is drained.	Check battery volume or charge battery.
Wrong SIM card	SIM card is damaged.	Contact your operator.
	SIM card is not inserted properly.	Make sure SIM card is inserted properly.

	Dirt on metal side of SIM card.	Wipe metal point of SIM card with a clean cloth.
Cannot connect to network	SIM card is unusable	Contact your operator.
	Out of GSM service area.	Request service area to operator.
	Feeble signal.	Please move to an area where signal is stronger and try again.
Cannot call	Activate call barring	Cancel call barring
	Activate fix dialing	Cancel fix dialing
Wrong PIN code	Enter the wrong PIN code three times.	Contact your operator.
Cannot charge	Charge in area where the temperature is lower than 0°C or higher than 40°C.	Change charging environment.
	Bad connection	Check the connection between the phone and the charger.
Cannot add contact	Contacts memory is full.	Delete some contacts.

Cannot set some functions	Operator does not support the function or you have not applied the function.	Contact your operator.
---------------------------	------------------------------------------------------------------------------	------------------------

Safety Information and Notices

Certification Information (RoHS)

We at L AVA take our social responsibility seriously and are committed to the cause of saving our environment, it is in keeping with these commitments that we are proud to state that L AVA phones are RoHS complaint.

Certification Information (SAR)

Your phone is designed not to exceed the limits of emission of radio waves recommended by international guidelines. These guidelines include safety margins designed to assure the protection of all persons, regardless of age and health.

SAR (Specific absorption rate) is the unit of body-absorbed RF quantity when the phone is in use. SAR value is ascertained according to the highest RF level generated during laboratory tests.

The true SAR level during phone usage will be far lower than this level.

The SAR value of the phone may change depending on factors such as how close you are to a network tower, use of accessories and other enhancements.

The highest SAR value of the device is less than 1.6W/Kg averaged over 10 gm of human tissue.

The SAR value may differ depending on national reporting, testing requirements and the network band.

SAR Recommendations

Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

Please keep your calls short and use SMS whenever more convenient. This advice applies especially to children, adolescents and pregnant women.

Prefer to use your cell phone when the signal quality is good.

People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Maintain a preferable distance of 15 mm from the device.

Using the Cell Phone and Charger

Danger:

Only use the battery and charger approved by the manufacturer. Using other brands may cause battery leakage, overheating, explosion or even fire.

Caution:

Keep the phone away from dust, water and damp areas.

Dust, water or other liquids may cause overheating, electrical leakage, and/or phone failure.

The phone, battery, charger and AC adapter are not waterproof. Keep them away from liquid.

Warning:

Do not bump, shake or tamper with the phone or charger.

This may cause battery leakage, overheating, explosion or even fire.

Do not place the battery, phone or charger near a microwave or high-voltage device. This may cause battery leakage, overheating, explosion or even fire; also prevent the phone and AC adapter from overheating, smoking or short circuiting.

Do not use the phone around volatile oil. This may cause fire or damage.

To avoid any damage, do not disassemble the phone, battery, charger or internal components by yourself.

Using the Cell Phone

Warning:

Do not use the phone while you are driving. Pull over and stop your automobile to dial or listen to a phone call.

Usage of cell phones in aircrafts or in hospitals is prohibited. Switch the phone off to prevent interference with electronic medical devices. Follow any rules or regulations in such places.

Do not use the phone at a gas station, near fuel or near chemicals.

Do not use the phone near electronic medical devices such as hearing aids, pacemakers and auto-control devices such as fire detectors and automatic doors.

If you have to use your cell phone near an electronic medical device such as a pacemaker, please contact your manufacturer or dealer for information about preventing interference.

Caution:

Electronic systems in automobiles such as anti-lock brakes, speed control, or fuel spraying systems, are usually not influenced by wireless devices. Manufacturers of these systems will tell you whether they are provided with good screening functions. If you suspect that an automobile failure is caused by a wireless wave, please contact your automobile dealer.

Avoid using your phone in crowded places.

Do not store your mobile phone near, or together with, a credit card, disk or other magnetic materials. This may effect information stored on your phone.

Keep your phone away from pins. Pins can be absorbed

by the phone's receiver magnet, which may cause harm.

Using the Battery

Danger:

Do not dispose of the battery into a fire. Doing so may cause battery explosion or even fire.

If you have difficulties installing the battery, do not force the installation. This may cause battery leakage, overheating, explosion or even fire.

Keep metal objects away so they don't come in contact with the battery or its connectors as it may cause the battery to short circuit, overheat or explode.

Do not weld the polarities of the battery directly together. This may cause battery leakage, overheating, explosion or even fire.

Battery liquid is severely harmful for your eyes. If battery liquid gets in your eyes, do not rub them. Instead, wash your eyes with water first and then go directly to a doctor for help.

Do not use or store your phone in high temperature areas. This may cause battery leakage, overheating, explosion or even fire.

Warning:

If battery liquid leaks onto your skin or clothes, immediately wash the affected parts with water.

If the battery begins to leak or emits a strange odor, properly dispose of the battery according to local regulations. Do not throw it into a fire.

Caution:

Do not leave the product or its battery inside a vehicle or

in places where the temperature may exceed 60°C (140°F), such as on a car dashboard, window sill, or behind a glass that is exposed to direct sunlight or strong ultraviolet light for extended periods of time. This may damage the product, overheat the battery, or pose a risk to the vehicle.

Using the Charger

Danger:

Only use the charger that came with the phone. Using a different charger may cause the phone to break or an explosion.

If the charger short circuits or breaks, a fire may occur.

Do not use a damaged, worn or broken charger. This may cause a fire.

Clean dust away from the power socket to avoid the possibility of a fire.

Do not store the charger near any liquids. If liquids spill onto the charger it may cause it to overheat or break,

If liquid does spill onto the charger, immediately unplug the power cable to prevent overheating, fire or another type of break.

Do not use the charger in places with high humidity like a bathroom. This may cause a fire.

Do not touch the charger, power cable or socket with wet hands. This may cause an electric shock.

Caution:

Keep the environment temperatures within the range of 0°C ~40°C while charging. Temperature below 0°C or higher than 40°C will cause insufficient charging, terminate charging or even cause the battery to explode.

Unplug the charger from its power source before

cleaning it.

Do not place heavy objects on the power cord. This may cause electric shock or fire.

Hold the plug while unplugging the power cord; this will avoid any potential damage or even fire.

Requirements for Cell Phone

Avoid using your mobile phone in extremely high or low temperature. Use the phone in a temperature range from -10~55°C and humidity of 35%~85%.

It is recommended that you do not use your mobile phone near a telephone, TV set, radio or other radio frequency sensitive devices.

Requirements for the Battery

When not in use, store the battery in a cool, well-ventilated place with sunshine.

If you won't be using the cell phone for an extended period of time, charge the battery on a regular basis to avoid battery breakdown.

Requirements for the Charger and AC Adapter

Do not charge your phone under the following circumstances: sunshine, temperatures equal to or lower than 0°C, temperatures equal to or higher than 40°C, high humidity, dust, high vibration areas, or near a TV, a radio, etc.

Cleaning and Maintenance

The mobile phone, the battery and the charger are not waterproof. Do not use them in places with high humidity like a bathroom and also avoid spilling any liquids on the phone, battery or charger.

Use a soft cloth to clean the mobile phone, the battery and the charger.

Do not use alcohol, diluted liquid or benzene to clean the mobile phone.

If dust gets in the sockets the phone can be damaged, short-circuit or even the lose the ability to be re-charged. Be sure to clean the socket regularly.

Service Center number

No.:+919560394002

Kindly note: Please send area code of your location through SMS to this No. and in return you will get address of service center nearest to you by SMS.

LAVA Warranty Certificate

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as " product")

The warranty period for the transceiver is one (1) year and for batter y, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for batter y & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation

- You have not notified Lava of the defect in the product during the applicable warranty period.

- The product serial no. code or the accessories date code has been removed, defaced or altered.

- The product has been used with or connected to an accessory
 - (i) Not supplied by Lava or its Affiliates
 - (ii) Not fit for use with the product or
 - (iii) Used otherwise than in manner intended.

- The seals of the product's battery enclosure have been broken or shown evidence of Tampering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.

- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we Recommend you to:

- Read the guidelines for safe and efficient use as mentioned in the manual.
- Read the terms and conditions of your Lava warranty in the manual.
- Keep your original receipt; you will need it for warranty services if asked to produce.
- Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website www.lavamobiles.com for updated list of Authorized Service Centers near to your location. Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized Distributor/retailer.

All warranty information, product features and specifications are subject to change without notice.

IMEI No.
 Dealers Stamp
 Date of purchase
 Model No.