

Skitter TV



MY DVR

Discover **fun** and convenient viewing
inside your TV



Southeast Nebraska
COMMUNICATIONS

People • Service • Quality



release 6.2.3

THIS PAGE INTENTIONALLY LEFT BLANK

Contents

Contents **i**

Introduction Error! Bookmark not defined.

My DVR **2**

- Set a Manual Recording 2
- View a Recorded Program 3
 - View Recorded Program Folders 4
 - Whole Home Resume 5
- Remove or Stop Recordings 7
- Manage My DVR 8
 - Select Default DVR Settings 8
 - Select Recording Priorities 9

 
Technical Support **10**

My DVR

The Recorded Programs feature lets you record programming for repeated viewing or viewing at a later time. Use My DVR to view the programming you record.

Set a Manual Recording

Manual recordings let you specify a specific time, channel, and/or date to record without using the channel guide. For example, you could record one channel for an entire evening.

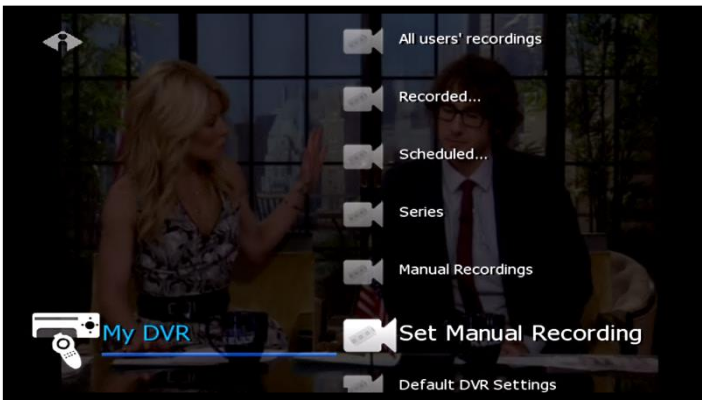

In the Main Menu, select My DVR and then Set Manual Recording.




Press buttons (◀ ▶ △ ▽) to select up or down arrows at each field, then press ok to scroll to the setting you want:

Channel

From/To—Start/end times


Repeat—How often to record at these settings, such as Just Once, Weekdays only, Daily

Period start—Date to start recording

 Press **⏪** to backspace your entries. For example, to change 9:30 to 9:00, press **⏪** twice and then type **00**.

 


1. To name this settings group, click the **Name** tab.
2. In the pop-up keyboard, press arrow buttons to select letters. Press ok after each letter to spell the name, and then select the check mark or OK.


 If you don't select a name, the system will assign one. You will see it when you check recording schedules at My DVR > Scheduled.

3. On the Set Manual Recording window, select **Set** and then press OK. Click ok in the confirmation window.
4. To view a list of programs you've scheduled, select My DVR > Scheduled.

View a Recorded Program

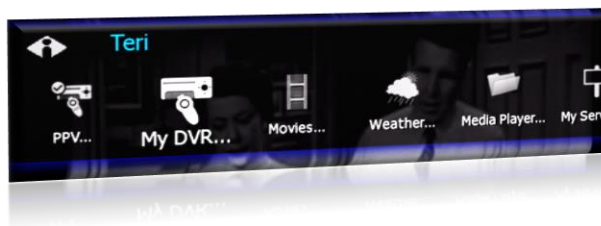

 In the Main Menu, select **My DVR**, and then press OK.

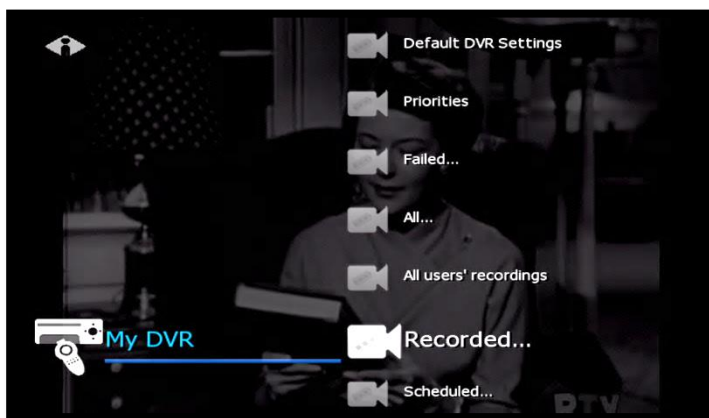

In the My DVR menu, press ∇ to scroll down to the item you want, then press OK. These menu options let you view recorded programming:

Recorded—All programs recorded


Scheduled—All programs scheduled to be recorded

Series Folders—Series episodes recorded

Manual Recordings—Manual recordings

All...—All recordings for user logged in






All users' recordings—All recordings made or scheduled by all users on this set-top box

 For information about different types of recording, see **"Error! Reference source not found."** starting on page **Error!**



 
In the list that appears, press ∇ or Δ to select a program and press OK. Information at the top of the window describes the selected program.

Symbols show the status of each listing:


-  Completed successfully
-  Unsuccessful
-  In progress
-  Scheduled
-  Interrupted



In the Main Menu, select **My DVR**, and then press **OK**.

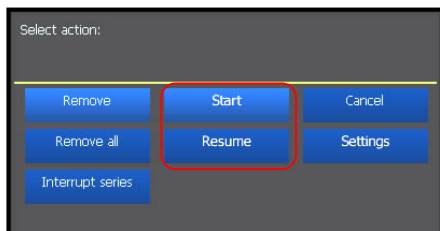


 Select **Start** to start the program at the beginning, or select **Resume** to continue watching a program from where you stopped. Press **OK**.
Navigate the program with Play, Stop, Pause, Rewind, or Fast Fwd.

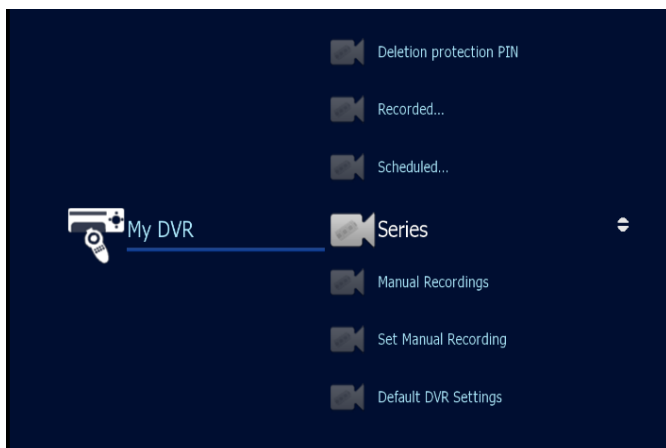


View Recorded Program Folders


To view a recorded program folder within fs|cdn, select **Series** from the My DVR menu.

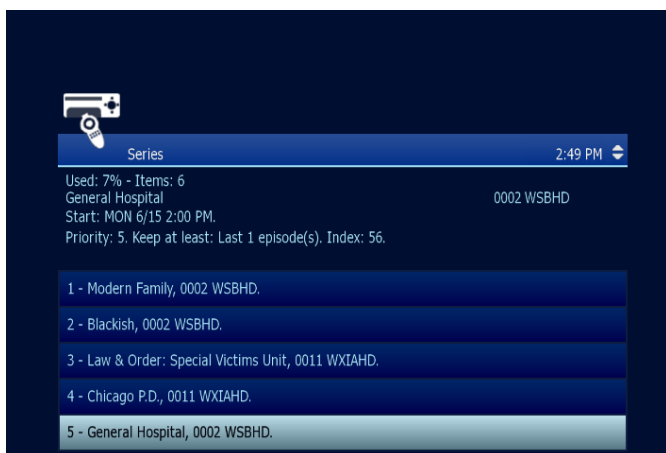 

  
Select the series you wish to view by highlighting it and pressing **OK**.

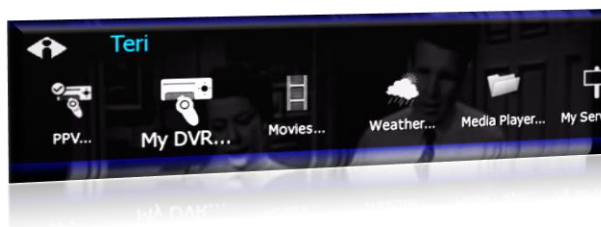

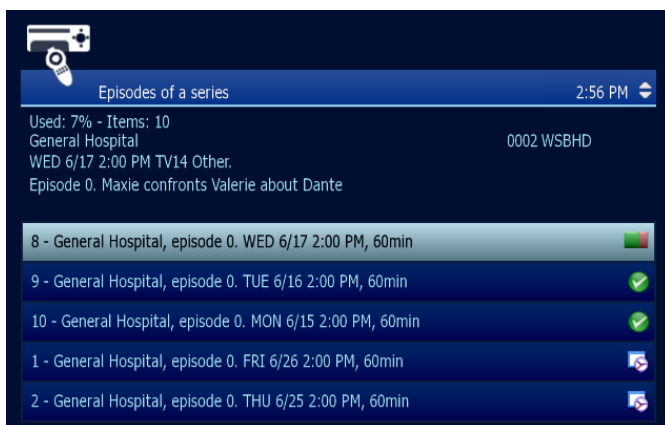

In the Main Menu, select **My DVR**, and then press **OK**.





 
The list of available episodes for that series will then appear.

 indicates that the episode has not aired yet and has been scheduled for recording.

 indicates that the episode has already aired and is available for viewing.

 indicates that the episode is airing currently.


Select an episode with either  or  adjacent to it. Press **OK**.

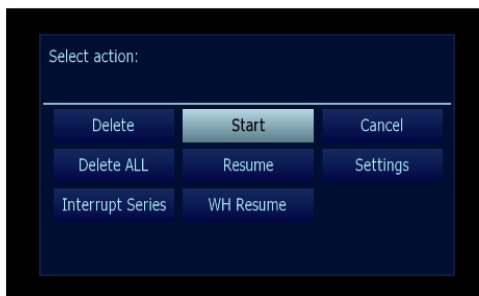

Highlight **Start** and press **OK** for the selected episode to play from the beginning.

Whole Home Resume

 The Home House Resume feature allows viewers with multiple television sets to pause recorded programming on one set and resume it on any other household set without missing any of the content. The programming will automatically restart from the point at which it was paused.




On the television you will no longer be viewing, press **Pause (||)** to pause the programming.



To resume the program on another television set, locate the program, then highlight it and press **ok**.

The program will then commence from exactly the point at which it was paused on the other television.

 Remove or Stop Recordings

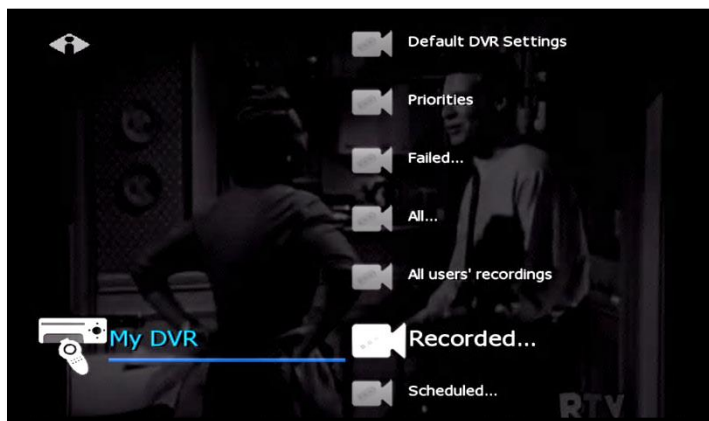

In the Main Menu, select **My DVR > Recorded**, select to view recordings listed by date or by title, and press **OK**.

From the list of programs, select the program you want to remove and press **OK**.



Select the option you want and then press **OK**:

Remove—Erase the selected program from the Recorded list

Remove all—Erase all programs in the Recorded list

Interrupt series—Keep the series already recorded, but stop recording future episodes

The window includes other controls for the selected program:

Start—Play the recording

Cancel—Discontinue this action

Resume—Continue to play the program if it has already been started

Settings—Change recording preferences for the program (for more information about recording preferences, see “Select Default DVR Settings” on page 8.)

 
Manage My DVR

Managing your recordings will optimize My DVR performance when you record programs for later viewing. This section describes how to set these controls:

- Default DVR Settings
- Recording Priorities

Select Default DVR Settings

Use this option to pre-set your recording preferences for different types of programs such as series, movies, and sports.

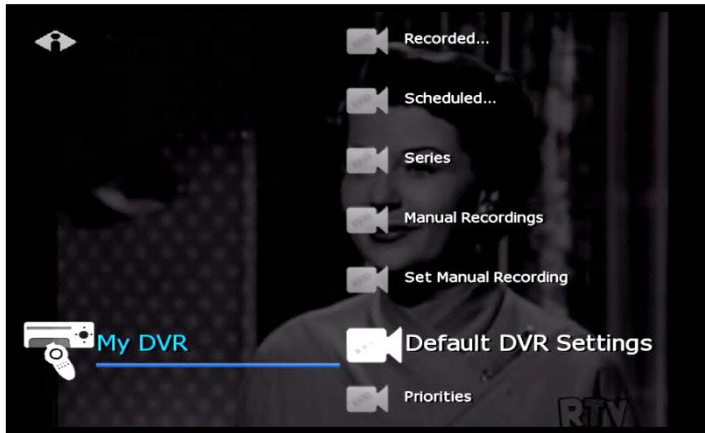

In the Main Menu, select **My DVR > Default DVR Settings**.



Use the arrow buttons (◀▶△▽) to select up or down arrows at each field, then press ok to scroll to the setting you want (settings vary depending on the Type):

Type—Type of recording, such as Series Recordings, Single series episodes, Movies, Shows, Sports, Manual Recordings

Start offset—Number of minutes to start recording before the program is scheduled to start

End offset—Number of minutes to continue recording after program is scheduled to end

Keep until—How long to store recorded programs

 
Keep at least—Number of episodes to store

Record episodes—Record only new episodes, or new episodes and reruns


Select **Apply** and press ok.

Select Recording Priorities

If the number of recordings scheduled at one time is more than allowed, use this option to choose which program to record. This is useful if you have scheduled a series, which records repeatedly and may conflict with other programs you schedule.

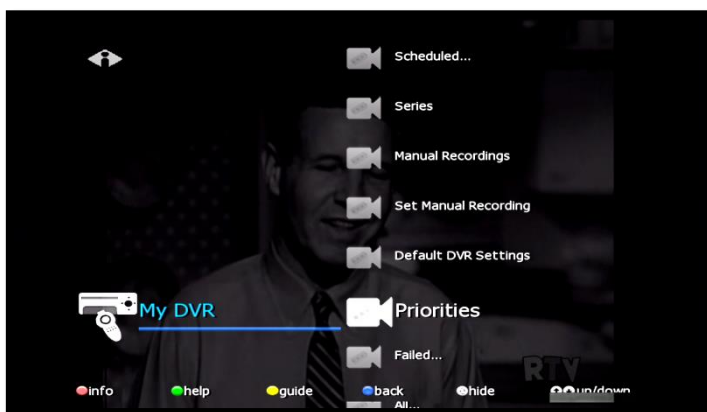

 In the Main Menu, select **My DVR > Priorities**.

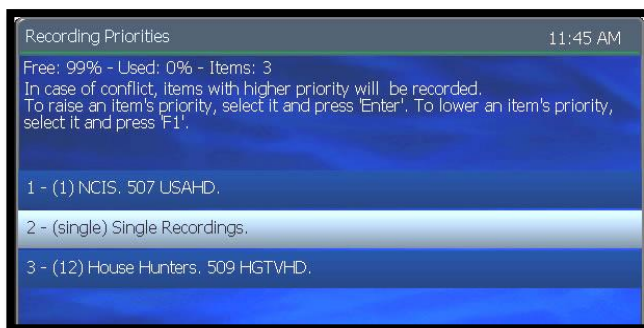

Programs scheduled for recording display in a list. The higher the program in the list, the higher its priority:

To move a program higher or lower in the priority list, follow these steps:

For higher priority—Select the program, then press **OK**

For lower priority—Select the program, then press the **Info/red** button

Technical Support

This user manual is intended for use by Owner personnel and fs|cdn end users.

If you have questions or problems please contact Southeast Nebraska Communications:

phone: **402-245-4451**

afterhours phone: **402-245-5999**

e-mail: snc@sentco.net

website: <http://www.sentco.net/>

Information included in this document is correct at time of release.

© 2011 Conklin Corporation, all rights reserved.

Printed in the USA.

fs|cdn and the Intelligent Personal|TV logo are registered trademarks of Conklin Corporation.

All other trademarks are the properties of their respective owners.

UM-CDNSTBC-6.2.3