

PRO-DIVE

WATERPROOF MP3/FM STEREO PLAYER

MT831



User Manual

Introduction

Thank you for buying this waterproof MP3 player with FM radio for swimmers. To fully enjoy all of its features please take a moment and read this manual before using the device.


Package contents

- MP3 player with FM radio,
- Waterproof earphones (ø2.5mm),
- Earphone silicone cushions (2 sizes),
- USB cable for charging/data transmission,
- Goggles rubber lock ring (2 pcs),
- Jogging arm belt,
- Quick-drying cleaning tissue.
- User manual.

Specification

- waterproofing international standard IPX-8,
- charging time ca. 2 hours,
- working time up to 5 hours,
- operation temperature under water: 0°C ÷ 50°C,
- dimensions: length 60mm, ø21mm,
- supports Windows XP/Vista/7.

Overview

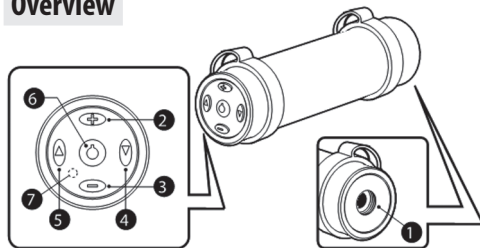

No	Icon	Function
1	Earphone /USB socket	For plugging earphones or USB cable
2	+	Volume up button
3	-	Volume down button
4	▼	Next track button
5	▲	Previous track button
6	⏻	Power/switch mode button
7	LED	Status indication

Charging

When you notice fast LED blinking during normal use of device rechargeable battery is low and need to be charged. Use attached USB cable and plug MP3 player to USB port. During charging LED will be blinking slowly. After 2 hours device is fully charged.

Note! Fully charge the device before first use.

Copying MP3 files

Use attached USB cable and plug MP3 player to USB port of PC computer. Windows will recognize new USB mass storage device and install it automatically. Now you can copy audio files onto MP3 player.

Note! When connected to PC computer LED will be on – you can transmit files onto player and charge it at one time.

Switching mode

Power ON – when device is in off mode press power button once, LED will be on and device will be in player mute mode. Now press again power button to unmute and start to play music files (player mode). Press again power button to pause and enter into player mute mode.

FM radio – when device is in player mute mode press next track button to enter into radio FM mode. Press power button to enter FM radio mute mode. Now press next track button to back to player mode.

Power OFF – when device is in player mute mode and when idle time exceeds 1 min device will automatically power off. You can also press and hold for 2 sec. power button to power off device manually. To confirm this state LED goes off.

Player mode

To enable pause/mute press power button once – press again to disable it. When playing in progress press next/previous track button to navigate or press volume up/down button to adjust volume level.

FM radio mode

To mute press power button once – press again to unmute it. Press and hold for 2 sec. next/previous track to seek for next radio station. When in FM radio mute mode press and hold power button for 2 sec. to enable autoscanner mode – wait until device stop switching radio stations, now you can simply press next/ previous track button to switch between saved radio stations.


Reset

If you encounter any problems or strange behaviour you can reset the device. Use straighten paper clip and


gently insert it into earphone/USB socket. At bottom there is tangible reset button, press it once and take out paper clip.

Operation in water


1. Put silicon cushions on each earphone to match your ear size.

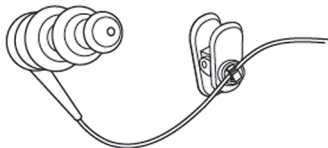

2. Plug earphones to MP3 player and screwed it tightly as shown below:

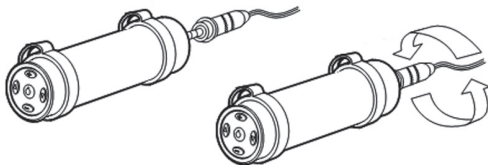

3. Fix MP3 player to swimming goggles using attached rubber lock rings as shown:

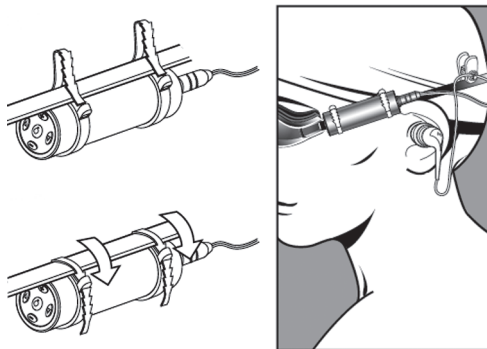

Note! Do not dive below level described in water-proofing standard IPX-8.

Note! After swimming use attached cleaning tissue to dry the device.

** Specification and appearance of product are subject to change without prior notice.*