Spark 285

1 Welcome

Thank you for purchasing the Spark 285. Your Spark 285 is packaged with the following state of the art features:

- 2MP Camera
- 2.8 Inch screen
- Audio Player
- FM Radio
- King Movie
- Video and FM Recording
- Dual SIM (GSM + GSM)
- T-Flash Card support (up to 16 GB)
- Hindi Language Support

Important:

- 1. Please read the contents of this manual to fully utilize the features of this phone.
- 2. Please read the Guidelines section provided with this Reference guide.

Table of Contents

1	W	/elcome2
2	K	now Your Phone9
	2.1	Keys and Parts9
	2.2	Insert SIM Card10
	2.3	Insert Memory Card10
3	В	asic Operations10
	3.1	Switch Phone ON/OFF10
	3.2	Unlock the phone10
	3.3	Make a call11
4	P	honebook11

4.1	Add New Contact12
4.2	Send SMS or MMS12
4.3	Call a Contact
4.4	Delete a Contact
4.5	Delete multiple contacts
4.6	Add to Blacklist12
4.7	Import/Export Contacts
4.8	Send vCard13
4.9	Others13
4.10	Most used14
4.11	Groups14
Cal	l Logs
5.1	View Call Logs14

5

6	Set	ttings	. 15
7	Int	ernet	15
8	Me	essages	. 15
	8.1	Write message	15
	8.2	Use message Templates	16
	8.3	Voice mail server	16
	8.4	Settings	16
	8.5	Delete all	17
	8.6	Message capacity	17
9	Ca	mera	17
10	Ca	mcorder	.17

Model -	- Spark 285	Page 6
20	FM Radio	20
19	My images	20
18	Bluetooth	20
17	My files	19
16	E-book	19
15	Torch	19
14	Video Player	19
13	Profiles	18
12	Calendar	18
11	Audio player	

21	Calculator21
22	Recorder21
23	Games21
24	Clock
25	Answer machine21
26	Unit conversion21
27	SIM tool kit22
28	To do list22
29	Opera Mini22
30	Health and Safety Precautions23

30.1	SAR (Specific Absorption Rate) Information2	3
30.2	E-waste Disposal Mechanism24	4
30.3	Do's and Don'ts for disposal e-waste24	4
30.4	Troubleshooting2	6

Lava warranty certificate	27
---------------------------	----

2 Know Your Phone

2.1 Keys and Parts

Important keys and parts are listed here for you to use the phone better.



2.2 Insert SIM Card

- 1. Insert the SIM card correctly in the SIM slot(s).
- Finally, insert the battery and fix in slot the rear cover of the mobile phone.

2.3 Insert Memory Card

- 1. Switch off the phone and remove the rear cover and the battery.
- 2. Insert the memory card into the slot.
- 3. Finally, insert the battery and the rear cover of the mobile phone.

Note: Use only compatible memory cards approved by KKT27. Incompatible cards may damage the slot or corrupt the data stored in the card.

3 Basic Operations

3.1 Switch Phone ON/OFF

To switch ON/OFF your phone, press and hold the **End key** for a few seconds.

3.2 Unlock the phone

If you do not use the phone for a while, the screen is replaced with a

locked screen.

- 1. Press any key to activate the screen.
- 2. Press Left key, and then press Right key.

3.3 Make a call

You can make a call in the following ways:

- Enter the desired number in standby mode and press the Call key to make the call.
- Go to Menu > Phonebook and then select and dial the desired number.
- Just press the Call key to dial the contacts listed in Call logs.
- You can also dial a contact from the messages.

4 Phonebook

Your phonebook stores all your saved contacts for anytime use. Your phonebook data can be stored in your SIM card or your phone memory. You can manage your contacts from here.

Menu > Contacts

4.1 Add New Contact

Menu > Contacts > Left Key > New

4.2 Send SMS or MMS

Menu > Contacts > Left Key >Write message > SMS or MMS

4.3 Call a Contact

Menu > Phonebook > Left Key > Call>Voice call

Allow you to make a call to the contact you are viewing. Or you can just highlight a number and press the **Call** key.

4.4 Delete a Contact

Menu > Contacts > Left Key> Delete

In the Contacts list, select the entry you want to delete.

4.5 Delete multiple contacts

Menu > Contacts > Left Key> Delete multiple

In the Contacts list, select the entries you want to delete.

4.6 Add to Blacklist

Menu > Contacts > Left Key > Add to Blacklist

Allow you to black list selected numbers. In this case the contact will be

blocked from calling you up.

4.7 Import/Export Contacts

Menu > Contacts > Left Key > Import/Export

You can copy, Import or Export contacts entries stored in the SIM card to the phone memory and vice-versa.

4.8 Send vCard

Menu > Contacts > Left Key >Contacts> vCard

Allow you to send vCard to other numbers and export vCard.

4.9 Others

Speed dial

Menu > Contacts > Left Key >Others> Speed dial

Set speed dial and view memory status.

Owner number

Menu > Contacts > Left Key >Others> Owner number

Set name of your own number.

Memory status

Menu > Contacts > Left Key >Others> Memory status

Check the memory status of SIM and Phone.

4.10 Most used

Menu> Contacts > Most used

View the contacts that most used.

4.11 Groups

Menu> Contacts > Groups

Press the Left/Right navigation key to access the Group tab. Setup a list of numbers with similar preferences such as ringtone, profile etc.

5 Call Logs

5.1 View Call Logs

Menu > Call Logs

Tip: Directly access the call logs of by pressing the Call key in idle mode.

The Call log lists the calls you have recently dialed, received, missed from SIM1 and SIM 2.

Press the Left/right navigation keys to access various call logs and work on the call logs.

6 Settings

Choose various preferences to customize your handset according to your requirements. You can set:

Phone Settings

Display

Security

Call settings

Connections

7 Internet

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

You also can choose Google, MSN, Facebook, Yahoo, ebuddy and STK

8 Messages

8.1 Write message

Menu > Messages > Write message > New SMS/MMS

You can compose and send SMS and MMS. Pressing the Left Key during/after composing the message gives you a host of messaging features.

8.2 Use message Templates

Menu > Messages > Templates

Enter into preset message templates and use them. These preset templates can save you time if the theme of your message is the same as those existing in the template.

8.3 Voice mail server

Menu > Messages > Voice mail server

You can activate voicemail service to redirect your incoming calls (based on your call settings) to a voicemail server and retrieve them later via SMS alerts.

To divert incoming calls to a voicemail server, go to Settings>Phone tab > Call Divert> Voice> (choose the desired call divert condition)> Activate> Phone Number/Voicemail Number.

8.4 Settings

Menu > Messages > Options>Settings

You can set your desired parameters for SMS, MMS, push message and other.

8.5 Delete all

You can choose all messages in the Inbox or others to delete.

8.6 Message capacity

Menu > Messages > Options > Message capacity

View the memory status of your SMS and MMS.

9 Camera

Press the left key in camera mode to choose various settings

Shortcut keys: Press the number keys on the phone's keypad to choose various settings.

10 Camcorder

Press the OK Key to start recording.

- You can press Options switch to Camera and vice versa.
- You can also press Options key to choose memory
- Press Left key to choose various settings

Shortcut keys: Press the number keys as shortcuts on the phone's keypad to choose various video settings.

11 Audio player

Menu > Multimedia > Audio Player

The phone comes with an inbuilt audio player that plays all your favorite songs stored in the phone memory or memory card.

- While in music mode, press the Left key to choose various music options.
- Adjust Volume: Press Up and Down keys to adjust volume.

12 Calendar

Let's you view the calendar and schedule tasks on selected dates.

13 Profiles

Menu > Profiles

You can choose your profile such as silent mode, Normal, Meeting, Outdoor, earphone and so on.

14 Video Player

Menu > Multimedia > Video Player

Let you play videos stored in your phone or memory card. Press 2 key while playing a video to change the display mode.

15 Torch

You can turn on/off the Flashlight in this menu.

16 E-book

You can read the E-Book in the memory card by this function.

17 My files

You can view and manage your files available in the Phone or memory card from the gallery. You can rename, view details, move, and delete files, and so on via the Gallery.

18 Bluetooth

Use Bluetooth to exchange information with other Bluetooth devices. Select Bluetooth to have a host of options for scanning and for using Bluetooth feature.

19 My images

Let's you see your saved images. You can also send the images via MMS or Bluetooth or use it as contact icon or wallpaper, etc.

20 FM Radio

Go to Options> Search Channels> Auto Search to fill up the channels.

Press the number keys on your keypad in accordance to the channel list.

Press OK key to start/stop the radio.

Press the Up or Down key to increase/decrease the volume.

Press the Left key for various radio options.

21 Calculator

Use the calculator.

22 Recorder

You can record surrounding sounds using this feature.



This mobile phone provides three games: Sokoban, Snake, Tetris.

24 Clock

Lets you schedule alarms with the required settings.

25 Answer machine

Do not have time to answer the phone, can help you recording.

26 Unit conversion

Weight calculation and the distance of the unit conversion.

27 SIM tool kit

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

28 To do list

Write down the things you want at any time.

29 Opera Mini

To access this menu, enter the Main Menu in the standby mode and then select Internet. You can use the network-related services with this function.

You also can choose Google, MSN, Facebook, Yahoo, ebuddy and STK

30 Health and Safety Precautions

30.1 SAR (Specific Absorption Rate) Information

The highest SAR value for this mobile phone is <1.6 W/Kg, in accordance with the requirements of the ICNIRP, which recommended that the limit for exposure to radio waves is 1.6 watts/kilogram (W/kg) averaged over 1 gram of tissue. For more information, please visit our website.

(www.lavamobiles.com).

Safety precautions:

- Use a wireless hands-free system (Headphone, headset) with a low power Bluetooth emitter
- Make sure the cell phone has a low SAR
- Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women
- Use cell phone when the signal quality is good
- People having active medical implants should preferably keep the cell phone at least 15cm away from the implant.

30.2 E-waste Disposal Mechanism

'E-waste' means waste electrical and electronics Equipment (WEEE). In other Word E-waste is a popular, informal name for electronics Product nearing the end of their "useful life". For more details about e-waste please refer e-waste rules, 2011 <u>www.moef.nic.in</u>

30.3 Do's and Don'ts for disposal e-waste

Do's:

- Ensure that an Authorised Person repairs your Lava products
- Call Our Local Authorised Collection Centers to Dispose Lava products
- Always drop your used electronics products, batteries or any accessories thereof after the end of their life at nearest Authorised Collection Point or Collection Center.
- Separate the packaging material according to responsible waste disposal options and sorting for recycling.
- Always remove the battery from the product, when you do not intend to use the product anymore in its future.

Don'ts:

- Do not Dismantle your Lava Product at your own risk
- Do not give your e-waste to Kabbadi Wala / Scrap Dealer/ Rag

Pickers.

- Do not dispose-off the e-waste in landfills
- Never dump E-waste in garbage bins.
- Do not dispose of your product at municipal waste bins or rooms.
- Do not throw used batteries into household waste.
- •

Consequences of improper handling and disposal of E-Waste

- Improper disposal of waste prevents natural resources from being re-used.
- Some waste contains hazardous chemicals and if not disposed of properly may release toxins into the soil and water, and also releases greenhouse gases into the environment
- If e-waste is not properly disposed of, it can threat to the health and well-being of humans and animals and it also has adverse effect on the environment.
- Placing of batteries or devices on or in heating devices, such as microwave, ovens, stoves, or radiators and improper disposal of batteries may lead to explosion.
- If the battery terminals are in contact with metal objects, it may

cause a fire.

For more détails on how to dispose of your Lava products at the end of life, Please refer the list of our Services Centers on Pan India basis on our website <u>www.lavamobiles.com</u> or please view this link for the details of Service Centers <u>http://www.lavamobiles.com/support-services.</u>

30.4 Troubleshooting

Service Center number

No.:+919560394002

Kindly note down and please send area code of place through SMS to this No. In return you will get address of service center nearest to you by SMS.

Lava warranty certificate

Limited warranty:

LAVA international Ltd. (LAVA) provides limited warranty for your mobile phone and original accessories delivered with your mobile phone (hereinafter referred to as "product")

The warranty period for the transceiver is one (1) year and for battery, charger and headset is six (6) months from the date of purchase.

LAVA Warranty

Subject to the conditions of this Limited Warranty, LAVA warrants a product to be free from defects in design, material and workmanship at the time of its original purchase by you, and for a subsequent period of one (1) year for transceiver and six (6) months for battery & charger.

You shall have no coverage or benefits under this warranty in the event that any of the following conditions are applicable:

- The product has been subjected to abnormal use or conditions, improper storage, exposure to 1.excessive moisture or dampness, exposure to excessive temperature, unauthorized modification, unauthorized repair (including but not limited to use of unauthorized spare parts in repairs), abuse, accidents, Acts of God, spills of food or liquids, improper installation
- You have not notified Lava of the defect in the product during the applicable warranty period.
- The product serial no. code or the accessories date code has been removed, defaced or altered.

- The product has been used with or connected to an accessory (i) Not supplied by Lava or its affiliates, (ii) Not fit for use with the product (iii) Used otherwise than in manner intended.
- The seals of the product's battery enclosure have been broken or shown evidence of tempering or the product's battery has been used in equipment other than that for which it has been specified usable by LAVA.
- All plastic surfaces and all other externally exposed part that is scratched or damaged due to normal use.

To get maximum of your new product, we recommend you to:

Read the guidelines for safe and efficient use as mentioned in the manual.

Read the terms and conditions of your Lava warranty in the manual.

Keep your original receipt; you will need it for warranty services if asked to produce.

Present this Lava Warranty Certificate along with original proof of purchase whenever you require any warranty services.

In case Lava product needs service, please visit the nearest Lava service centers given in the service guide. Please visit our Website

www.lavamobiles.com for updated list of Authorized Service Centers near to your location.

Important note: for your warranty to be valid, all information on the warranty certificate has to be completed including the stamp from the authorized distributor/retailer. All warranty information, product features and specifications are subject to change without notice.

IMEI No
Dealers Stamp
Date of purchase
Model No.