



Model KF5.5
USER MANUAL

iki mobile 

Contents

1. The Basics	3
1.1 Overview	3
1.2 Safety guide	3
1.3 Safety warnings and notices	3
2. Getting Started	4
2.1 Component name and explanation	4
2.2 Key explanations	4
2.3 Using the touchscreen	4
2.4 Connecting to the network	4
3. Functional Menu	5
3.1 File Management	5
3.2 Sending an Email	5
3.3 Dialing	5
3.4 3G video call	5
3.5 Calculator	5
3.6 Browser	6
3.7 Voice Recorder	6
3.8 Calendar	6
3.9 Settings	6
3.10 Clock	6
3.11 Radio	6
3.12 Google Search	6
3.13 Contacts	6
3.14 Gallery	6
3.15 Camera	6
3.16 Messaging	7
3.17 Notification Menu	7
3.18 Download Content	7
3.19 Music	7
3.20 Call Records	7
3.21 Widget	7
3.22 Selecting Wallpaper Source	7
3.23 Local search	7
3.24 Note	7
3.25 Flashlight	7
3.26 Documents To Go	7
3.27 MoboPlayer	7
3.28 Map	7
3.29 Navigation	7
3.30 Voice Search	7
3.31 Videos	7
3.32 SIM Card Application	7
3.33 GMail	7
3.34 Google Talk	7
3.35 To Do	8
3.36 Backup and Reset	8
3.37 Film Workspace	8
3.38 Play store	8
4. Text Input	8
5. SD Card Introduction	8
6. FAQs and Solutions	9



Trademarks

The IKIMOBILE is a registered trademark of Univercosmos, Lda., a company of Grupo FF, with a participation in Technology Solutions IT INT.

Android e Google Search™ are registered trademarks by Google Inc.

Wi-Fi® is a registered trademark by Wi-Fi Alliance.

Bluetooth® is a registered trademark by Bluetooth SIG, Inc.

MicroSD™ is a registered trademark and logo by SD-3D, LLC.

Dolby, Dolby Audio and the double D symbol are registered trademarks by Dolby Laboratories.

Other trademarks are property of their respective owners. All rights reserved.

1. The Basics

1.1 Overview

Thank you for choosing the GSM/GPRS digital mobile phone. After reading this guide you will be able to fully master the use of your phone and appreciate all its functions and ease of use.

Not only does the smartphone provide you with basic call functions such as call Register, but also with many practical functions and services, to improve the time you spend working and playing.

The color screen mobile phone complies with the GSM/GPRS technology and has been approved by certification authorities both domestically and abroad.

The availability of some services and features described in this manual depends on the network and your subscription. Therefore, some menu items may not be available in your phone. The shortcuts to menus and features may also vary from phone to phone.

Our company reserves the right to revise this manual content without prior notice.

1.2 Safety guide

- If your mobile phone is lost or stolen, please contact the telecommunications authorities or a sales agent immediately to have a hold on the phone and the SIM card. This will prevent economic loss caused by unauthorized calls made from your mobile phone.
- When you contact the telecommunications authorities or a sales agent, they will need to know the IMEI number of our mobile phone (remove battery to expose number located on the label on back of phone). Please copy this number and keep in a safe place for future use.
- In order to avoid the misuse of your mobile phone please take the following preventative measures:
 - Set the PIN number of your mobile phone's SIM card and change this number immediately if it becomes known to a third party.
 - Please keep the phone out of sight when leaving it in a vehicle. It is best to carry the phone with you, or lock it in the trunk.
 - Set call barring.

1.3 Safety warnings and notices

Before using your mobile phone, read and understand the following notices carefully to ensure you will use it safely and properly.

1.3.1 General attention

- Only the battery and battery charger specified by our company should be used in your phone. Other products might result in battery leakage, overheating, fire or explosion.
- To avoid your phone malfunctioning, or catching fire, please do not violently impact, jolt or throw your phone.
- Please do not place the battery, mobile phone, or charger in a microwave oven or high-pressure equipment. Otherwise it could lead to unexpected accidents such as damage to the circuitry or fire hazard.
- Please do not use your phone near flammable or explosive gases, otherwise it could cause malfunction of your phone or fire hazard.
- Please do not subject your phone to high temperatures, high humidity or dusty places; otherwise this may lead to the malfunction of your phone.
- Keep your phone out of the reach of small children. Your phone is not a toy. Children could hurt themselves.
- To avoid your phone falling and malfunctioning or being damaged, please do not place it on uneven or unstable surfaces.

1.3.2 Notices when using your phone

- Turn off your mobile phone where the phone is not allowed, such as, on the airplane or in hospitals. Using the mobile phone in those

places may impact the normal operation of electronic devices and medical instruments. Follow relevant regulations when using your mobile phone in those places. Your mobile phone has the auto turn-on feature. Check your alarm clock settings to confirm that your mobile phone will not be turned on automatically during flight.

- Please do not use your mobile phone near the weak signal or high precision electronic devices. RF interference might cause malfunctioning of such electronic devices and other problems. Special tips must be paid near the following equipment: hearing aids, pace makers and other medical electronic devices, fire detectors, automatic doors and other automatic control installations. To find out the effect of mobile phones on a pacemaker or other pieces of electronic medical equipment please contact the manufacturers or local sales agents of the equipment.
- Please do not subject the LCD to impact or use the screen to strike things, as this will damage the LCD board and cause leakage of the liquid crystal. There is a risk of blindness if the liquid crystal substance gets into the eyes. If this occurs rinse eyes immediately with clear water (under no circumstances rub your eyes) and go immediately to a hospital for treatment.
- Do not disassemble or modify your mobile phone, as it will lead to damage to the phone such as battery leakage or circuitry failure.
- Under very rare circumstances using the mobile phone in certain model cars may negatively affect the internal electronic equipment. In order to assure your safety under such circumstances please do not use the mobile phone.
- Please do not use needles, pen tips, or other sharp objects on the keypad as this may damage the mobile phone or cause it to malfunction.
- In the event of antenna malfunction, do not use your phone, as it could be harmful to human body.
- Avoid letting the phone come into close contact with magnetic objects such as magnetic cards as the radiation waves of the mobile phone may erase the information stored on floppy disks, pay cards and credit cards.
- Please keep small metal objects, such as thumbtacks far away from the receiver. When the receiver is in use it becomes magnetic and may attract these small metal objects and thus these may cause injury or damage the mobile phone.
- Avoid having the mobile phone come into contact with water or other liquids. If liquids enter the phone, this could cause a short circuit, battery leakage or other malfunction.

1.3.3 Charging your phone

- Connect the connector of charger to the mobile phone. The battery level indicator flashes on the screen. Even if the phone has been turned off, the charging image still appears, indicating that the battery is being charged. If the phone is overused when the current is insufficient, it may take longer time for the charging indicator to appear on the screen after the charging begins.
- When the battery level indicator does not flash and indicates the battery is full, this indicates the charging has been completed. If the phone is off during charging, the charging being completed image also appears on the screen. The charging process often takes 3 to 4 hours. During the charging, the battery, phone and charger gets warm, this is a normal phenomenon.
- Upon the completion of charging, disconnect the charger from AC power socket, and from the mobile phone.

Notes:

- During charging, the phone must be placed in well-ventilated environment of +5°C - +40°C. Always use the charger supplied by your

phone manufacturer. Using an unauthorized charger might cause danger and invalidate the authorization and warranty clauses for your phone.

- The standby time and call duration provided by the manufacturer are based on ideal operating environment. In practice, the battery's operating time varies depending on network conditions, operating environment and usage methods.
- Make sure the battery has been installed before charging. It is best not to remove the battery while charging.
- Upon completion of charging, disconnect the charger from your phone and the power supply.

If you have not disconnected the charger from your phone and the power supply, the charger will continue to charge the battery after about 5 to 8 hours when the batter level decreases substantially. We advise you not to do like this, as it lowers your phone performance and shortens your phone life.

2. Getting Started

2.1 Component name and explanation

2.1.1 Technical parameters








 






Handset

Lithium-ion battery

Travel charger

2.1.2 Icons

In the standby mode, the following icons may appear in standby screen:

Icon	Description
	Indicate the intensity of network signals.
	Show missed calls.
	Location by satellite.
	Receive a new message.
	An application is being downloaded.
	The download is over.
	The alarm clock has been set and activated.
	A call is in progress.
	The phone is playing a song.
	Show battery level.
	Enable USB.
	The access is blocked.
	Get connected to the wireless network
	Turn on the Bluetooth.
	No SIM card is installed in the phone.
	GPRS data connection is on.

2.2 Key explanations

Key	Explanations
Return key	· Return to the previous menu.
Menu key	· Show options of current menu.
Home key	· At any status, press the key to return to the standby screen.
Power key	· Hold down this key to turn your phone off and on. · Generally, press this key to lock the mobile phone.
Side volume keys	· During the conversation, press the two keys to adjust the volume. · While playing an audio file, press the two keys to adjust the volume.

Note: In this guide, the phrase “press the key” refers to pressing and thereafter releasing a key. “Hold down a key” refers to pressing a key and keeping it depressed for 2 seconds or longer.

The descriptions and functions of keys depend on the model of your phone.

2.3 Using the touchscreen

- Do not touch the screen with wet hands.
- Do not touch the screen with great forces.
- Do not touch the screen with metallic or conductive objects.

2.4 Connecting to the network

2.4.1 Inserting and removing the SIM card

- Turn off the phone; remove the battery and unplug other external power supplies. Insert the SIM card into the SIM holder as shown in the phone.
- When you need to remove the SIM card, turn off the phone, remove the battery and then remove the SIM card from the holder.

2.4.2 Turning your phone on and off

To turn on the phone, hold down the **POWER key** on the top; to turn off the phone, hold down the **POWER key**.

- Enter PIN1 – if your have set the SIM card password.
- Enter phone password – if you have set your phone password
- Search for network – the phone searches for the appropriate network.

2.4.3 Unlocking the SIM card

The PIN 1 (personal identification number) secures your SIM card from being misused by others. If you have selected this function, you must enter the PIN1 code each time you turn on the phone so that you may unlock the SIM card and then make or answer calls. You can deactivate SIM card protection (see “Safety settings”). In this case, the misuse of your SIM card cannot be prevented.

- Press the Hang Up key to turn on your phone;
- Enter your PIN1 code. Clear the incorrect digits by using the right soft key, and press OK for confirmation. e.g. if your PIN1 is 1234, please enter: 1 2 3 4

If you enter incorrect numbers for three times in succession, your SIM card will be locked and your phone will ask you to enter PUK 1 number. If you do not know the PUK1 code, do not try. Instead, contact your network service provider. See “Safety settings”.

Note: your network service provider sets a standard PIN1 code (4 to 8 digits) for your SIM card. You should immediately change this number. See “Safety settings”.

2.4.4 Unlocking your phone

To prevent unauthorized use, you can set phone protection. If you have selected this function, you must draw unlocking pattern each time you turn on your phone, to unlock the phone and then make or

answer calls. You may clear the unlocking pattern. In this case, the unauthorized use of your phone cannot be protected. If you forget your phone password, you must contact the retailer or local authorized service center to unlock your phone.

2.4.5 Connecting to the network

Once your SIM card is unlocked, your phone searches for available network automatically (the screen will show the network searching is underway). If your phone has found the available network, the name of network service provider appears at the center of screen.

Note: Making an emergency call. If “only for emergency calls” appears on the screen, it indicates that you are beyond the network coverage (service area), and that you can still make emergency calls depending on the signal intensity.

2.4.6 Making a call

When the logo of network service provider appears on the screen, you can make or answer a call. The bars at the upper left corner of screen indicate the intensity of network signal.

2.4.7 Making a domestic call

In the Dial screen, enter a number, and press the **Dial** key to make a call. To change the number, delete the digits you have entered. During dialing, the animation appears on the screen. After the call is picked up, the screen will show call status information. If the connection alert tone has been set, your phone will ring the alert tone (network dependent).

To end a call, press the **Hang Up** key.

Zone code Phone number Dial key

2.4.8 Making an international call

To make an international call, hold down the **0** key on the Dialing screen until the international prefix “+” for appears. This allows you to dial an international number without knowing its international fix (e.g. 00 for China).

Like making an international call via a fixed telephone, omit the “0” at the head of a city code.

2.4.9 Making a call from the list

- To view the dialed calls, press the Dial key
- You can dial any number from the list by pressing the Dial key.

When the call list appears, press OK to see details, or go to Options -> Save to place the number into your Phonebook.

2.4.10 Making an emergency call

If you are beyond the network coverage (see network-signal-intensity bars at the upper left corner of the screen), you can still make emergency calls. If your network service provider does not provide roaming service to the area, the screen will show “only for emergency calls”, alerting you that you can only make such calls. If you are within the network coverage, you can also make emergency calls even without the SIM card.

2.4.11 Call menu

The Call menu is only visible during an active call, and features such as Call Waiting, Call Diverting, and Multiple-party Call are network dependent. Contact your network service provider.

The call options include:

 
- Mute: Do not send local voice.
- Handsfree: Switch on the loudspeaker to amplify the voice.
- Hold: Put the current call on hold or retrieve the call on hold.
- End a call.: End the current call.
- New call: Make another new call.
- More: Start voice recording.

3. Functional Menu

(The following features depends on specific models)

3.1 File Management

The file management is composed of sdcard and sdcard 2, while sdcard is the memory of the phone, sdcard 2 is the external SD card. In the file management, files can be searched rapidly, deleted or edited in each card and new files can be created.

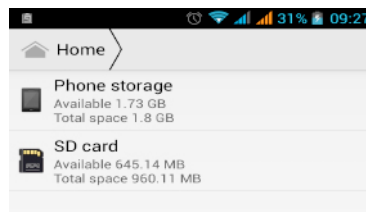

3.2 Sending an Email

Entering the procedure and set an account, you can click the account so that you come into the account already created, you can also activate, compile and create an account and then delete the operating. The email can be sent and received just like in a computer. This procedure requires the network support.

3.3 Dialing


When dialing, you can have a quick access to the call records, contacts and digit dial keyboard (used for manual dialing) by the menu key on the screen.

 
3.4 3G video call

Click a number portrait in the phonebook, and you can do these things instantly: dial, send a message and make a video call. During the video call, you can select applications such as adjusting it to mute mode, switching to robot portrait, turning off the voice and intercepting photos to SD card.

3.5 Calculator

Your phone provides a calculator with 4 basic functions for the convenience of your calculating.

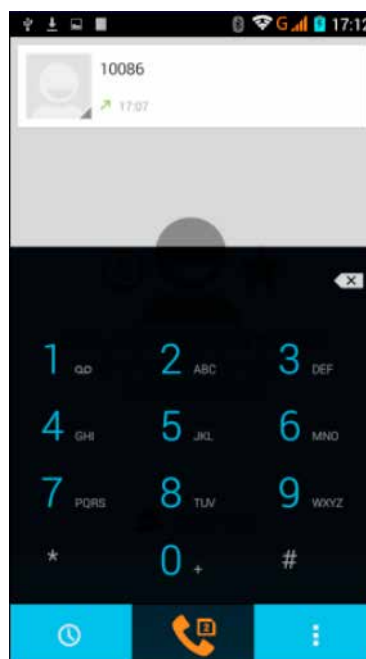


Press this button , and you delete the input and output in bitwise. Notice: this calculator is of limited accuracy and sometimes it causes error, please forgive us for the inconvenience.



3.6 Browser

You could view web pages in longitudinal or transverse mode. The page rotates according to the rotation of the phone and automatically adjusts to fit the page.

3.7 Voice Recorder

To start voice recording: Tap 
 To end voice recording: Tap 
 To play back voice recording: Tap 

The audio files are automatically stored on your phone. Click the Menu key, and you can operate and set the recorded voice. The file can be in document management and various players can be selected to play the voices.

3.8 Calendar

Select to show calendar by day, week or month. If “by week (or month)”, the calendar will be shown by week (or month). This application is convenient for you to view schedule or add events.

3.9 Settings



Reach the menu and customize your phone settings. SIM card management: SIM card can be managed and made settings.

- **WLAN:** WLAN can be turned on and off and settings are editable.
- **Bluetooth:** Bluetooth can be turned on and off and settings are editable.
- **The information flow usage:** It makes you in full awareness of the usage of the information.
- **More:** Click more and you will set up flight mode and VPN and more.
- **Audio profiles:** General, silent, meeting and outdoor optional. Meanwhile, customized setting-up of some scene modes are allowed.
- **Select a mode and enter the customized setting-up,** operational are vibration, volume, ring tones, notifications and key beep, etc.
- **Display:** Customized setting-up of the phone luminance, wallpaper, the screen and screen time-out and font size is allowed.
- **Storage:** The internal memory of the storage card and of the phone is shown.
- **Battery:** The usage detail of the battery is shown.
- **Applications:** View, manage and delete the applications on your phone.
- **Account and synchronization:** Set the synchronization of your phone account with your phone.
- **Location service:** Set the service during the locating.

- **Safety:** Set unlocking pattern; lock the SIM card; set the SD card.
- **Language and keypad:** Select a language and input method.
- **Backup and reset:** Reset DRM and restore factory settings to clear all personal data on your phone.
- **Date and time:** Set current time and date.
- **Schedule power on/off:** set the time to turn ON or OFF your phone.
- **Auxiliary function:** Some auxiliary functions can be set.
- **Developers' options:** Set some options used by developers.
- **About phone:** View the model, service status, mobile software and hardware information, etc.

3.10 Clock

Clock

Enter the menu to display the current time.

Alarms

Your phone provides many groups of alarm clocks. Select one of them to edit and customize alarm clock.

3.11 Radio



Wear your earpieces of radio before searching for channels.

Glossary:

Channel list: Display the list of FM radio channels. You can select to play one of them. (the list can contain 20 channels maximum).

 
Search: Select this option to automatically search for channels and generate the list of channels.

Loudspeaker: Press the button to use the radio loudspeaker.

 and  Tap to move to another channel.

3.12 Google Search

You can locally search for the information you need.

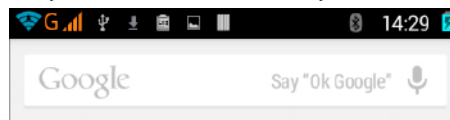

3.13 Contacts

Add a contact:

To add a contact, directly enter the name and phone number, or import the name and phone number from the SIM card. The number of contacts you can add is limited by the memory of your phone.

Search for contacts:

To search for a contact, press the Search key in search screen, and a search box will pop up. In the search box, enter the key words, such as first name, second name and company name. While you are entering the key word, the matching contacts immediately appear.

Edit a contact:

To edit details of a contact, select “Edit a contact”.

Delete a contact:

To delete the current contact, select “Delete a contact”.

From the menu, you can also synchronize with or share an account or import or export a contact.

3.14 Gallery

Gallery is a picture manager that typically exhibits miniatures, supports the features of “save picture”, “set pictures as desktop” and “share picture”.

3.15 Camera

Your phone provides the camera and video recorder features. Wherever you go, you can take high-resolution photos and videos. It also supports advanced camera features such as image stabilization, face embellishment, panorama shooting, high dynamic range and zero delay shutter, which can also be customized.

3.16 Messaging

Send a message: Tap it, enter the number and name of the contact or select the contact from Contacts. Tap the text box above keypad, enter the information and then tap "Send".

After selecting the number, you can select such options as Call, Add subject, Attach, Insert facial expression, and more.

Tap Settings to set ringtone, Delivery reports, and maximum quantity of messages.

3.17 Notification Menu






 
Slide and pull down menu on the main interface, you can see the message notice and choose whether to turn on or off WIFI, Bluetooth, GPS, off-line mode. In the data connection, the current SIM is available to make data connection of GPRS. Slide it around you can see the options of profile for your convenience.

3.18 Download Content

You can download through the browser things and pictures you want and list them in the Download Content menu.

3.19 Music

Music is used for enjoying the stored audio files. Select Music, you can see the menus of "List of played songs", "Songs", "Specialists" and "Artists".

To pause playing a song	Tap 
To resume playing a song	Tap 
To skip to the next song or reading material	Tap 
Return to the previous song or reading material	Tap 
To move fast backward or forward	Touch and hold  or  .

3.20 Call Records

Come into the call records, you can view missed calls, received calls and outgoing calls. The calling time is viewed in each record and features such as calling, sending messages and adding to new contacts can be set. Deleting call records and setting up speed dial can be done in the menu.

3.21 Widget

 
The widget is on the right of applications in Main Menu, holding down this widget, you can drag it anywhere you want in the main screen. It is convenient for you to enter that procedure.

3.22 Selecting Wallpaper Source

Hold down the main screen, the options of selecting wallpaper source will appear, then you can set up wallpapers you like.

3.23 Local search

You can find some merchants and service facilities near a location, which you can find through GPS navigation.

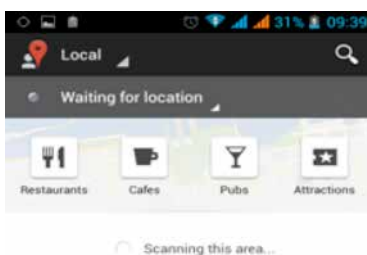

3.24 Note

Add note for your convenience, delete and sort at any time.

3.25 Flashlight

Enter flashlight app, click the turn on button, can open to light, user-friendly.

3.26 Documents To Go

Convenient you see, edit & create Microsoft Word, Excel and PowerPoint file and review Adobe PDF and Attached.

3.27 MoboPlayer

A smart view play that support various format video, you can easily play stored video files.

3.28 Map

The maps, directions and location-based information are provided by relevant data services. These data services may vary from time to time, and be not available in some regions, thus the provided maps, directions and location-based information may be invalid, incorrect or incomplete.

If the location service is closed when you open the "Map", the system may ask you to enable the service. But you can use the "map" without enabling the location service.

3.29 Navigation

 
How to use the feature: In the Main screen, select "Settings", click "Location and Safety", tick "Use GPS satellite", and then reach the navigation menu. Note that it may take 10 minutes or more for your phone to determine your current location for the first time.

3.30 Voice Search

Support voice search, through voice search website on Google.

3.31 Videos

A videos software, can detect mobile video and auto generate play list, you can easily play stored video files.

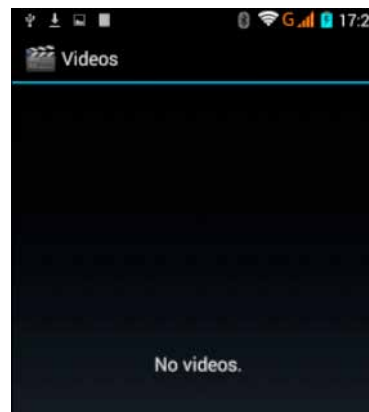

3.32 SIM Card Application

 
This function is provided by the network provider. If the SIM card and network providers do not support this kind of service, the function will not be able to use. Please contact the network provider to get more information.

3.33 Gmail

No pop-up window or banner advertising in Gmail, and almost no spam in it. With the Google search, you will easily find the important information.


3.34 Google Talk

Google Talk is a downloadable chat application developed by Google. Check out what Google Talk can do:

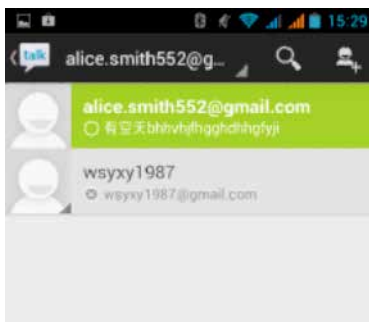

3.35 To Do

 Add todo, can write schedule notice and set deadline data. Review schedule and finish schedule more Convenient.

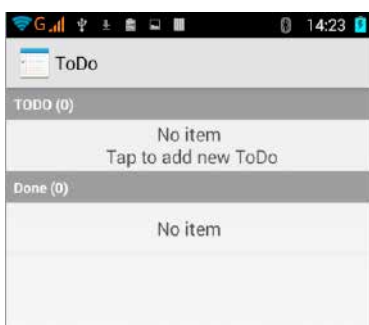

3.36 Backup and Reset

Backup personal data and applications to sdcard, can restore at anytime.

3.37 Film Workspace

<Film Workspace> is a perfect video edit software, let you can put together your stored music, photo and short video from a film, enjoy your life.

3.38 Play store

You can download and install the required application in the store. Follow the steps below, you can download and install the application:

- First, enter the list of mobile phone application and open the Play Store.
- Second, you will find the recommendation, latest and necessary options when you enter the store. You also can find a search button on the lower right corner. You can get the class of all application when you click on the category options, and get it if you click on the button of ranking. You also can get everything about the application which you want.
- Third, you can know the brief introduction and user rating after you found the application which you want. It's good for you to make a evaluation on the program.
- Last, click on the button of install which at the bottom of the screen after you have found the application which you want to install. The Play Store will download it. And next, you can install it.

4. Text Input

Enter text via the keypad. Examples of text include contact details, emails, short messages, and websites. The keypad provides the functions of spelling prediction, spelling correction and learning while using.

The smart keypad may give you prompts of correct spelling, depending on which application you are using.

Enter text:

- 1) Tap the text box (memo, or new contact) to call the keypad.

- 2) Tap the keys on keypad.

At the initial stage, you can tap keys using either of your index fingers. Once you get familiar with the keypad, you can try tapping keys using both of your thumbs.

While tapping a key, the corresponding letter will appear above your thumb or another finger. If you are tapping a wrong key, you may slide to the correct one. Only when your tapping finger leaves a key, can the corresponding letter be entered in the text box.


To delete a character	Tap
To enter an upper-case letter	Tap , and then tap that letter.
To enter a digit	Tap , and then tap that digit.
To enter a symbol	Tap , and then tap that symbol.
Quickly enter a space	Press the space key twice successively.
To toggle input methods	Hold down to bring up the keyboard.

5. SD Card Introduction

Your mobile phone supports SD card to expand the memory. Install the SD card according to the indication.

As one of storages for your phone, SD card has been set as the default storage at factory. You can directly use it without making any settings.

 Use as flash disk: If "Phone - Data Wire - PC" is well connected, the PC will prompt "New hardware is found", and "MT65xx Android Phone requires to be installed" will appear in the dialog box. After checking and confirmation, reconnect "Phone - Data Wire - PC", and pull down notification menu in the standby interface:

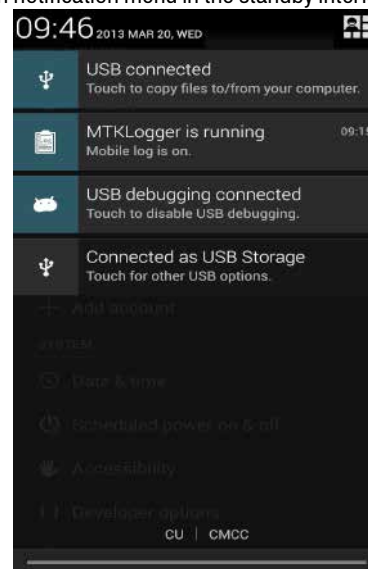

Select "connected as USB Storage, and the following screen pops up. Select "USB storage device", and such dialogue box pops up:

You can synchronize files on the computer with those on the phone according to your needs or you can manage files on the storage card.

- Select "MTP storage" to support the phone to function as a U-disk. If your computer is not supported by WIN7, you need to install MTP drive (you can directly update window player to the latest wmp11 which comes with MTP drive).
- Follow the prompts appearing in the phone to operate, so that data uploading and downloading with U disk can be achieved.

- Select “Camera PTP”, you can export photos on the phone to the computer.

Note: Your mobile phone supports the plug-in feature. Without turning off your phone, however, it does not support inserting or remove T card. Generally, it is not recommended to remove and install the SD card.

6. FAQs and Solutions

If you have any questions about the phone, please find the solutions from the table below.

FAQs	Causes	Solutions
Poor reception	When you use your phone at poor reception areas, for example, near high rise buildings or base rooms, the radio wave cannot be transmitted effectively.	Avoid this as far as you can.
	When you use your phone at network traffic congestion, such as working time and off-duty time, the congestion can result in poor reception.	
	This is related to the distance to base station in question.	You may ask the network service provider to provide service coverage map.
Echoes or noises	The trunk line of network is in bad condition. It is a regional problem.	Hang off the call and dial again. Choose another better line.
	In some areas, the call lines are in bad condition.	
Shorter standby time	The standby time is relevant to network settings.	In poor reception areas, turn off your phone temporarily.
	Replace the batteries	Change with a new battery.
	When no signals are received, your phone will continue searching for base stations, thus consuming a large amount of battery power and reducing standby time.	Use your phone at strong signal areas or Turn off the phone temporarily.
Failed to turn on your phone	The battery power is used up.	Check the battery power level or charge the battery.
SIM card error	The SIM card is damaged.	Contact your network service provider.
	The SIM card is not properly installed.	Ensure the SIM card is properly installed.
	The metallic face of the SIM card is contaminated.	Wipe the face with a clean cloth.

Failed to connect to the network	The SIM card is invalid.	Contact your network service provider.
	Beyond the GSM coverage.	Consult the network service provider for service areas.
	The signal is feeble.	Retry at a stronger signal area.
Failed to make a call	The call barring feature is used.	Cancel the call barring settings.
	The fixed dialing number feature is used.	Cancel the fixed dialing number settings.
PIN code error	Enter incorrect PIN codes for three times in succession.	Contact your network service provider.
Failed to charge the battery	The battery or the charger is damaged.	Change a new battery or charger.
	Charge the battery when ambient temperature is lower than -10°C or above 55°C.	Change the environment.
	Poor connection.	Check whether the plug is properly connected.
Failed to add contacts to phonebook	The storage space of phonebook is used up.	Delete some contacts from the phonebook.
Failed to set up some features	Your network service provider does not provide the services, or you haven't subscribed them.	Contact your network service provider.

Power in your hands.



Rua Gaivotas em Terra · nº 2-S4 · Parque das Nações
1990-196 Lisboa · Portugal · tel. +351 218 968 045
info@ikimobile.com · www.ikimobile.com