



# **Cincinnati Bell**<sup>SM</sup>

## Quick Start Guide

### Nokia 6126

Welcome to the Nokia 6126 Quick Start guide. The 6126 features a sleek design with one-button open, designed for maximum convenience and style. Other highlights include a 1.3 megapixel camera, and Bluetooth compatibility.

#### To Save Contact Information

Enter a 10-digit telephone number and select **Save**. Using the scroll buttons and number pad, enter the person's last and first name and select **Save**. The information will be saved to your Contact list.

#### Setting Up Voice Mail

Please refer to the Welcome Guide, which you received with your phone, for full instructions on how to set up your voice mail service. For the Nokia 6126, be sure to use 1111 as your temporary voice mail password.

#### Using Text Messaging

Text messaging is already active on your phone, and any messages you receive are FREE. This means you're able to receive text messages from other wireless callers as well as info alerts for free from sites such as CNN.com, and the Weather Channel. PC users can also send emails (150 character maximum) to your phone using your 10-digit telephone number@gocbw.com as the email address. To illustrate, the format of your address looks something like this: [5135551212@gocbw.com](mailto:5135551212@gocbw.com). To respond to text messages, it's just a \$.15 per message that you send, or you can get a money-saving text messaging plan if you become a frequent user. Visit your nearest Cincinnati Bell retail store or call Cincinnati Bell Customer Care at 611.

#### Cincinnati Bell Wireless Internet Services

If you subscribe to one of our Wireless Internet plans, there are a lot of added benefits you receive, including a free Fuse email box, the ability to personalize your service, and better rates on download and data usage beyond your selected plan. If you choose not to subscribe, you can still try Wireless Internet and pay-as-you-go using our more limited service. All the applications within this section require that you be connected to Cincinnati Bell Wireless Internet Service. To connect to CBW Internet Services, simply select **Menu > Web > CBW Internet** to access a menu of CBW Internet services. To customize your preferences using your PC, visit [www.cincinnati-bell.com/portal](http://www.cincinnati-bell.com/portal) and click on "My News." To customize your preferences using your phone, select **My Info > More > Edit Settings**. Please refer to the Welcome Guide for full instructions on how to set up your Wireless Internet service.

**Note:** Downloadable games have a fee when you download and the kilobytes used to download the game are deducted from your monthly data plan. Games that you play online are free, except the kilobytes used while playing are deducted from your monthly data plan.

### Create and Set a Video Ring Tone

The Nokia 6126's video ring tones and photo caller ID displays on both screens when you receive a call. Switch your camera to video mode and create a video ring tone or download new ones from the mobile web. To create a video ring tone: Press **Menu > My Files > Media > Video**. Aim the viewfinder and select **Record**. Press **Stop** to end the recording. Select **Options > Use video clip**. Scroll to and then select **Set as incoming call video > Yes**.

### Take a picture and send via multimedia messaging

The Nokia 6126's 1.3 megapixel camera takes quality pictures to share with friends and family. Pics look awesome on the vibrant 2.2 " True Color display. To take a picture in landscape mode and send via MMS: Select **Menu > My Files > Media > Camera**. Aim the viewfinder and press **Capture** to take the picture. After taking a picture, select **Options > Send**. (NOTE: If you return to camera mode before selecting send, select options > view previous to return to the picture.) Select **Options > Send > Add**. Scroll to and select **Contact**, then scroll down and enter name. Scroll down once to enter the presentation message to display with the image. Then select **Options > Send**.

### Listen to Music

Enjoy your favorite tunes – transfer MP3s and other music files from your computer to your phone. The 6126 offers 10MB of available memory plus a memory expansion slot for optional microSD cards. Larger memory cards may be purchased from your nearest Cincinnati Bell retail store. To play music: **Select Menu > My Files > Media > Music Player and > Play**. Select **Options** to access your playlist and other music player features.

### Bluetooth

Bluetooth wireless technology lets you effortlessly connect to a compatible headset, print directly to a compatible printer, and share files with other Bluetooth devices, such as phones, PDAs and computers up to 30 feet away. Start the Bluetooth connection by selecting **Menu > Settings > Connectivity > Bluetooth > On**.

### Protecting Your Phone From Unauthorized Use

To protect your phone from unauthorized use, just follow these simple steps. Once activated, your phone will require the user to enter a password each time it's turned on. Go to **Menu > Settings > Security Settings > Pin Code Request**. To turn your PIN code request on, you will be prompted to enter a 4 to 8 digit phone code (that you create) Call Cincinnati Bell Customer Care at 611 to obtain a PIN/PUK code to enter at the prompt.

**Note:** You will have 10 chances to correctly enter this code. If you incorrectly enter it 10 times, you will see "SIM Blocked" and should visit your nearest Cincinnati Bell retail location to purchase a new SIM card.